



Having Trouble?

Chat with us on your phone

Simply point your phone camera towards



Limited 1-Year Manufacturer Warranty

Manufacturer warranty covers:

- Parts that are deemed defective within 30 day will be shipped free of charge.
- Any warranty claim after 30 days, will require shipping to be paid by the customer.

Any visible damage due to the neglect, misuse, or abuse will void the limited warranty of the product.

Contents	2
What is included	3
Assembly instructions	3-4
Warranty	6


What is included



A. Ignition Screen



B. Thermocouple

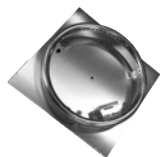

C. Fire Pan with Burner



D. Ignition Pin




E. Ground Wire



F. Body



G. Volcano Rocks

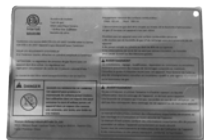

H. ETL Tag



I. Nameplate Board



J. Pulse Ignition



K. Knob



L. Gas regulator



M. Gas Valve



N. Corrugated Pipe




O. Injector




P. Rain Cover


Assembly instructions

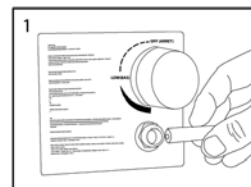


1
Open the cap with twist motion and insert AAA battery for the Pulse Ignition

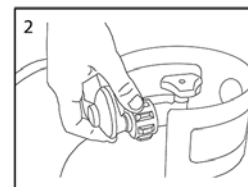


2
Connect Gas Regulator with Propane Tank

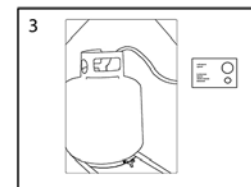


3
Place Propane Tank inside the fire pit body

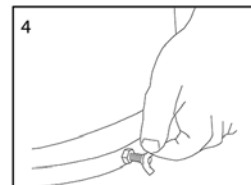


4
Tighten the tank in place

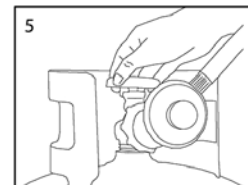


5
Make sure to release the gas flow from the tank

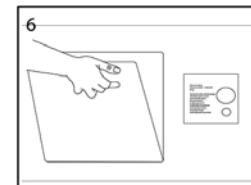

6
Secure cover door in place

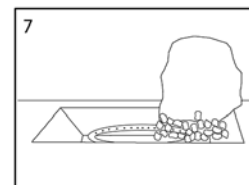

7
Add included volcano rocks. Make sure not to cover the Burner

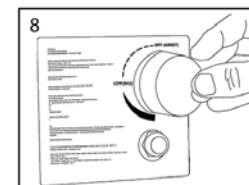

8
Turn the regulator on/off. Make sure to stop gas flow when item is off

Notes:

- Keep the rocks dry at all times. Volcanic rock explosion may occur when mixed with any liquid.
- Do not leave this appliance uncovered in the rain.
- Do not place ANY cover on the fire table while the product turned on.
- Allow the fire table to cool down before touching for at least 30 minutes. The burner tray and glass rocks may cause burn injuries. Avoid putting ANY cover on top of the fire table during the cooling period.

