
 


 










## ASSEMBLY INSTRUCTION

### DESCRIPTION : TV CONSOLE

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small Hardware which may have come loose inside the carton during shipment. Identify and count all Hardware and compare with the Hardware List Below.

Parts List			
No.	Description		Qty.
①	Table Top KD		1 Pc
②	Console		1 Pc
③	Wood Block		4 Pcs
④	Leg		4 Pcs
⑤	Support Leg		2 Pcs

Assembly Hardware Pack			
⑥			
No.	Description	Hardware	Qty.
(A)	JCBC Screw Ø5/16" x 57mm		8 Pcs
(B)	Spring Washer Ø5/16"		8 Pcs
(C)	Flat Washer Ø5/16" x 19mm		12 Pcs
(D)	Allen Key M4		1 Pc
(E)	Nut Ø5/16		4 Pcs
(F)	Wrench		1 Pc

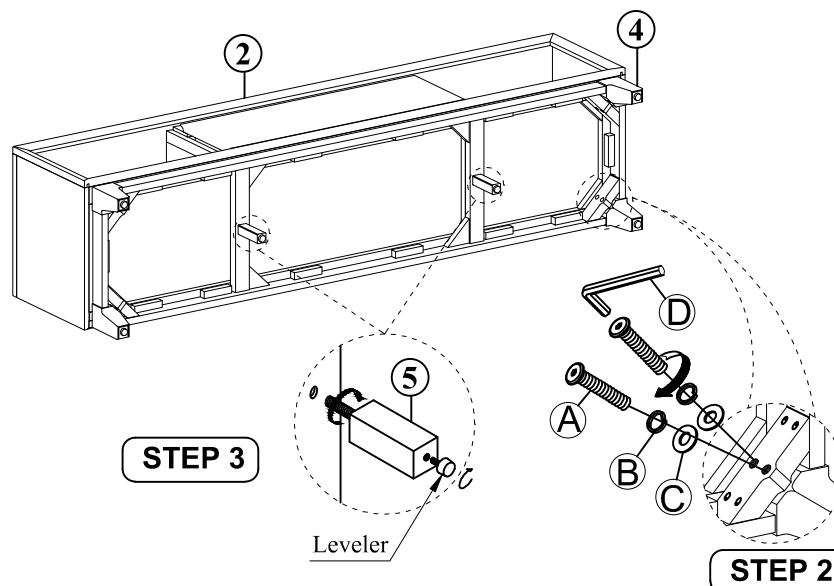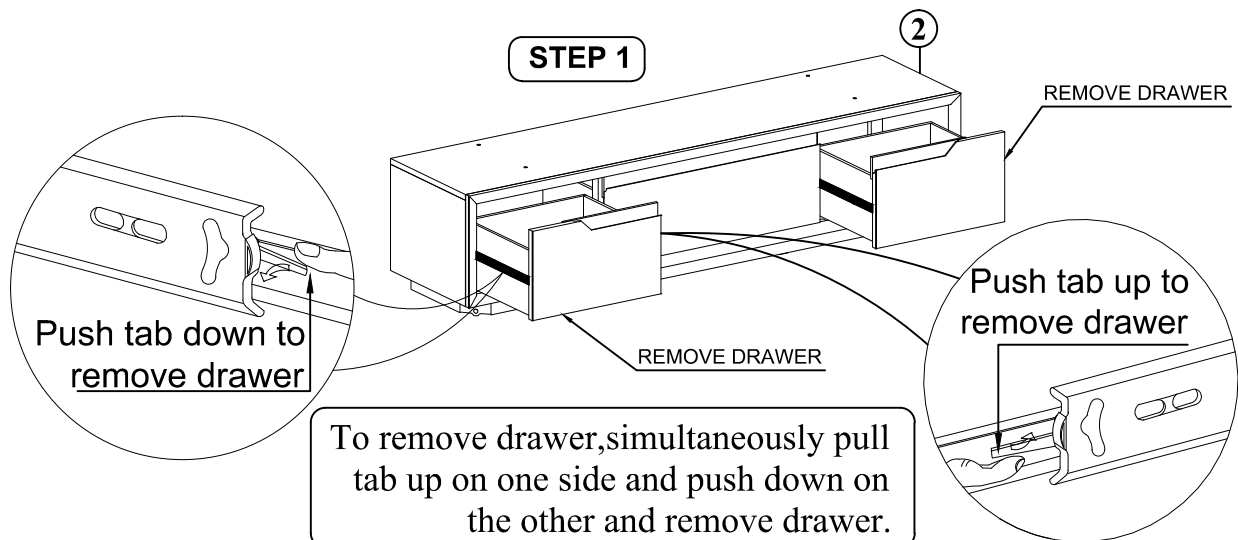

## ASSEMBLY INSTRUCTION

### DESCRIPTION : TV CONSOLE

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small Hardware which may have come loose inside the carton during shipment. Identify and count all Hardware and compare with the Hardware List Below.

