 


DOG WATER FOUNTAIN

DC Power Version

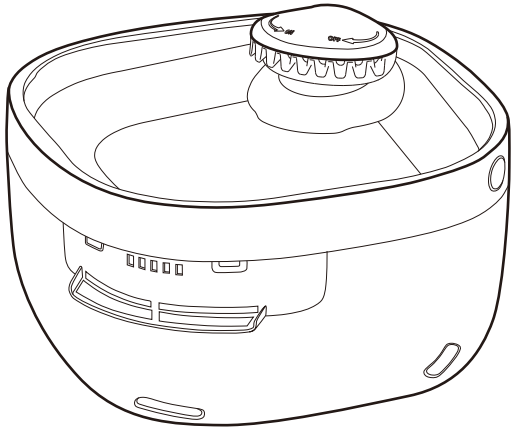

Thank you for choosing our smart pet water fountain.
Please read this manual carefully before use and keep it for reference in the future.

NOTES

- Please read this manual carefully before use. Once it's installed for use, we will assume that users have carefully read and accepted the safety instructions as follows.
- The product damaged due to improper operations and uses will not be covered by the warranty. The product is subject to any necessary changes without prior notice.
- The Company reserves the right of final interpretation.

SAFETY INSTRUCTIONS

- Failure to comply the terms as follows may result in the malfunction or other unexpected losses.
- Please strictly follow the instructions to install and use the product.
- Please selectively use this product according to the actual needs of your pet. Please use the product in the cool and dry places away from source of ignition.
- Although this product is running in the mode of low voltage, the wire bit broken by pets may cause electric leakage, please use under proper instructions.
- Please choose DC5V-1A adapters in line with relevant national and regional standards to avoid any possible damages or safety hazards.
- Place the product horizontally and avoid being tipped over; otherwise, the product will suffer from malfunction or water leakage.

- Do not clean this product in dishwasher. To move this product or keep it idle for long, please unplug the power cord.
- Please keep the children using this product under the supervision of adults. Make sure to check the water level in the fountain before holidays.
- Do not repair the product without the guidance of professionals to avoid any possible injuries. In case of any problems during use, please contact our customer service in time.


PACKING LIST

Open the package and check whether the components as follows are complete.


1. Upper Tray



2. Filter Cap

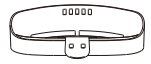

3. USB Pump

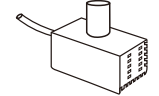


4. Filter




5. Fountain Head



6. Water Tank

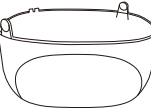

BRIEF INTRODUCTION

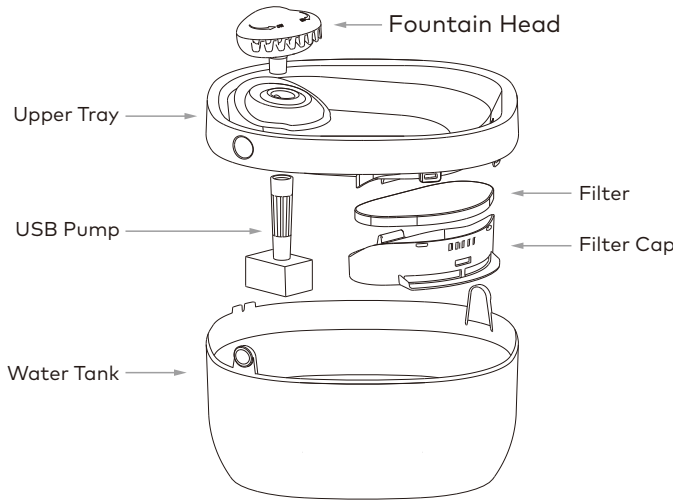

SPECIFICATION PARAMETERS





Product Name	Dog Water Fountain
Dimension	305*305*167mm
Rated Voltage/Current	5V-1A
Rated Power	0.325W
Capacity	6L
Net Weight	1.20kg
Material	ABS

INSTRUCTIONS FOR USE


★ Please follow the steps below for the initial use:

1. Before installation, please soak the filter element in clean water at 5~50°C for about 5 minutes.
★ It is normal that the water in which the filter element is soaked appears to be colorless or yellow, but it is not drinkable.
2. Rinse the water tray and water tank with clean water.
★ It is strictly forbidden to clean this water fountain and its components in the dishwasher.
3. The amount of clean water poured into the water tank should be within the specified range (1~6L)
★ Water temperature: 5~50°C


4. Place the filter upwards into the filter cap keep it horizontally in alignment with the groove.

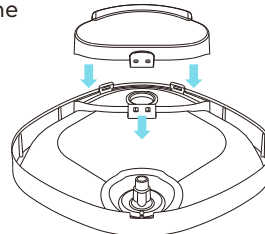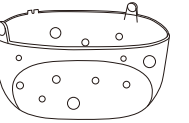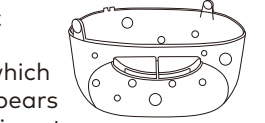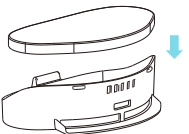


5. Insert the USB pump into the water tray
keep the upper cover fixed properly.

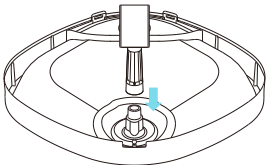

6. Put the upper cover into the water tank.

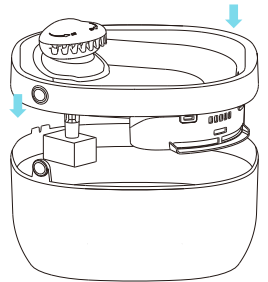

7. Place the water fountain on flat ground and
power on to run.

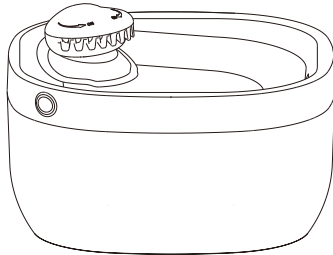


INSTRUCTIONS FOR USE


1. How to add water

Add water to the water tank with a container.

- 1.1 Remove the tray from
then water tank
(as shown in figure)

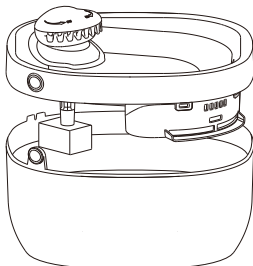


- 1.2 Add water to the
highest water level with
a container without
moving water fountain
(as shown in the figure)

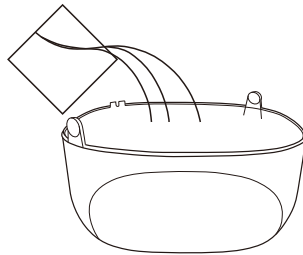


2. Connect to power supply

- 2.1 Connect DC wire to the adapter and plug into the
socket for charging.

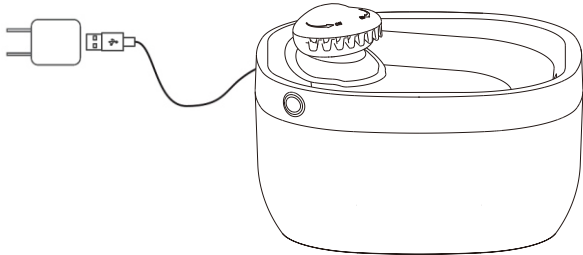


CLEANING OF WATER PUMP

1. The service life of the water pump can be prolonged by
cleaning. It is recommended to clean the water pump
once every 1-2 months, in order to prevent dirt from
blocking the water channel that may result in
obstructed water flow, poor water quality, noise and
other abnormal phenomena.
2. Wash the water pump with clean water and brush in
the steps shown in Figure 1 to Figure 4.

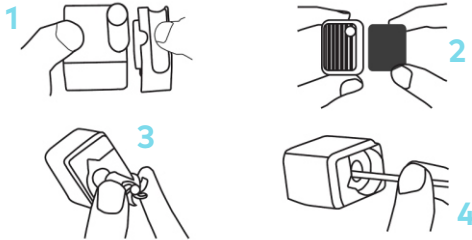


CLEANING OF FOUNTAIN HEAD

1. Open the cover of the fountain head by rotating it in
the ON/OFF direction on the cover.
2. Wash the fountain head with clean water and brush it,
and rotating it to close the cover after cleaning.

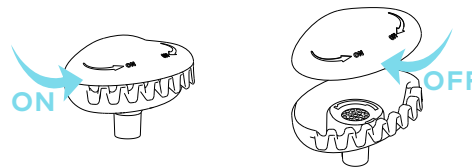

WATER IN THE TRAY IS FILTERED AND STORED

When there is debris in the water in the water tray, rotate
manually the drain plug to the vertical position, the water
will flows to the filter and then stored in the tank.

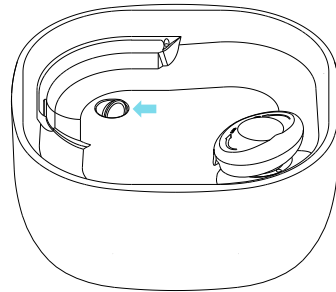

REPLACE THE FILTER

The filter should be replaced every 2~4 weeks in normal
cases. It's recommended to replace the filter every two
weeks when it's shared by multiple pets.

The cases as follows are not covered by the warranty:

1. Damages caused by force majeure factors such as fire,
lightning, rainstorm, earthquake and so on.
2. Damages caused by the errors of humans or animals.
3. Damages caused by failure to abiding by the user
manual before assemble, use, disassemble and repair.
4. Color fading, wears and tears during the normal use.

FAQS

	Failure Problems	Failure Analysis	Troubleshooting
1	The standard mode cannot be switched	Whether the charger is connected; whether the blue light of the charging indicator is keep lighting	Use a compliant 5V/1A adapter and correctly plug the Type-c cable and adapter
2	Red light is on at the water tank port/red and blue lights are flashing alternately	Insufficient water in the water tank	Add purified water above the scale line
3	Blur light is on at the water tank port, with no spraying at the top of the machine	1. The internal rotor of the water pump has debris (hair) 2. Whether the pump parts were missed when cleaning	Clean the water pump and check if there are missing parts
4	Noise becomes louder with less water discharge	1. The internal rotor of the water pump has debris (hair) 2. Whether the pump parts were missed when cleaning	Clean the water pump and check if there are missing parts
5	Black debris in the water body after replacing the filter element	1. Whether the filter element has been soaked in water for 5-10 minutes first 2. If the filter element cotton is broken	Soak for 5min before using a new filter element and check its integrity