

# **INSTALLATION**

## *Product Manual*

Version: 460063-01-24A-HY



### **IMPORTANT INFORMATION!**

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.



### **AVOID SCRATCHES!**

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.



### **IMPROVE EFFICIENCY !**

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.



### **ANTI-TOPPLE WARNING !**

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

### **IMPORTANT !**

 
 

 
It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.




Please prepare the following tools

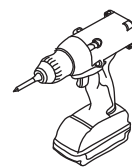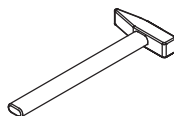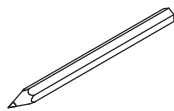

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 102

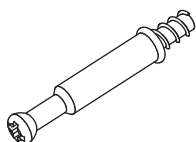


M6 x 35 mm

B x 102



Ø 12 x 10 mm

 C x 12

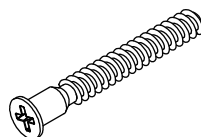


M5 x 40 mm

D x 16




M3 x 12 mm

 E x 24

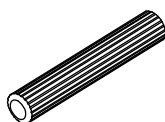

M6 x 40 mm

 F x 2

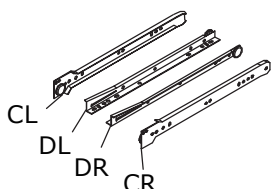

300 mm

G x 32



M3.5 x 14 mm

H x 22

 


J x 4




DWJL

K x 8




LKJL

 L x 2




M3.9 x 40 mm

 
M x 2



N x 2

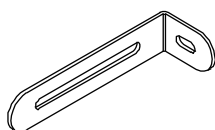 

P x 58

 


M3.5 x 12 mm

R x 16




M4 x 8 mm

 S x 6

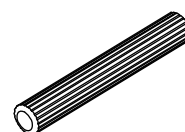

M6 x 50 mm

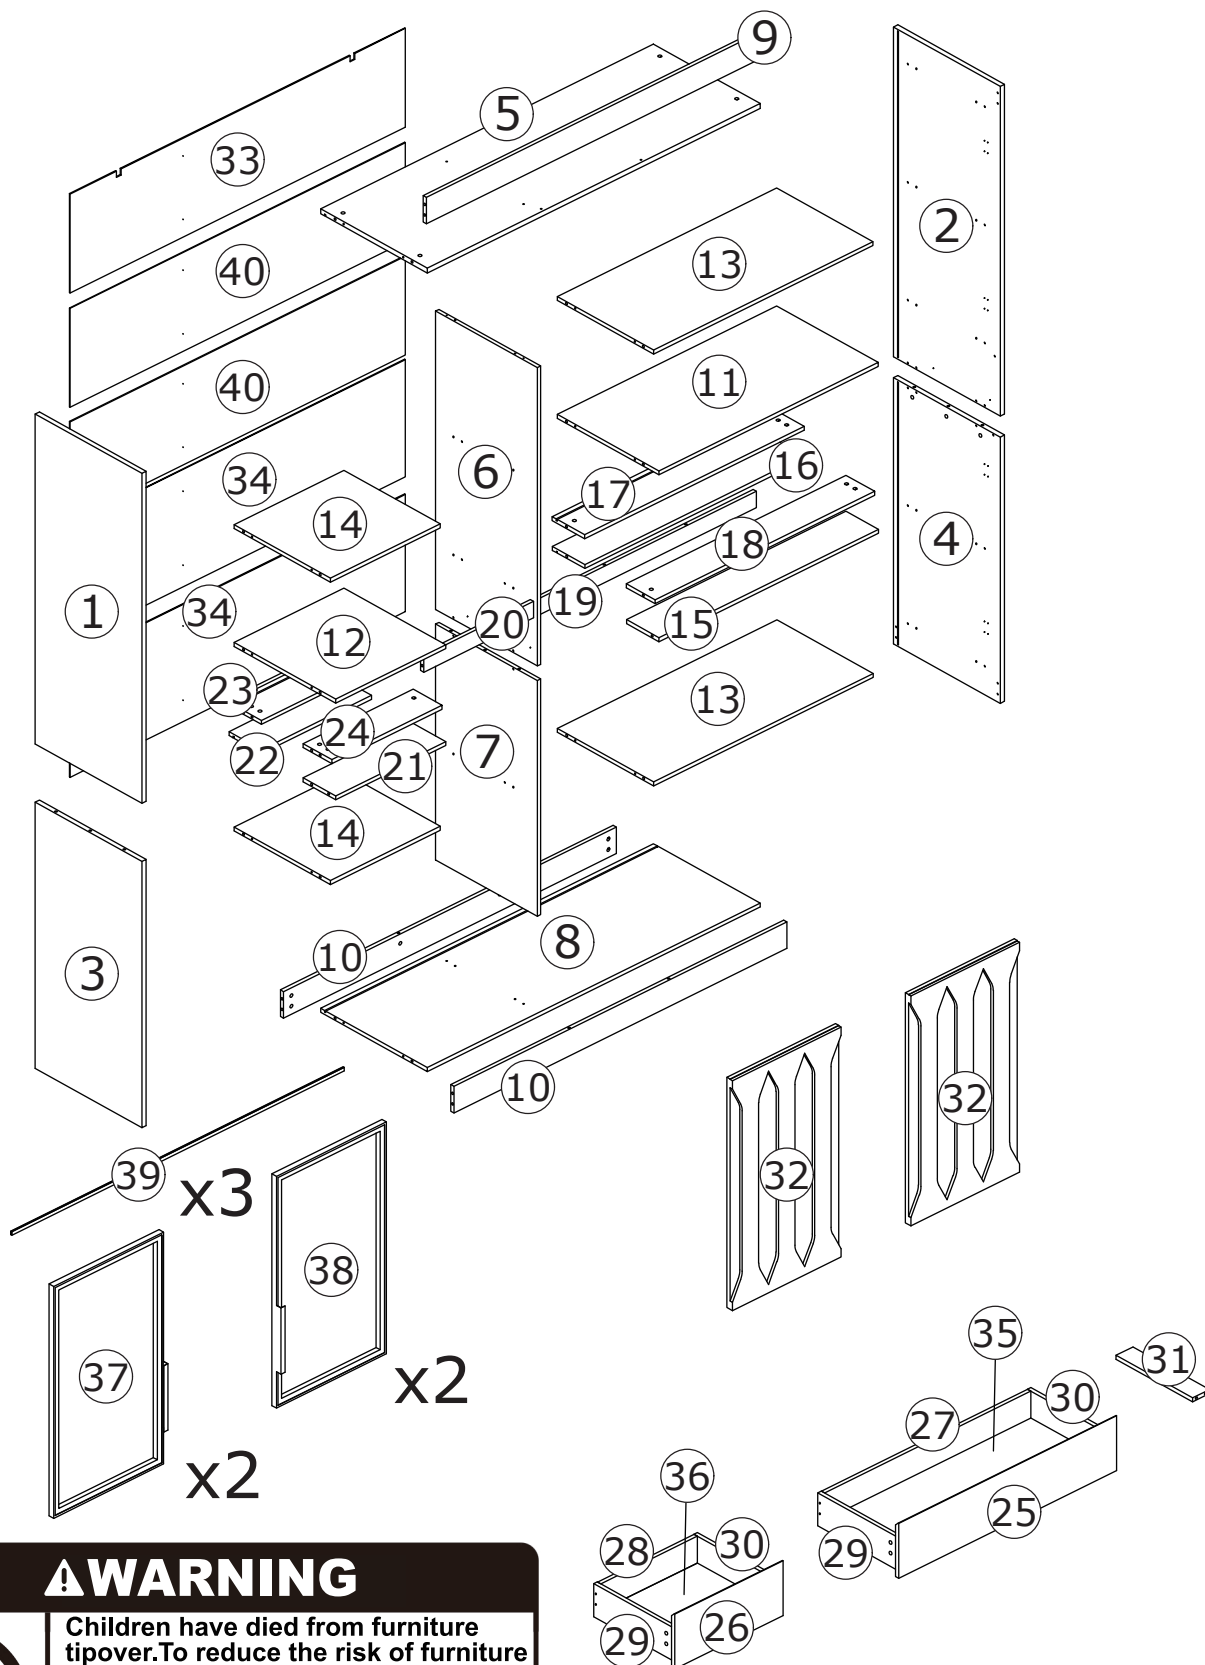 


## ⚠ WARNING



**Children have died from furniture tipover. To reduce the risk of furniture tipover:**



- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.  
Do not remove!*



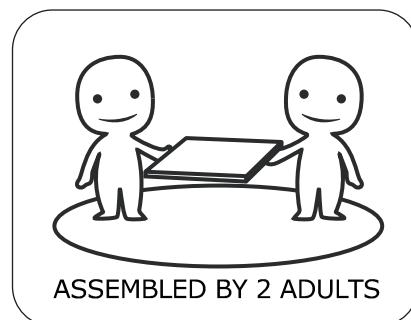






1

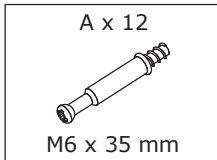  

 
 
 
Screw eccentric rod(A)  
into panel 3 as shown.

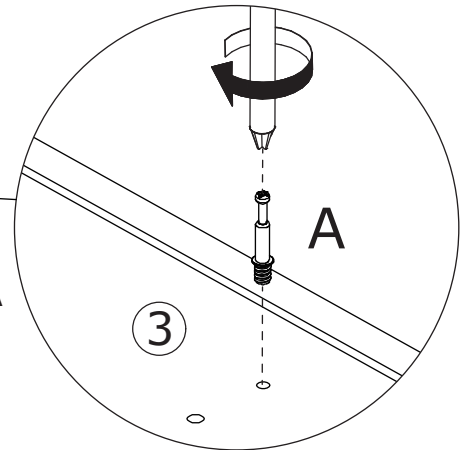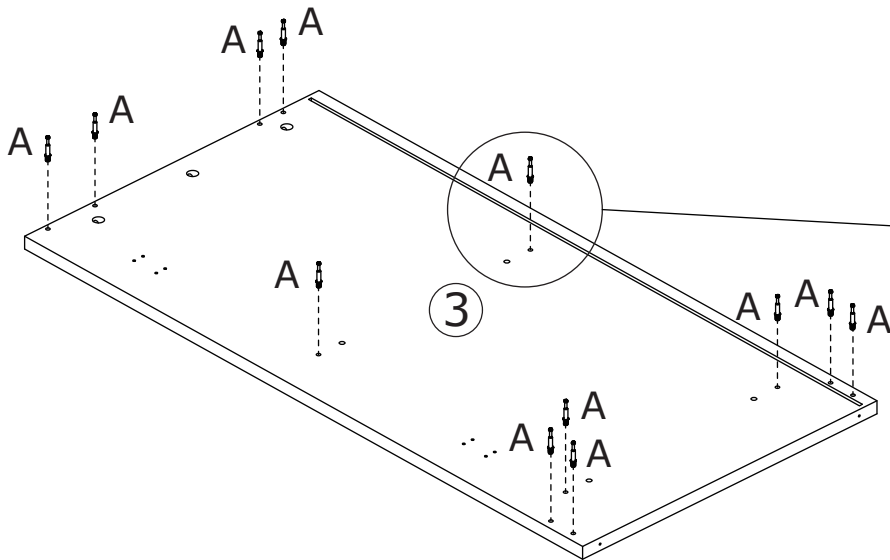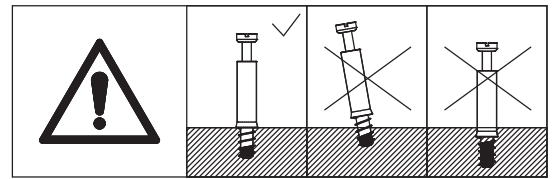




2

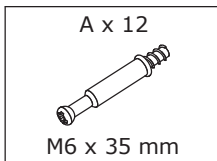  

 
 
 
Screw eccentric rod(A)  
into panel 4 as shown.

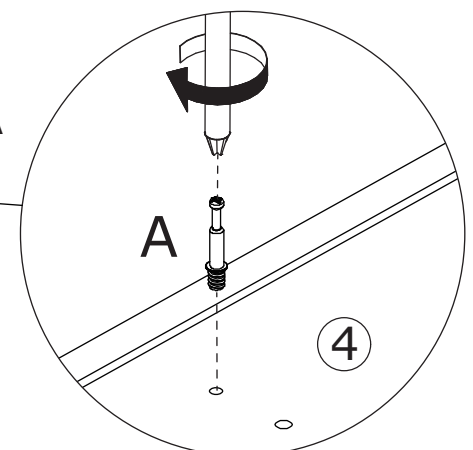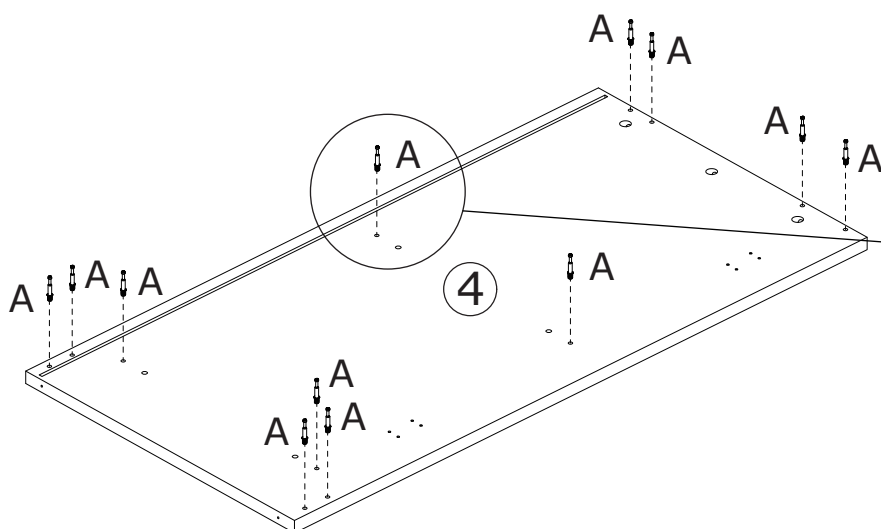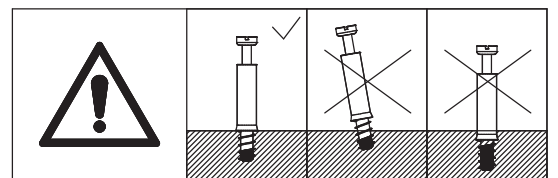

3

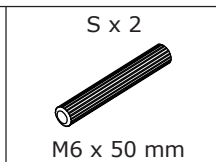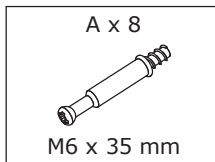   

   
Screw eccentric rod(A)  
into panel 7 as shown.  
Insert the wooden tip(S)  
into panel 7 as shown in the figure.

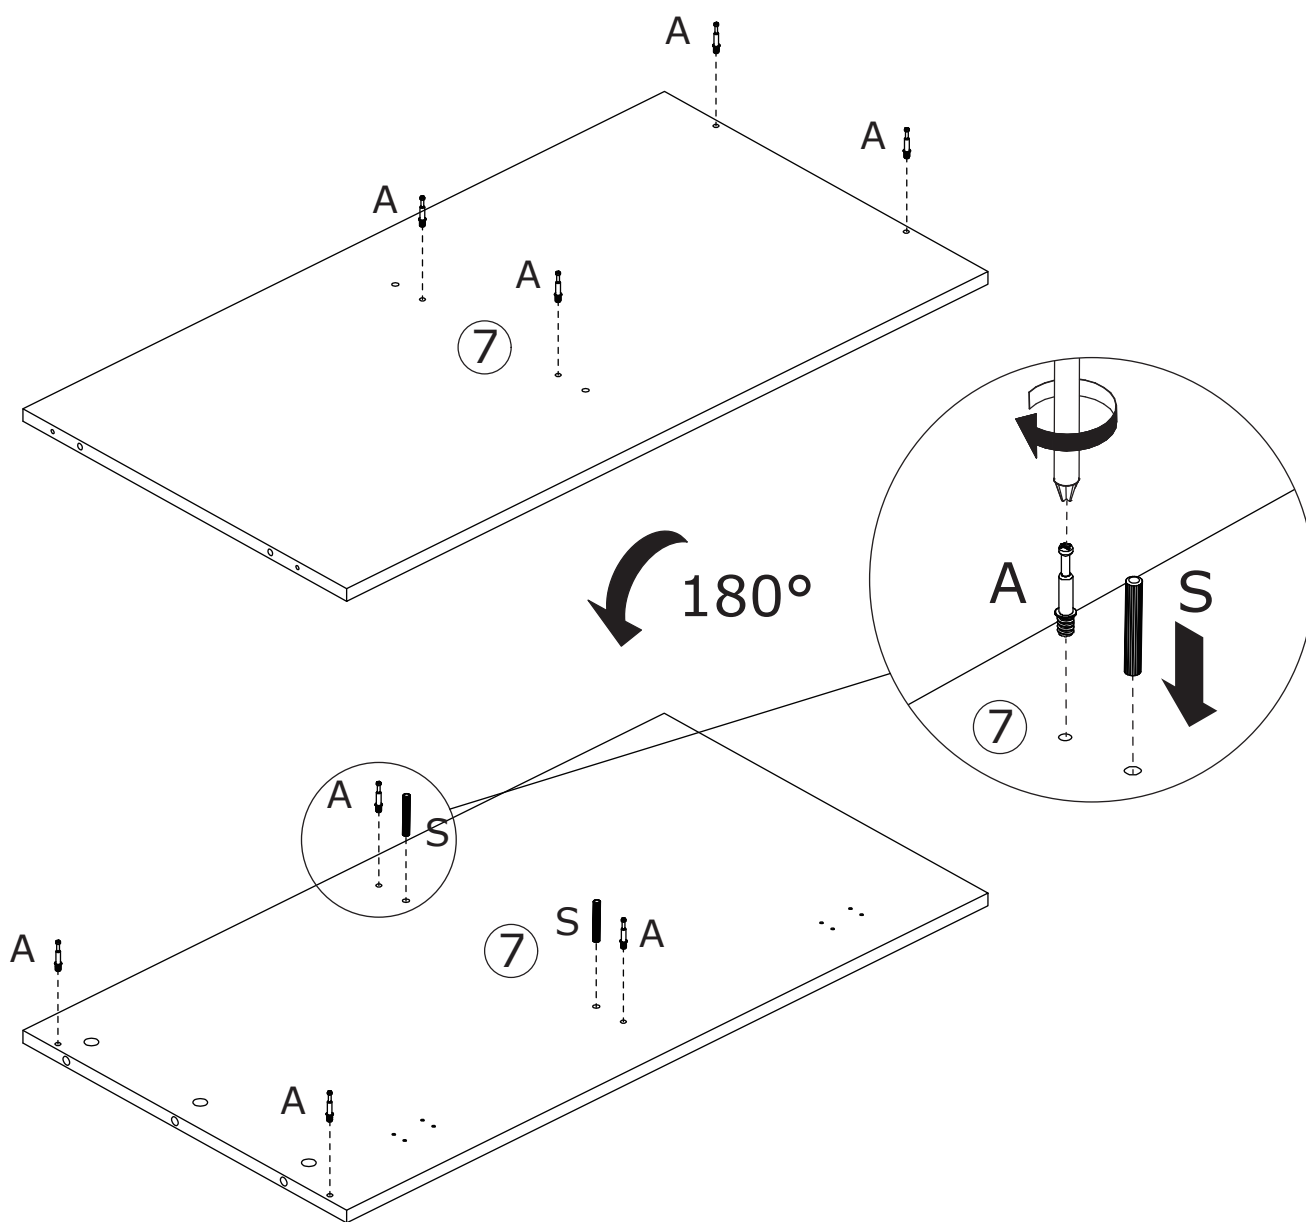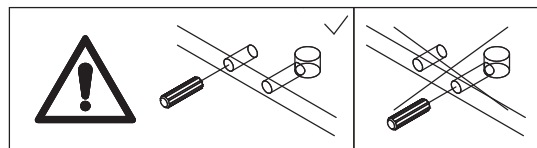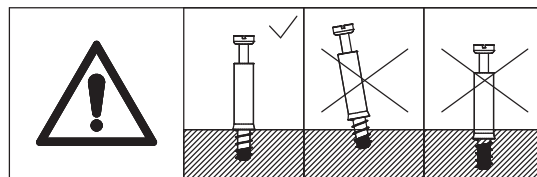




4

A x 4

 M6 x 35 mm



   Screw eccentric rod(A)  
into panel 8 as shown.

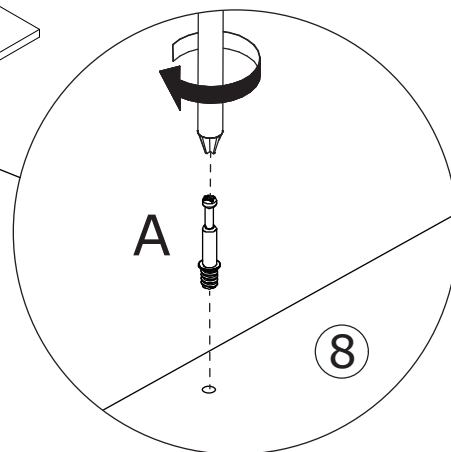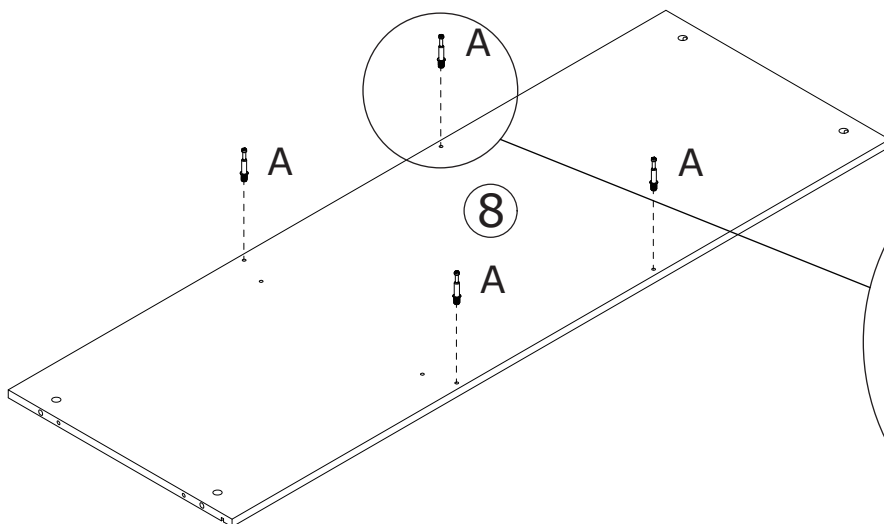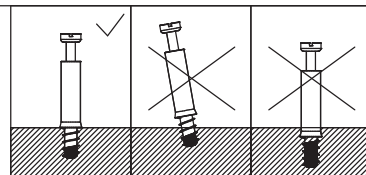


5




B x 4



 Ø12 x 10 mm



  
 
Attach panel 10 to panel 8, add  
cam lock(B) into panel 10 and  
turn clockwise to tighten as shown.

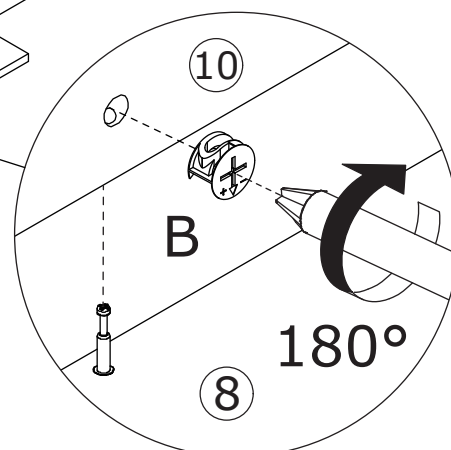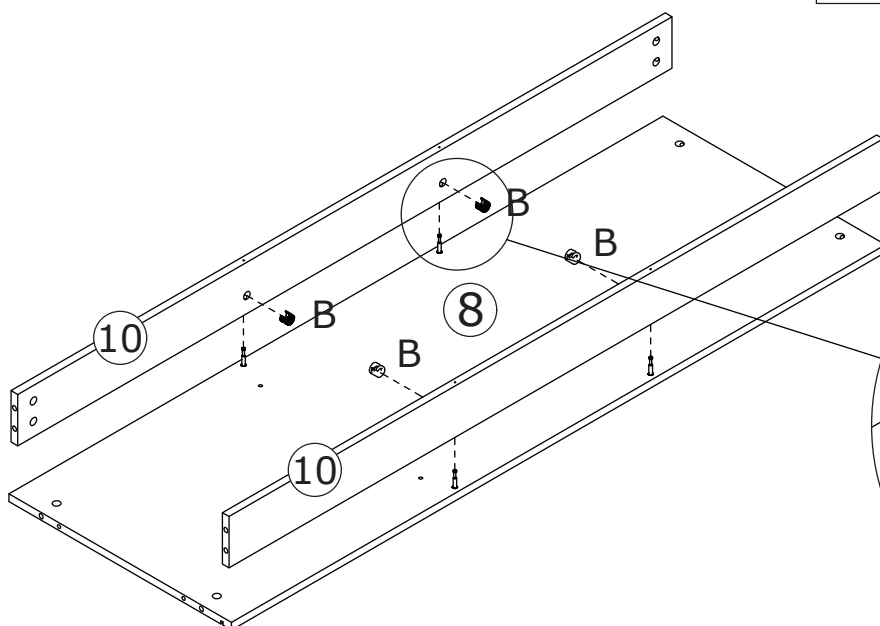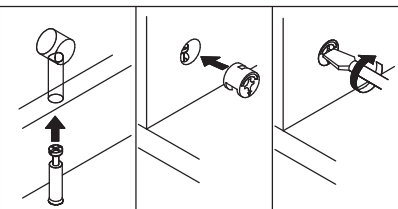

6



 
 
Attach panel 7 to panel 8 using wooden dowel(E), and fix with screw(C) as shown.

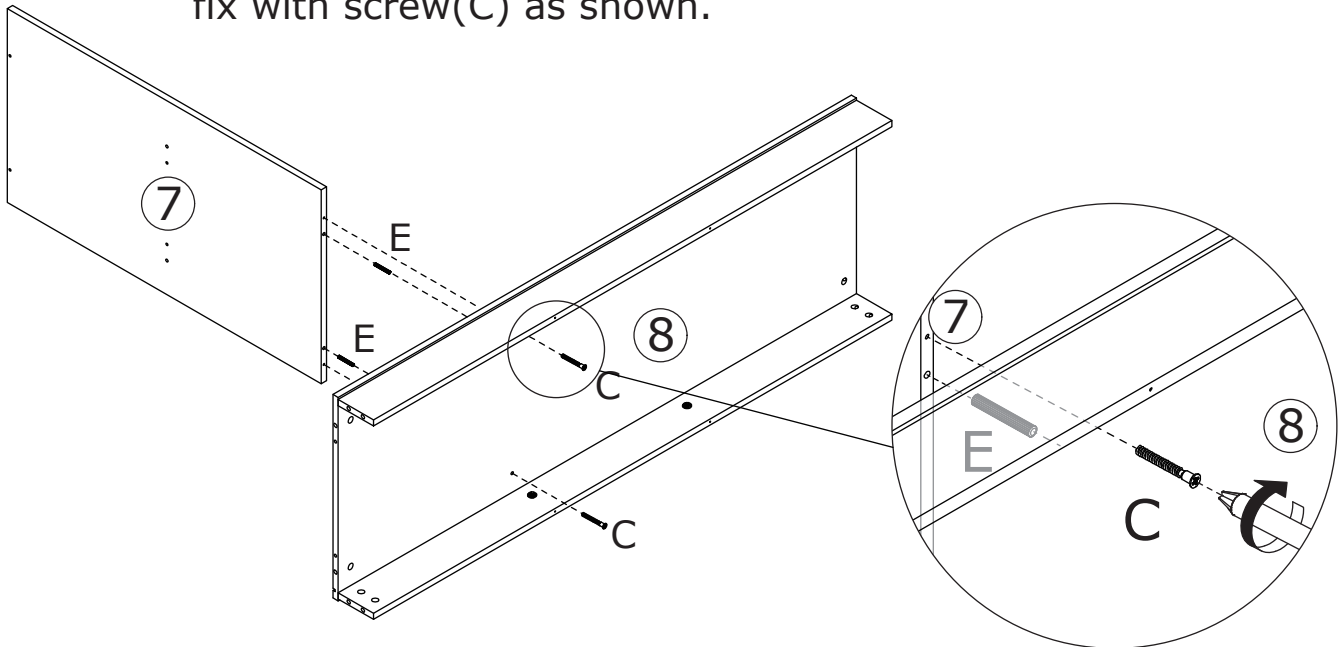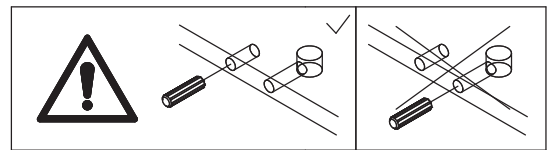

7



  Attach panel 14 to panel 7 using wooden dowel(S), add cam lock(B) into panel 14 and turn clockwise to tighten as shown.

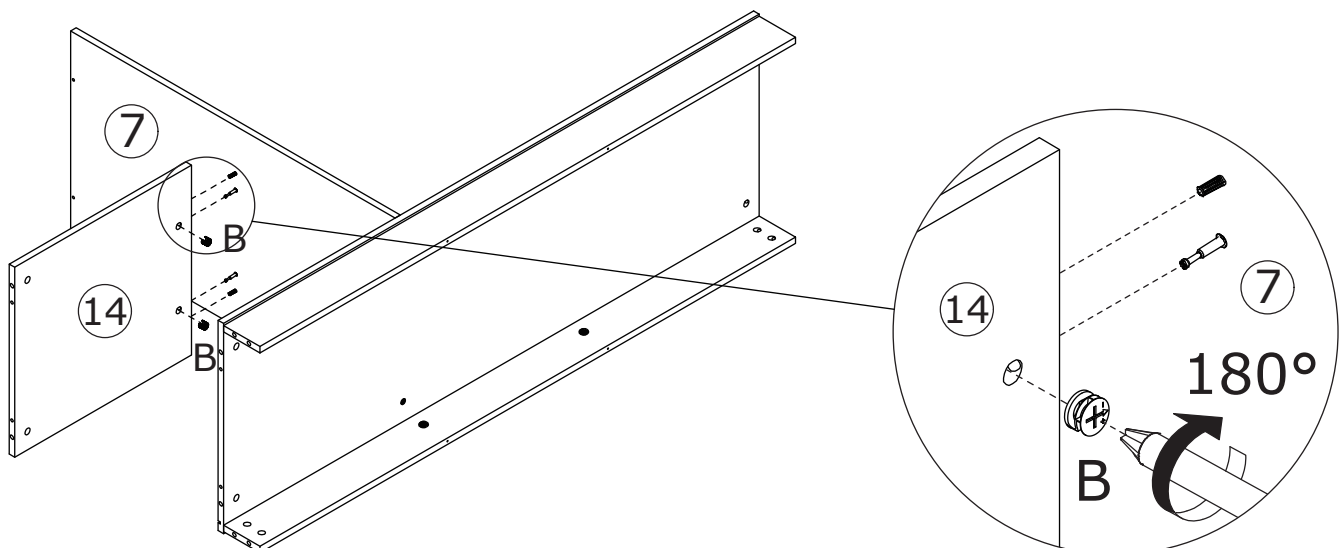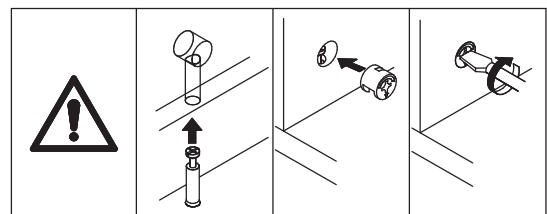


8


B x 2



 Ø12 x 10 mm

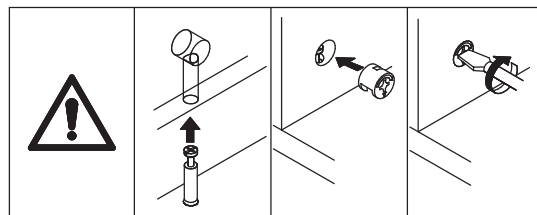

 Attach panel 21 and 22 to panel 7,  
add cam lock(B) into panel 21, 22  
and turn clockwise to tighten as shown.

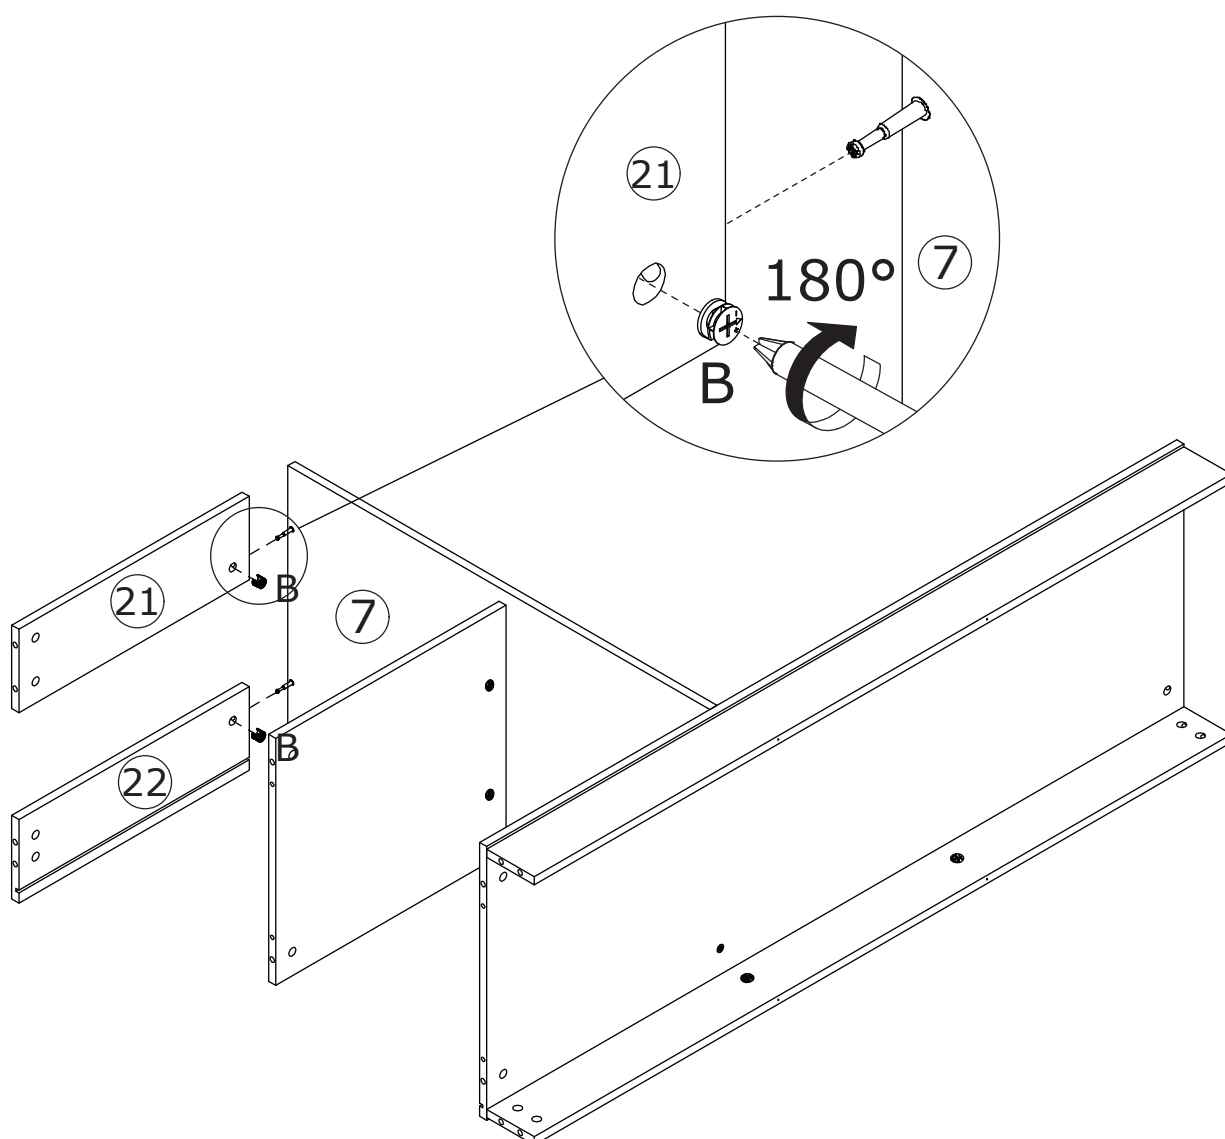


9

B x 12









Ø 12 x 10 mm


 
E x 4



M6 x 40 mm

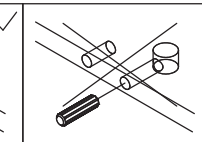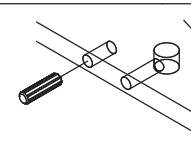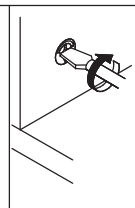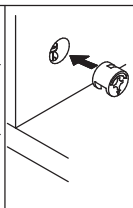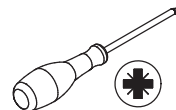     

  Attach panel 3 to panel 21, 22, 14, 7 and 8 using wooden dowel(E), add cam lock(B) into panel 21, 22, 14, 7, 8 and turn clockwise to tighten as shown.



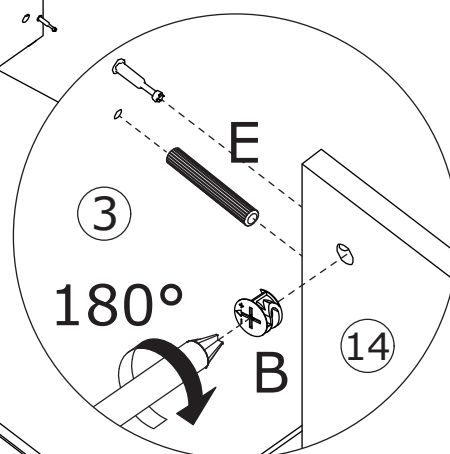
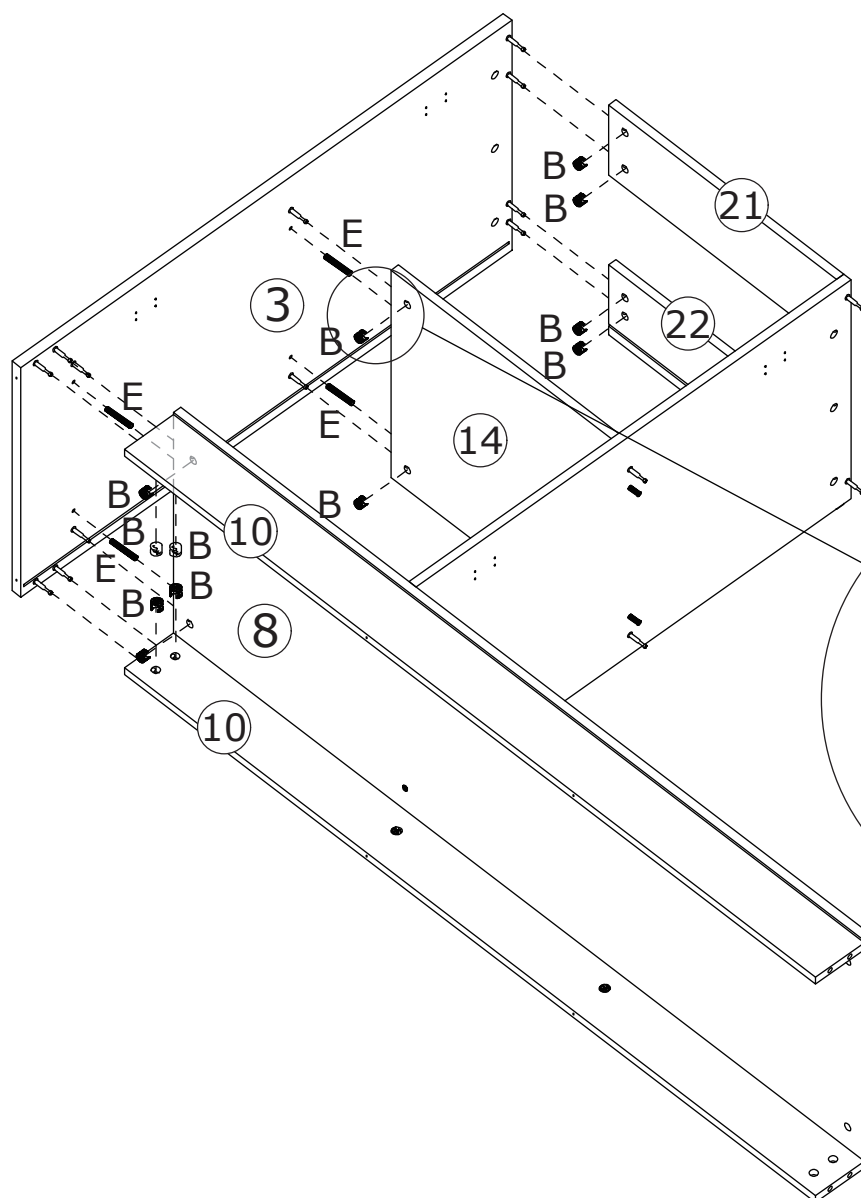


# 10


B x 2



    Ø 12 x 10 mm

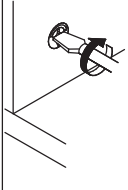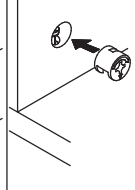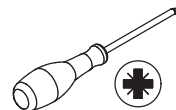

 Attach panel 13 to panel 7 using wooden dowel(S), add cam lock(B) into panel 13 and turn clockwise to tighten as shown.



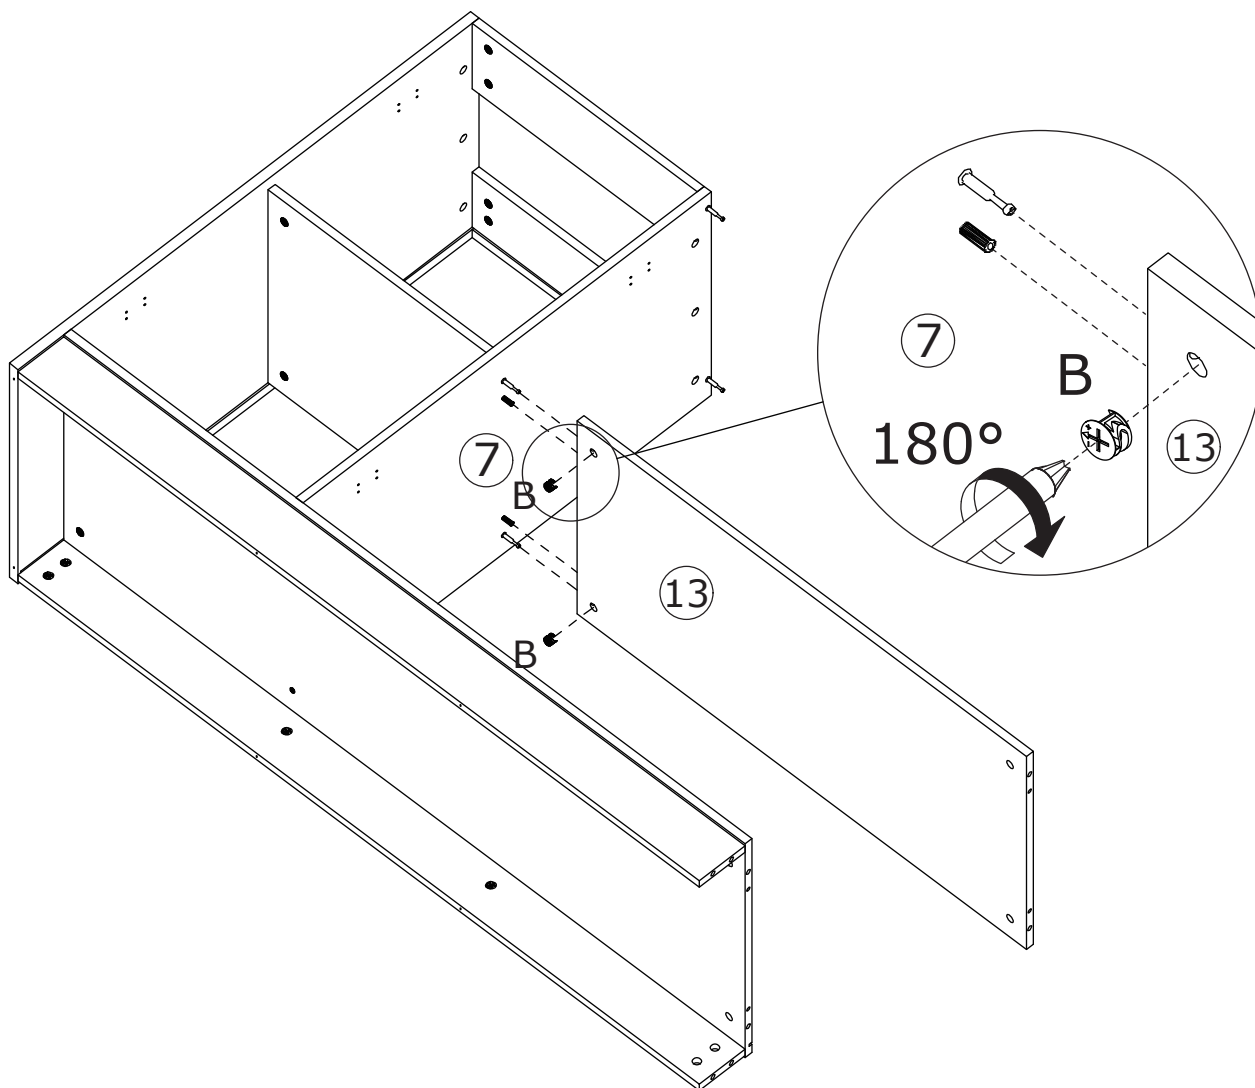


# 11


B x 2



   Ø 12 x 10 mm

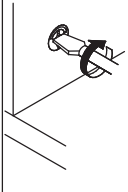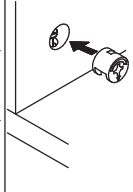

 
Attach panel 15 and 16 to panel 7,  
add cam lock(B) into panel 15, 16  
and turn clockwise to tighten as shown.

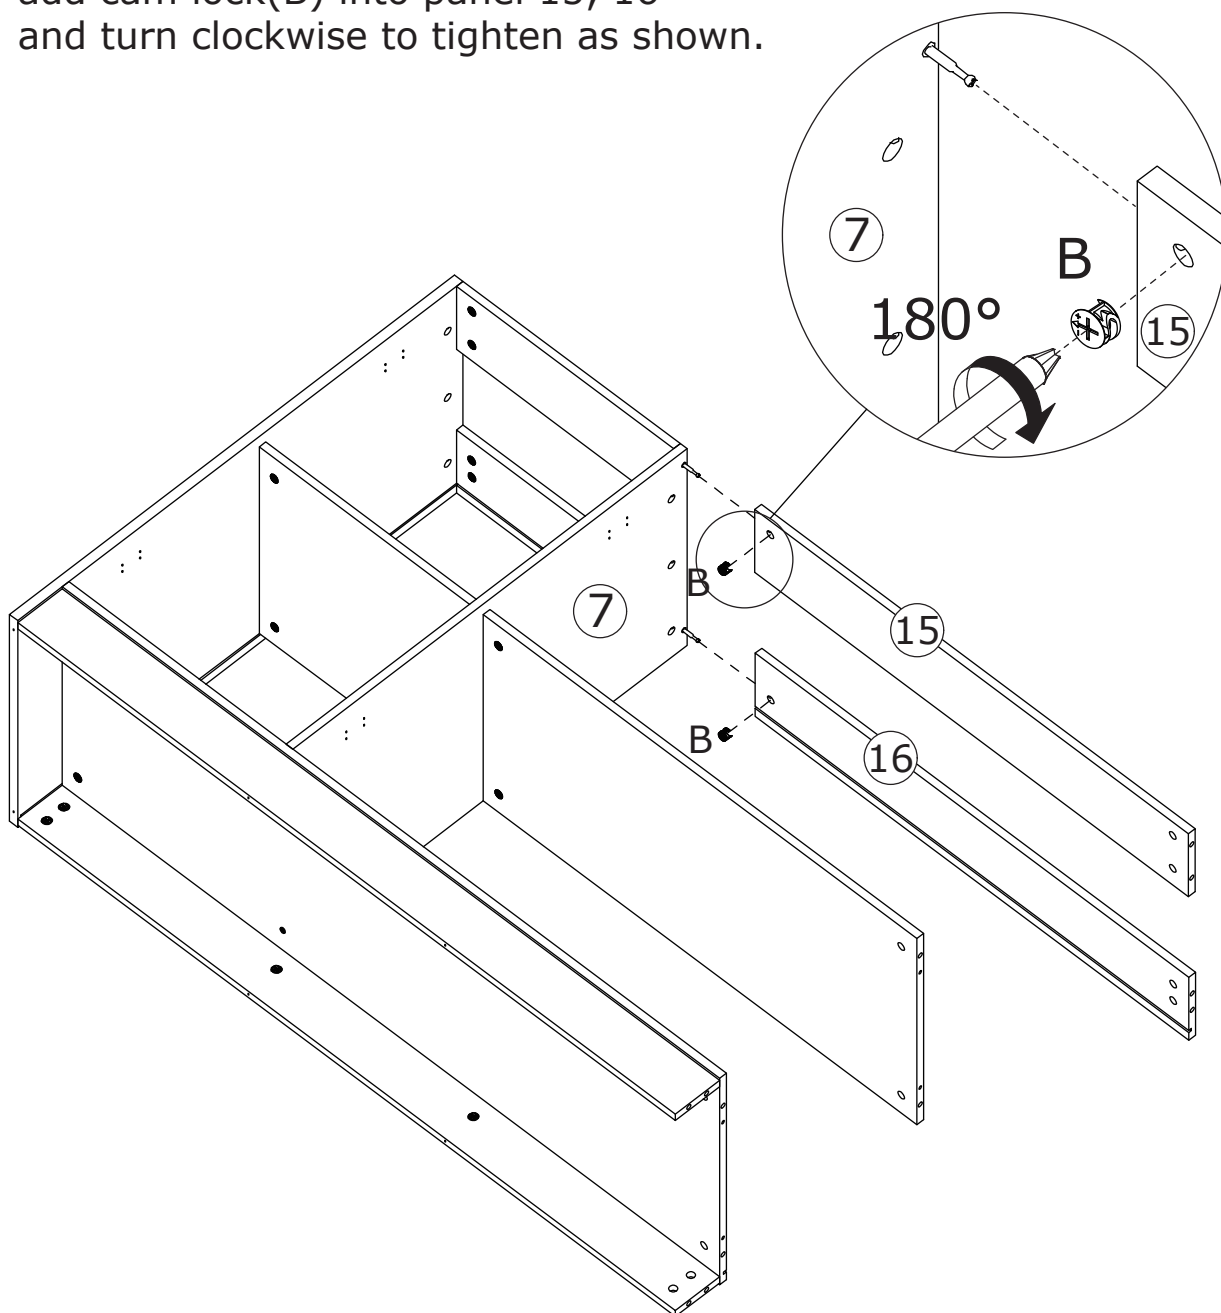



# 12

 Insert back panel 34 along available grooves as shown.

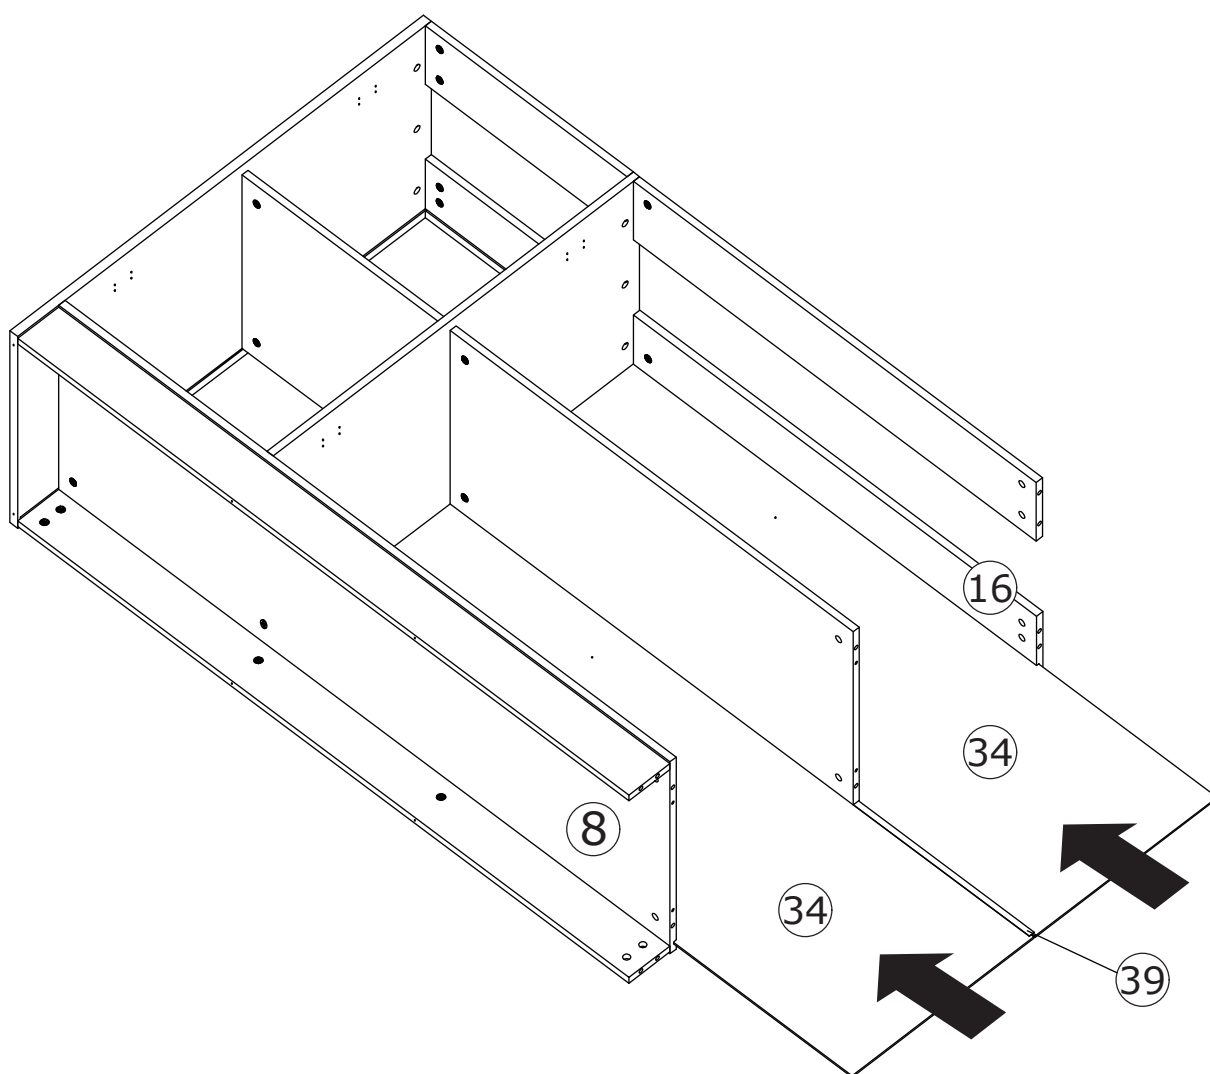


# 13

B x 12









Ø 12 x 10 mm

        
 
E x 4





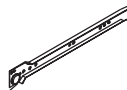
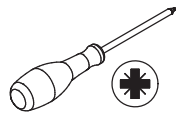
M6 x 40 mm

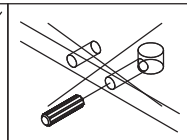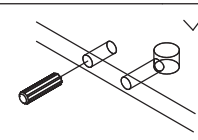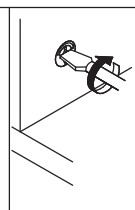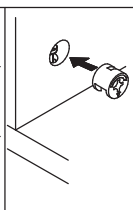
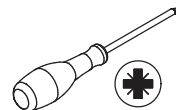


Attach panel 4 to panel 15, 16, 13, 7 and 8 using wooden dowel(E), add cam lock(B) into panel 15, 16, 13, 7, 8 and turn clockwise to tighten as shown.

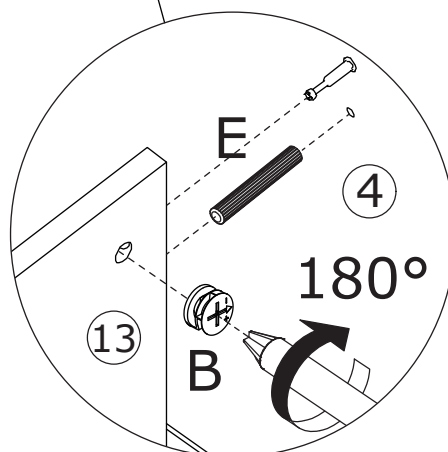
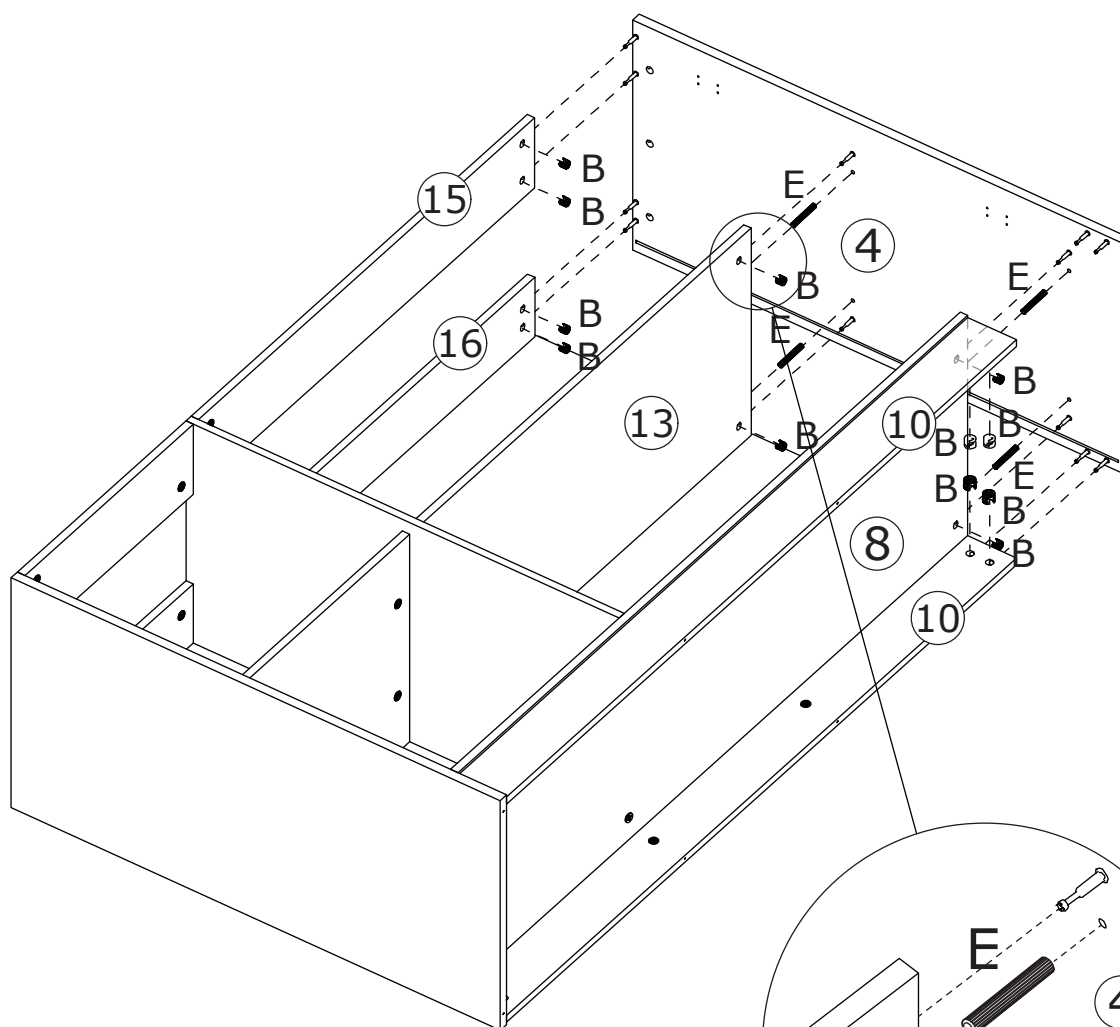


# 14

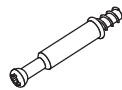    

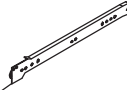
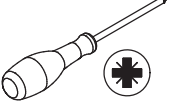
<p>A x 16</p>  <p>M6 x 35 mm</p>	<p>D x 2</p>  <p>M3 x 12 mm</p>	<p>F x 1</p>  <p>CL</p>	
---	--	--	---

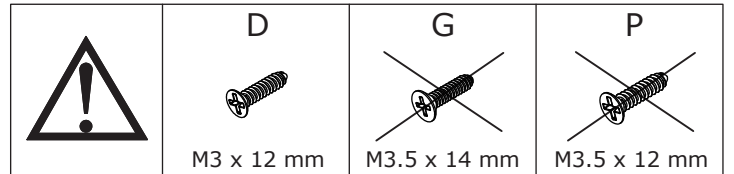
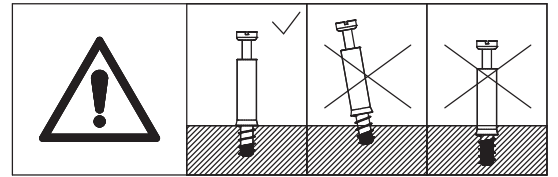


Screw eccentric rod(A)  
into panel 1 at first.  
Fix rail(F-CL) to panel 1  
using screw(D) as shown.

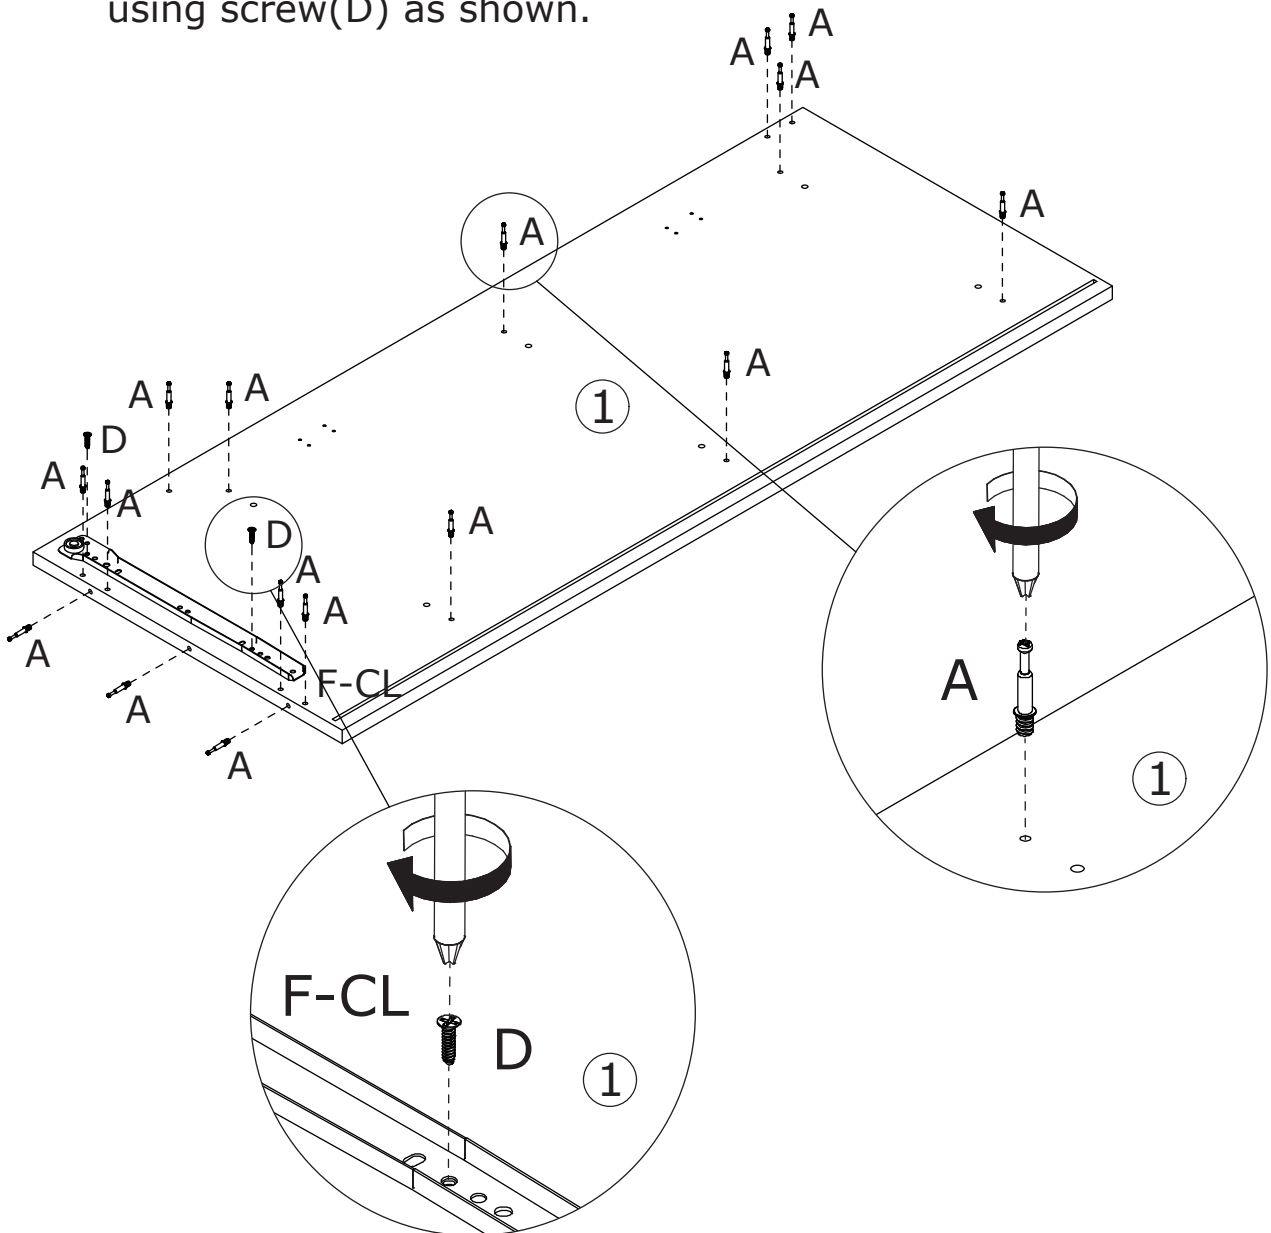
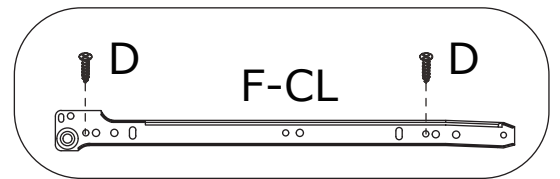


# 15



 
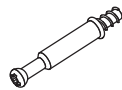 
<p>A x 16</p>  <p>M6 x 35 mm</p>	<p>D x 2</p>  <p>M3 x 12 mm</p>	<p>F x 1</p>  <p>CR</p>	
---	--	--	---

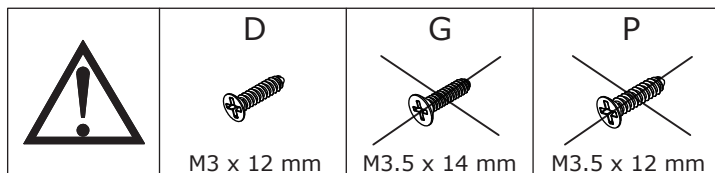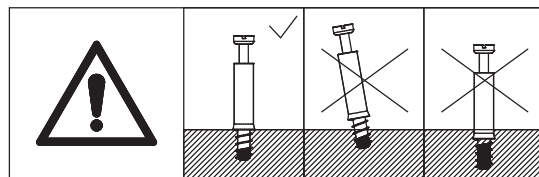

 
 
Screw eccentric rod(A)  
into panel 2 at first.  
Fix rail(F-CR) to panel 2  
using screw(D) as shown.

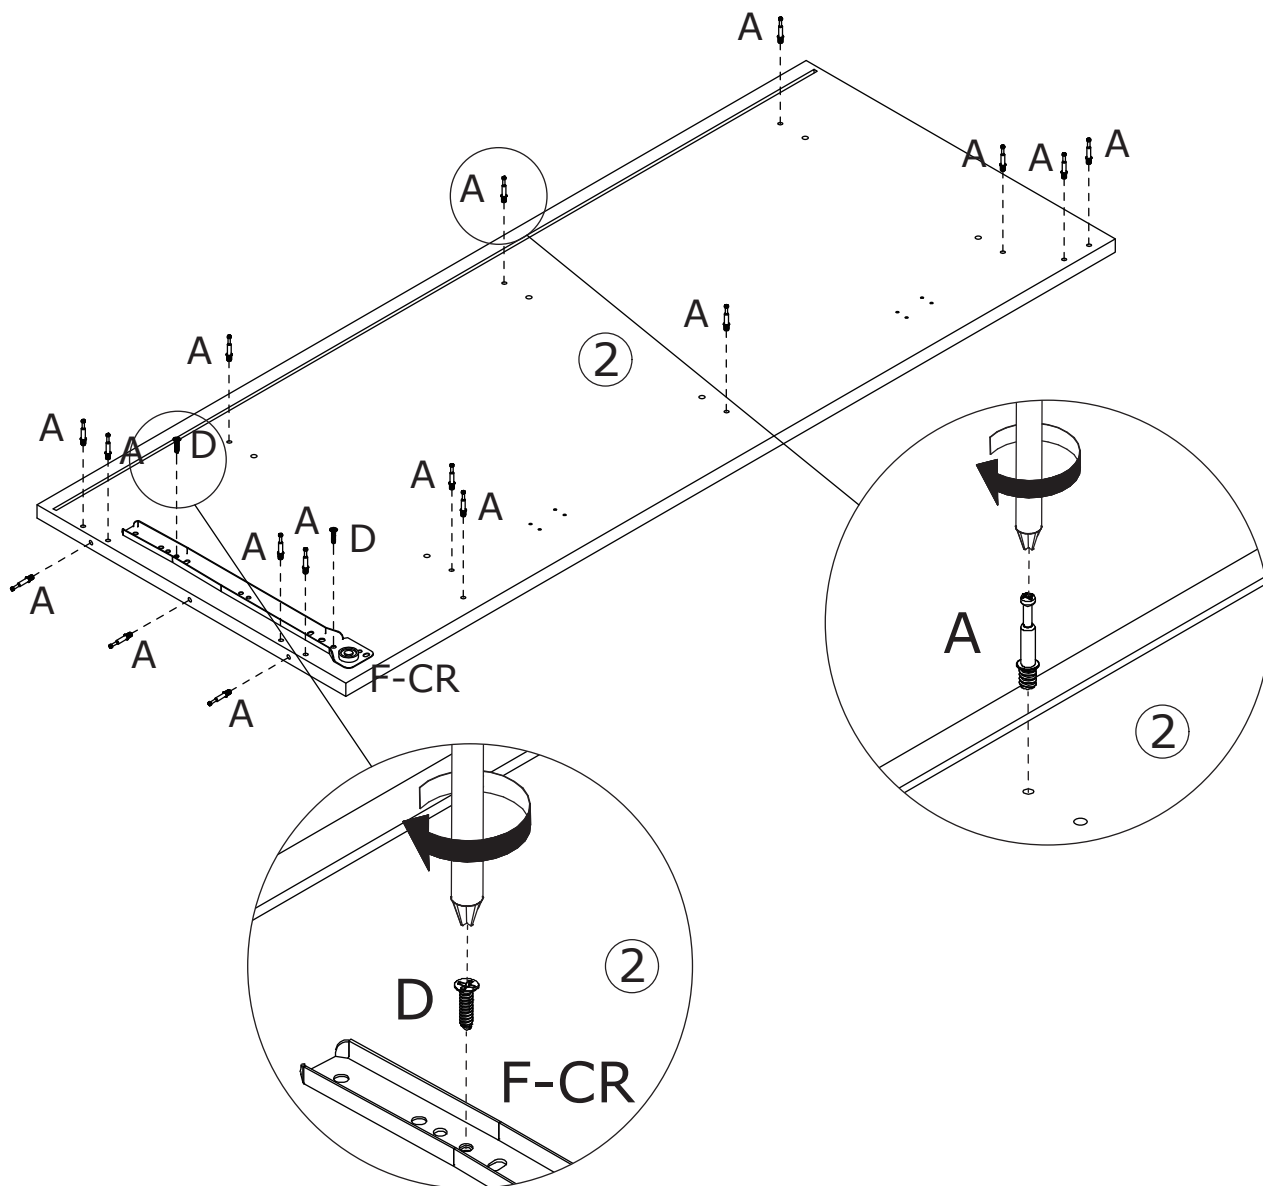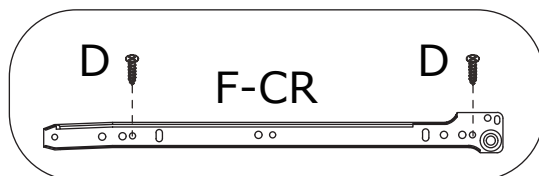

# 16

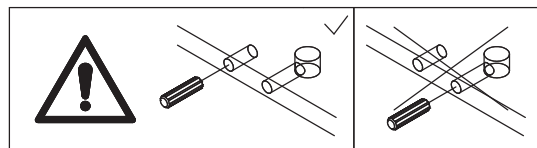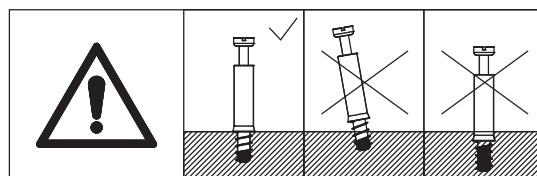  
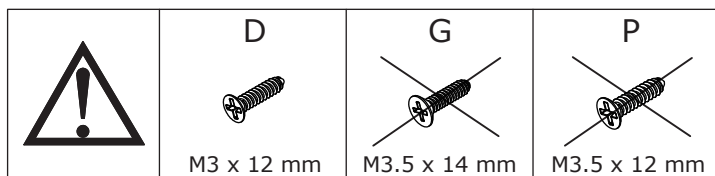 
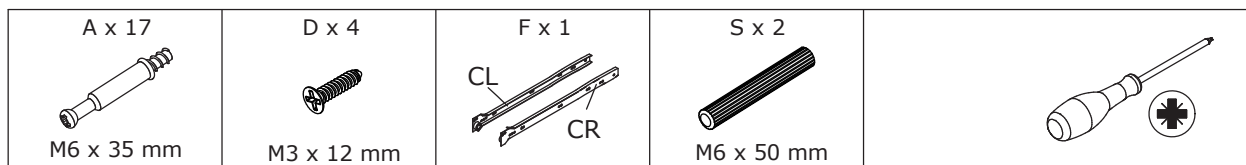 


  Screw eccentric rod(A) into panel 6 and fix rail(F-CR) with screw(D) at first. Flip to back, screw eccentric rod(A) and fix rail(F-CL) as shown. Insert the wooden tip(S) into panel 6 as shown in the figure.

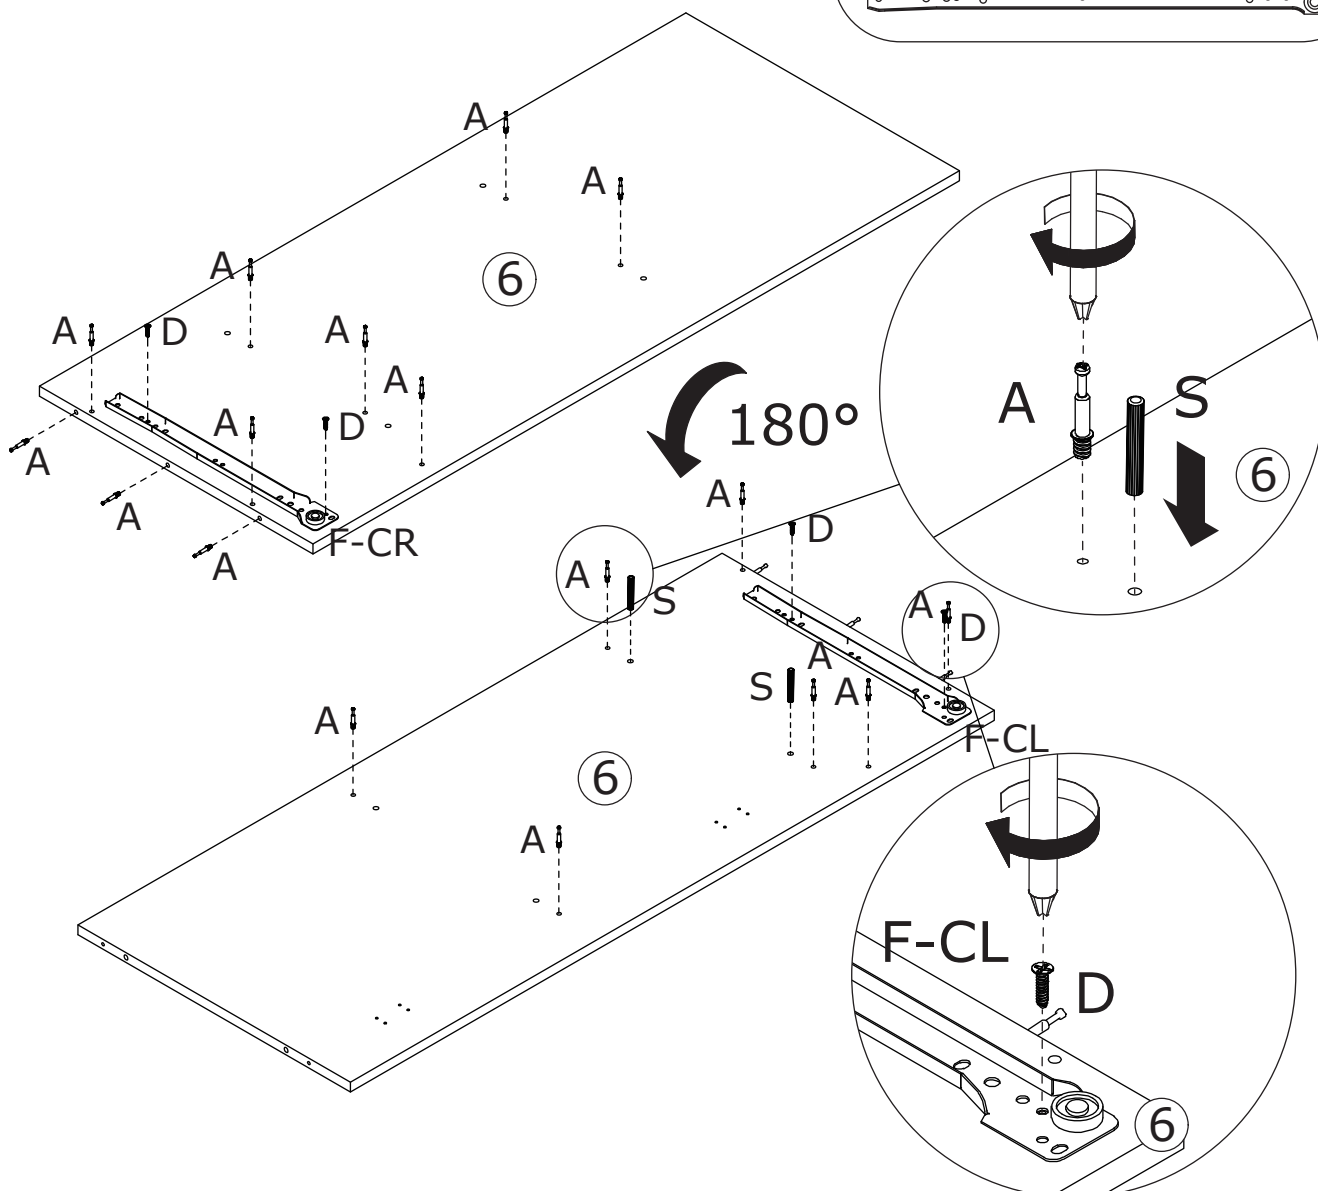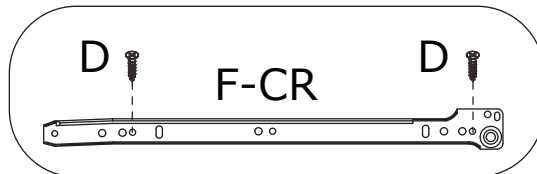


17

   A x 5  
M6 x 35 mm

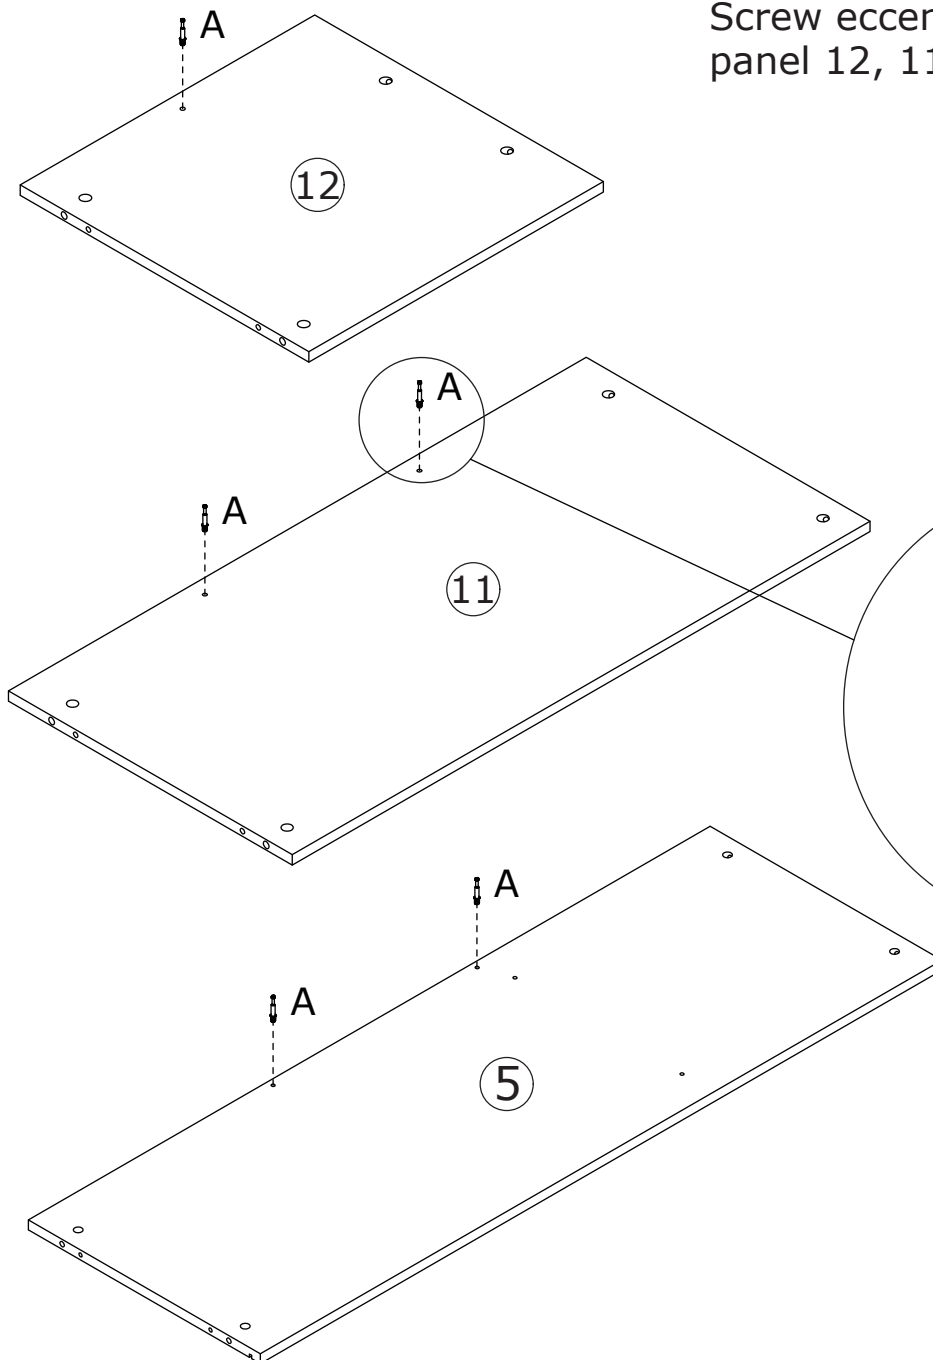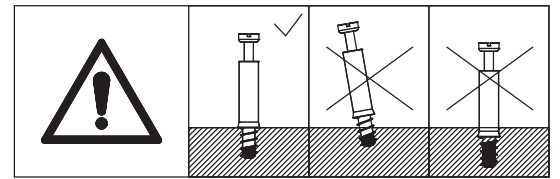

 Screw eccentric rod(A) into panel 12, 11 and 5 at first.




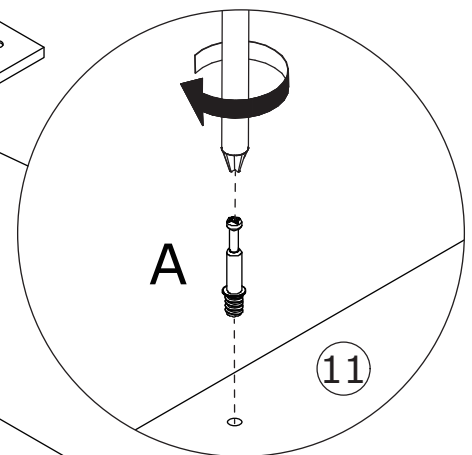


# 18



B x 5



    Ø 12 x 10 mm

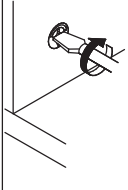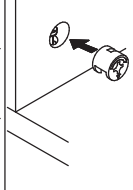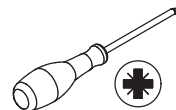

  Attach panel 20 to panel 12; panel 19 to panel 11; panel 9 to panel 5, add cam lock(B) into and turn clockwise to tighten as shown.

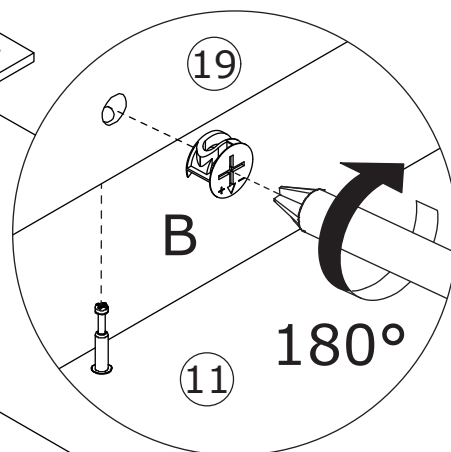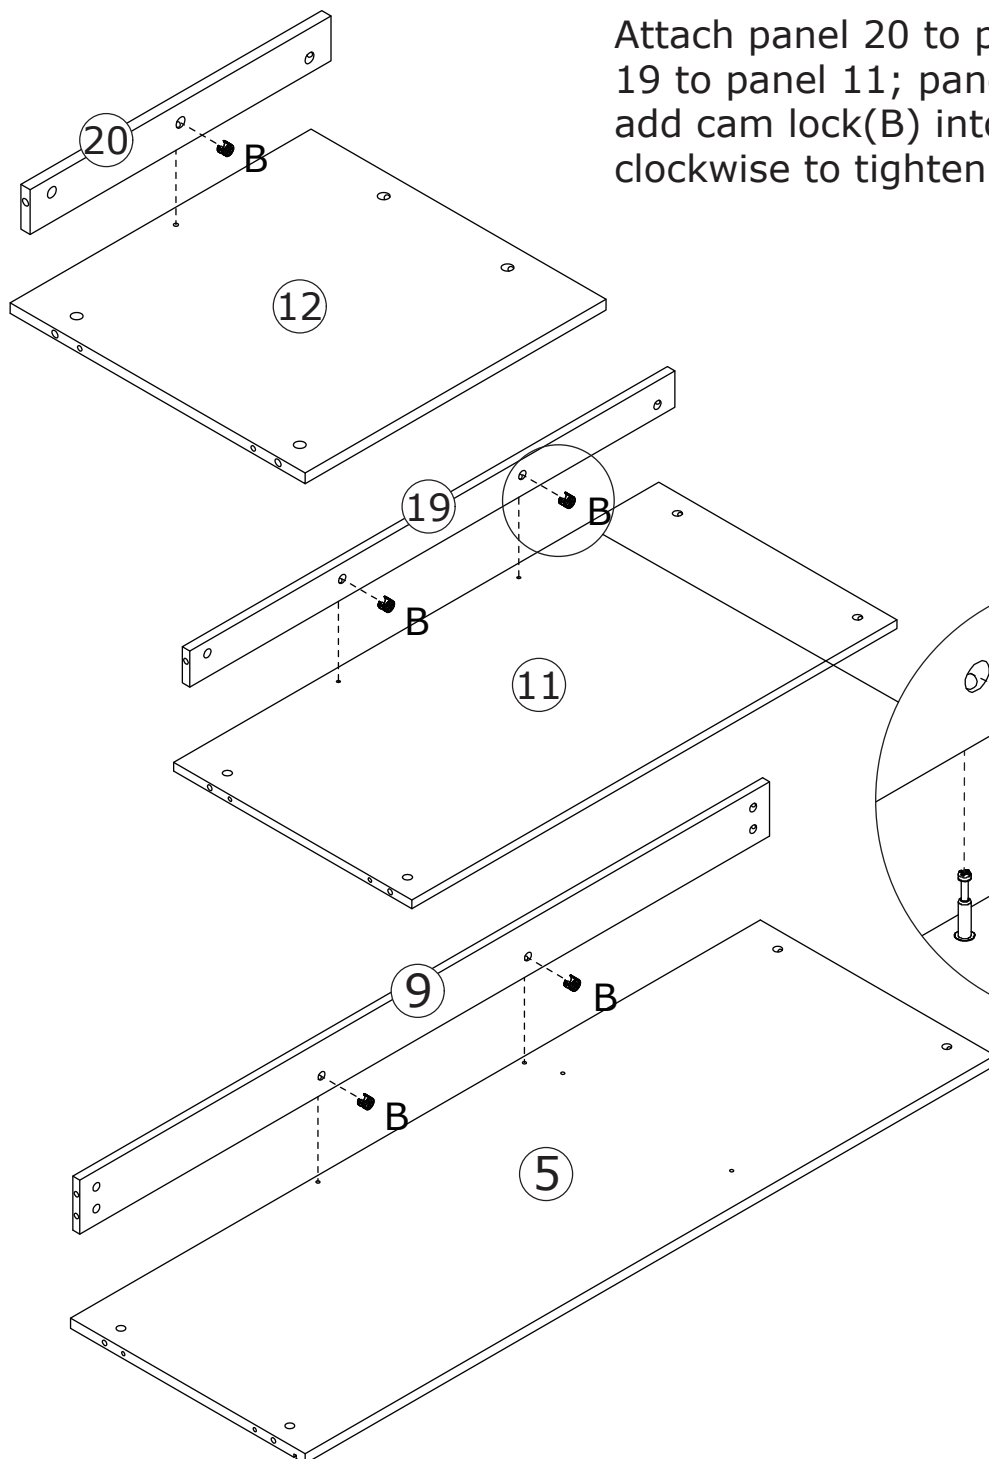


# 19

C x 2




M5 x 40 mm




 
E x 2



M6 x 40 mm

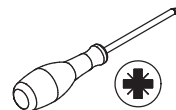

    Attach panel 6 to panel 5 using wooden dowel(E), and fix with screw(C) as shown.

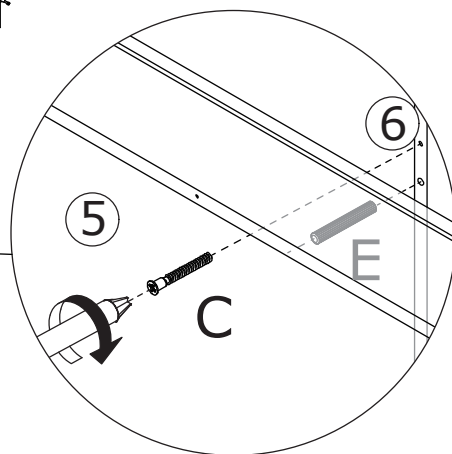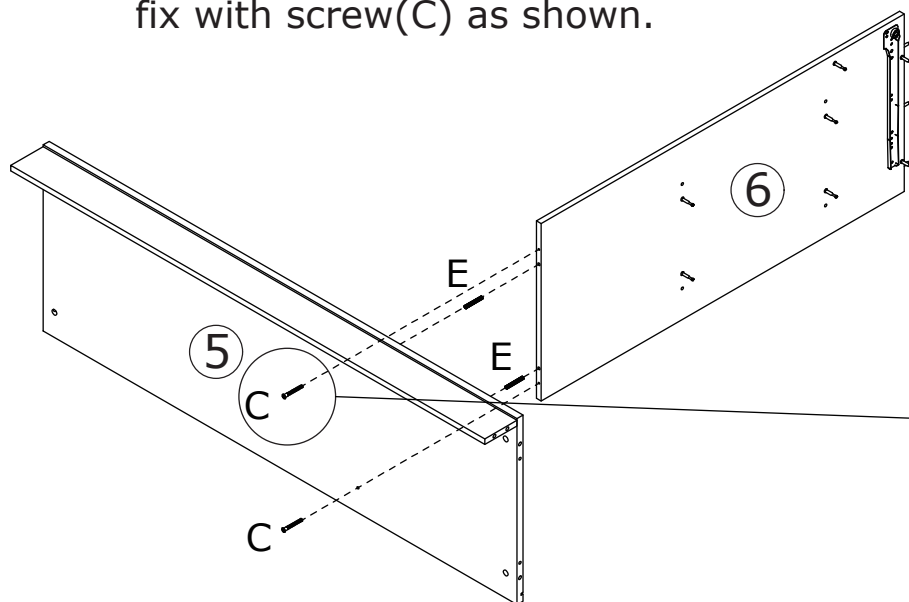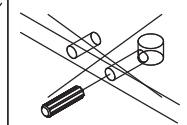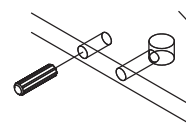


# 20






B x 2



 Ø12 x 10 mm



     Attach panel 23 and 24 to panel 6, add cam lock(B) into and turn clockwise to tighten as shown.

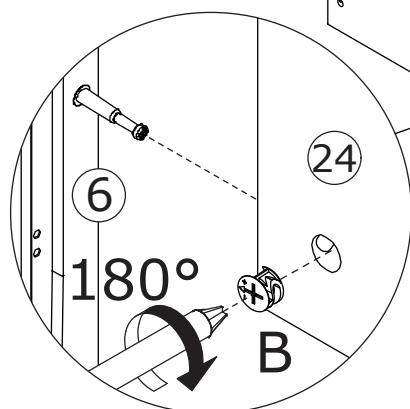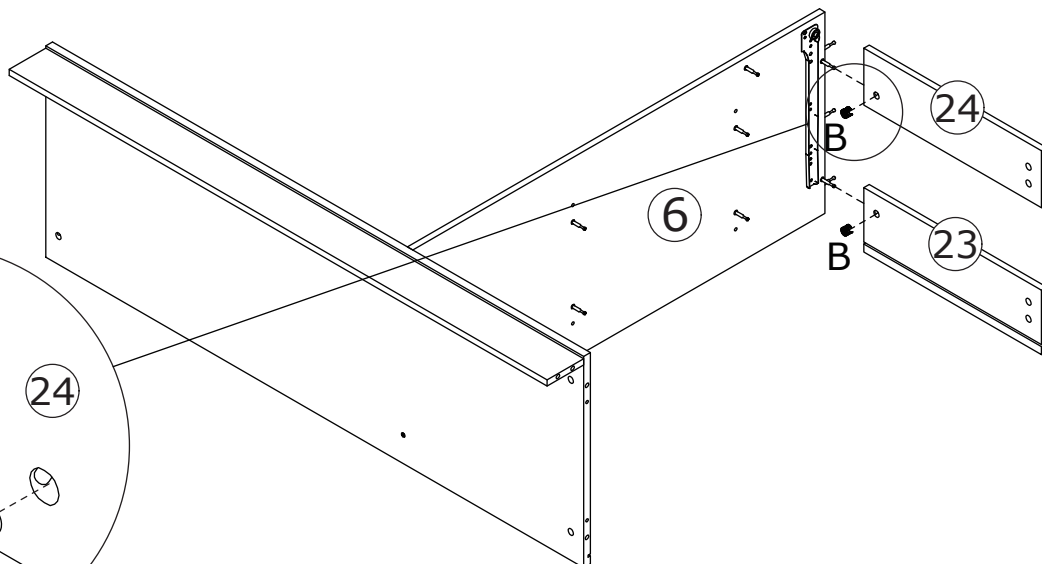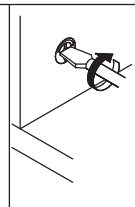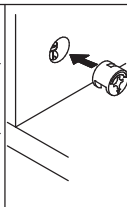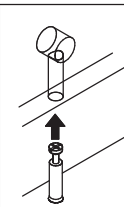



# 21

 
 
 
B x 2



Ø 12 x 10 mm



Attach panel 14 to panel 6 using wooden dowel(S), add cam lock(B) into and turn clockwise to tighten as shown.

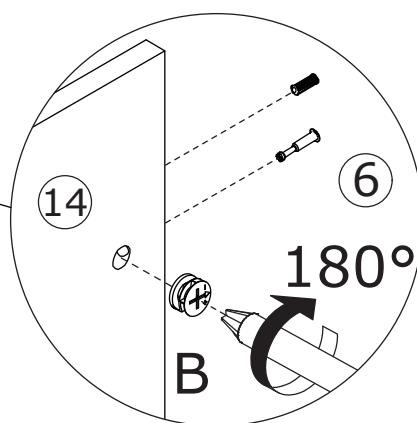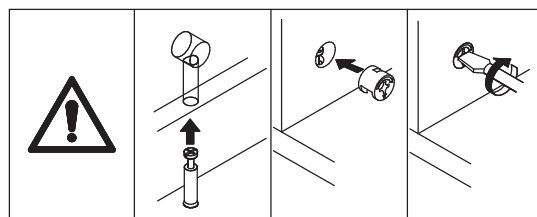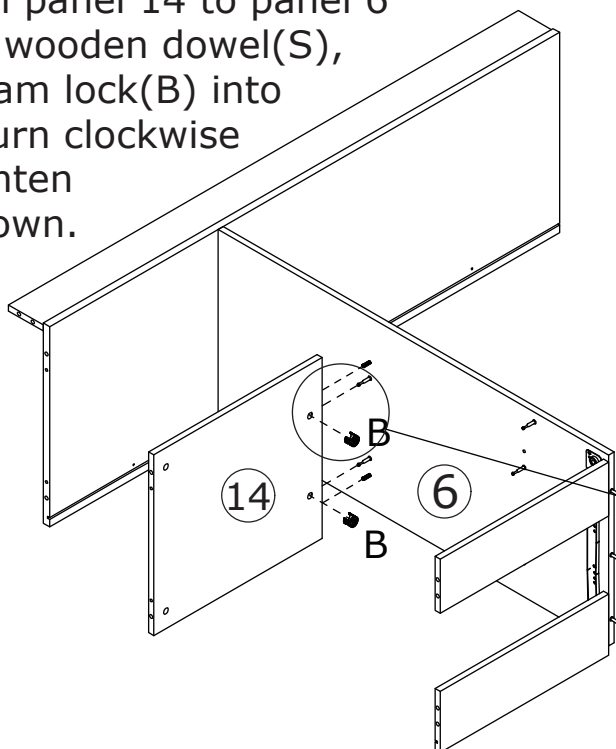


# 22




B x 3



 Ø 12 x 10 mm



   Attach panel 12 and 20 to panel 6 using wooden dowel(S), add cam lock(B) into and turn clockwise to tighten as shown.

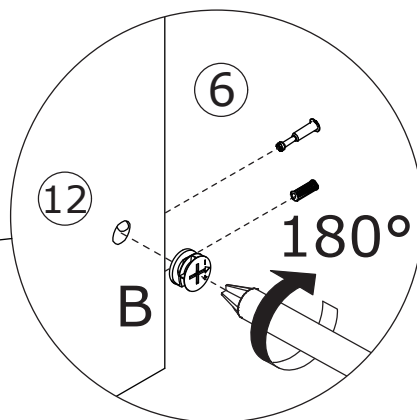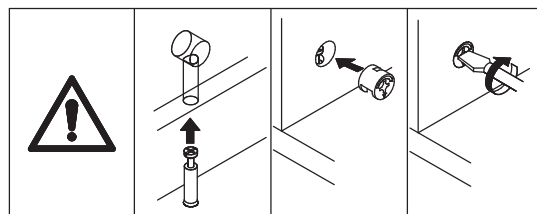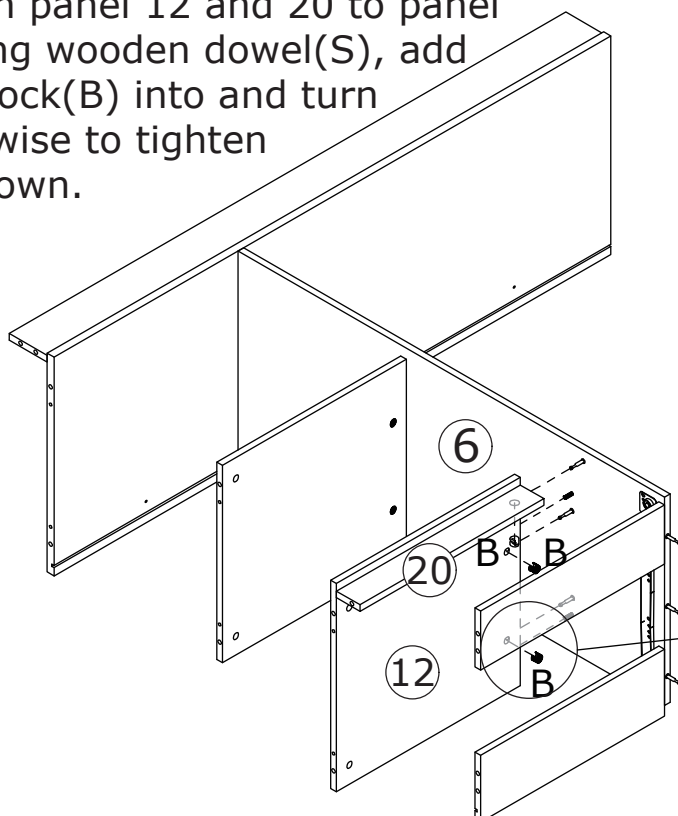


# 23

B x 13









Ø 12 x 10 mm


 
E x 6



M6 x 40 mm

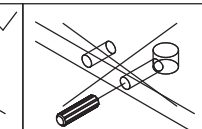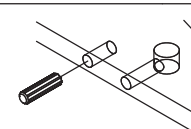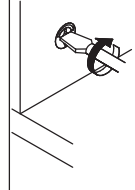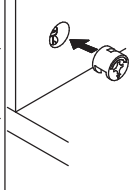      

  Attach panel 1 to panel 9, 5, 14, 12, 20, 23 and 24 using wooden dowel(E), add cam lock(B) into and turn clockwise to tighten as shown.

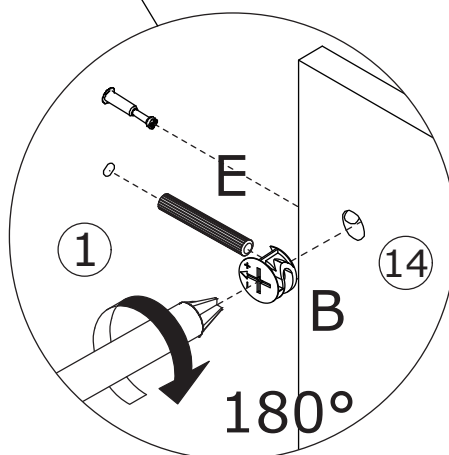
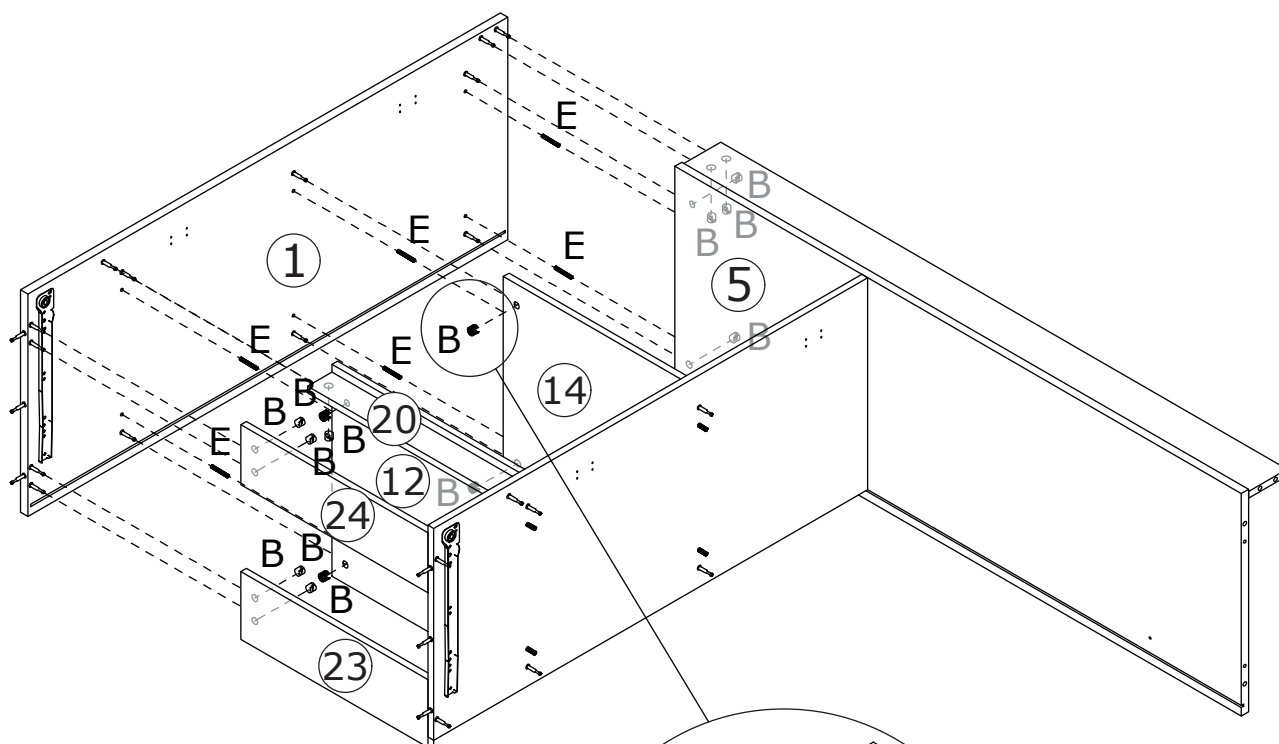


24


B x 2



 Ø 12 x 10 mm

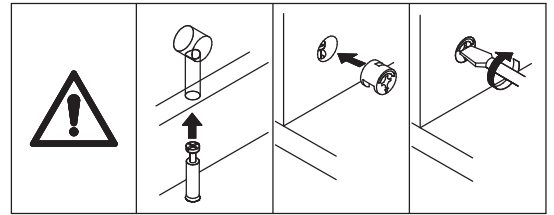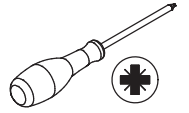

 Attach panel 13 to panel 6 using wooden dowel(S), add cam lock(B) into and turn clockwise to tighten as shown.




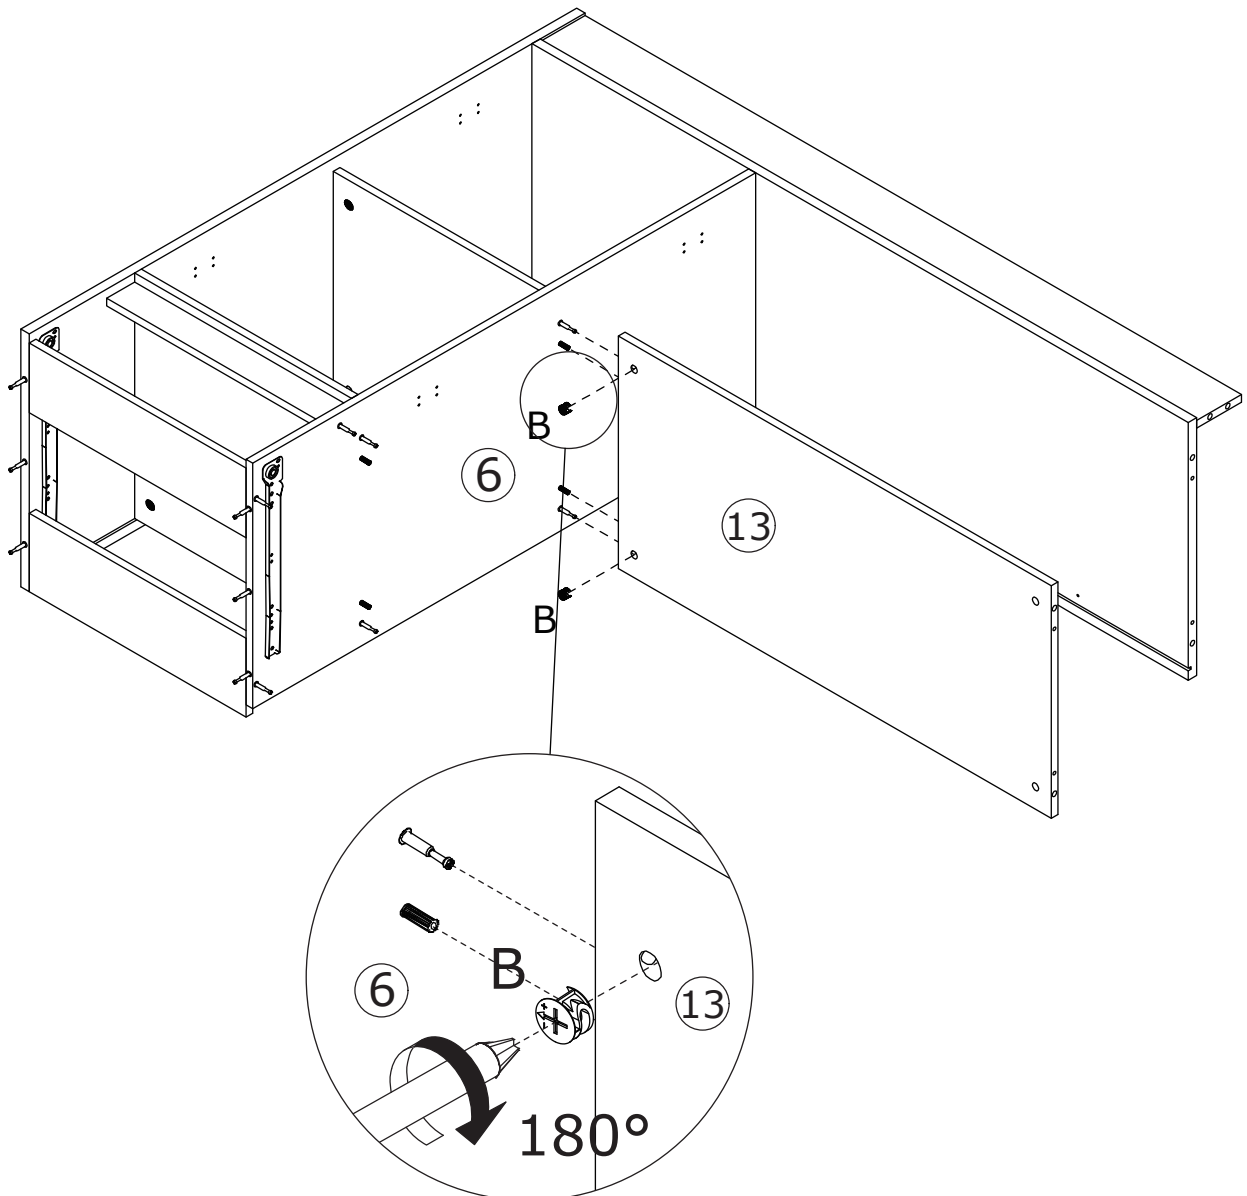


# 25



B x 3



    Ø 12 x 10 mm

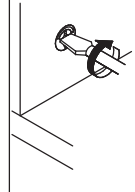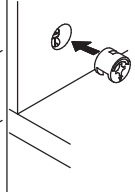

  Attach panel 11 and 19 to panel 6  
using wooden dowel(S), add cam lock(B)  
into and turn clockwise to tighten as shown.

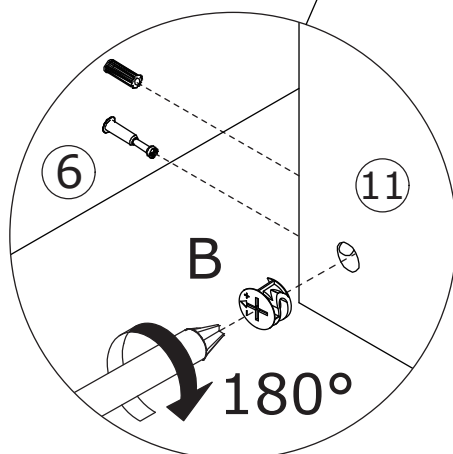
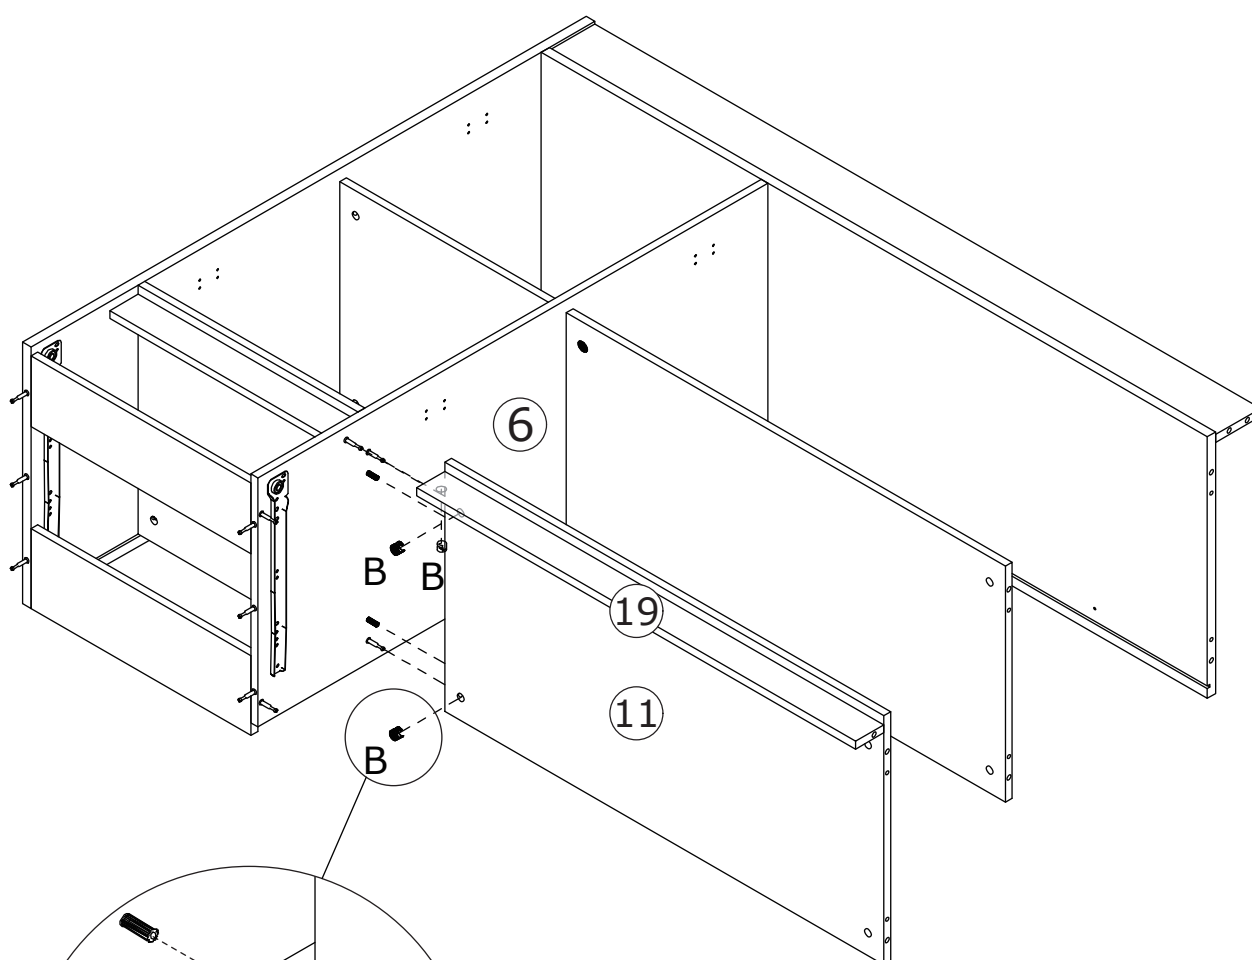


# 26


B x 2



  Ø 12 x 10 mm

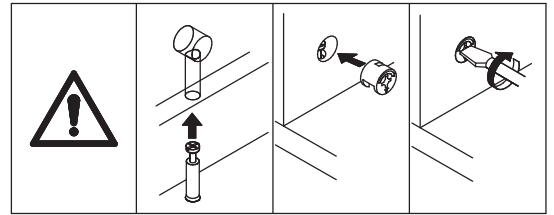


 Attach panel 17 and 18 to panel 6,  
add cam lock(B) into and turn  
clockwise to tighten as shown.

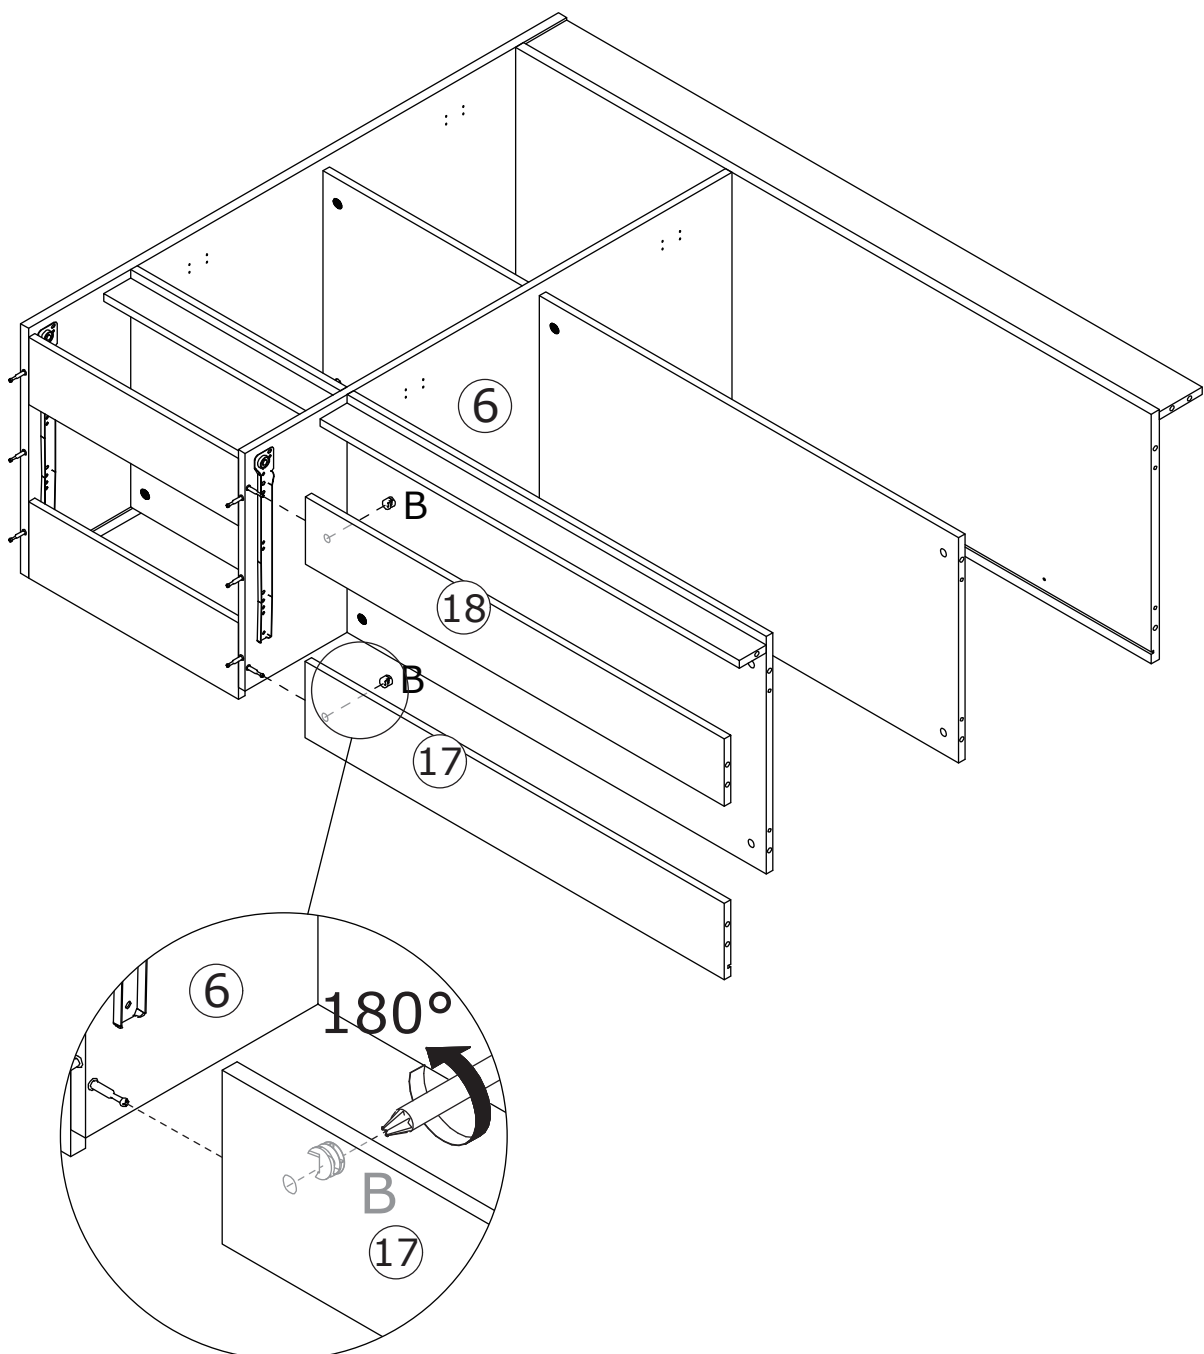

27

 Insert back panel 33, 40 and plank 39 along available grooves as shown.

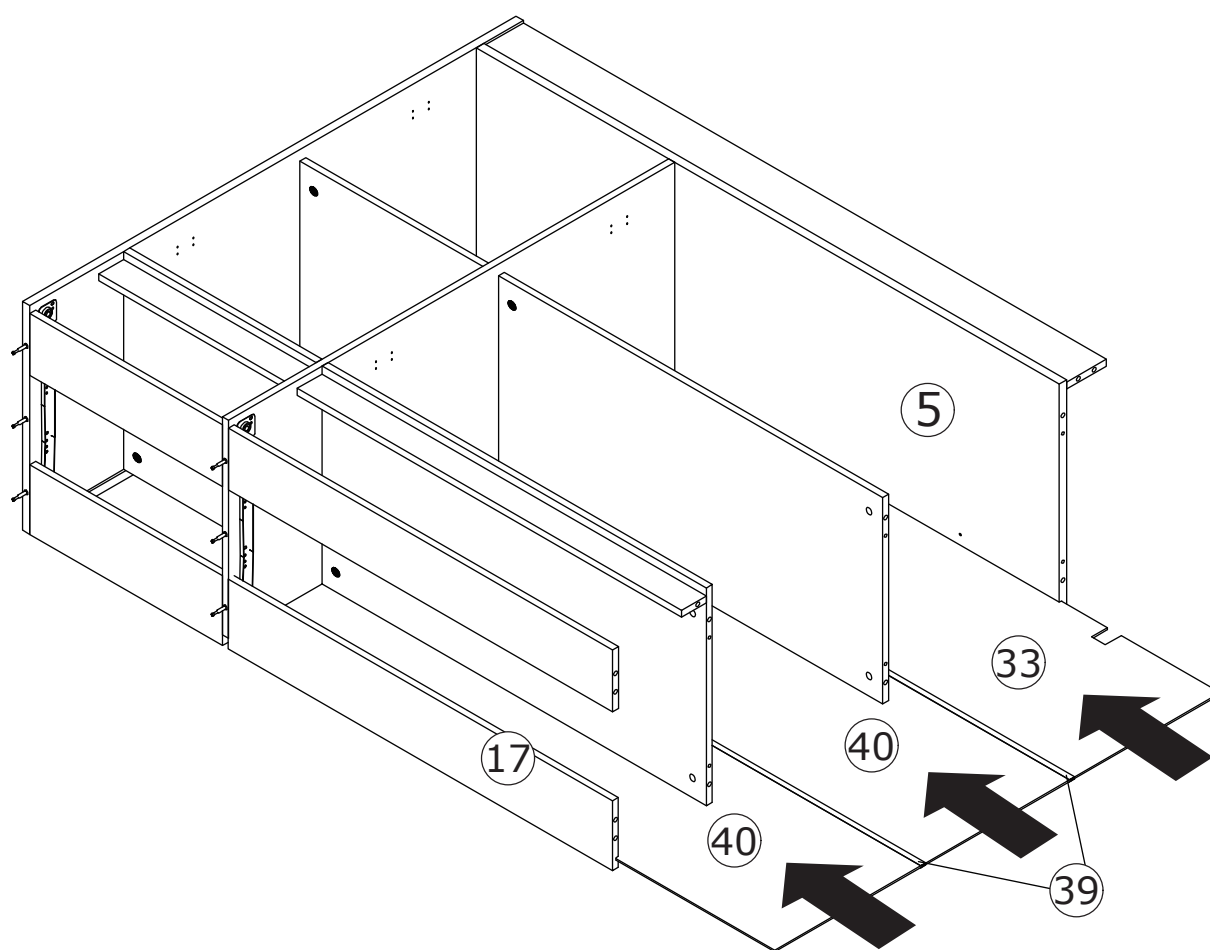


# 28

B x 13









Ø 12 x 10 mm


 
E x 6



M6 x 40 mm

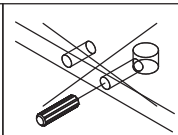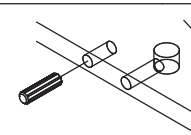      

  Attach panel 2 to panel 9, 5, 13, 11, 19, 17 and 18 using wooden dowel(E), add cam lock(B) into and turn clockwise to tighten as shown.

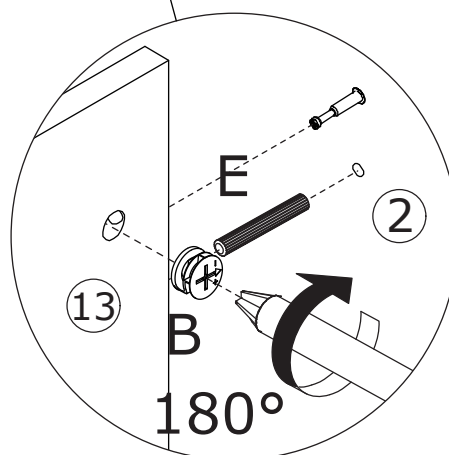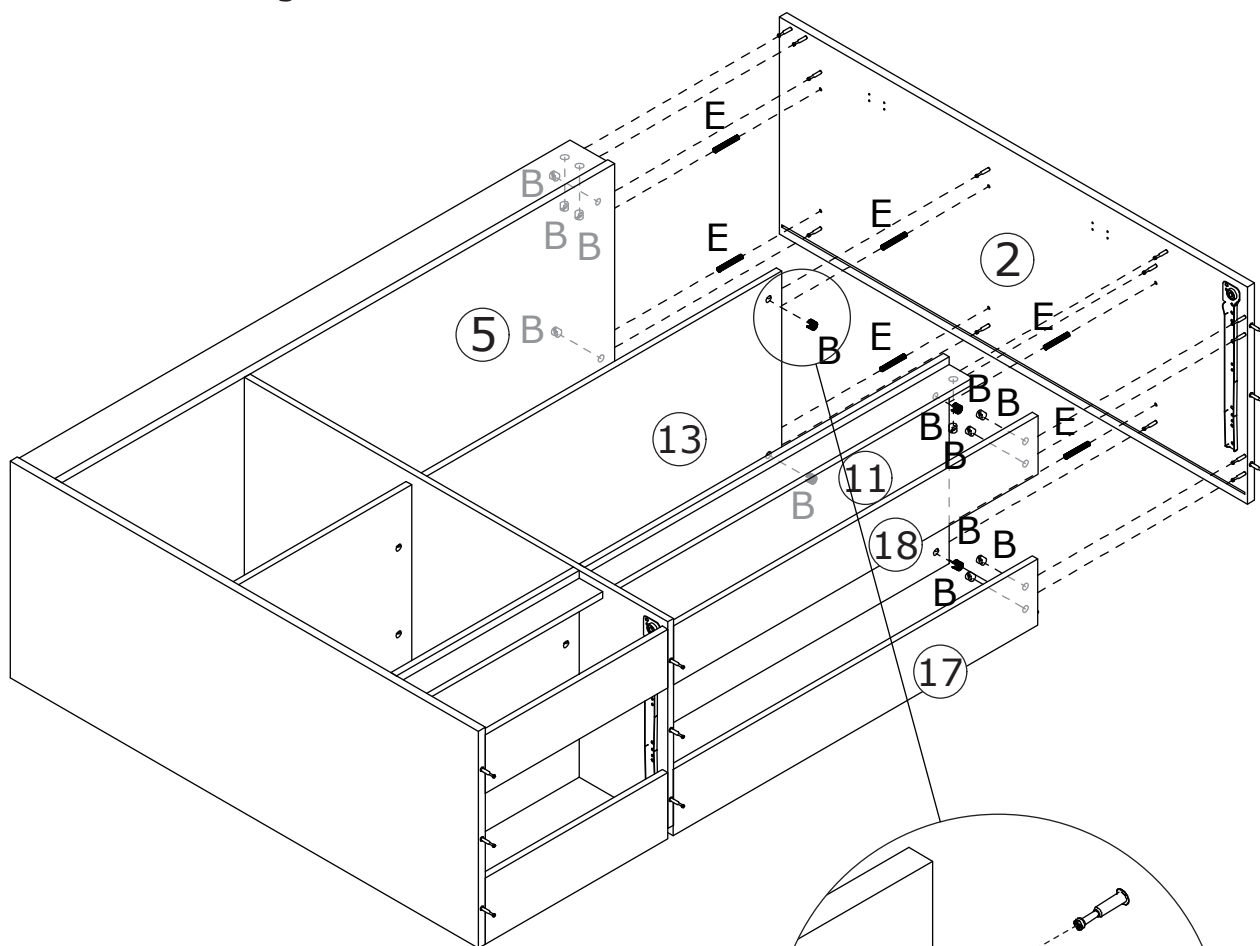


29



B x 9



 Ø 12 x 10 mm



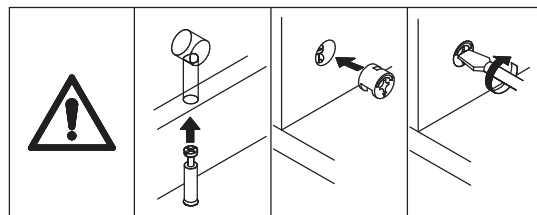


  Connect the two components,  
add cam lock(B) into and turn  
clockwise to tighten as shown.

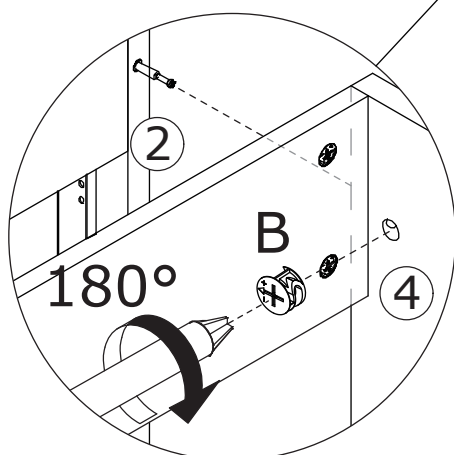
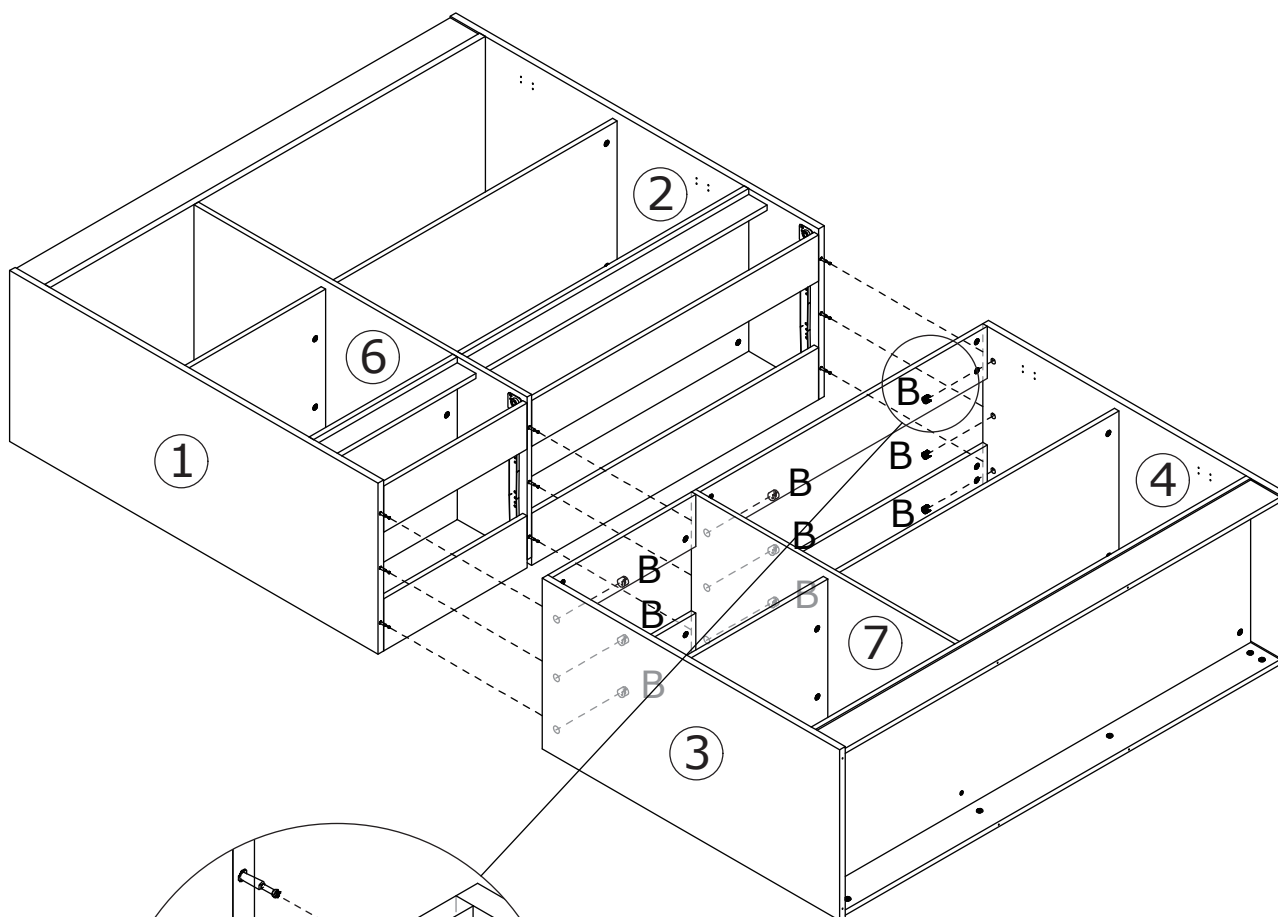







30

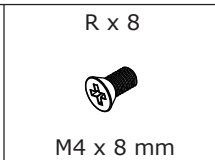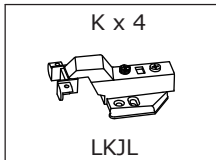   

 
 
Fix hinge(K) to glass panel 37 with screw(R) as shown.

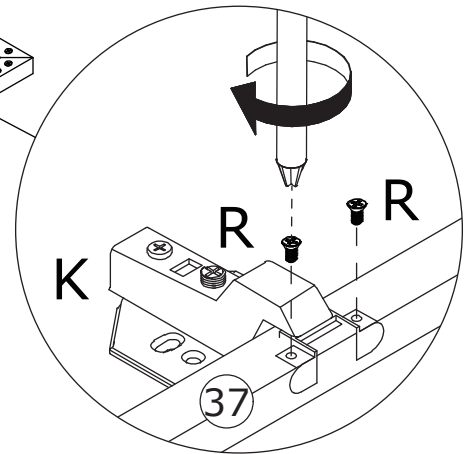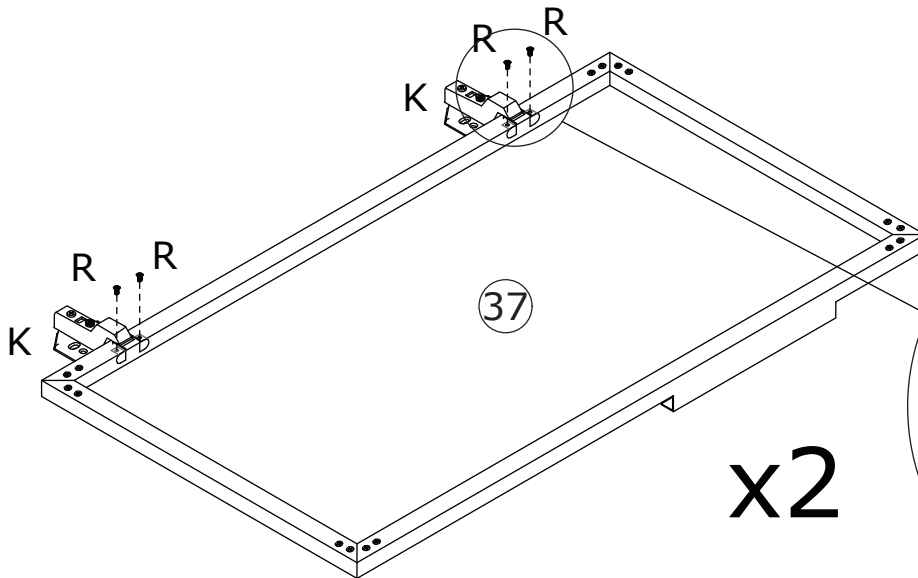

31

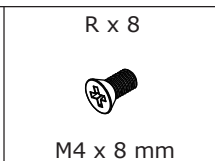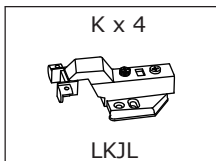     
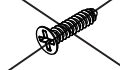
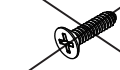



Fix hinge(K) to glass panel 38 with screw(R) as shown.

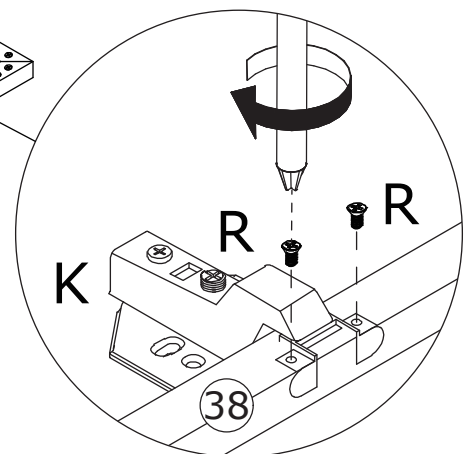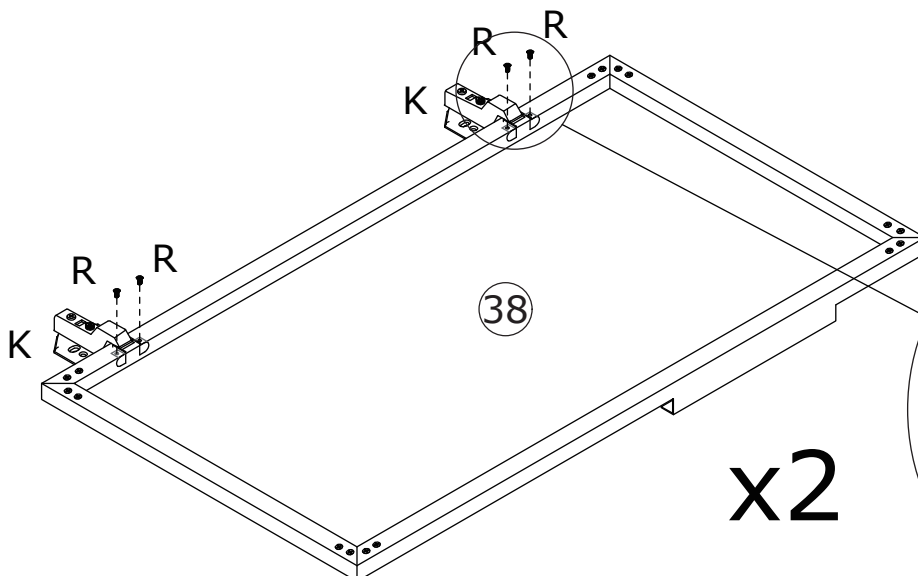


# 32
 
<p>J x 4</p>  <p>DWJL</p>	<p>P x 8</p>  <p>M3.5 x 12 mm</p>	
--	--	---



	<p>D</p>  <p>M3 x 12 mm</p>	<p>G</p>  <p>M3.5 x 14 mm</p>	<p>P</p>  <p>M3.5 x 12 mm</p>
---	---	--	--

Fix hinge(J) to panel 32 with screw(P) as shown.


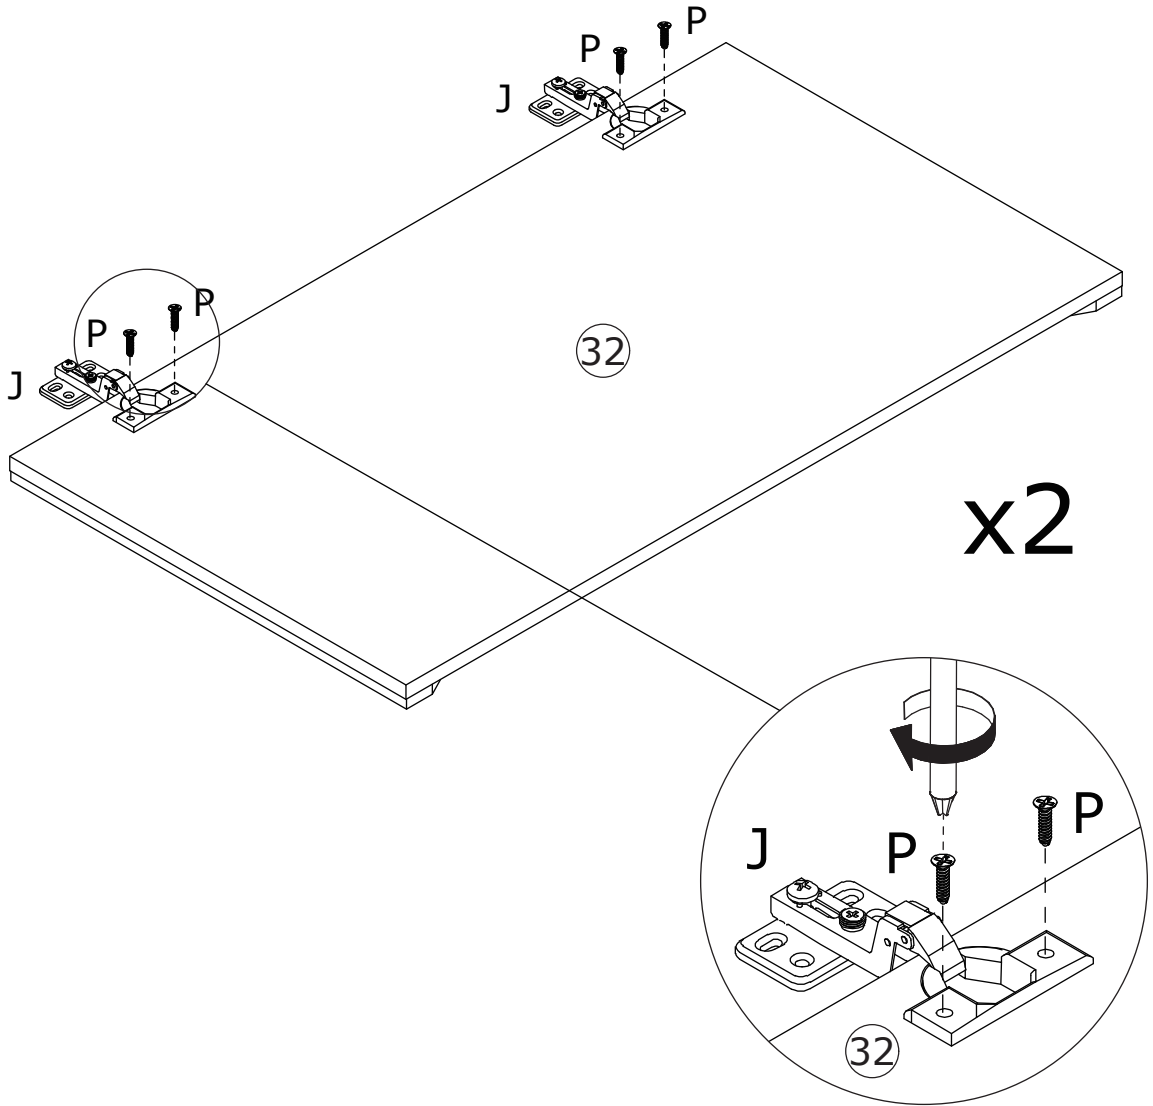


# 33

  P x 32  
M3.5 x 12 mm

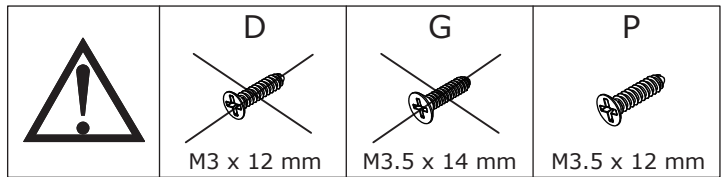


  Attach panel 37 and 38 to panel 1, 6 and 2, 3 by fixing hinge with screw(P) as shown.

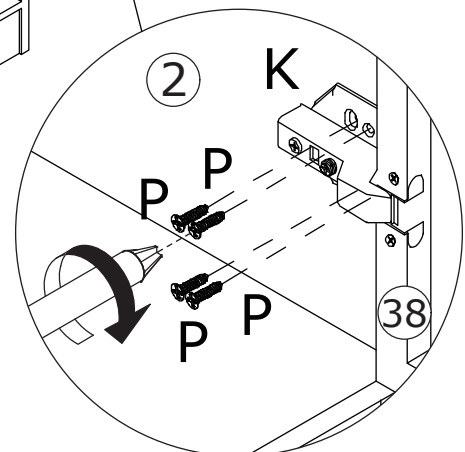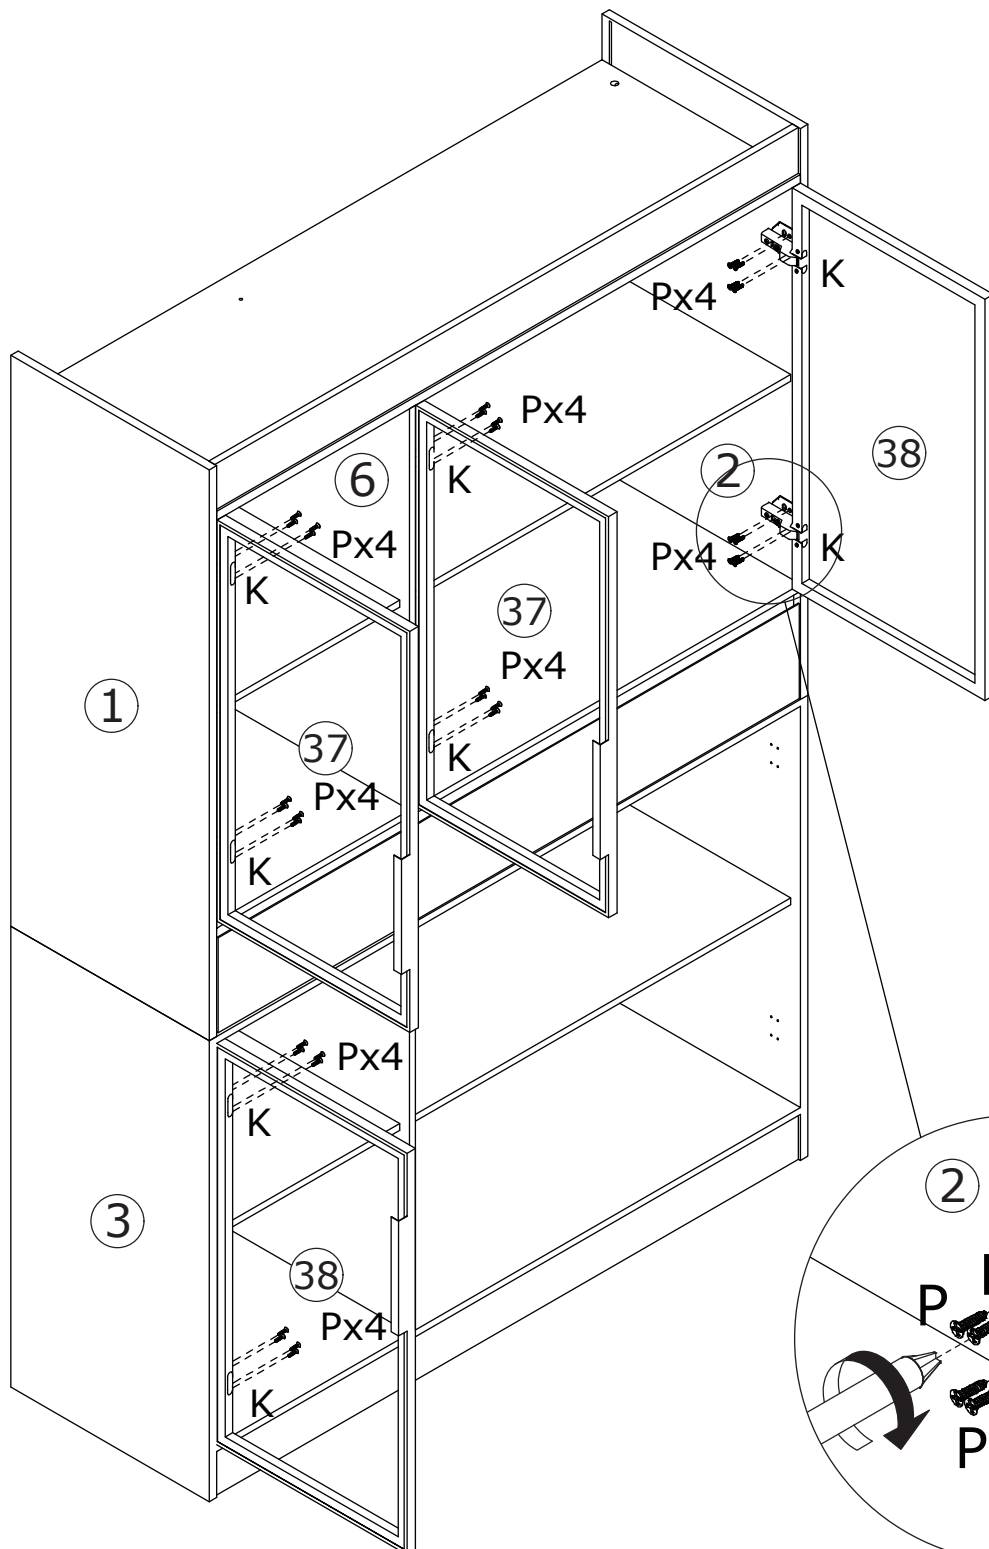


# 34


P x 16  
M3.5 x 12 mm

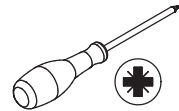

	 D M3 x 12 mm	 G M3.5 x 14 mm	 P M3.5 x 12 mm
--	---------------------	-----------------------	-----------------------

  Attach panel panel 32 to panel 4 and 7 by fixing hinge with screw(P) as shown.


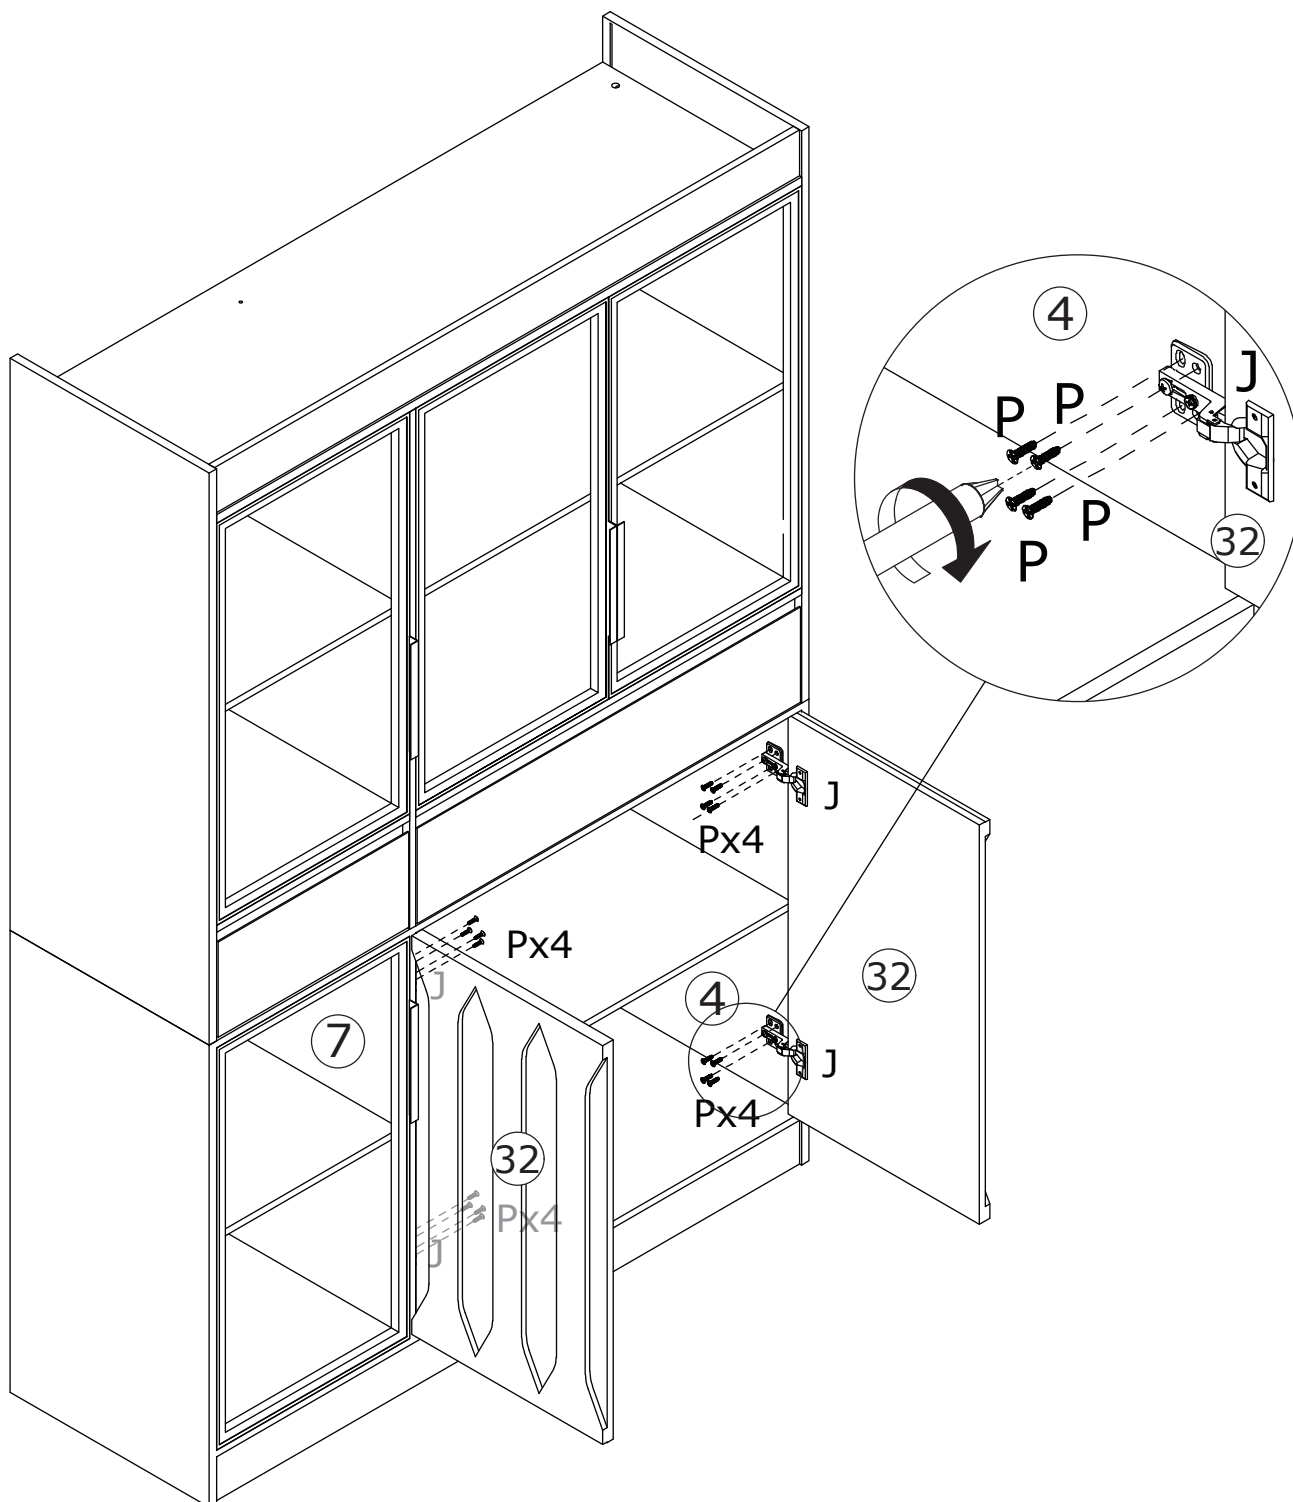


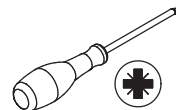


If doors are still not aligned if the hinges are properly correctly, please watch the video.

<https://youtu.be/n0Lb36SoODM>


 
 
If there is misalignment after you install, adjust the screw to the best condition

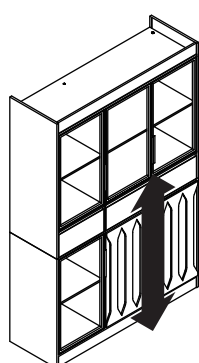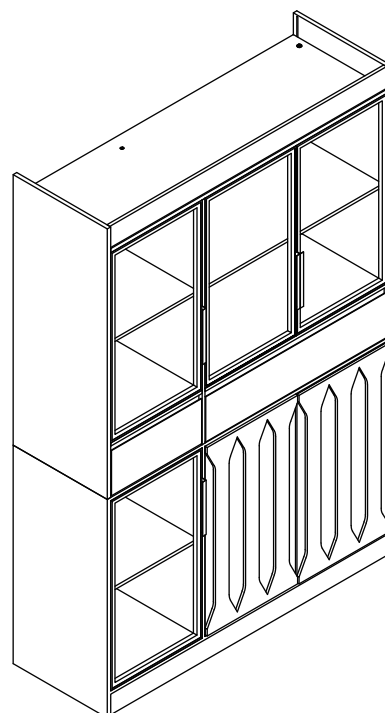


①

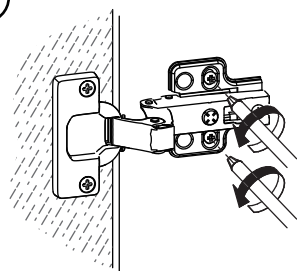 






②

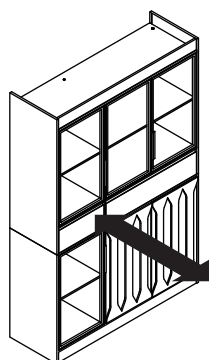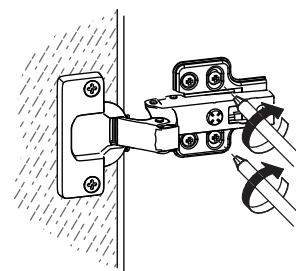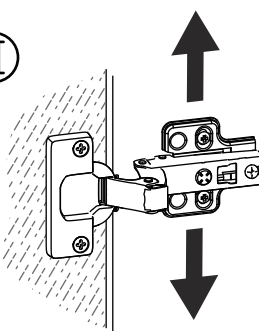   

      
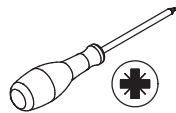
①

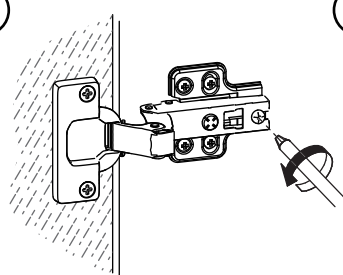
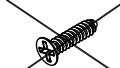

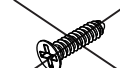


②

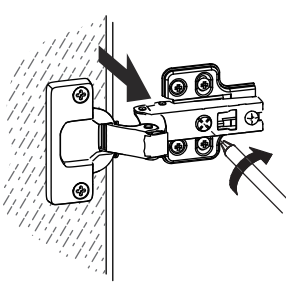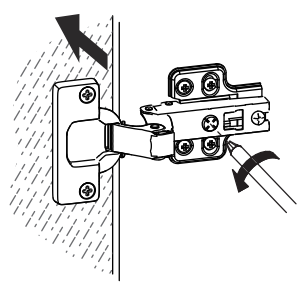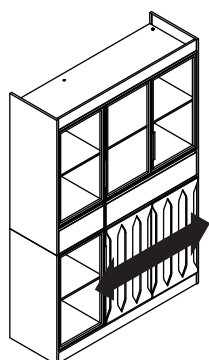
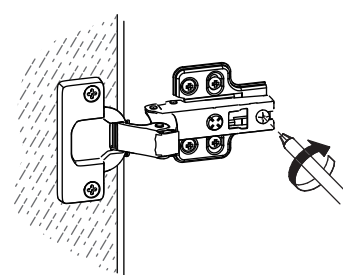
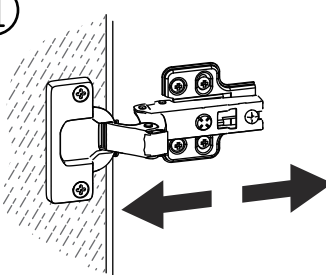


# 36
   
<p>G x 32</p>  <p>M3.5 x 14 mm</p>	<p>H x 22</p> 	
---	---	---



	<p>D</p>  <p>M3 x 12 mm</p>	<p>G</p>  <p>M3.5 x 14 mm</p>	<p>P</p>  <p>M3.5 x 12 mm</p>
---	---	--	--

Insert buckle(H) into back slots and fix with screw(G) as shown.

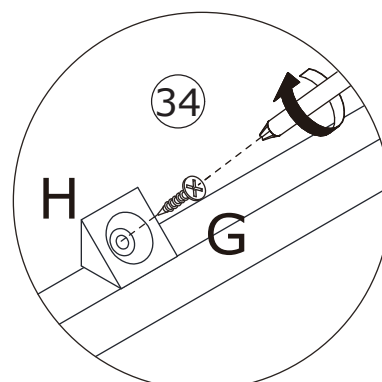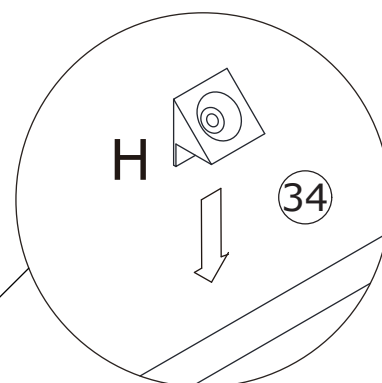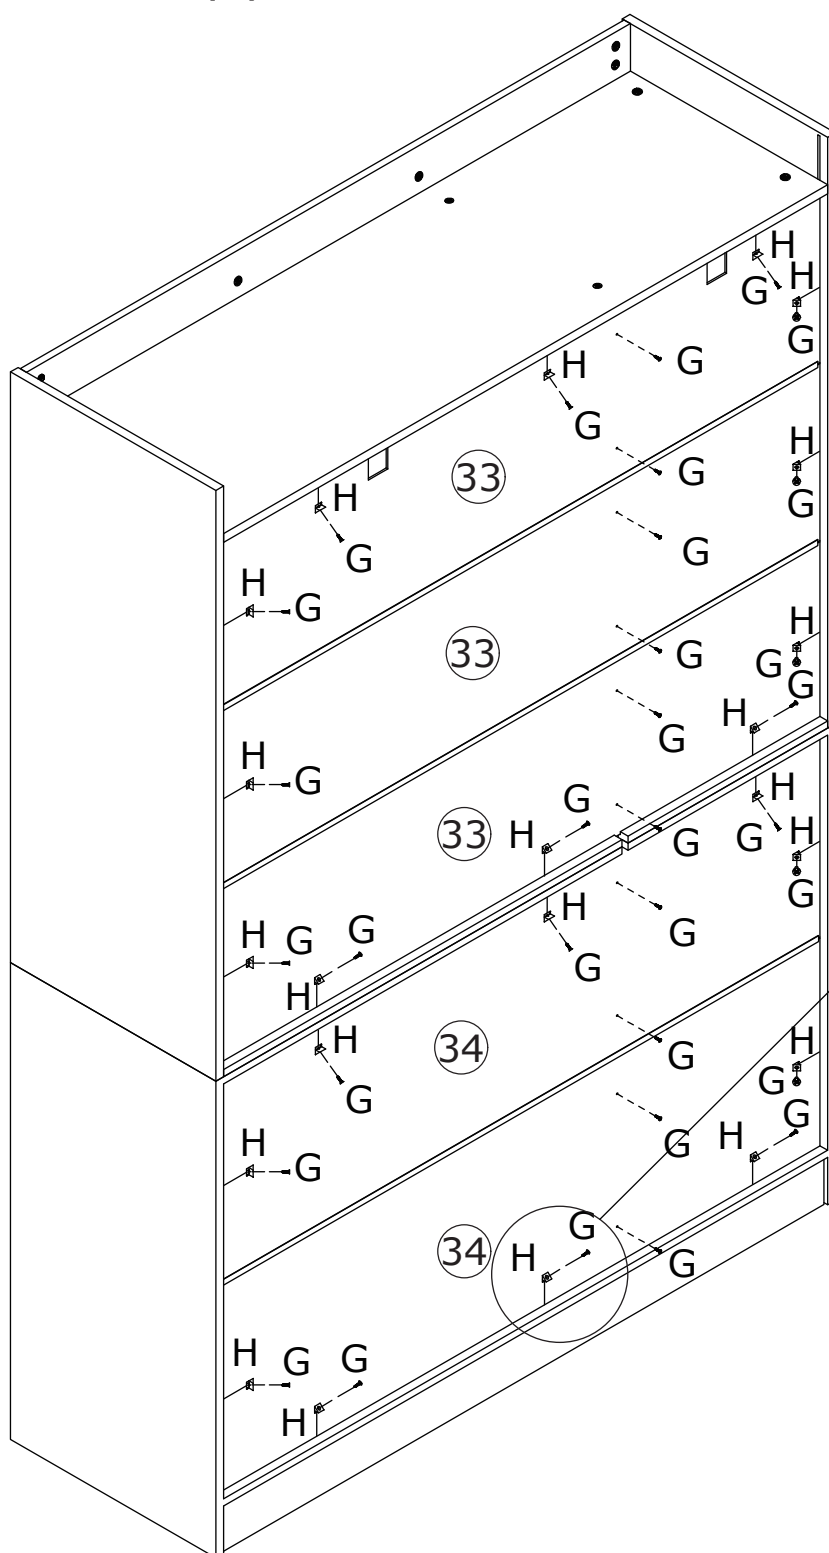


# 37

 
 
A x 12  
M6 x 35 mm

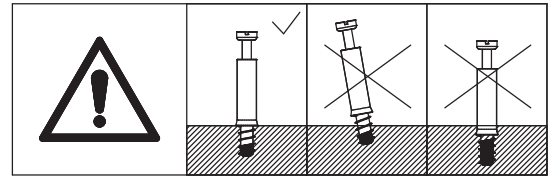

 
Screw eccentric rod(A) into panel 26, 27 and 25 as shown.

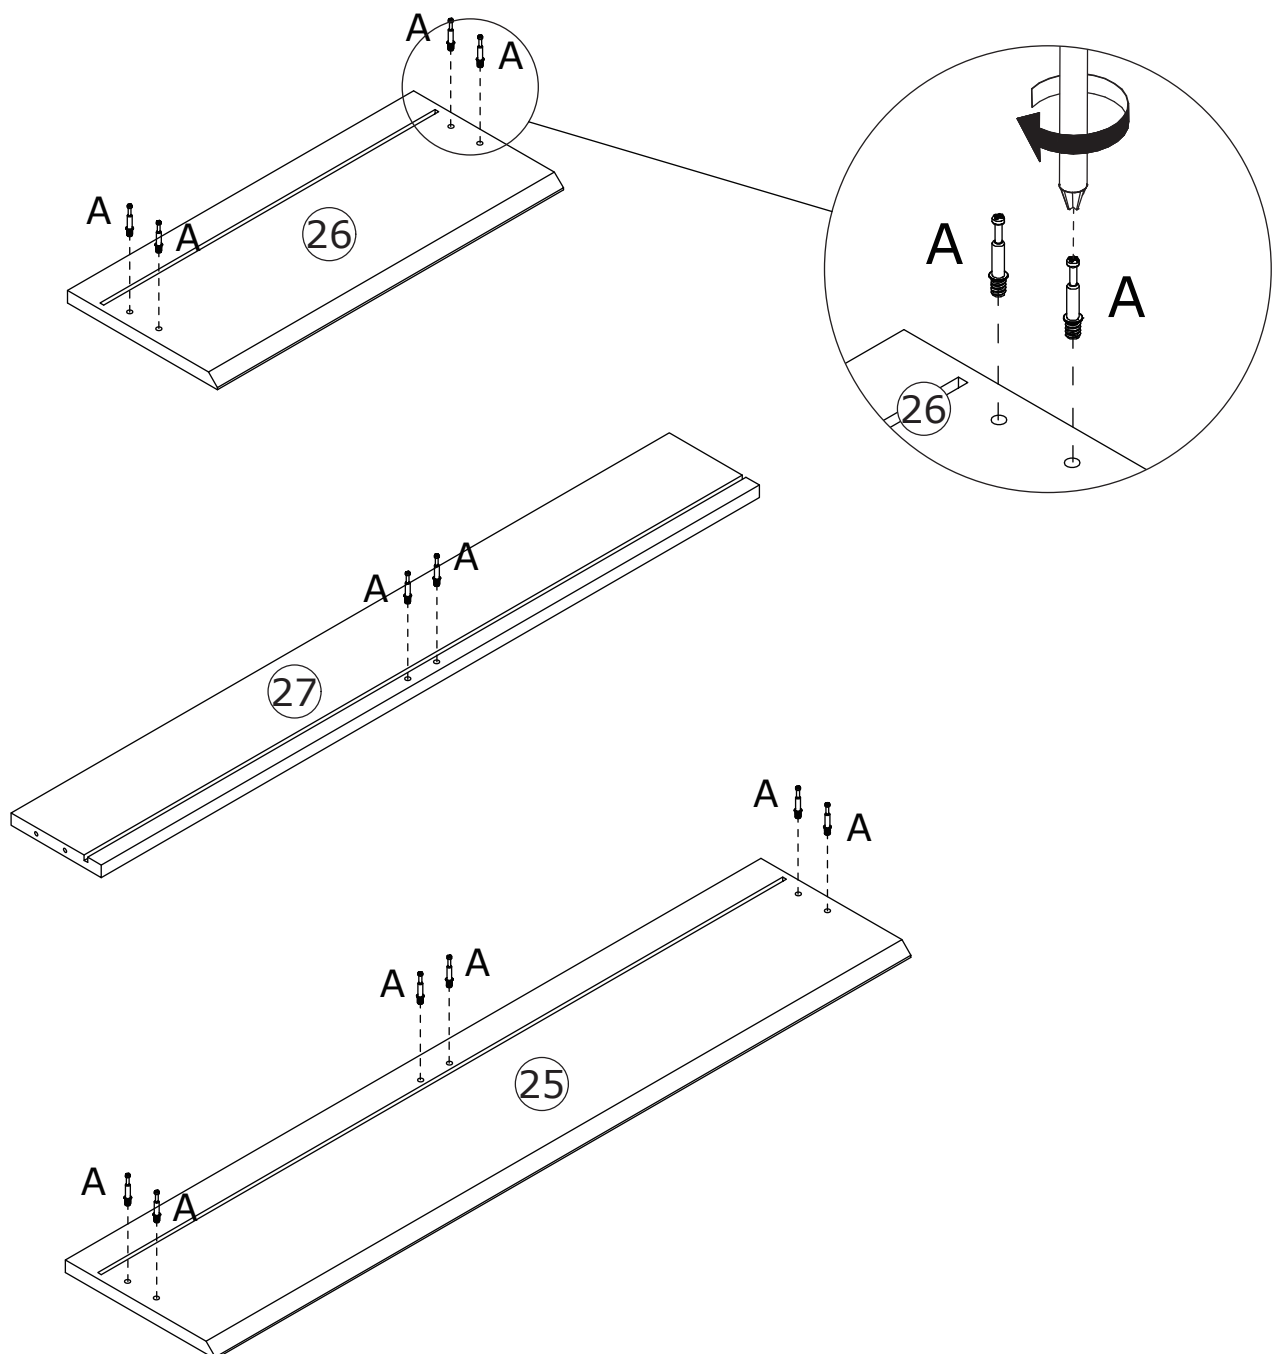



# 38

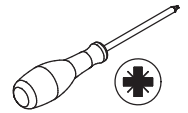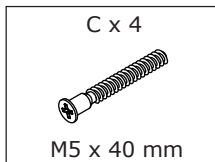  


 
Fix panel 28 to panel 29 and 30 using screw(C) as shown.

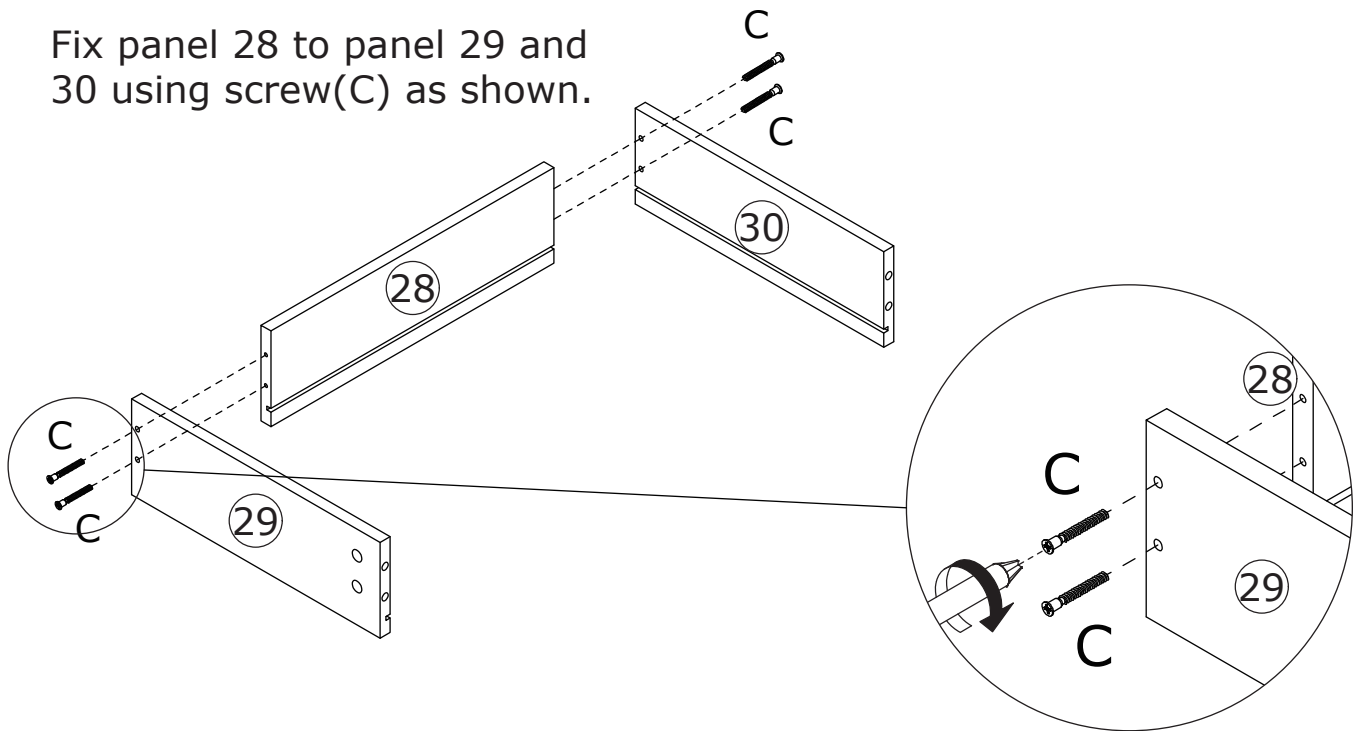

# 39

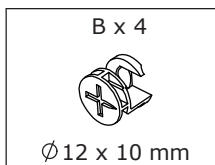  

  Insert panel 36 along available grooves as shown. Attach panel 26 to panel 29 and 30, add cam lock(B) into and turn clockwise to tighten as shown.

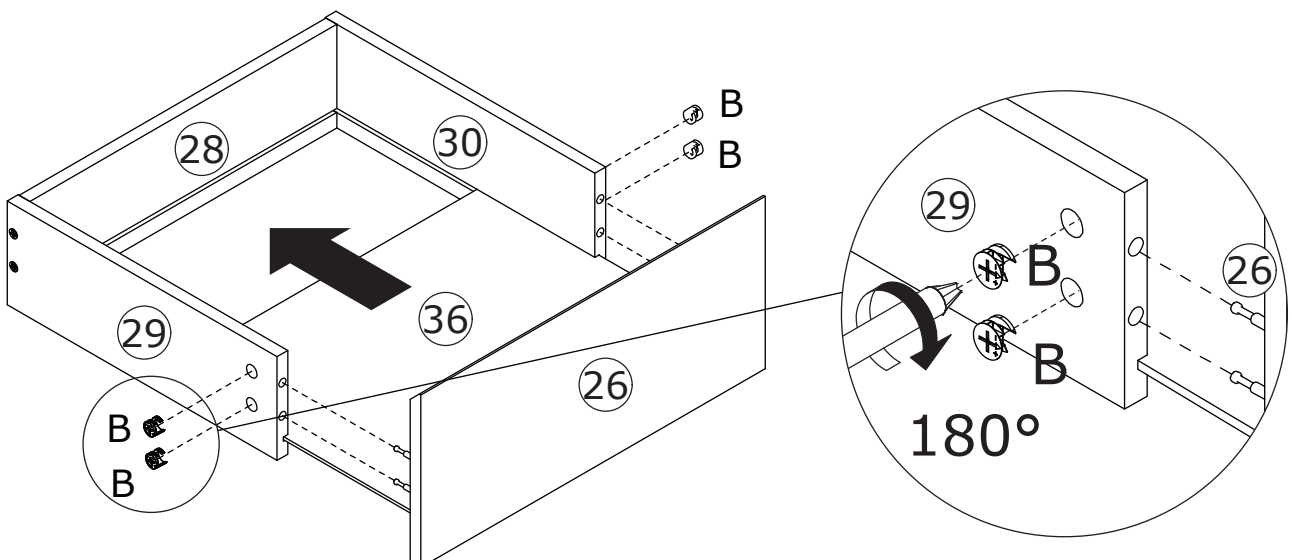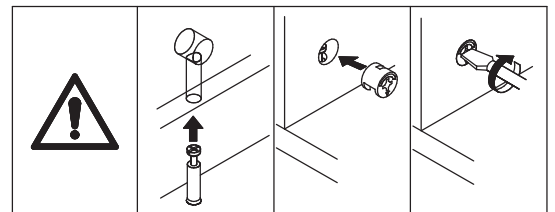





# 40

D x 4



M3 x 12 mm

 F x 1

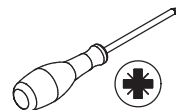

D



M3 x 12 mm

G



M3.5 x 14 mm

P



 
M3.5 x 12 mm

D





F-DL/DR

D



  Fix track(F-DL) and (F-DR) to panel 29 and 30 with screw(D) as shown.

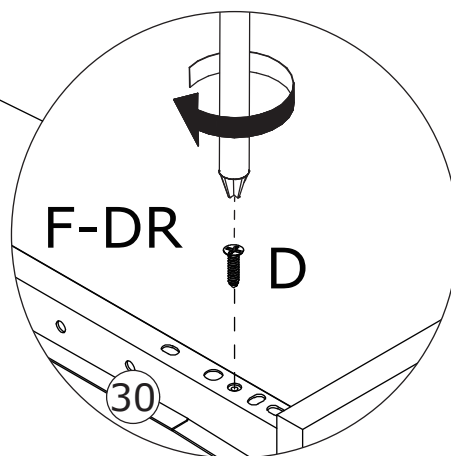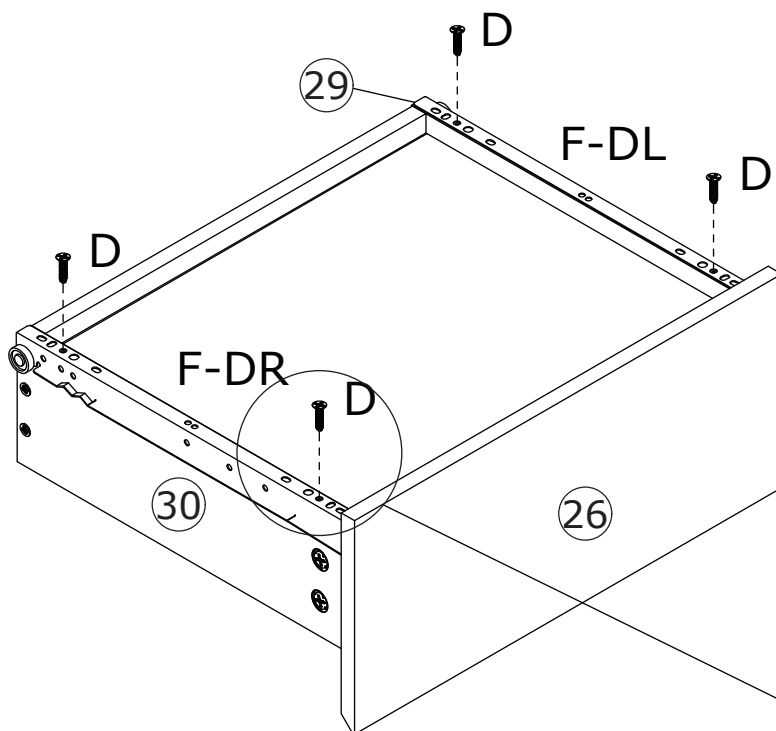

# 41

B x 2

 
 
 
 


Ø 12 x 10 mm


C x 4



M5 x 40 mm

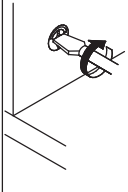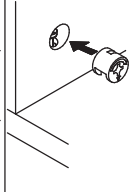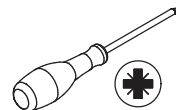

 Fix panel 27 to panel 29 and 30 using screw(C) as shown. Attach panel 31 to panel 27, add cam lock(B) into and turn clockwise to tighten as shown.




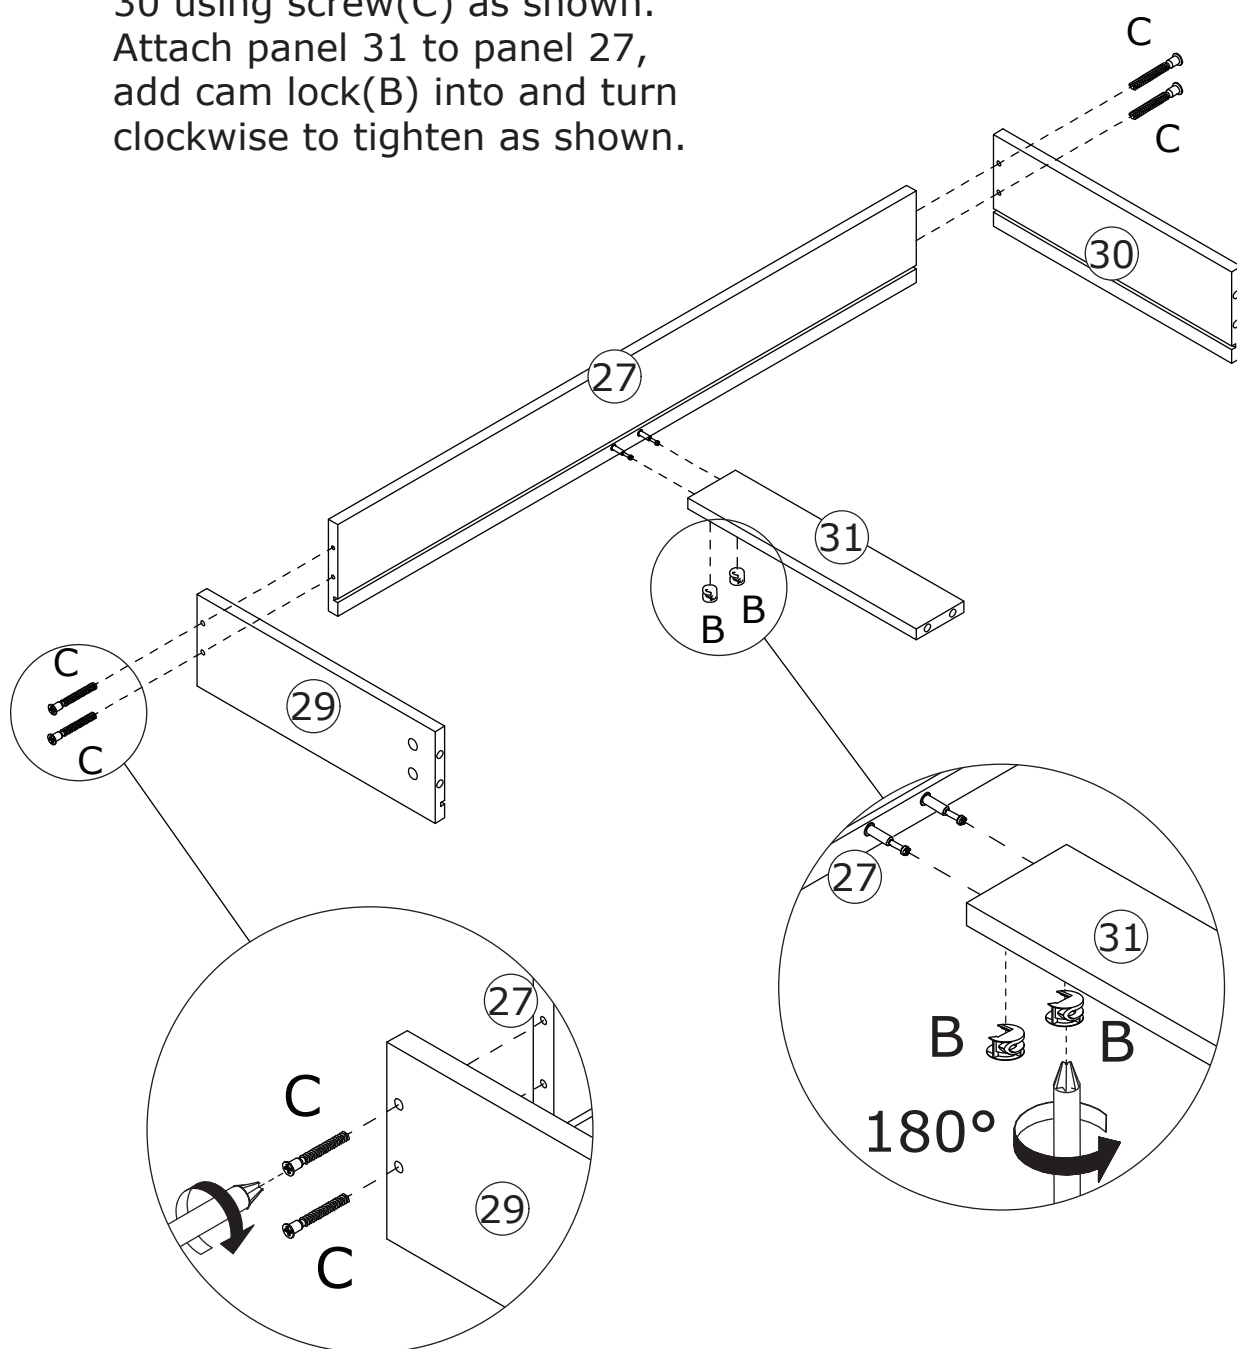


# 42


B x 6



   Ø 12 x 10 mm

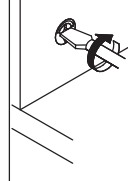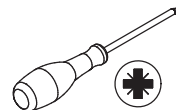

 Insert panel 35 along available grooves as shown.  
Attach panel 25 to panel 29, 31 and 30, add cam lock(B) into and turn clockwise to tighten as shown.

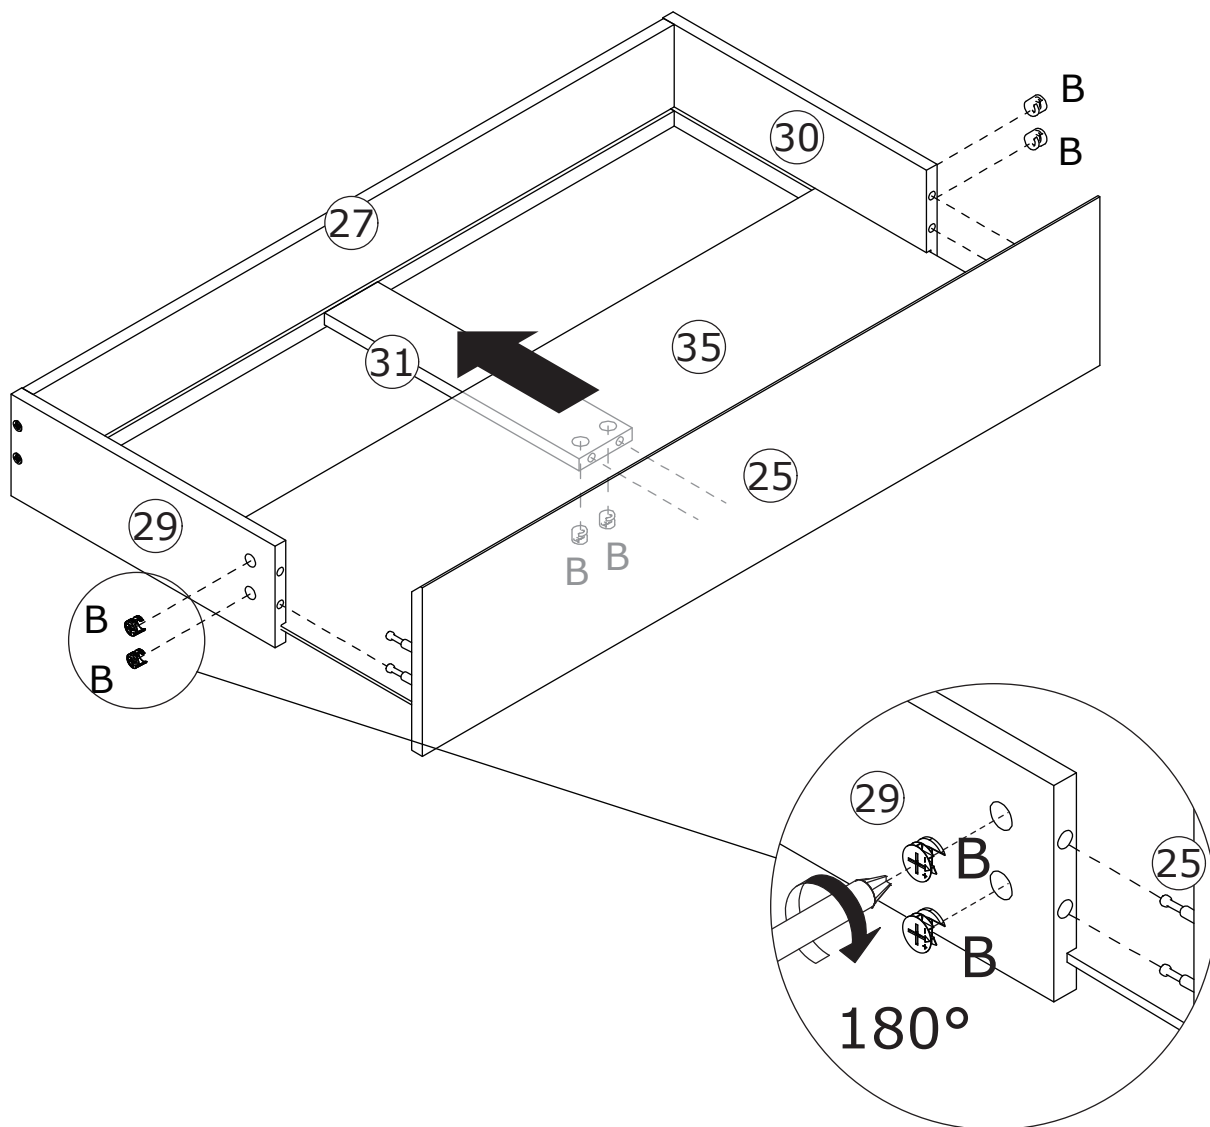



# 43

D x 4



M3 x 12 mm

  F x 1




D




M3 x 12 mm

 G



M3.5 x 14 mm

 P




M3.5 x 12 mm

D





F-DL/DR

   D


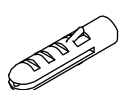
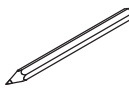
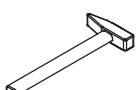





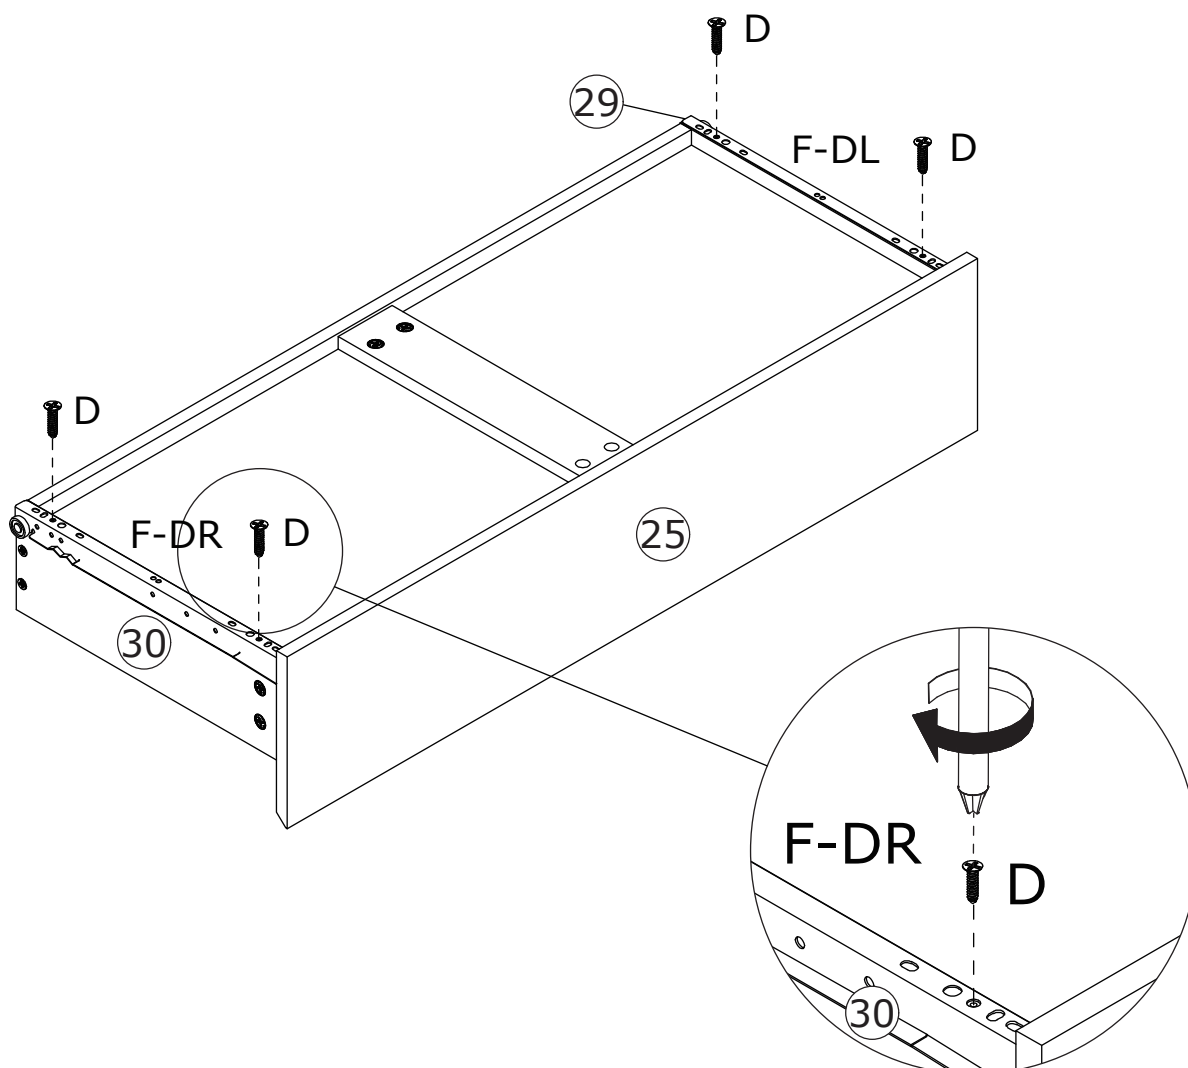

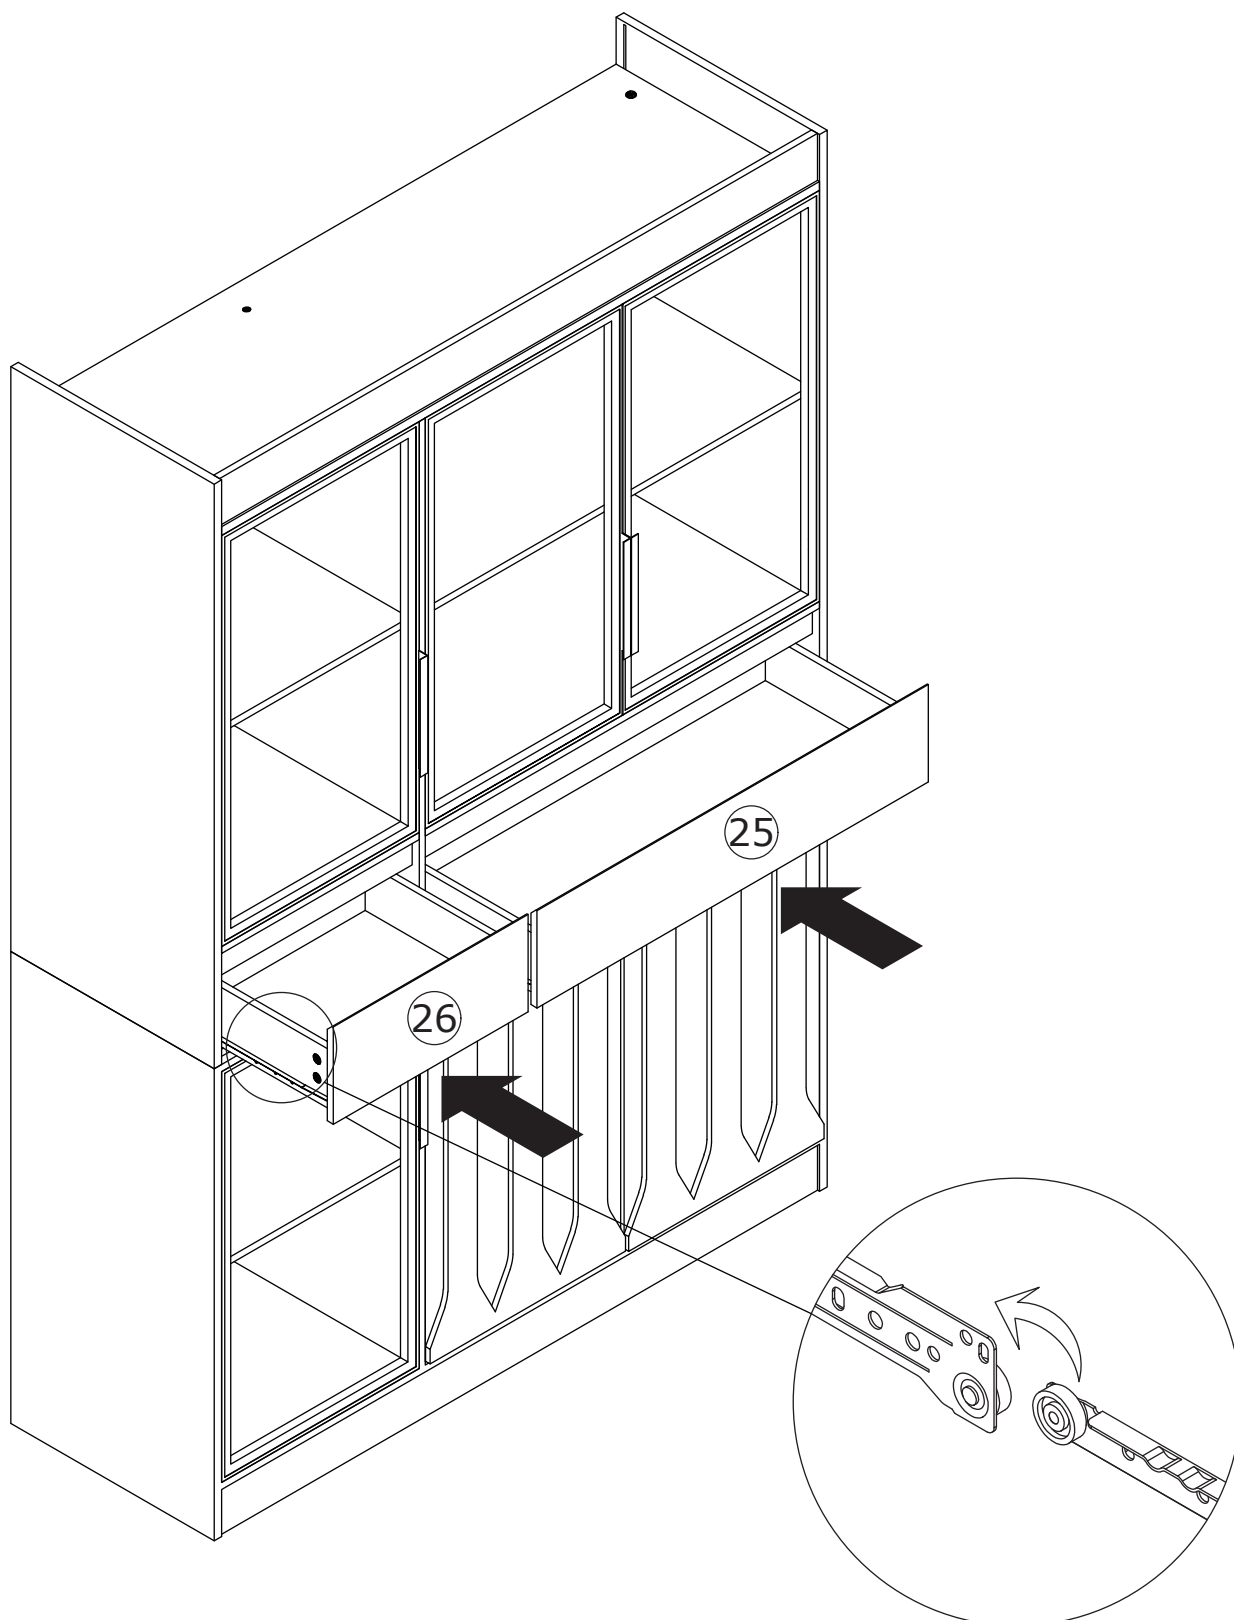


Fix track(F-DL) and (F-DR) to panel 29 and 30 with screw(D) as shown.




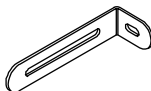


# 45

<p>L x 2</p>  <p>M3.9 x 40 mm</p>	<p>M x 2</p> 	   
<p>N x 2</p> 	<p>P x 2</p>  <p>M3.5 x 12 mm</p>	<div>  <div> <p>D</p>  <p>M3 x 12 mm</p> </div> <div> <p>G</p>  <p>M3.5 x 14 mm</p> </div> <div> <p>P</p>  <p>M3.5 x 12 mm</p> </div> </div>

 
Install anti-tipping device as shown.

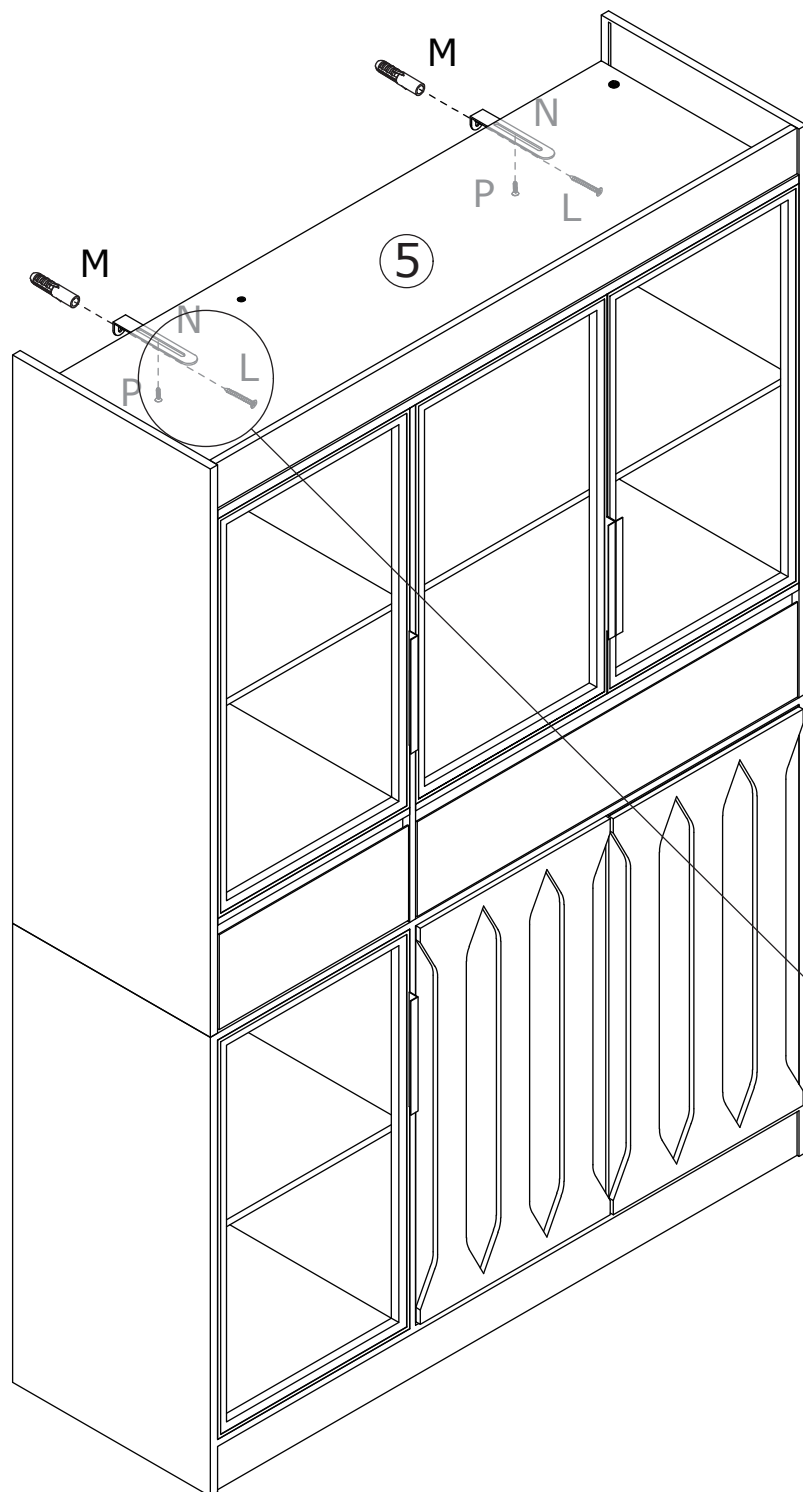

 
1.

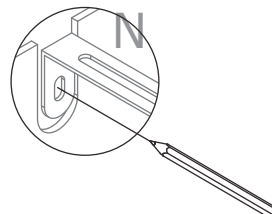


 
2.

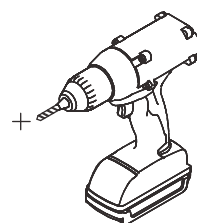

 3.

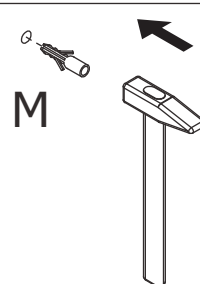

  4.

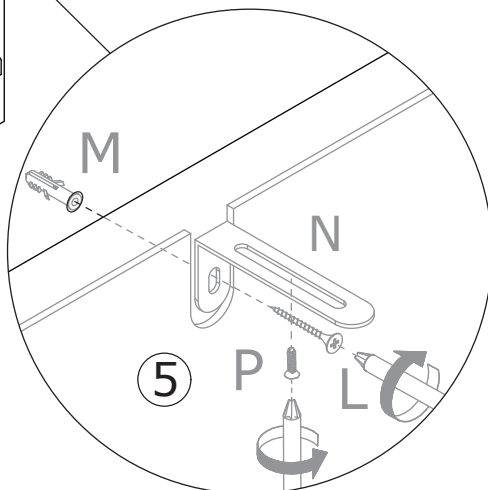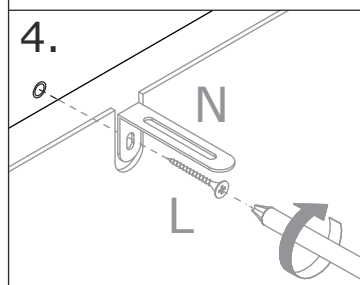

# WARRANTY

## WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

## Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

## Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

## The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

# RETURNS

## CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

### PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

### DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

### DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.  
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

### AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068