



Invigoration® Series | K-5557

Steam generator control kit

Features

- Fast-Response® technology produces a luxurious steam shower in 60 seconds
- Power Clean™ technology offers one-touch automatic cleaning and safe maintenance
- Steam head features an integral aromatherapy well for adding scents
- Circular steam head projects from finished wall, allowing steam to evenly disperse throughout shower
- Easily adjustable control panel allows user to set temperature (90-125°F range) and steam session duration
- 20-minute safety shutoff
- For use with Invigoration™ Series 5kW - 15kW Steam Generators
- Includes control panel and steam head with aromatherapy reservoir
- Required for use with KOHLER Invigoration® 5kW-15kW steam generators
- Improved sensor reduces temperature fluctuations for a consistent steam shower temperature
- Controls the Power Clean feature
- Digital display with clock
- Quick-connect RJ-12 cord and connector for simplified installation and service
- Mounting arm and gasket included



Available Colors/Finishes

Color tiles intended for reference only.

CP	Polished Chrome
SN	Vibrant Polished Nickel
BN	Vibrant Brushed Nickel
BV	Vibrant Brushed Bronze
BL	Matte Black
2MB	Vibrant Brushed Moderne Brass
TT	Vibrant Titanium



1-800-4KOHLER (1-800-456-4537)

Kohler Co. reserves the right to make revisions without notice to product specifications.
For the most current specification sheet, go to www.kohler.com USA or www.kohler.ca Canada.
8-10-2026 17:11 - US-CA

THE BOLD LOOK
OF **KOHLER**

Codes/Standards

None Applicable

Material

- KOHLER finishes resist corrosion and tarnishing
-

Recommended Products/Accessories

K-23723 Faucet cleaner

Warranty

See website for detailed warranty information.

KOHLER® Electronic Faucets, Valves, and Controls Five-Year Limited Warranty




1-800-4KOHLER (1-800-456-4537)

Kohler Co. reserves the right to make revisions without notice to product specifications.

For the most current specification sheet, go to www.kohler.com USA or www.kohler.ca Canada.

8-10-2026 17:11 - US-CA

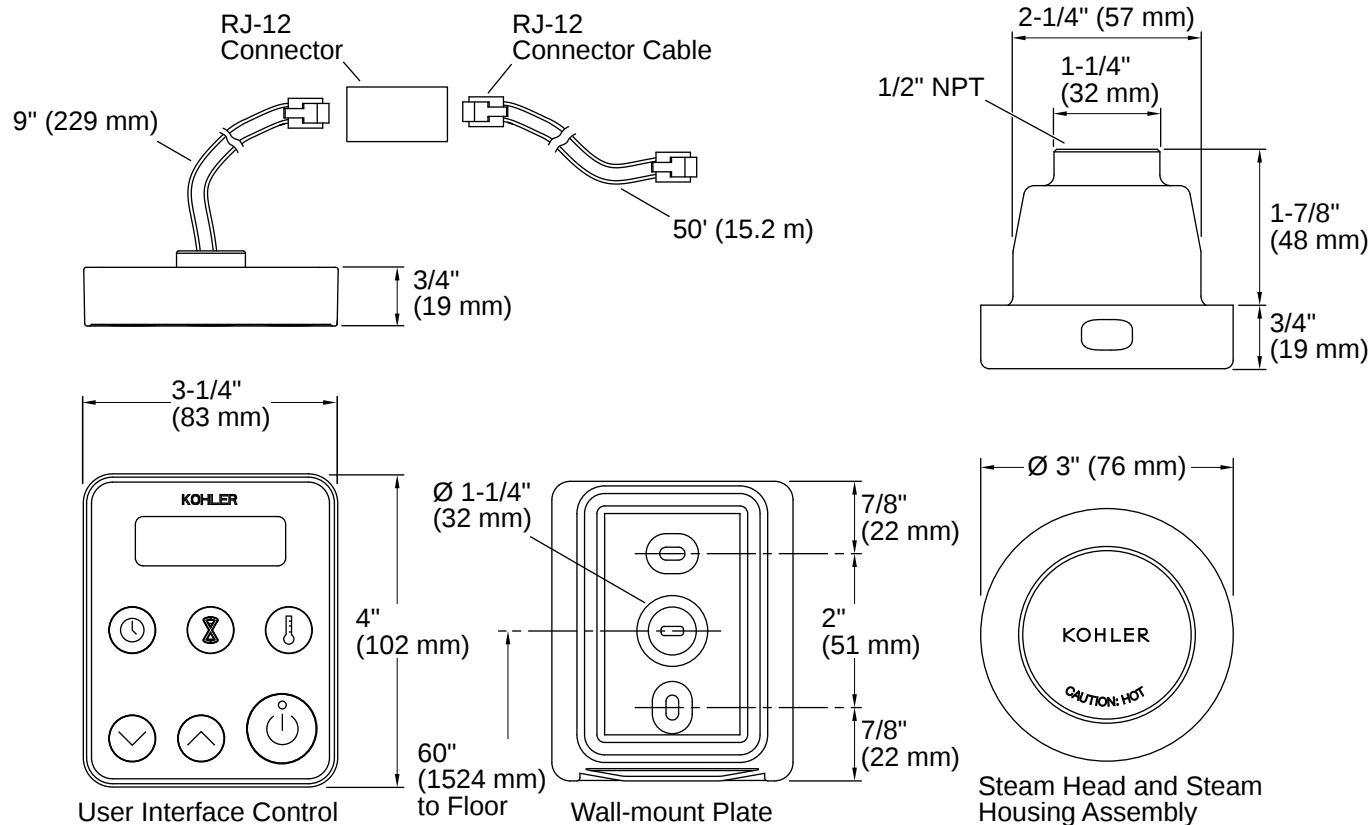

Installation Notes

Install this product according to the installation instructions.

CAUTION: Risk of personal injury. Do not install the User Interface Control outside the steam enclosure. The User Interface must be installed within the enclosure to allow the sensors to regulate the temperature and control the flow of steam.

CAUTION: Risk of scalding. Do not locate the steam head near a seat or bench, as the steam head is hot during operation and may scald the user if touched.

The temperature sensor should be mounted on the wall opposite the steam head. The steam head should be located as far from the seating area as possible.

Locate the steam head 6" (152 mm) above the floor and at least 4-1/2" (114 mm) from the threshold.

