 




Instruction Manual

Suitable for K1-D Series

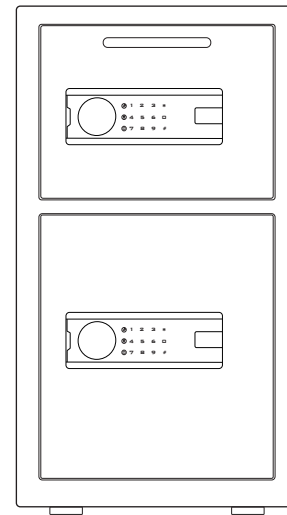

Never keep emergency keys and emergency battery box in your safe!!!

  BOX CONTENTS

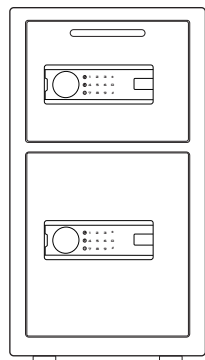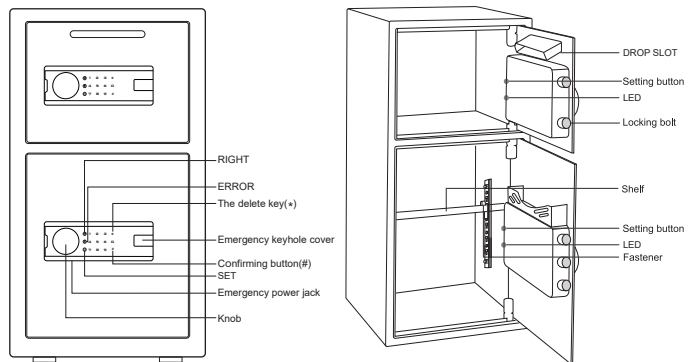

Safe box *1



 
Quick start guide*1



Emergency battery box*1



Foot mats*4



Expansion bolts*6



Emergency keys*2
(Door Above)



Emergency keys*2
(Door Below)

 
- ▲ NOTICE: 1. The keys are hung in the upper right corner of each door. The serial numbers of the two sets of keys are different. Please open the door with the correct key.
2. Locate the emergency keys and the instruction in the accessories bag on the door, the rest of the accessories are inside the safe.

BOLTING DOWN YOUR SAFE

TOOLS NEEDED TO BOLT SAFE

1. Drill (no included)
2. Marker pen (no included)
3. Expansion bolts (included)

MOUNT THE SAFE

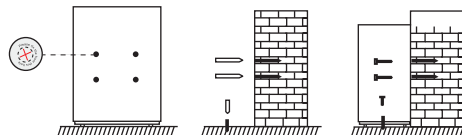

Step1:

Place the safe at the installation place(Wall or floor), mark the drilling spots on the wall/floor from the inside pre-drilled holes.

Step2:

Remove the safe and drill a about 10 mm hole in the wall or floor with drill bit.

Step3:

 
Position the safe in place and install screws through the safe into the holes. Tighten screws.

▲ NOTICE: This safe has 6 pre-drilled holes, 4 pre-drilled holes in the back and 2 pre-drilled holes in the bottom, you can mount the safe on the wall or floor according to your needs.

SET UP THE CODE

➤ Step3: Set up the code

1. Open the safe, keep the safe opening, short press the setting button (on the inner side of the door), the safe beeps once and "Ⓢ" light on.
2. Input a new code(1-8 digits),then press #, "Ⓢ" flash, repeat the code, then press # to confirm.
3. The screen display "Ⓢ", indicating success.
4. Testing the code before you close the door.

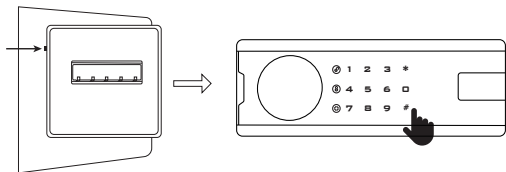

➤ Step4: Set up the second code

1. Open the safe, keep the safe open, press # and enter 0 twice,then short press the setting button, the safe beeps once.
2. Input your second code, 1-8 digits and press #, repeat the code, then press # to confirm.
3. The screen display "Ⓢ", indicating success.
4. Testing the code before you close the door.

 
▲ NOTICE:

1. 10 seconds without any operation after pressing the setting button, it will go back to standby mode, you need to retry from **STEP3**;
2. Please set up both of two codes immediately after receiving the safe.
3. A single **beep** indicating that the code has been set successfully, thrice beep indicate that the two codes entries are inconsistent, please repeat the procedures.


OPEN / CLOSE THE DOOR

THREE WAYS TO OPEN THE DOOR


1. The first way to open: Use the emergency key.

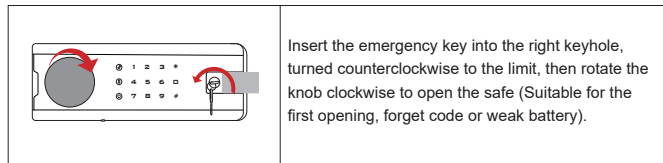

 2.The second way to open: Use the code.

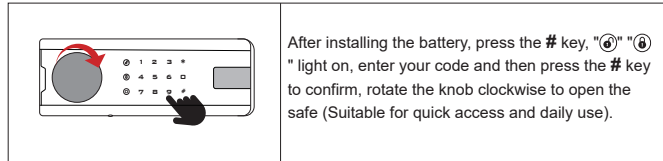

 3. The third way to open: Use the emergency battery box + code.

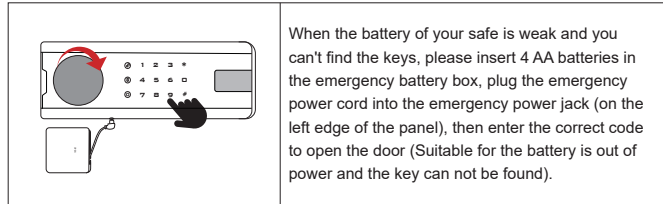

▲ NOTICE: Every time you open the safe, you need to press the #, enter your code, press the # to confirm, and turn the knob clockwise to open.

CLOSE THE DOOR

Close the door and rotate the knob counter-clockwise.

ADDITIONAL FEATURES

DUAL ALARM SYSTEM

1. After 3 consecutive times of wrong code, your safe will activate the alarm system, the alarm will sound for 30 seconds, enter the correct code and the alarm will be cancelled.

2. In standby state, press * then press 9, prompt sound comes up, the vibration alarm mode is turned on. If the box is shaken or hit violently, it will give an alarm immediately for 30 seconds, at this point, enter the correct code to stop the alarm.

▲ NOTICE:

1. When power on, the system default for alarm is off.
2. After safe is opened with code, the vibration alarm will turned off and needs to be turned on again.
3. The alarm beeps can be stopped by use the key to open the safe and remove the battery to cut off the power.
4. The alarm will still sound, even in silent mode.

MUTE FUNCTION

1. In standby mode, press * then press 1, “🔇” “🔊” light on, prompt sound comes up, indicating the mute function is turned on.

2. In silent mode, press * then press 1, “🔇” “🔊” light on, prompt sound comes up, indicating the mute function is turned off.

▲ Notice: Under the mute function, the wrong code alarm and vibration alarm still work, and the alarm will sound when triggered.

RESTORE FACTORY SETTINGS

Keep pressing the setting button for 3 seconds until you hear a long beep. The “🔊” indicator will flash once, indicating that the reset has been successful. At this point, all codes will be invalid and need to be reset.

▲ NOTICE: The default code is 123456.

LOW BATTERY REMINDER

After installing the batteries or entering the password, if the safe is consistently beeping, it indicates that the battery power is low and new batteries need to be replaced.

SET UP THE CODE

➤ Step 1: Open the door with the key

1. Locate the emergency keyhole by moving the right side of the lock cover.

 
2. Align the emergency key with the keyhole and fully insert, turn it counter-clockwise to the limit, and hold on it.

3. Then rotate the knob clockwise to open the door

▲ NOTICE: 1. When you rotate the knob to open, you must have the key fully inserted and turned counterclockwise to the limit, keeping the key until the safe unlocked and opened

2. Use the key to unlock, the led light will not light up.

3. Please keep the keys in a secure place, do not lock the keys inside the safe.




➤ Step 2: Install Battery

1. After first opening, keep the safe open and locate the battery case; prepare 4 brand-new AA 1.5 Volt alkaline batteries (not included).

2. Remove the internal battery case cover and install the 4 AA batteries by matching the + & - electrode.

▲ NOTICE: 1. Rechargeable battery is not recommended as it may destroy the internal electronic components of your safe.

 2. please use brand-new batteries, do not mix used batteries with new batteries.



TROUBLESHOOTING

Malfunction	Cause	Solution
Inserting the battery does not work	Battery drained	Replace with new battery
	Electrode reversed	Put the battery in the correct position
Scratches on the panel and handle	The protective film is scratched and not torn off	Tear off the protective film
Can't open with password	Low battery	Replace with new battery
	Wrong password	Please reset your password
Door won't close	There is an obstacle in the middle of the latch or behind the door	Close the door after clearing the obstacle
Unlocked but the door won't open	The key is not turned to the specified position	After turning the key to the specified position, turn the knob to open
	The knob is not be turned within 5 seconds after entering the password	Open the door within 5 seconds after entering the password
Cannot be locked	The key was not pulled out	Lock the door after removing the key
LED won't light up	Use the key to open the safe	Use the password to open the safe

Maintenance

1. If you do not use the safe for a long time, please take out the battery in the safe to prevent the battery fluid from leaking and damaging the safe.
2. Keep your keys and emergency battery box safe, which can be opened when the safe is out of power or if you forget your password.
3. Store the safe in a cool, backlit place.
4. Do not wipe the safe with corrosive chemical solvents, use a clean rag to wipe with a little cleaning agent.

CATALOGUE & WARNING

Warnings	2
Box Contents	3
Set Up the Code	4-5
Open / Close the Door.....	6
Additional Features	7
Bolting Down Your Safe	8
Troubleshooting	9

WARNING

1. Do not lock the emergency key or emergency battery box into your safe.
2. If the safe box is not used for a long time, the battery should be removed to prevent leakage of liquid from damaging the electronic system.
3. Purchase 4 AA batteries in advance, this safe does not include batteries.
4. There are protective films on the knob and LCD screen. You can remove or keep it according to your needs.