 
 
 
 
 
 
 

 
 


 
 
 

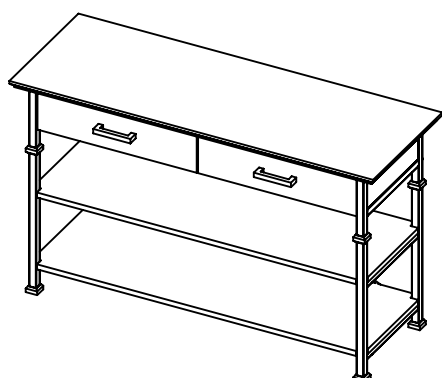 


ASSEMBLY INSTRUCTION

RUSTIC ELEGANT DETAILED LEG STORAGE TV STAND


A Top Panel	B Lower Panel	C (L) Side Frame	D (R) Side Frame
			
1PC	2PCS	1PC	1PC
E Tension Bar	F Handles	G Bolts 1/4"x1-3/8"xØ13	H Bolts 1/4"x1/2"xØ16
			
2PCS	2PCS	12PCS	6PCS
I Allen Wrench	J Bolts 3/16"x1/2"	K Nut	L Spanner Wrench
			
1PC	5PCS	1PC	1PC
M Wood Screws 4 x 25 x 6mm	N Wall Anchors	O Mounting Tabs	P Plastic Mounting Straps
			
2PCS	2PCS	4PCS	2PCS

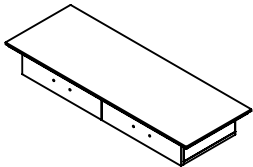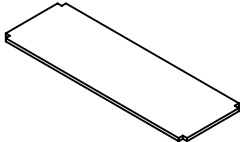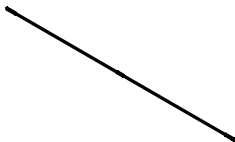


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

***Do not tighten screws & bolts until the entire unit is completely assembled.

 - 1 Use the Philips Screwdriver (not provided) to loosen the screws and remove the MDF boards from the Top Panel (A). Attach Handles (F) to the front panel of drawers with Bolts (G) as shown.

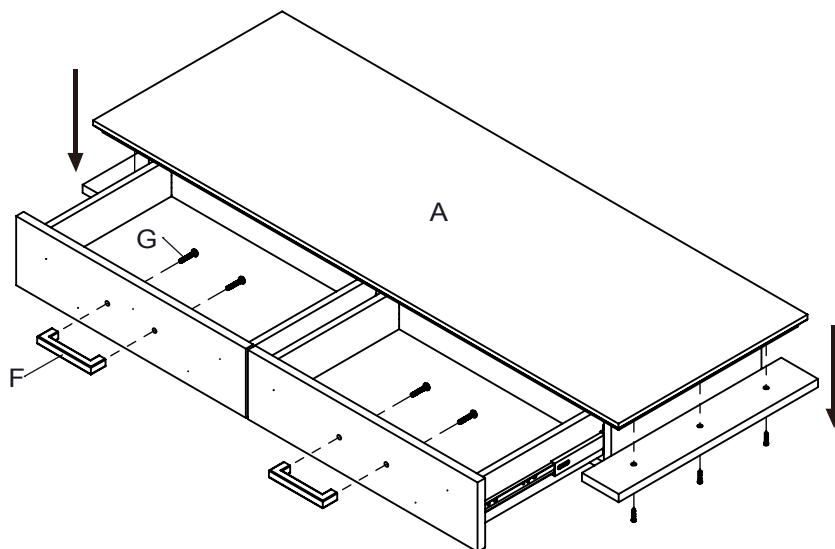

 
- 2 Attach Left Side Frame (C) and Right Side Frame (D) to Lower Panels (B) using Bolts (G) and Allen Wrench (I) .

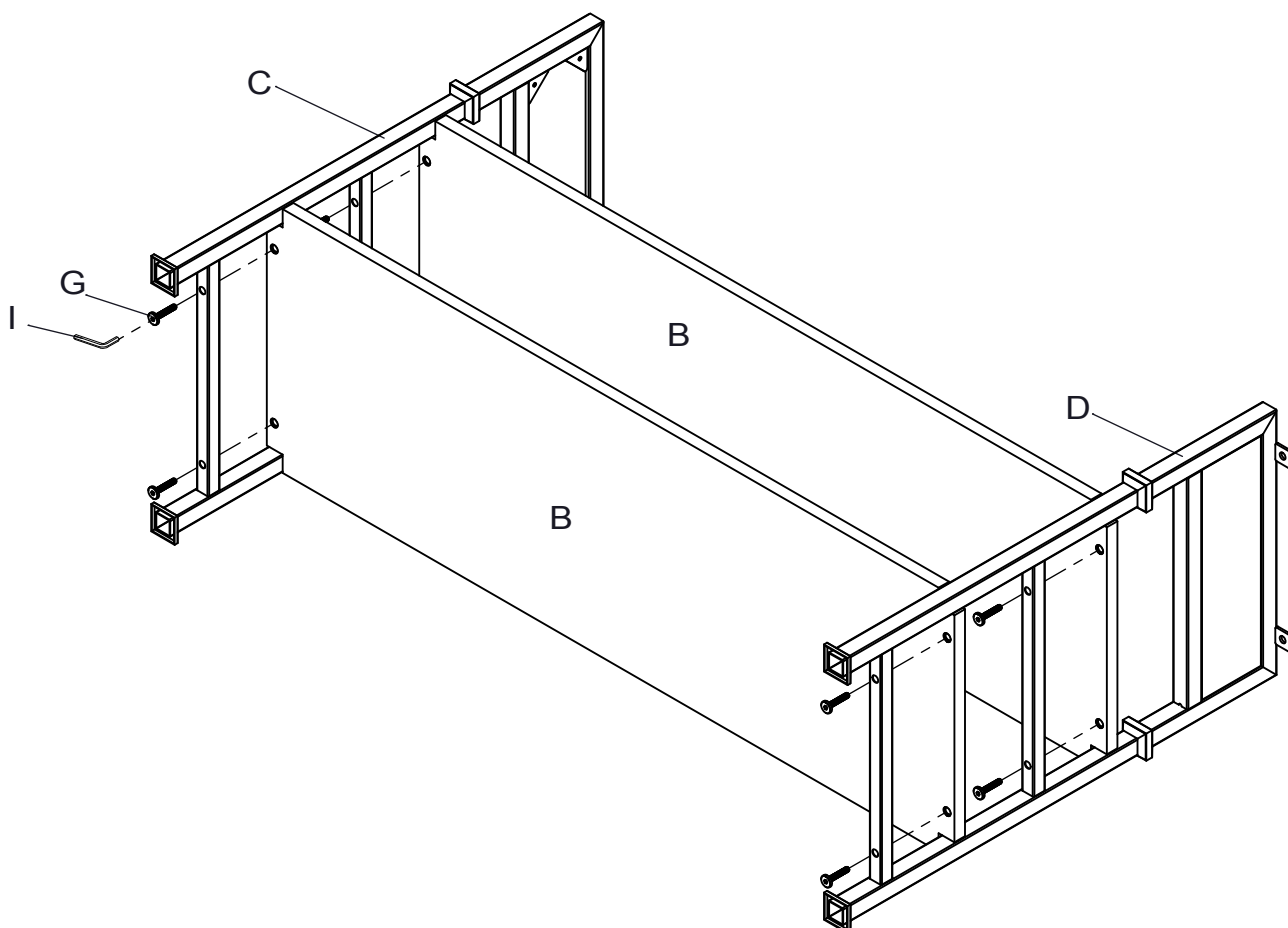

3

Attach the Side Frames (C&D) to Top Panel (A) with Bolts (H) as shown. Attach Tension Bars (E) to the back of Side Frames (C&D) using Screws (J) and Philips Head Screwdriver (not provided). Then secure MIDDLE using Screw (J) and Nut (K).

 Attach Mounting Tabs (O) to the bottom of Top Panel (A) with Bolts (H) as shown.

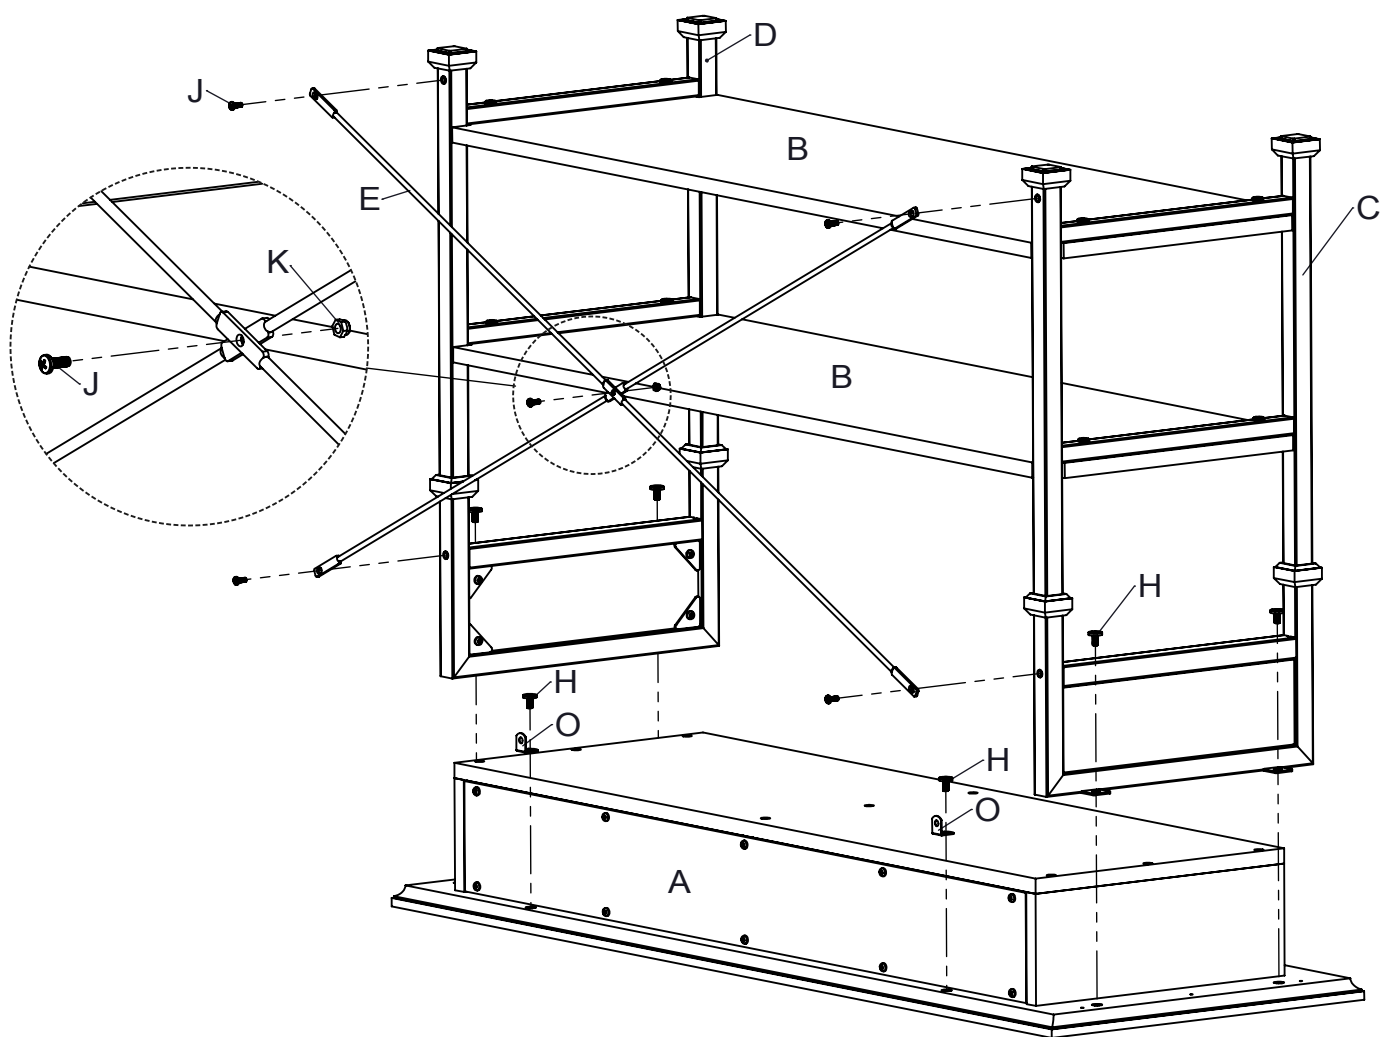

4

 
*NOTE: WE RECOMMEND THAT YOU ATTACH THE PRODUCT TO YOUR WALL AS A SAFETY PRECAUTION.

Drill 2 (Two) holes in your wall approximately 2" (Two Inches) BELOW the corresponding positions of Mounting Tabs (O) and insert Plastic Sockets (N) as shown.

*NOTE: You may need to tap LIGHTLY with a rubber mallet.

Attach Mounting Tabs (O) to Plastic Mounting Straps (P) with Wood Screws (M), making sure the Tabs extend UPWARD.

Now connect the corresponding Mounting Tabs (O) with Plastic Mounting Straps (P) and tighten as described before locking in place.

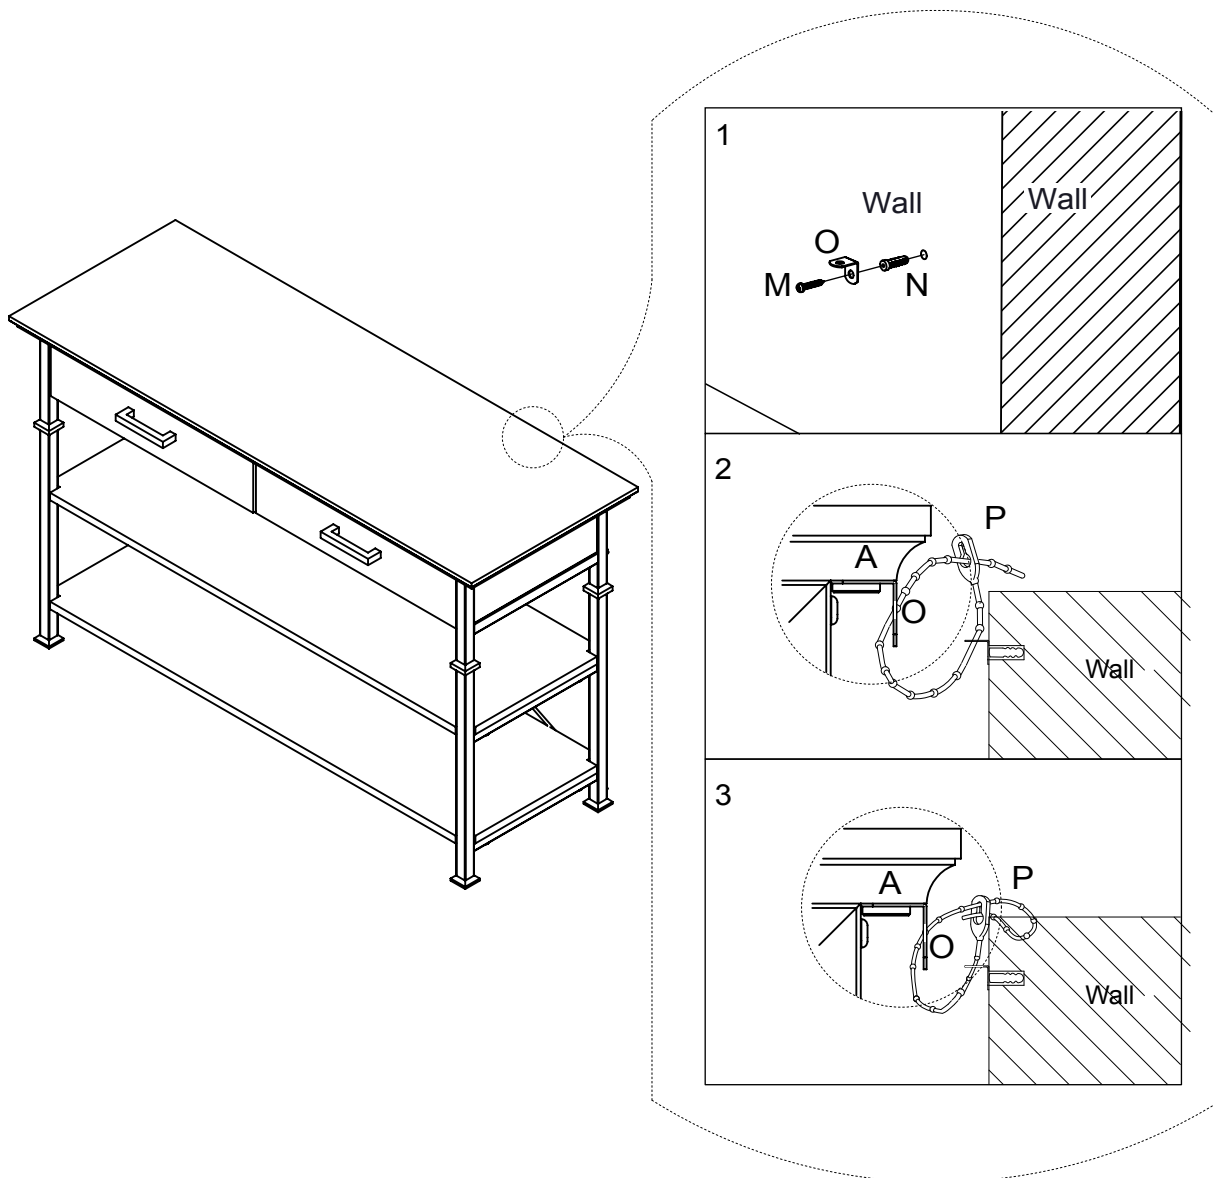

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.