

VIVOHOME

THANK
YOU!

NOTE:

To continuously improve its products, VIVOHOME reserves the right to modify this information without prior notification.

For any questions regarding assembly, please watch the video on the product page or contact our customer service. Our customer service will gladly assist you with any additional questions, comments, or concerns.

Thank you for using VIVOHOME products in your home!

 
Thank You for Purchasing from

VIVOHOME
Made in China

VIVOHOME

HOW-TO

USER MANUAL

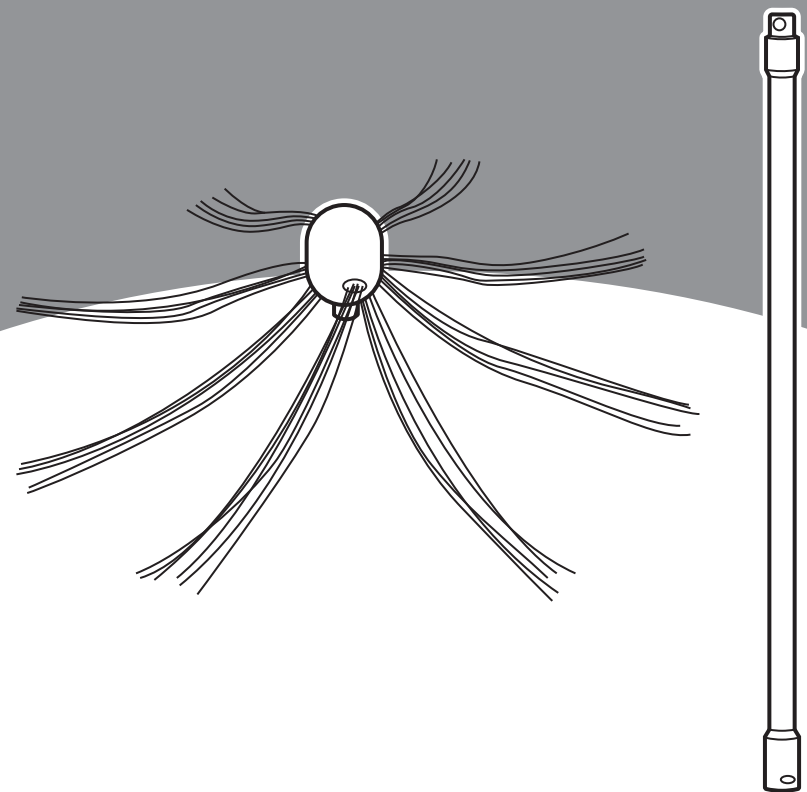

Chimney Sweep Kit

Assembly is EASY!

**WE WANT
YOU TO
ENJOY LIFE
AT HOME**

GO TO THE PRODUCT LISTING PAGE
FOR AN INSTRUCTIONAL VIDEO!

CONTENTS

Replace the Bristles	1
Security & Warnings	3
Storage	3
Operation	4
Warranty	5

 
This manual provides detailed instructions on how to use the product and outlines important safety precautions. We highly advise reading this manual thoroughly before using the product.

Replace the Bristles




STEP 1

Remove the two screws on the top and bottom sections as shown in the figure below.

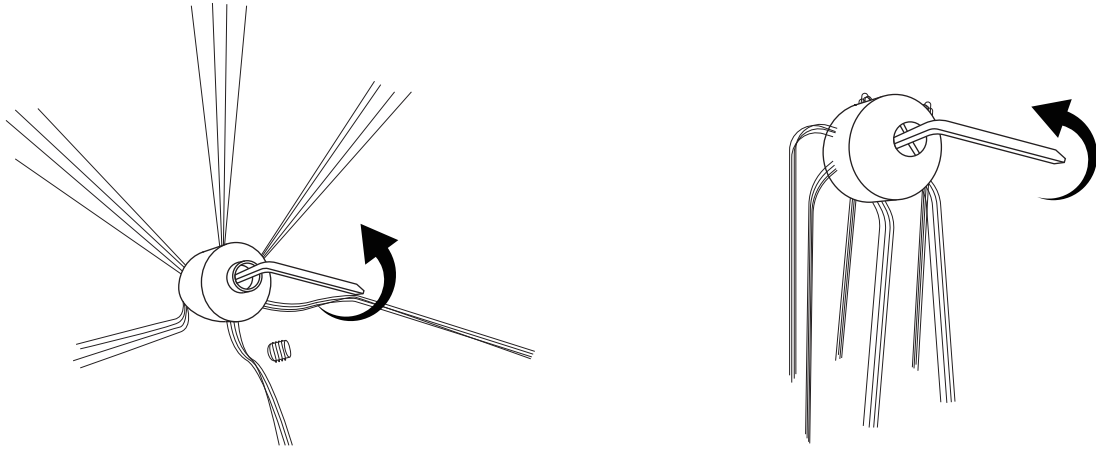


STEP 2

 Remove the existing chimney brush as shown in the figure below.

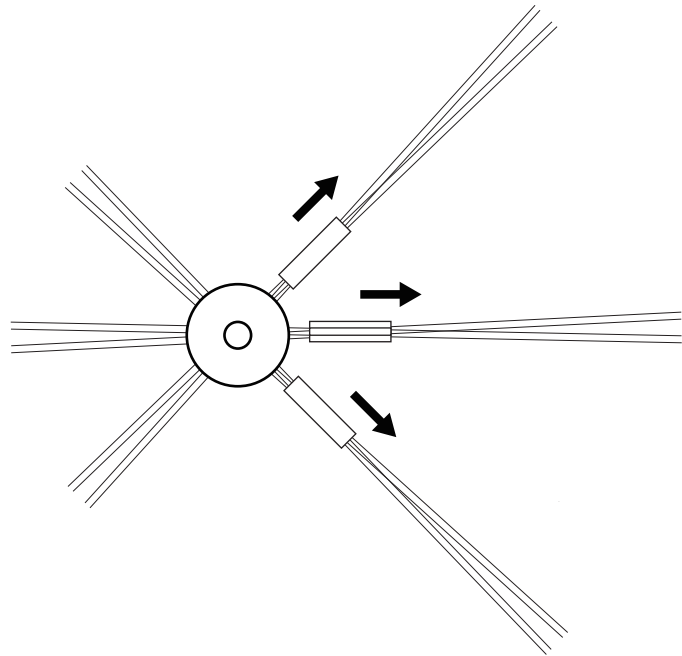


STEP 3

 Install the new brush as shown in the figure below.

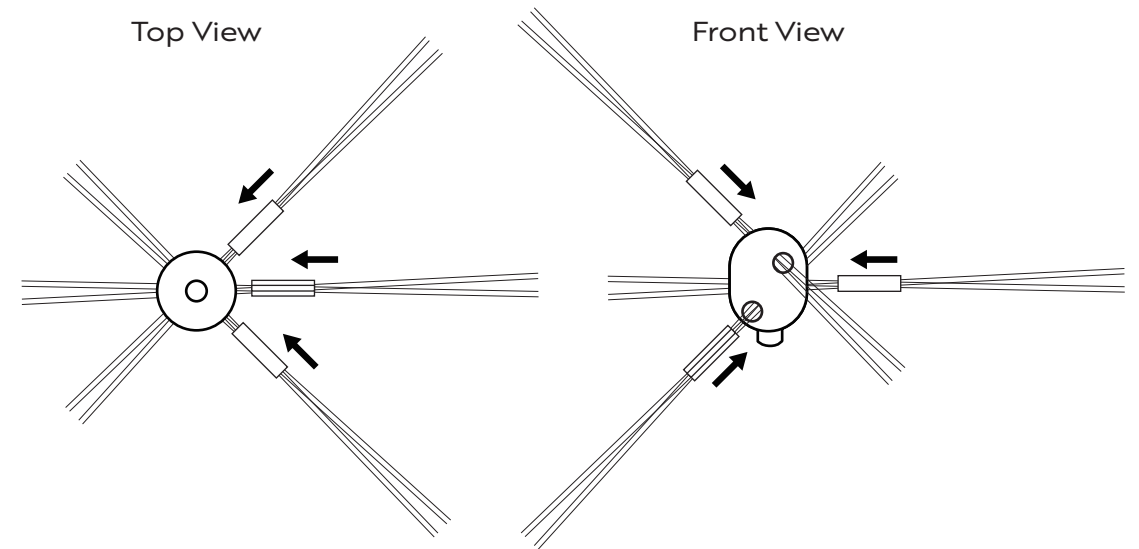

STEP 4

 Tighten the screws on the top and bottom sections as shown in the figure below.

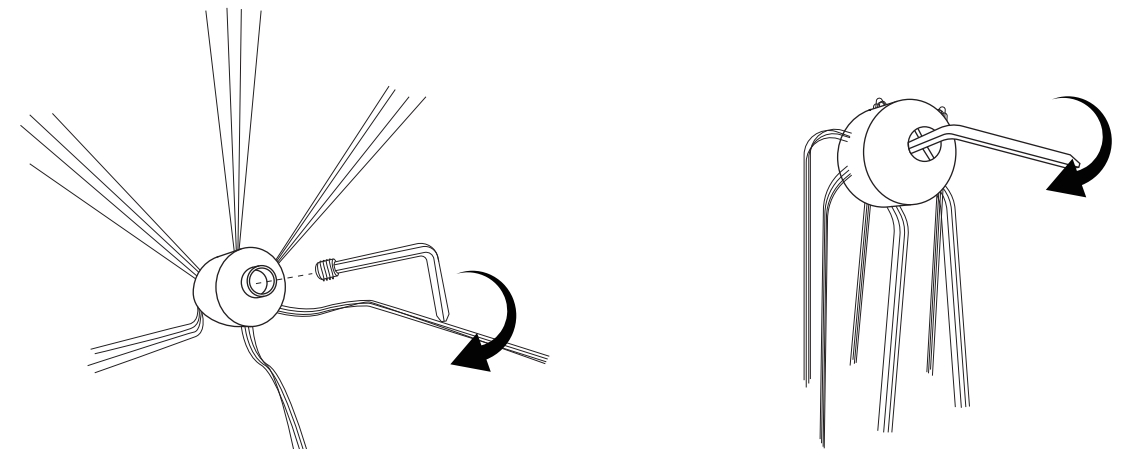

Security & Warnings



This section contains essential information you need to know before using your chimney brush. Prioritizing safety is crucial when operating this product.

Please review this information thoroughly, as improper use may damage the chimney brush.

- Use professional-grade drills with a safety auxiliary handle for power sweeping, as this feature allows you to stop the drill immediately if necessary.
- Use drills with a speed range between 350 RPM and 2000 RPM. Ensure the drill is either a 24V or higher DC-powered model, or a 500W or greater AC-powered model.
- Avoid gripping the rods too tightly, as this may cause your gloves to come off.
- When connecting the rods, ensure they are aligned as straight as possible.
- Do not leave the rods spinning in the chimney without moving them up or down, as friction may cause overheating and potential breakage.

Storage

 
 


Keep the chimney brush stored in a cool, dry location.

Operation



1. Connect the rods one by one.
2. Attach the bristle to the rods.
3. Put the brush into the flue.
4. Slide the rod into the flue.
5. Attach the drill to the rod.
6. Start cleaning your chimney.

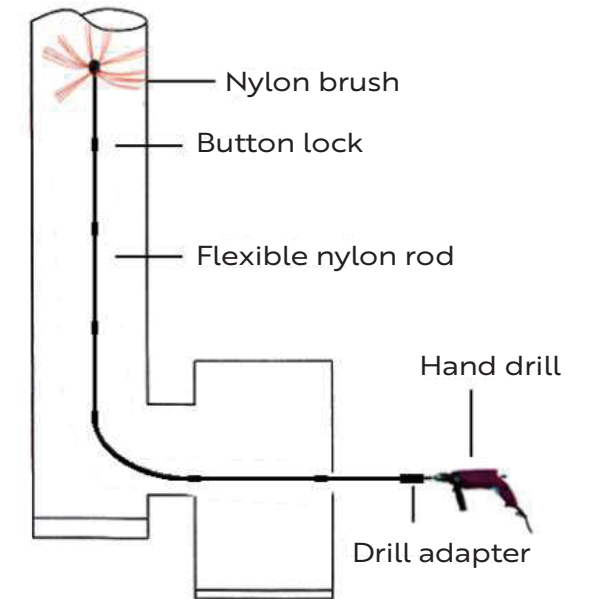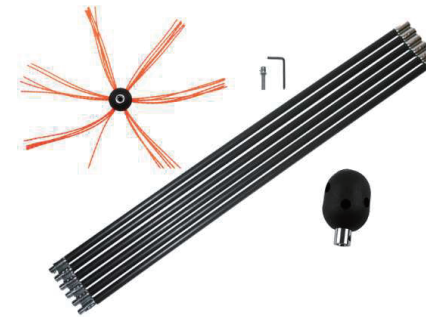



The VIVOHOME warranty program is our commitment to you. We are committed to providing you with a high-quality product that meets your needs and expectations. To demonstrate our confidence in the durability and performance of our products, we offer the following warranty.

Warranty Coverage

This warranty program applies to any orders, purchases, receipts, or use of any products sold by VIVOHOME and is valid for a period of 1 year from the date of purchase. However, please note that this warranty period is only valid for the original order. If you receive a replacement order during the warranty period, it will not include a separate warranty period.

Warranty Exclusions

This warranty does not cover damage resulting from misuse, accident, unauthorized modification, or any other circumstances not directly related to the manufacturing and design of the product, including but not limited to:

- Parts lost during use.
- Normal wear and tear of products or parts.
- Incorrect installation (such as using the wrong voltage) or assembly.
- Exceeding the bearing capacity of the product.
- Use under extremely harsh conditions.
- Improper cleaning or maintenance.
- Damage caused by any reason other than the intended use of the product.
- Indirect loss or damage caused by the product.

How to Make a Warranty Claim

If you find any defects that affect the use of the product or if the product stops working and cannot be repaired during the warranty period, please contact our customer service team at our email or via Amazon & app's direct messaging service as soon as possible. Provide the following information to expedite the process:

- Order number
- Images and/or videos illustrating the issue
- A detailed description of the problem

VIVOHOME will provide technical support, replacement, refund, or other solutions based on the nature of the issue. If you wish to return the original package for any reason, please contact us for confirmation before proceeding. You can expect to receive a response within 48 hours.

Thank you for choosing VIVOHOME. We are committed to ensuring the quality and satisfaction of your purchase. If you have any questions or need assistance, please do not hesitate to contact our customer service team.