


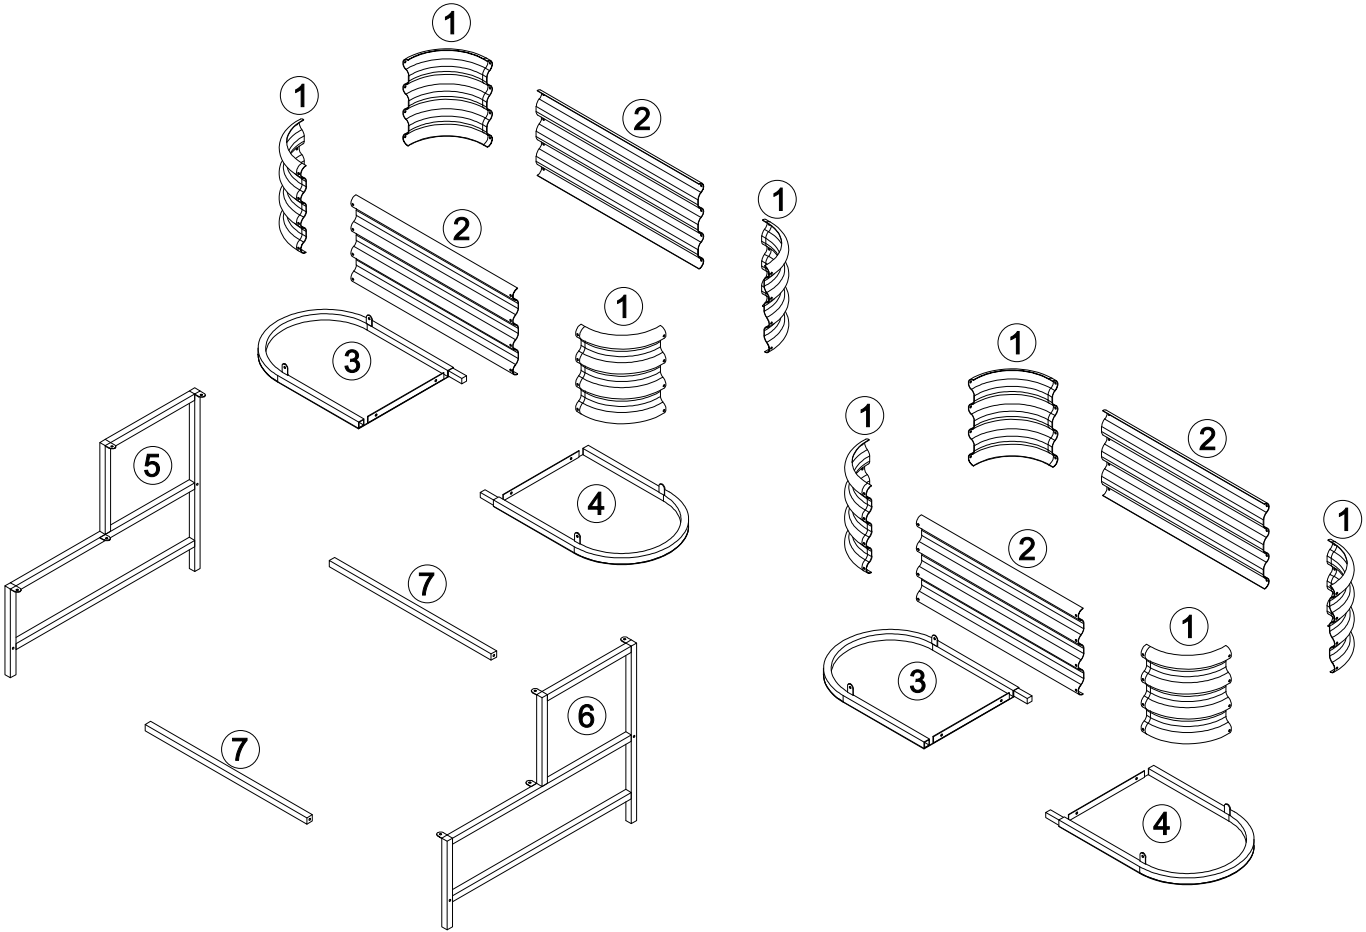


Installation Manual

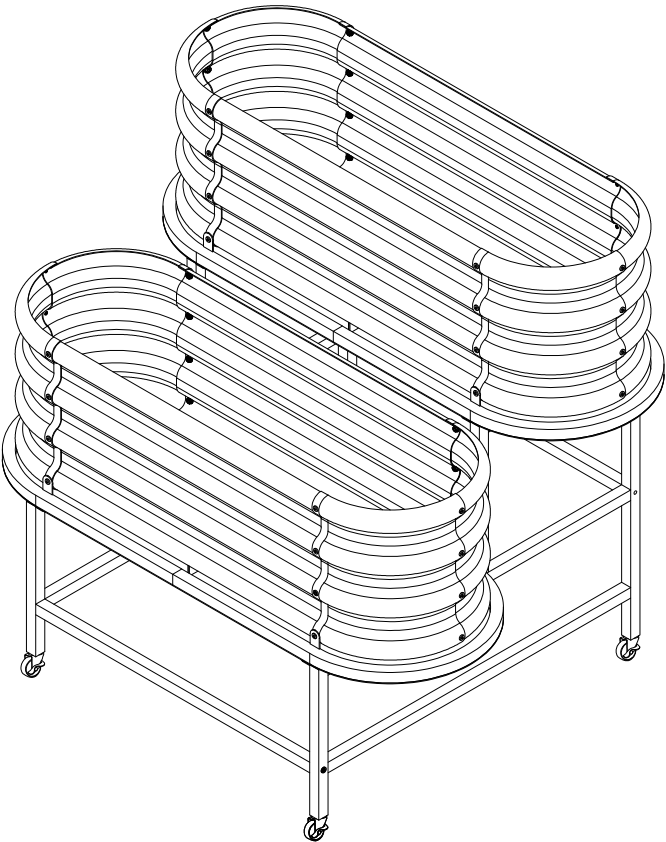


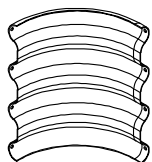


① X8pc

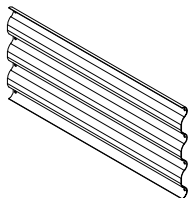


② X4pc

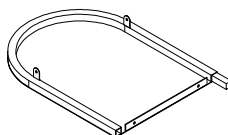


③ X2pc

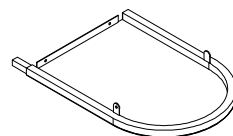


④ X2pc

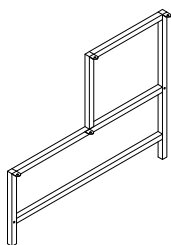

⑤ X1pc

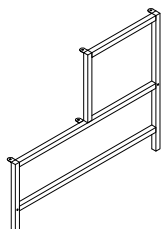


⑥ X1pc

 


⑦ X2pc

 M6X10



Ⓐ X60pc

M6X25

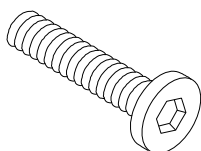

Ⓑ X4pc




Ⓒ X48pc



Ⓓ X4pc

1


	M6X10  Ⓐ X16pc	 Ⓒ X16pc
---	---	--

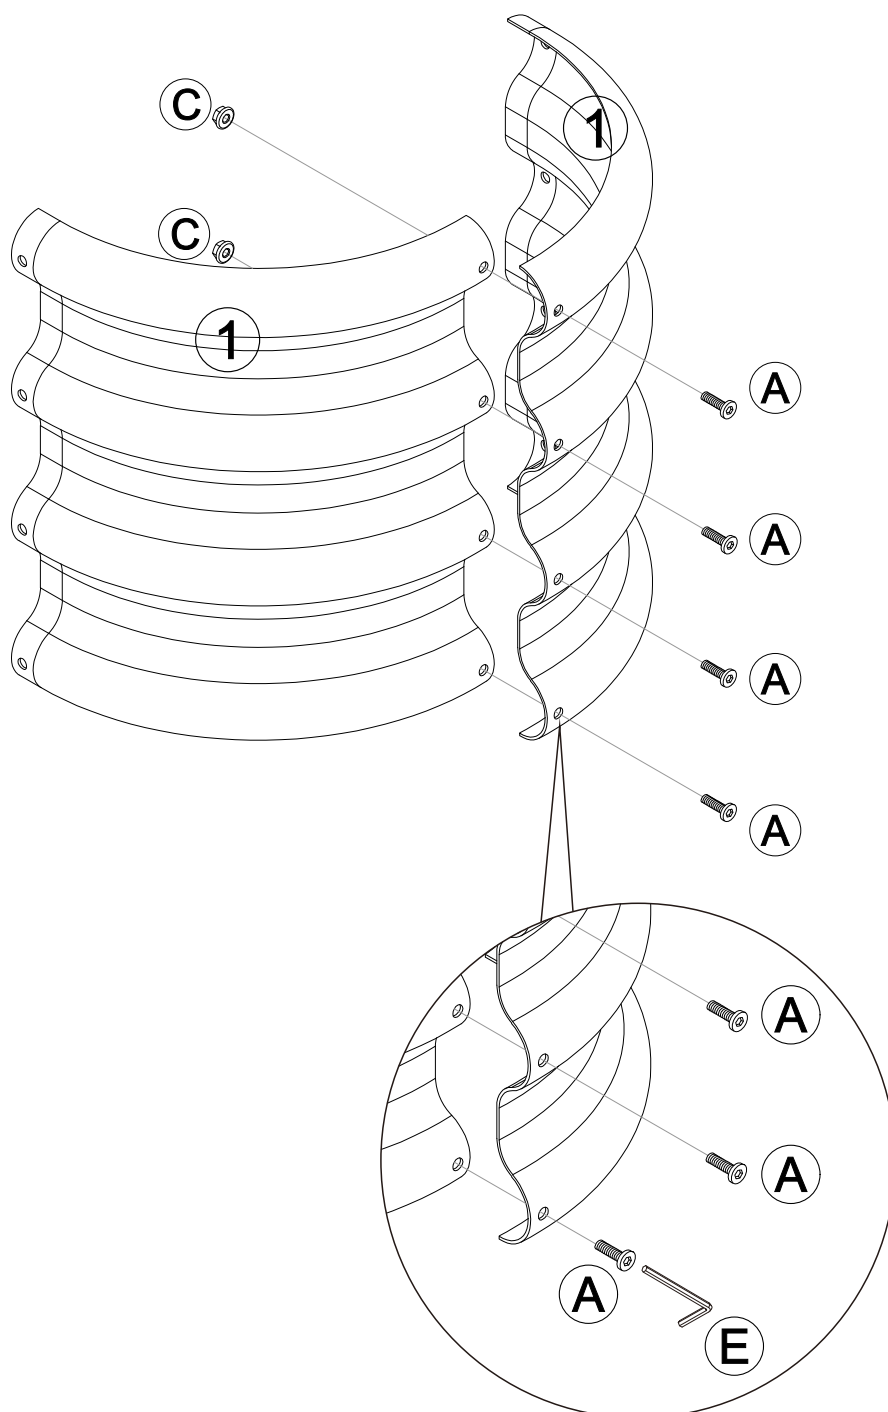

X4






2

 	M6X10  Ⓐ X24pc	 Ⓒ X24pc
--	---	--

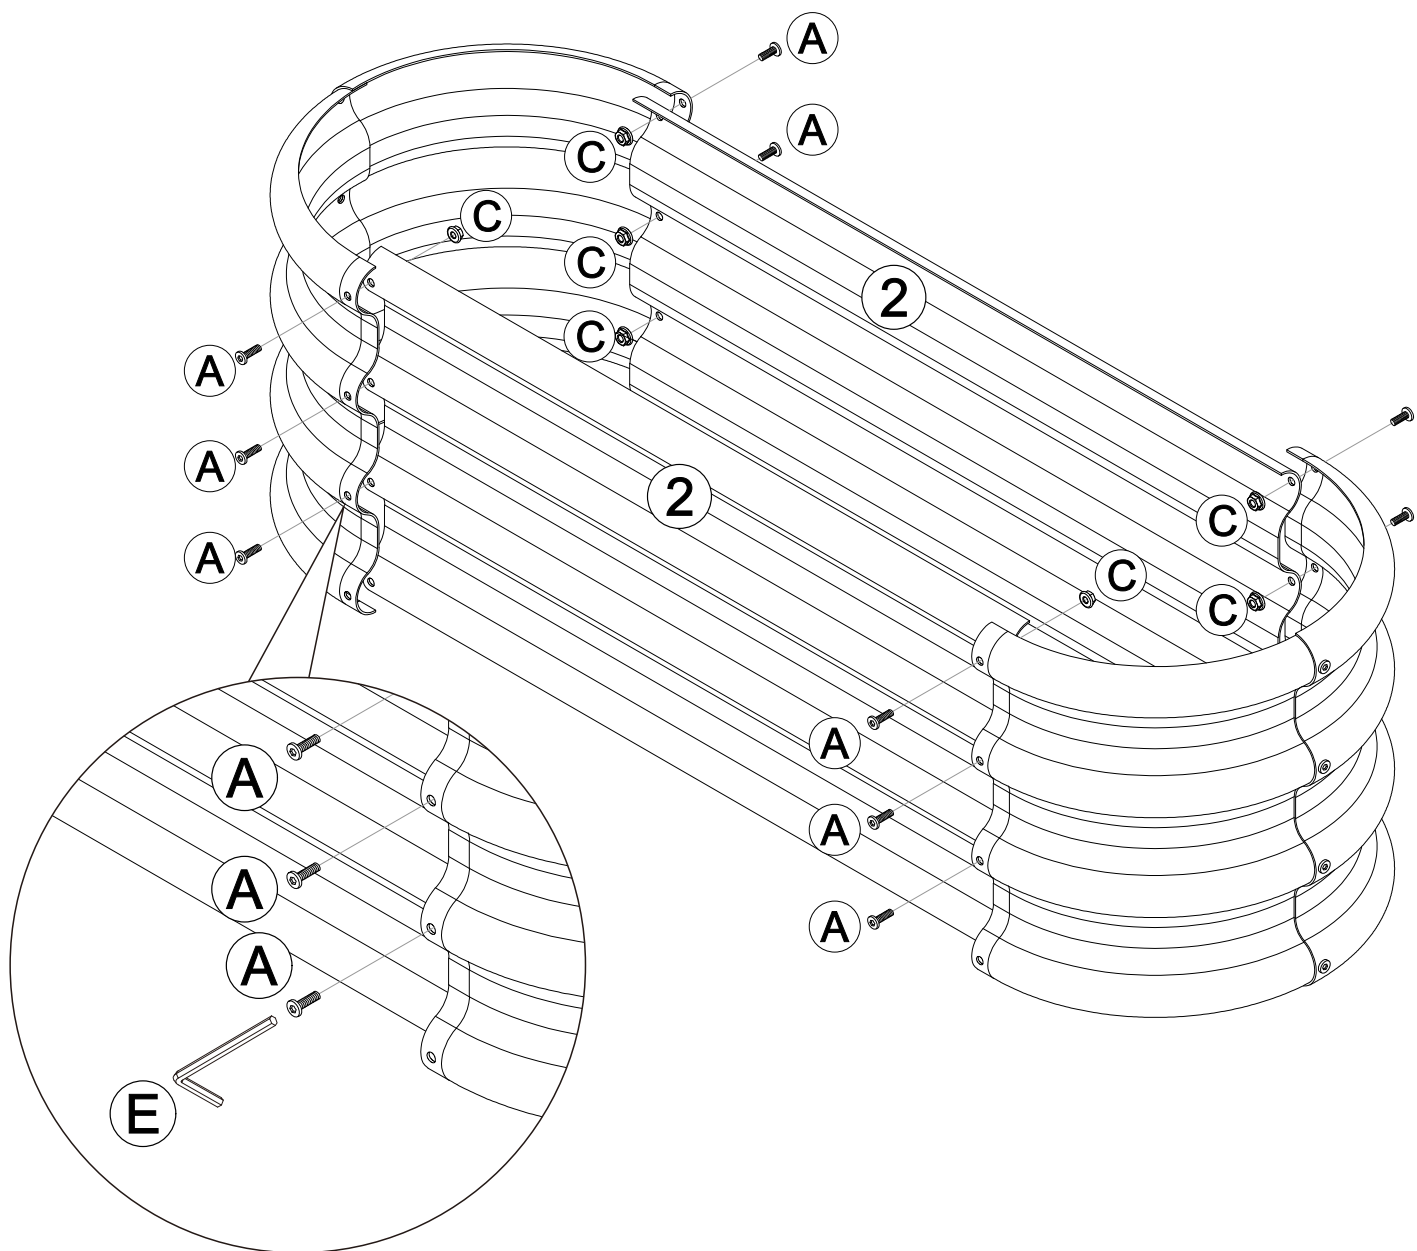

X2


3

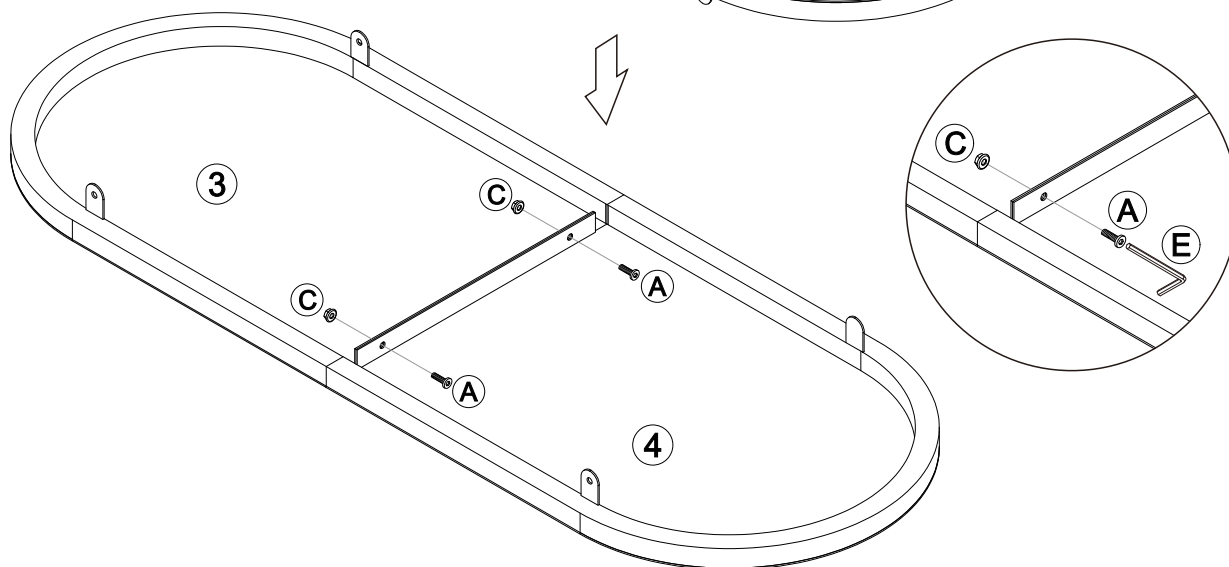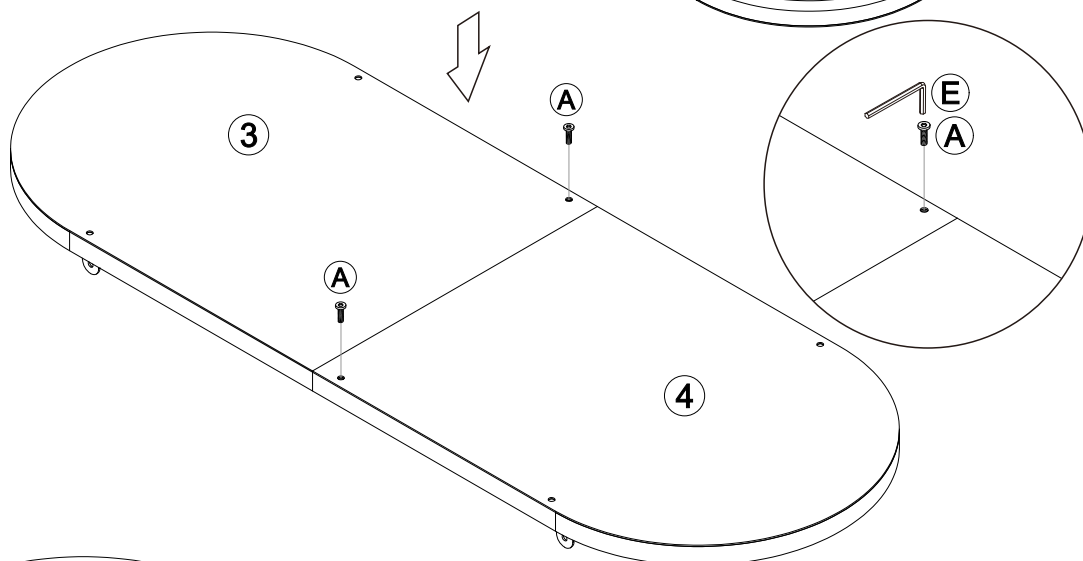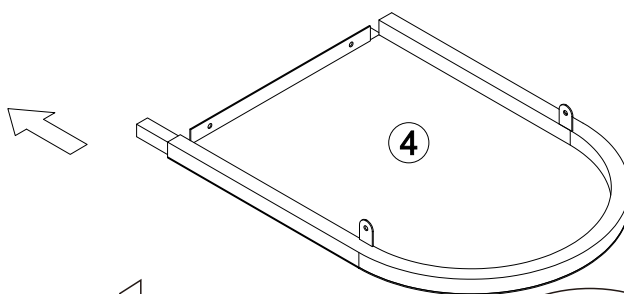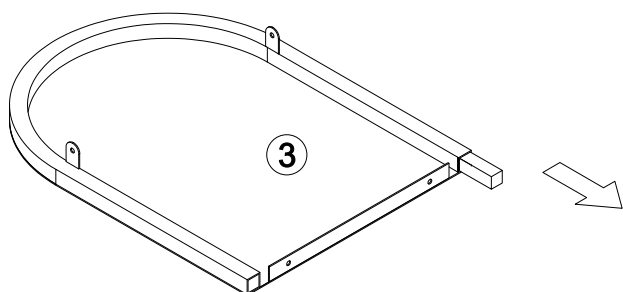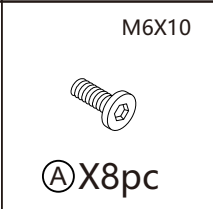

X2

4

 	M6X10  Ⓐ X4pc	 Ⓒ X4pc
--	--	---

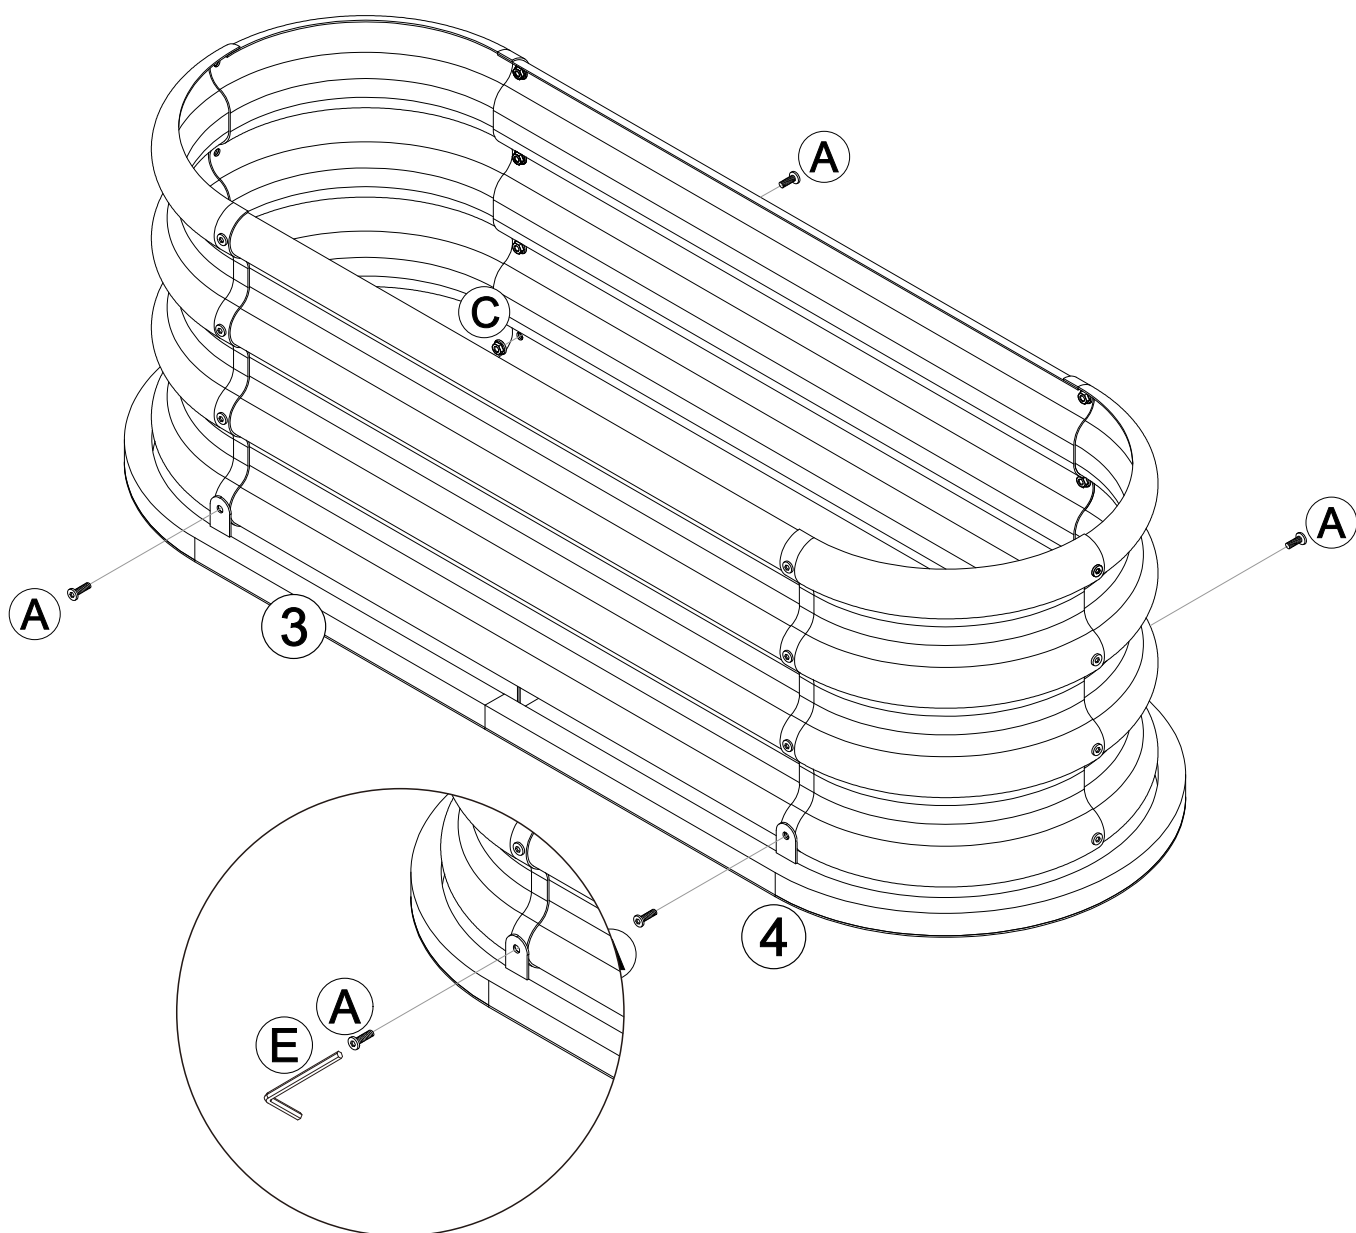


X2


5



 M6X25




Ⓑ X4pc

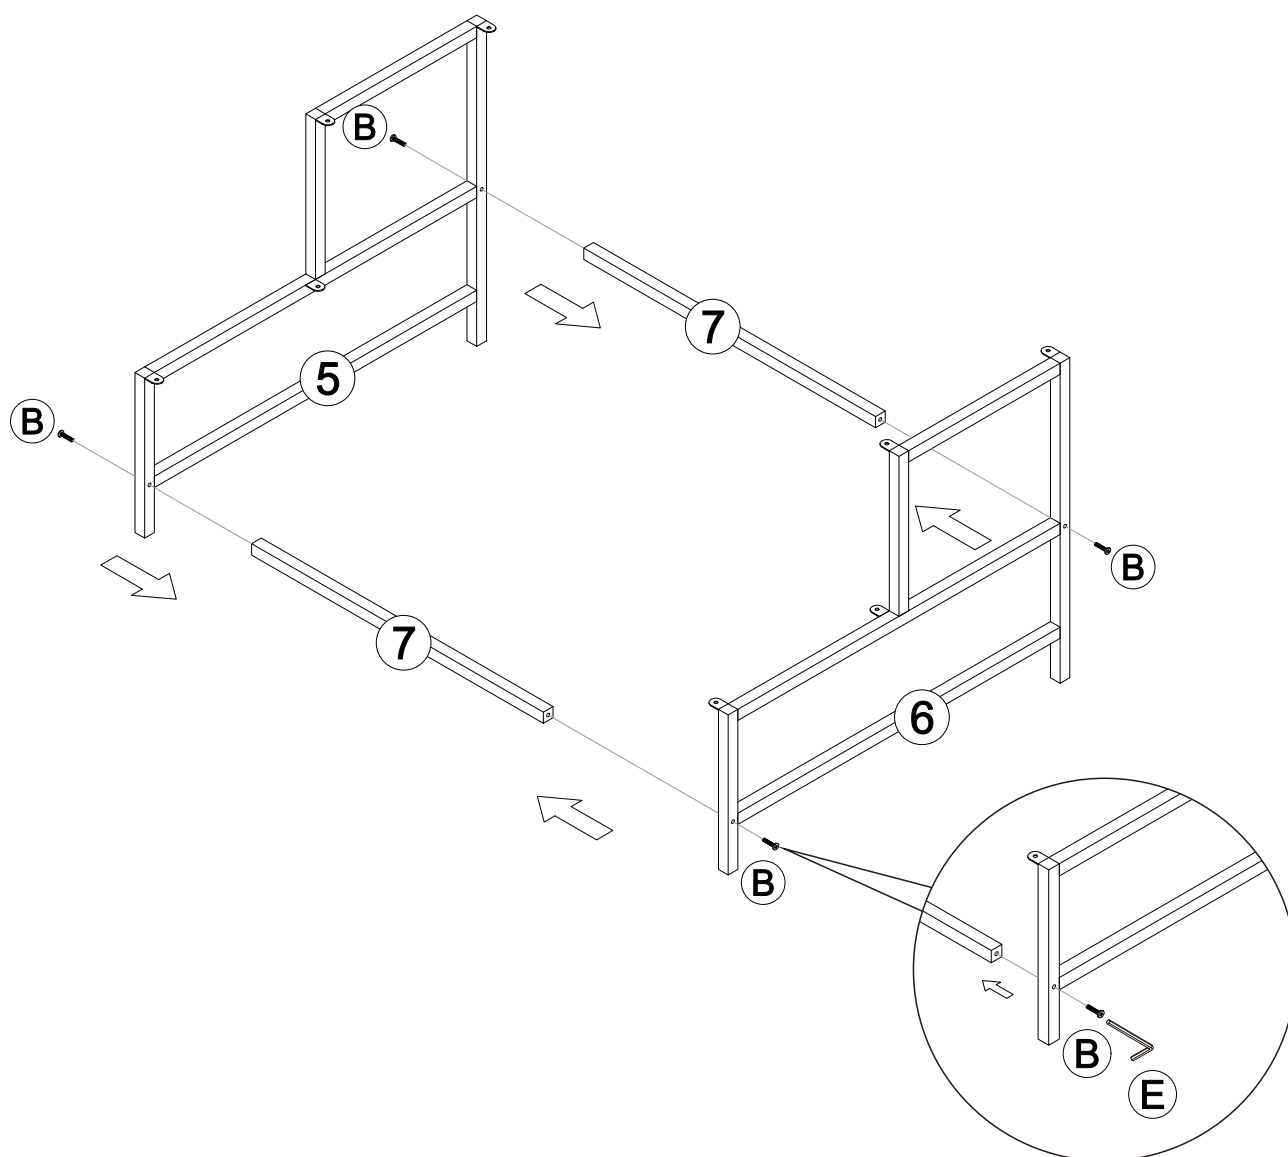

6

 	M6X10  Ⓐ X8pc	 Ⓓ X4pc
---	--	---

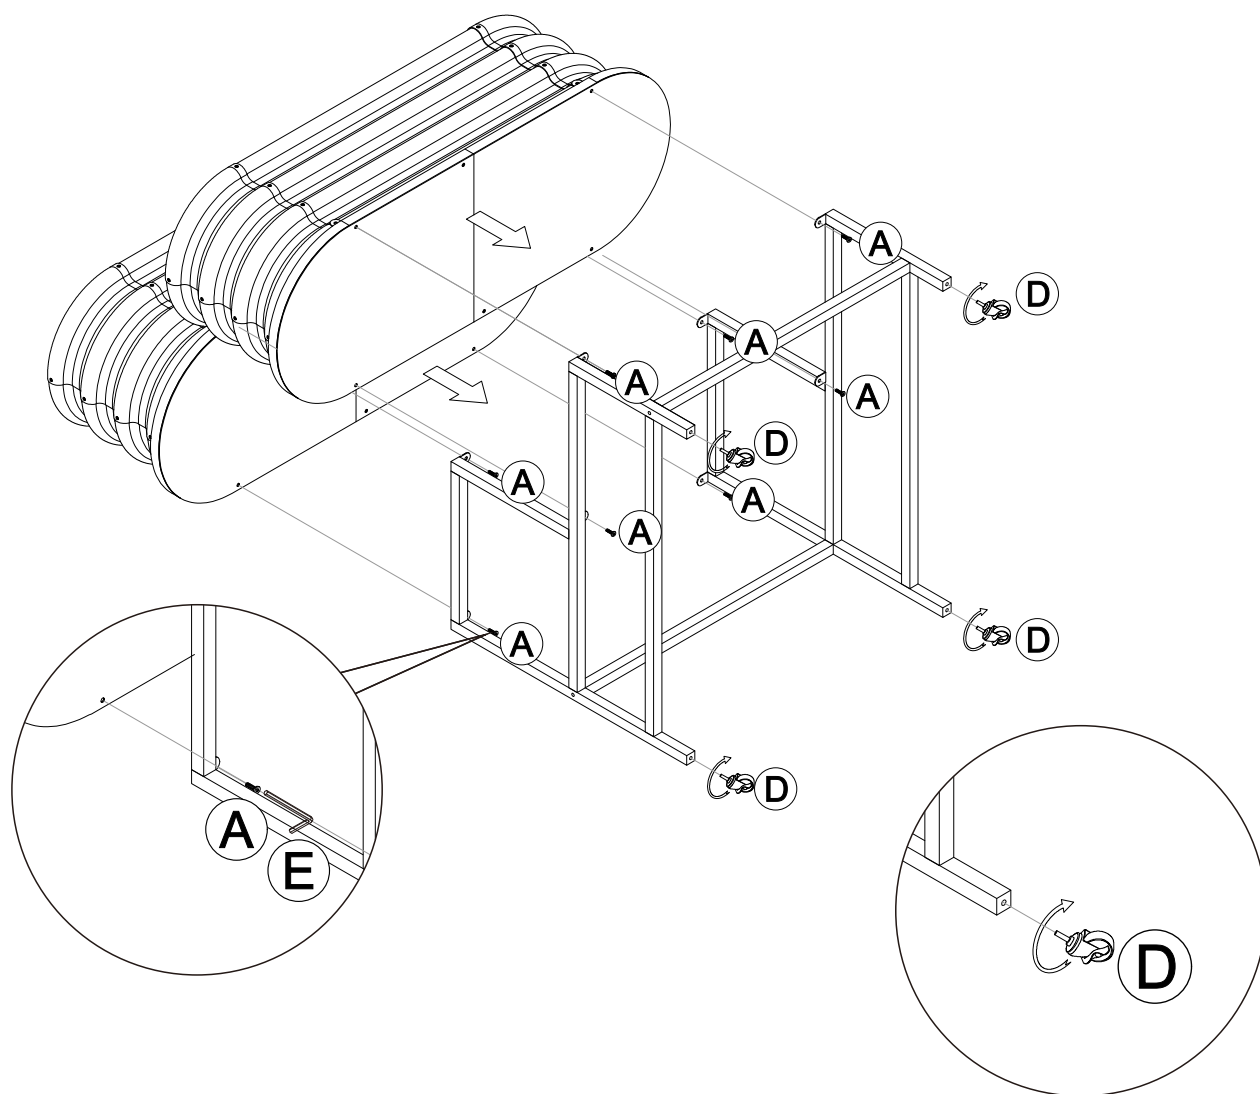



Tighten all screws to 100% after inspection.

