

Instruction Manual

User Guide

Make life better

Warm tips: We are proud of high-quality products and satisfactory service, but the goods may encounter special circumstances during transportation, if you receive the goods with missing or damaged parts, please take photos and contact our customer service before returning the goods , we will customize a solution that satisfies you, thank you.



HOME OFFICE CHAIR

Instruction



◀ HOME OFFICE CHAIR

▼ PARTS LIST


NO	DESCRIPTION			QTY
A	Chair Seat			1
B	Chair Back			1
C	Plate			1
D	Gas spring/lift			1
E	Castor			1
F	Wheel			5
G	Screw1	$\Phi 5/16'' * 2-3/8'' L$		3
H	Screw2	$\Phi 5/16'' * 1-9/16'' L$		4
I	Flat Washer	$\Phi 5/16'' * 22mm$		7
J	Lock Washer	$\Phi 5/16''$		7
K	Allen Wrench	$\Phi 5mm$		1

Note:

1. During the assembly of the two components, if there are multiple screws that need to be installed, you can first align all the screws with the hole position and manually turn a few turns to fix the position, and then tighten them all with a wrench

2. The Flat Washer and Lock Washer must be installed to prevent the screw from loosening and damaging the connection part.

Installation Method

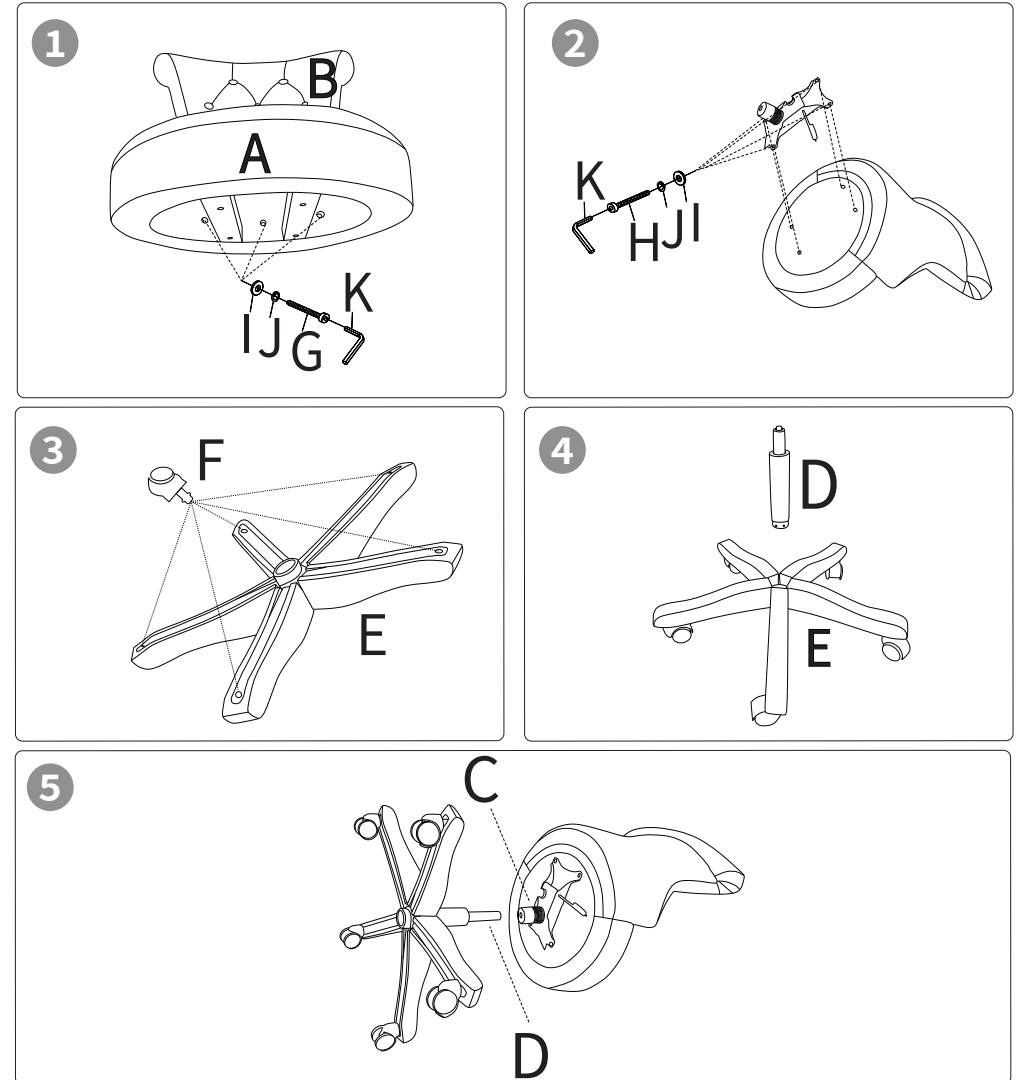

- 1 Align screw (G) through lock washer (J) and flat washer (I) with holes as shown and tighten with hex wrench (K).
- 2 Use screws (H) and washers (I and J) to assemble the seat cushion and plate as shown.
- 3 Snap the wheels (F) into each groove of the castor (E).
- 4 D and E can be inserted in line with the holes.
- 5 As shown, turn the chair upside down, align the holes, and assemble the gas spring/lift with the plate.