



# Instruction Manual

## Suitable for GKM-W Series

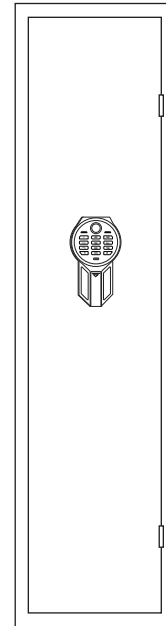


*Never keep emergency keys and USB type-c cable in your gun cabinet!!!*

## Component Description

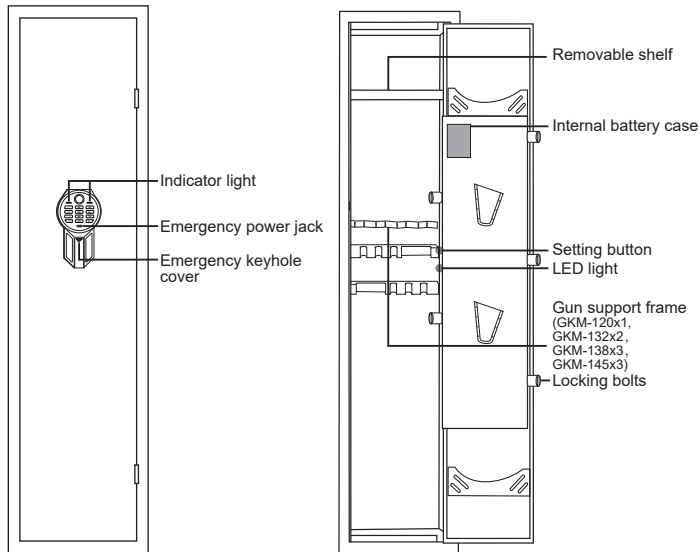

## Schematic Drawing of Control Panel

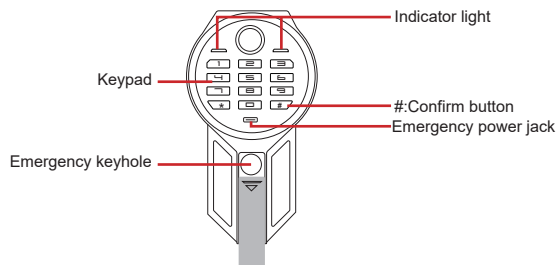


## 4. The fourth way to open: Use the USB type-c cable + code/fingerprint

When the battery of your safe is weak and you can't find the keys, please plug one end of USB type-c cable into the emergency power jack and plug the other end to the portable charger (not included), then enter the correct code/fingerprint to open the door (Suitable for the battery is out of power and the key can not be found).


## Removable Shelf

This gun cabinet has a removable shelf, with the shelf, you can place short rifles, store your pistols and ammo on the shelf; without the shelf, you can place your long rifles, more flexible storage space.

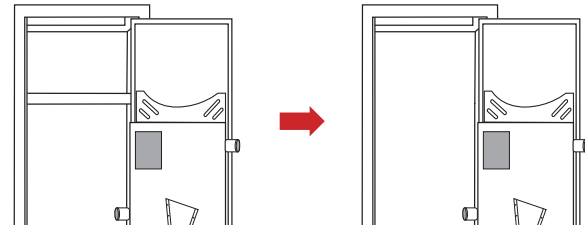

## Mounting Instructions

- Place the gun cabinet in the desired location. Lift the bottom carpeting up to find the install holes locations on the floor or wall.
- Mark the drilling spots on the wall or floor from the inside pre-drilled holes, then remove gun cabinet and drill the holes. Drill the appropriate diameter and depth of pilot holes depending on the type of hardware.
- Put the expansion bolts into the drilled holes, take the expansion bolt out of the sleeves, then place the gun cabinet and align the pre-drilled holes with drilled holes, and insert the expansion bolts into its sleeves from inside of the safe.

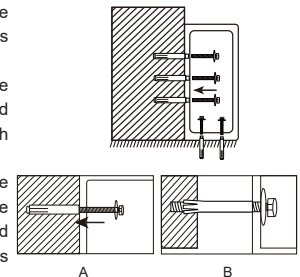

**⚠ NOTICE:** Please make sure to mount the gun cabinet on the wall or floor otherwise it may fall over and threaten your safety.

Thank you for choosing our products! Please take your time to read and familiar with the proper operating procedures presented on the following pages.

### IMPORTANT

#### ⚠ WARNING



- Tip over hazard: Secure the cabinet! The cabinet can be tipped over by children or adults, please make sure the cabinet is mounted on the wall or floor.
- Keep the keys in a secure place away from children.
- Do not move this cabinet using its knob.

#### Lifetime Key Matching Service


Record the serial number on the locks! (It is important information for the manufacturer to make up keys if you lose your keys.)

Serial number: \_\_\_\_\_




Serial number


### Parts List

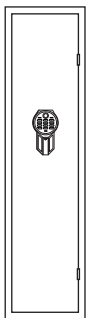

Gun Cabinet \*1

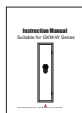

Instruction Manual\*1

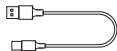

USB Type-c Cable\*1



Expansion Screws\*5



Emergency Keys\*2

### Warnings

- ⚠ 1. Do not lock the emergency key or USB type-c cable into the cabinet.
- ⚠ 2. The default user code is **123456**, which need to be modified.
- ⚠ 3. If the cabinet is not used for a long time, the battery should be removed to prevent leakage of liquid from damaging the electronic system.
- ⚠ 4. Purchase 4 AA batteries in advance, this cabinet does not contain batteries.



### Dual Alarm System

1. After 3 consecutive times of wrong code or 5 consecutive times of wrong fingerprint, your safe will activate the alarm system, the alarm will sound for 30 seconds, enter the correct code/fingerprint and the alarm will be cancelled.
2. In standby state, press \*, there is a beep and all the lights came on at once, the vibration alarm mode is turned on. If the box is shaken or hit violently, it will give an alarm immediately for 30 seconds, at this point, enter the correct code to stop the alarm.

#### ⚠ NOTICE:

1. When power on, the system default for alarm is off.
2. After safe is opened with code, the vibration alarm will turned off and needs to be turned on again.
3. When you forget the code, the alarm can be stopped by using the key to open the safe and remove the battery to cut off the power.

### Mute Function

1. In standby state, press **1** twice, then press **#**, there is a long beep , indicate the mute function is turned on.
2. In mute function state, press **1** twice, then press **#**, there is a long beep , indicate the mute function is turned off.

#### ⚠ NOTICE:

Under the mute function, the wrong code alarm and vibration alarm still work, and the alarm will sound when triggered.

### Reset the System

1. Press and hold the setting button for 3 seconds, the buzzer plays a chord, indicating the reset successful (All stored codes will be deleted, please use the default code to unlock).
2. The default code is **123456**, need to be modified.


### Under-voltage Warning

When the voltage is around 4.8V, after opening the door, the buzzer will beeps 6 times in a row, reminding the user that the battery power is low and the user needs to replace the battery.



## System Setting

### Step1 Open the door with the key

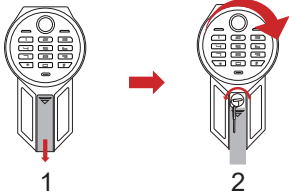

1. Down slide the keyhole cover to expose the emergency keyhole.
2. Insert the emergency key, turn it counterclockwise to the limit, and hold on it.
3. Then rotate the knob clockwise to open the door.

**▲ NOTICE:** 1. When you rotate the knob to open, you must have the key fully inserted and turned counterclockwise to the limit, keeping the key until the safe unlocked and opened.

2. Use the key to unlock, the led light will not light up.

3. Please keep the keys in a secure place, do not lock the keys inside the safe.

### Step2 Install Battery

1. After first opening, keep the safe open and locate the battery case, prepare 4 brand-new AA 1.5 Volt alkaline batteries (not included).
2. Remove the internal battery case cover and install the 4 AA batteries by matching the + & - electrode.


**▲ NOTICE:** 1. Rechargeable battery is not recommended as it may destroy the internal electronic components of your safe.

2. Please use brand-new batteries, do not mix used batteries with new batteries.

3. After opening the door, if the safe beeps 6 times in a row, it means the batteries are out of power, please replace the batteries.

### Step3 Set the fingerprint

1. Open the safe, keep the safe opening, short press the setting button (on the inner side of the door), the safe beeps once and the fingerprint collector indicator blinks.
2. Place your finger on the fingerprint collector. When you hear a short beep, remove your finger and press again, repeat 4 times. Keypad light on and a long beep indicating that the code is successfully set.
3. Test the fingerprint before you close the door.

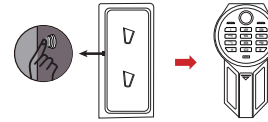

### Step4 Set the first code

1. Open the safe, keep the safe opening, press 0 twice, then short press the setting button (on the inner side of the door), the safe beeps once and keypad light on.
2. Input a new code(3-12 digits), then press # to confirm. There is a long beep indicating that the code is successfully set.
3. Test the code before you close the door.

### Step5 Set the second code

1. Open the safe, keep the safe opening, press 1 twice, then short press the setting button (on the inner side of the door), the safe beeps once and keypad light on.
2. Input a new code(3-12 digits), then press # to confirm. There is a long beep indicating that the code is successfully set.
3. Test the code before you close the door.

**▲ NOTICE:**

1. 10 seconds without any operation after pressing the setting button, it will go back to standby mode, you need to retry from **STEP3**.
2. Please set the fingerprint and two codes immediately after receiving the safe.
3. When setting the code or fingerprint, please short press the setting button. If you long press the setting button, the buzzer plays a chord, indicating the safe was restored to factory settings and all codes and fingerprint will be deleted.
4. The default code is **123456**, need to be modified.

## Four Ways to Open the Door

### 1. The first way to open: Use the emergency key

Insert the emergency key into the keyhole, turn counterclockwise to the limit and hold still, then rotate the knob clockwise to open the safe (Suitable for the first opening, forget code or weak battery).

### 2. The second way to open: Use the code

After installing the battery, enter your code and then press the # key to confirm, rotate the knob clockwise to open the safe (Suitable for quick access and daily use).

### 3. The third way to open: Use the fingerprint

After installing the battery, put your finger on the fingerprint collector, the left indicator light will be on. Turn the door handle clockwise to open the door (Suitable for quick access and daily use).