 


Instruction Manual

Cabinet

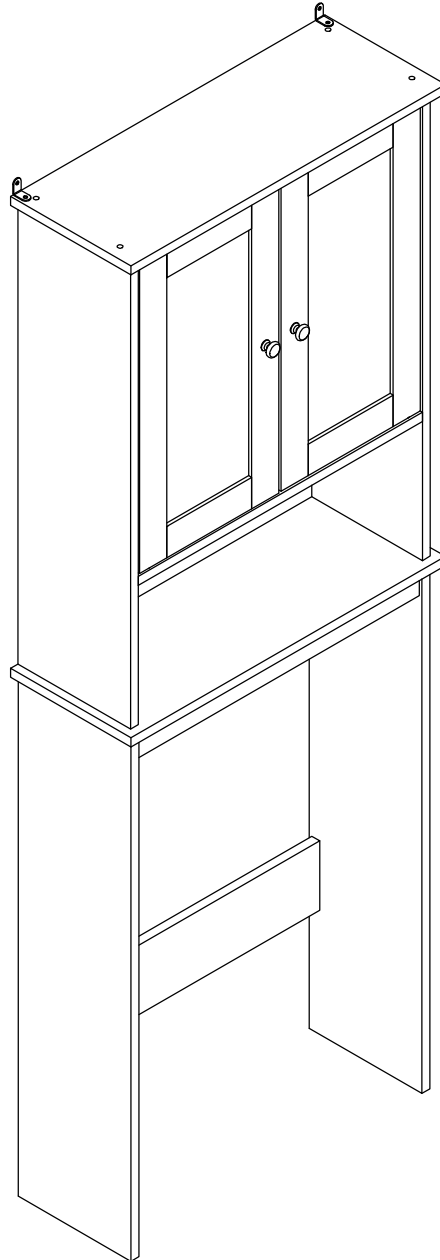

Thank you for shopping with us!

Power tool is recommended for the assembly.

Notes:

1. ASSEMBLY PREPARATION AND TIPS FOR ASSEMBLY

- 1). Remove all packaging materials, staples and packing straps from the carton.
- 2). Refer to Parts List and Hardware List, and ensure parts and hardware are correct before assembly.
Contact customer service for missing parts.
- 3). Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent scratch and damage to parts.
- 4). Allow ample room for assembly and assemble the product near where the product will be placed.
- 5). During assembly, do not over-tighten any fittings as this may cause damage.
- 6). Always place the product on a flat, level surface.

 
 
 
 
 
 
 
 
 
 
 
 
2. CARE AND MAINTENANCE

- 1). KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
- 2). Wipe clean with a soft, dry cloth; avoid the use of harsh chemicals or household cleaners as they may damage the exterior finish of the furniture.
- 3). Hardware may loosen over time. Periodically, check that all connections are tight; re-tighten as necessary.









3. TIPS TO PROTECT & CARE FOR YOUR FURNITURE

- 1). Avoid placing your furniture in direct sunlight, as sunlight causes fading.
- 2). Use a protective pad when writing on the furniture surface.
- 3). Use cutting boards and trivets for food preparation in order to avoid damaging the top for the unit.


PART LIST

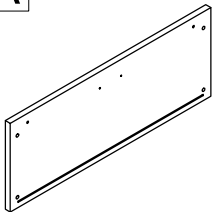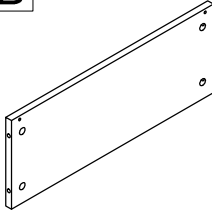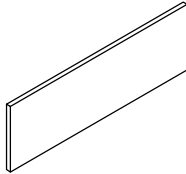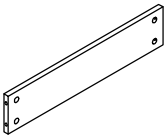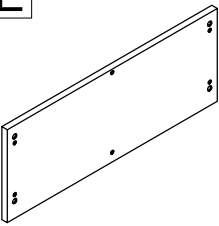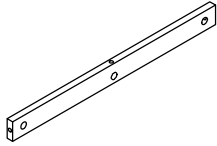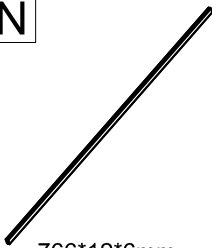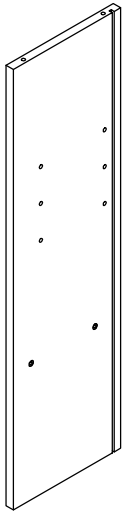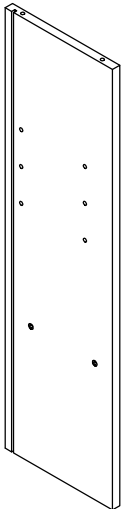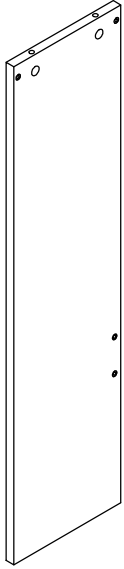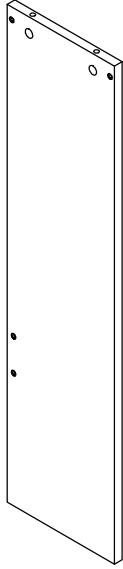A 	B 	C 	D 	E 
Top Panel 1 PC	Fixed Shelf Panel 1 PC	Adjustable Shelf 1 PC	Back Bottom Rail 1 PC	Bottom Panel 1 PC
F 	G 	H 	I 	N 
Top Rail 2 PCS	Back Panel 2 PCS	Left Door 1 PC	Right Door 1 PC	766*12*6mm Back Plastic Strip 1 PC
J 	K 	L 	M 	
Upper Left Panel 1 PC	Upper Right Panel 1 PC	Lower Left Panel 1 PC	Lower Right Panel 1 PC	

        HARDWARE LIST
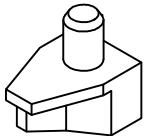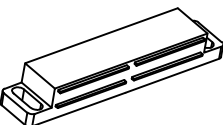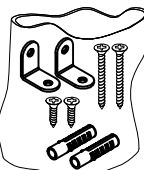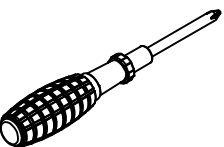
#1		#2		#3		#4		#5	
	Ø5*40mm		30*22*1mm		14*10mm		Ø6*35mm		Ø15*9mm
	Screw		Door Small Plate		Back Bracket		Cam-bolt		Cam-lock
	8 PCS (Extra 2)		2 PCS		10 PCS(Extra 2)		18PCS (Extra 2)		18PCS(Extra 2)
#6		#7		#8		#9		#10	
			M4*22mm		16*11*Ø5mm		Ø3.5*15mm		70*17*13mm
	Handle		Round Head Bolt		Shelf Holder		Screw		Door Magnet
	2 PCS		2 PCS		4 PCS (Extra 1)		12PCS (Extra 2)		1 PC
#11		#12							
	Ø3*12mm								
	Screw		Safety Strap Kit		Center Axis (Extra)		Phillips Screwdriver		
	2 PCS(Extra 1)		1 SET		2 PCS		1 PC		

 Instructions For Fastening CAM-BOLT and CAM-LOCK




CAM-BOLT




CAM-LOCK

 
Tools Required




INSERTING AND TIGHTENING CAM-BOLT

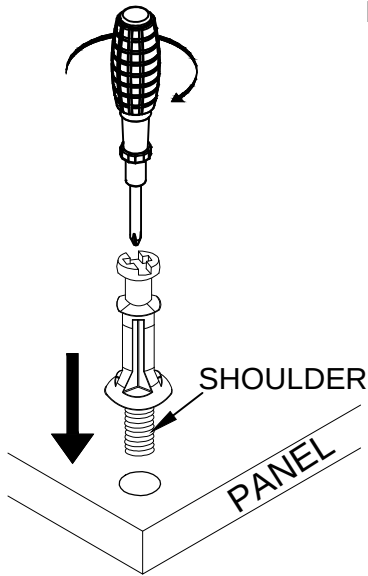 

 Place Cam-bolt on pre-drilled hole and screw in vertically

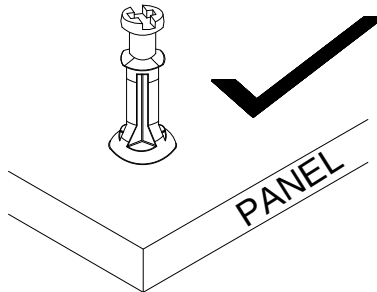

 
Shoulder is flushed (on the same level) with the panel.

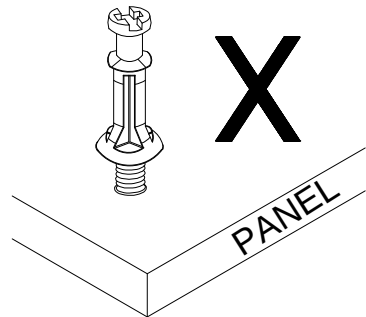


Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

 
INSERTING CAM-LOCK

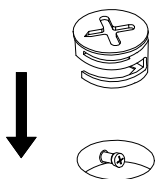

 Insert Cam-lock with arrow align to Cam-bolt head




CORRECT

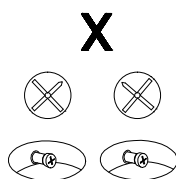 

WRONG



Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

 TIGHTENING CAM-LOCK


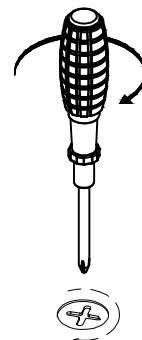


Use a Flat-head Screwdriver to turn Camlock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.

 
 
Step 1.

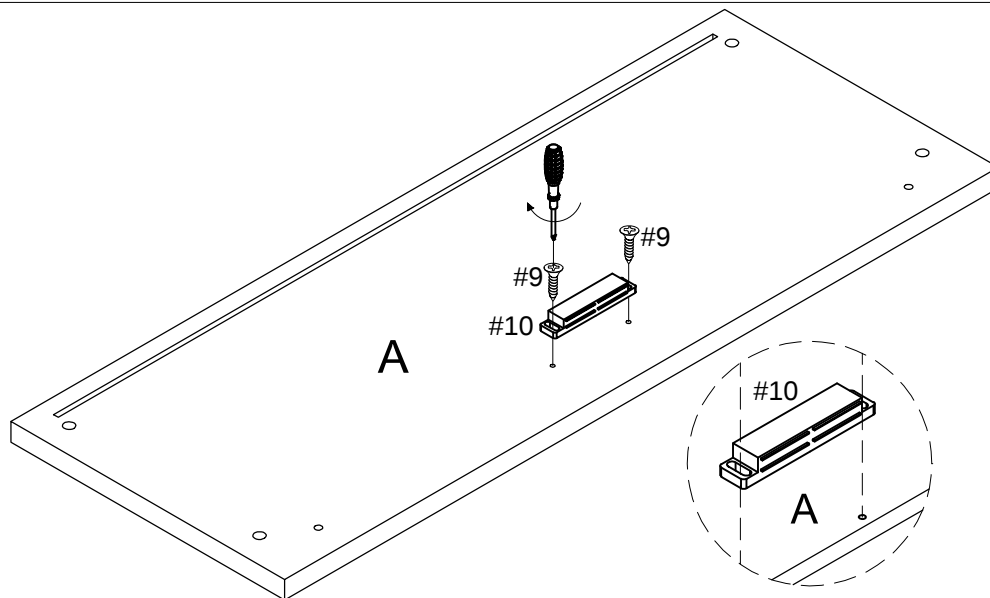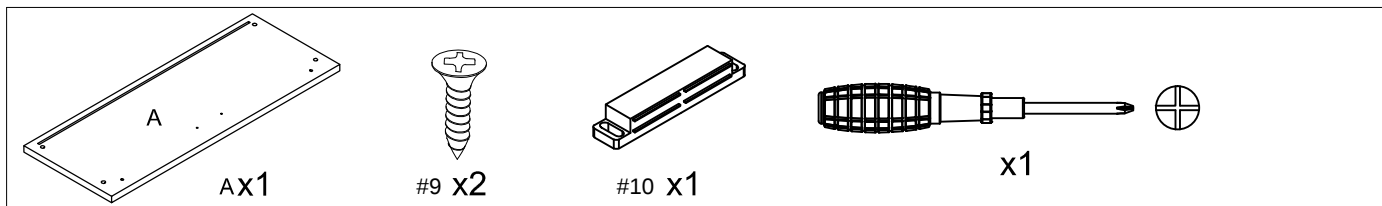

 
 
Step 2.

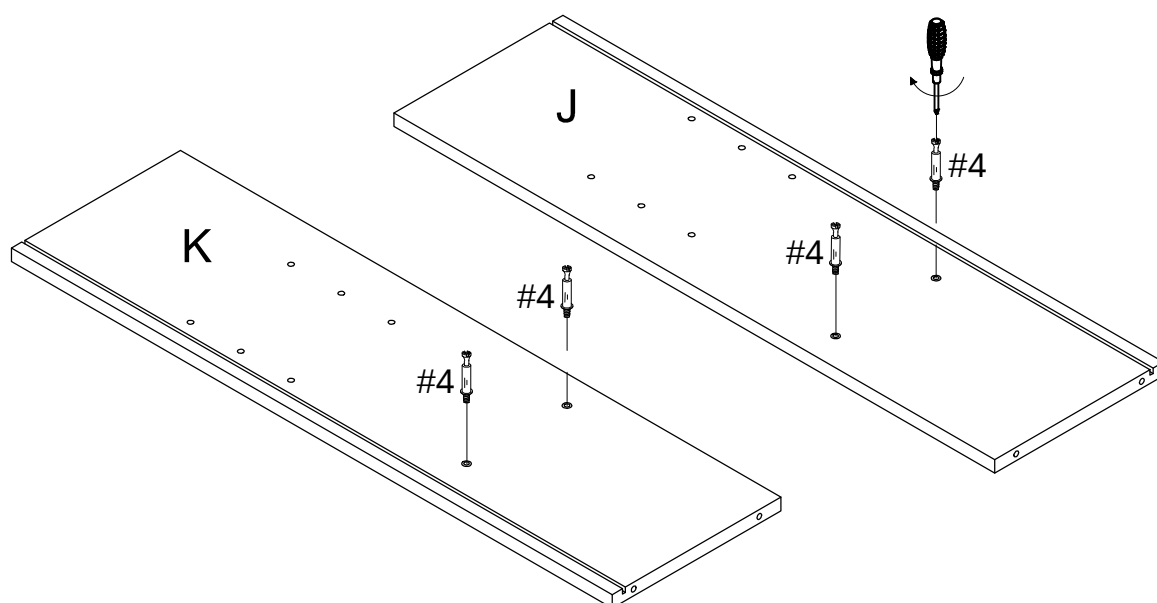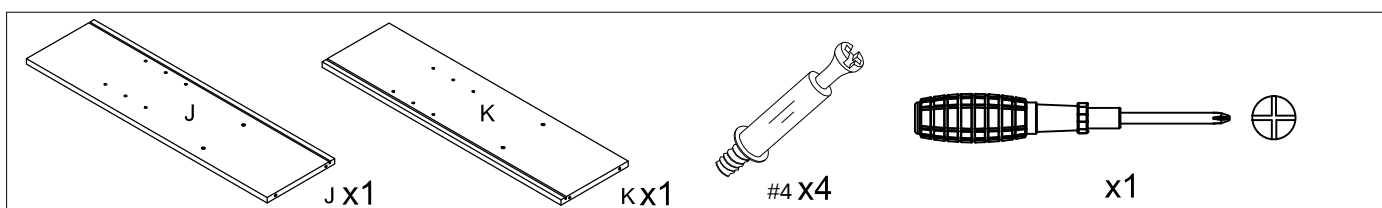

 
 
Step 3.

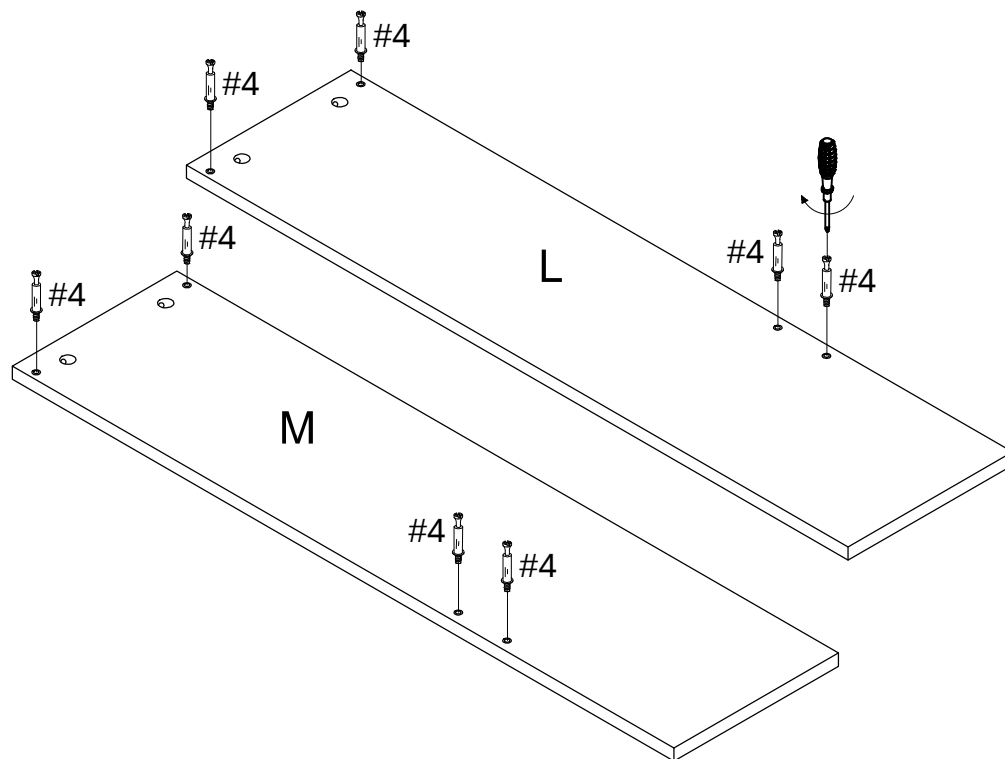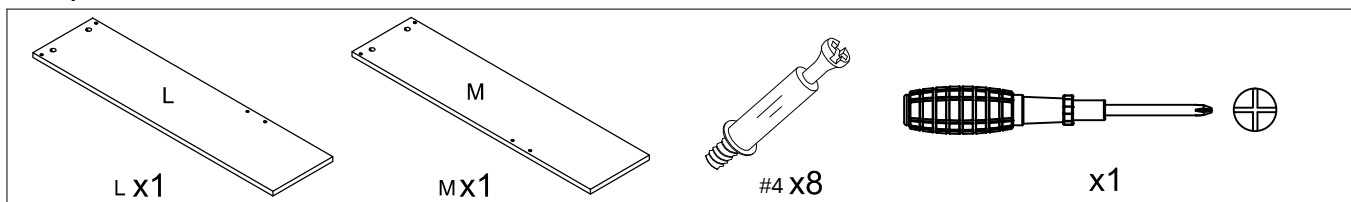

 
 
Step 4.

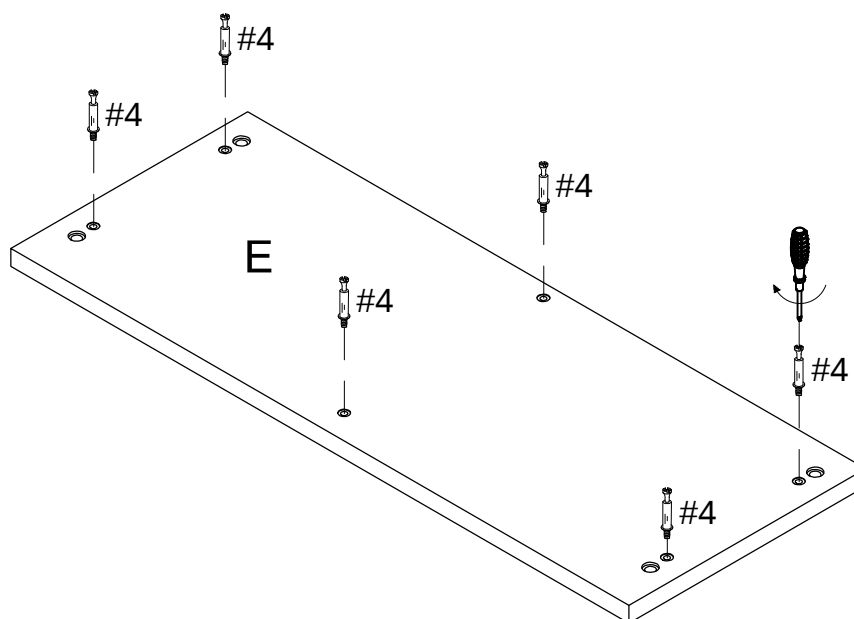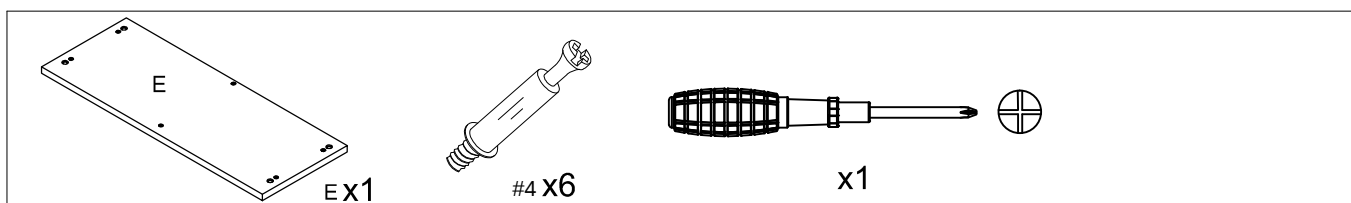

 
 
Step 5.

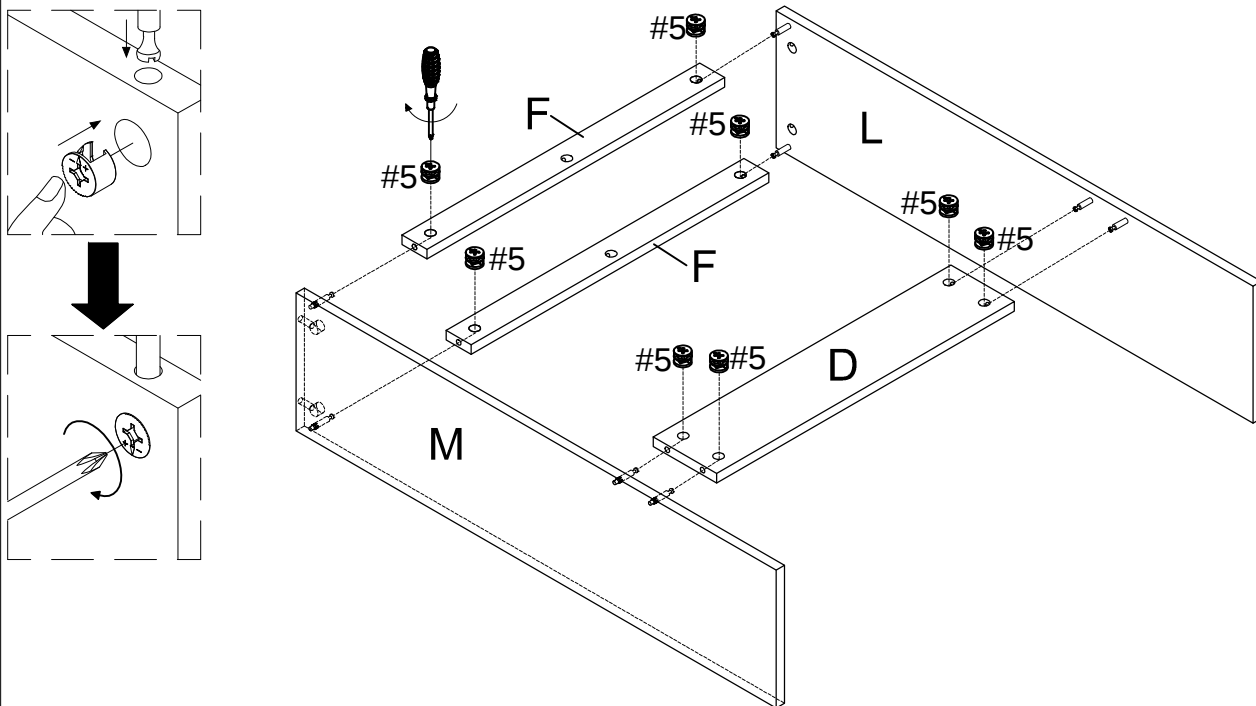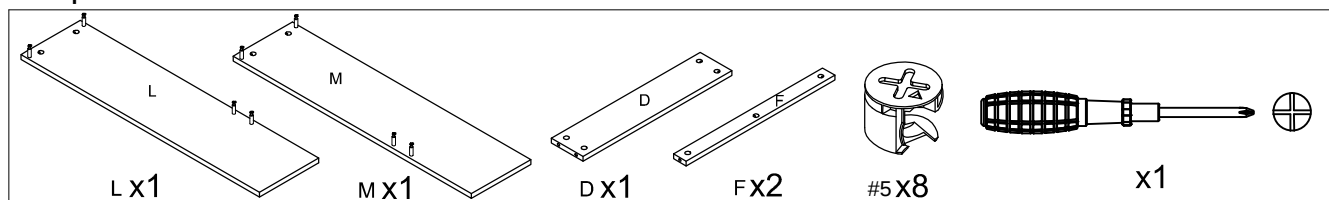

 
 
Step 6.

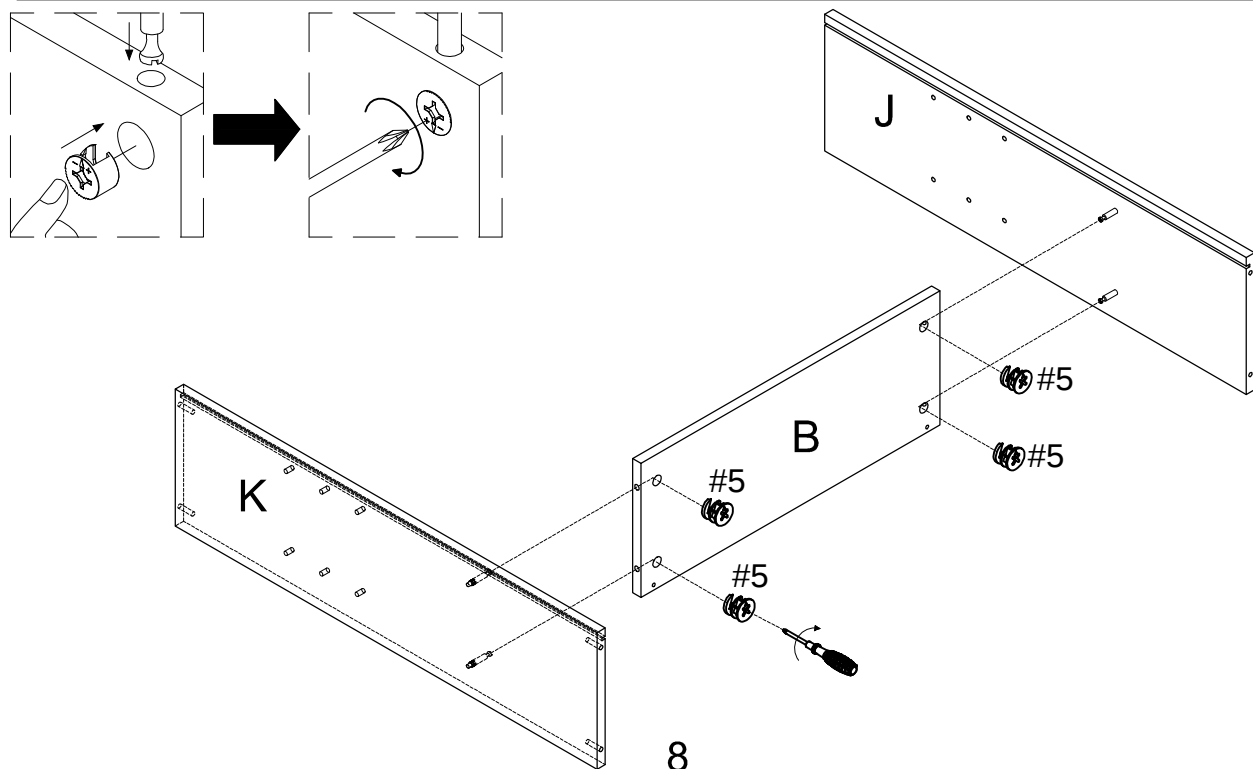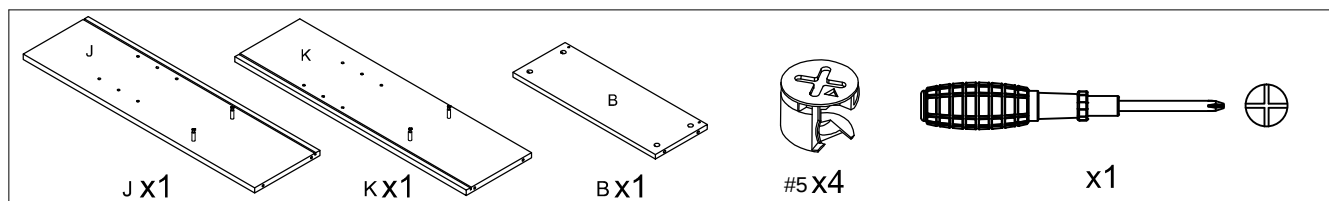

 
 
Step 7.

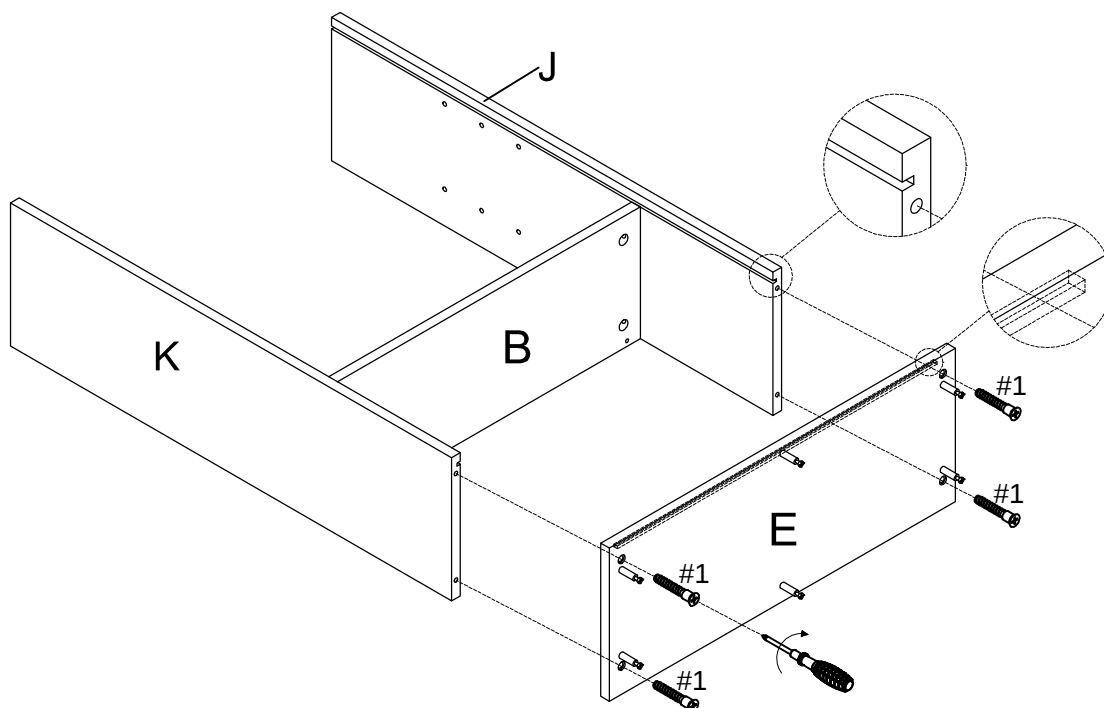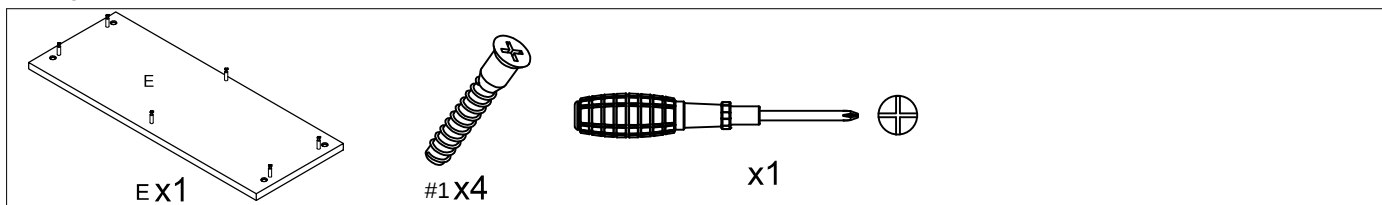

  Step 8.

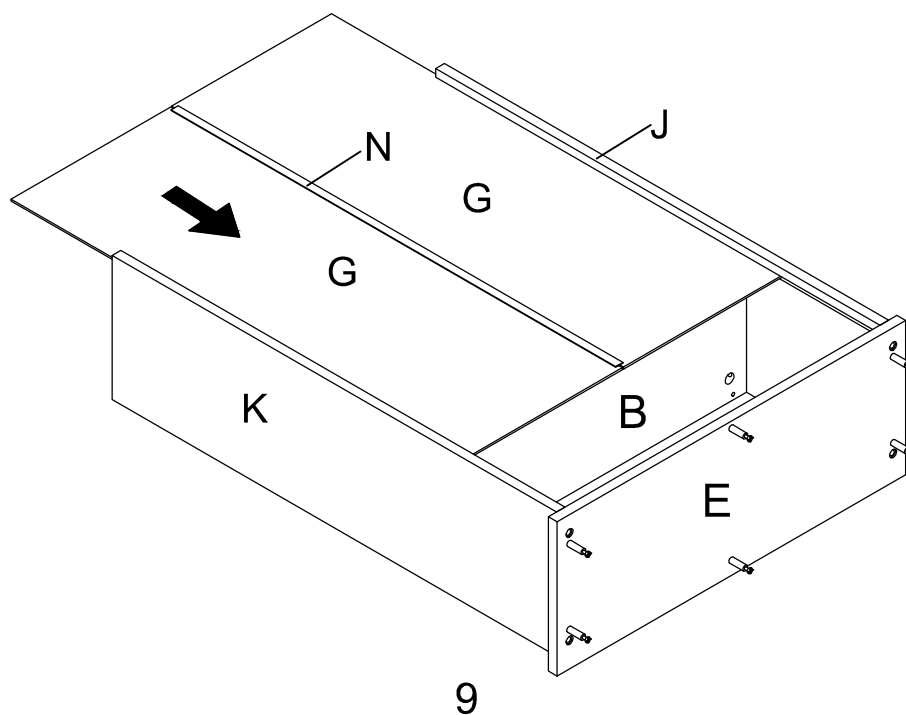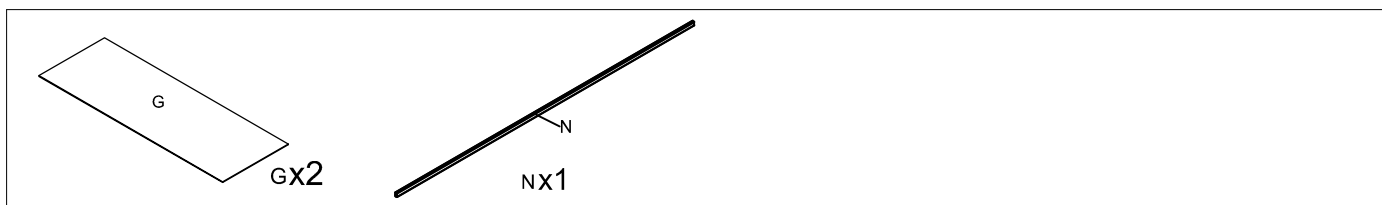

  
Step 9.

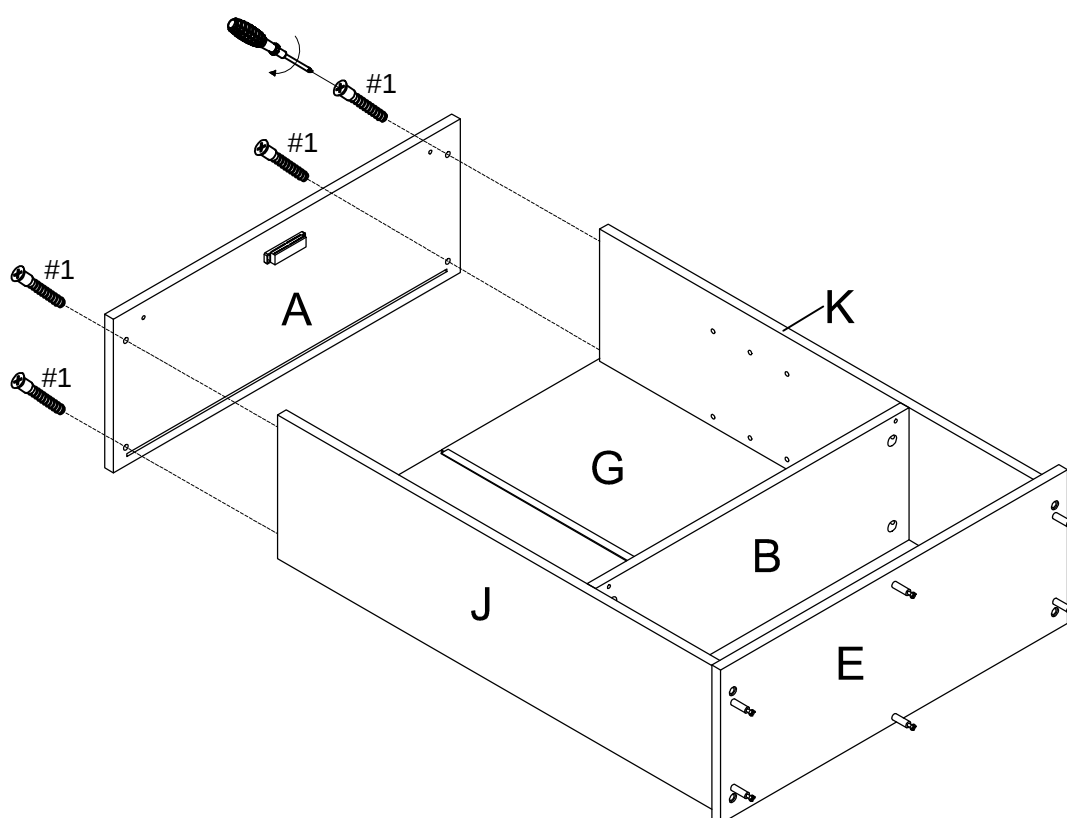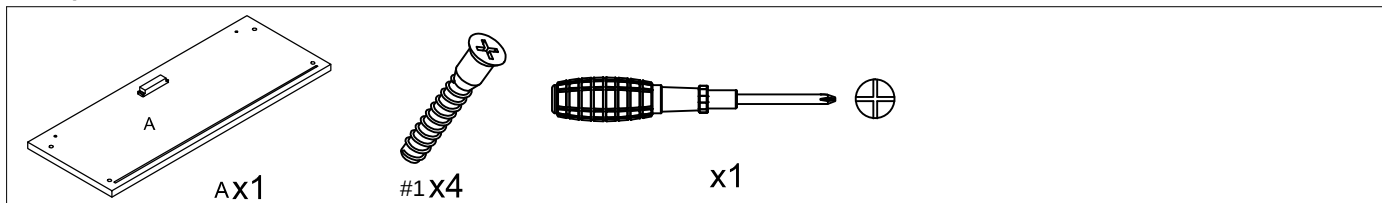


Step 10.






#5 x6

 




x1

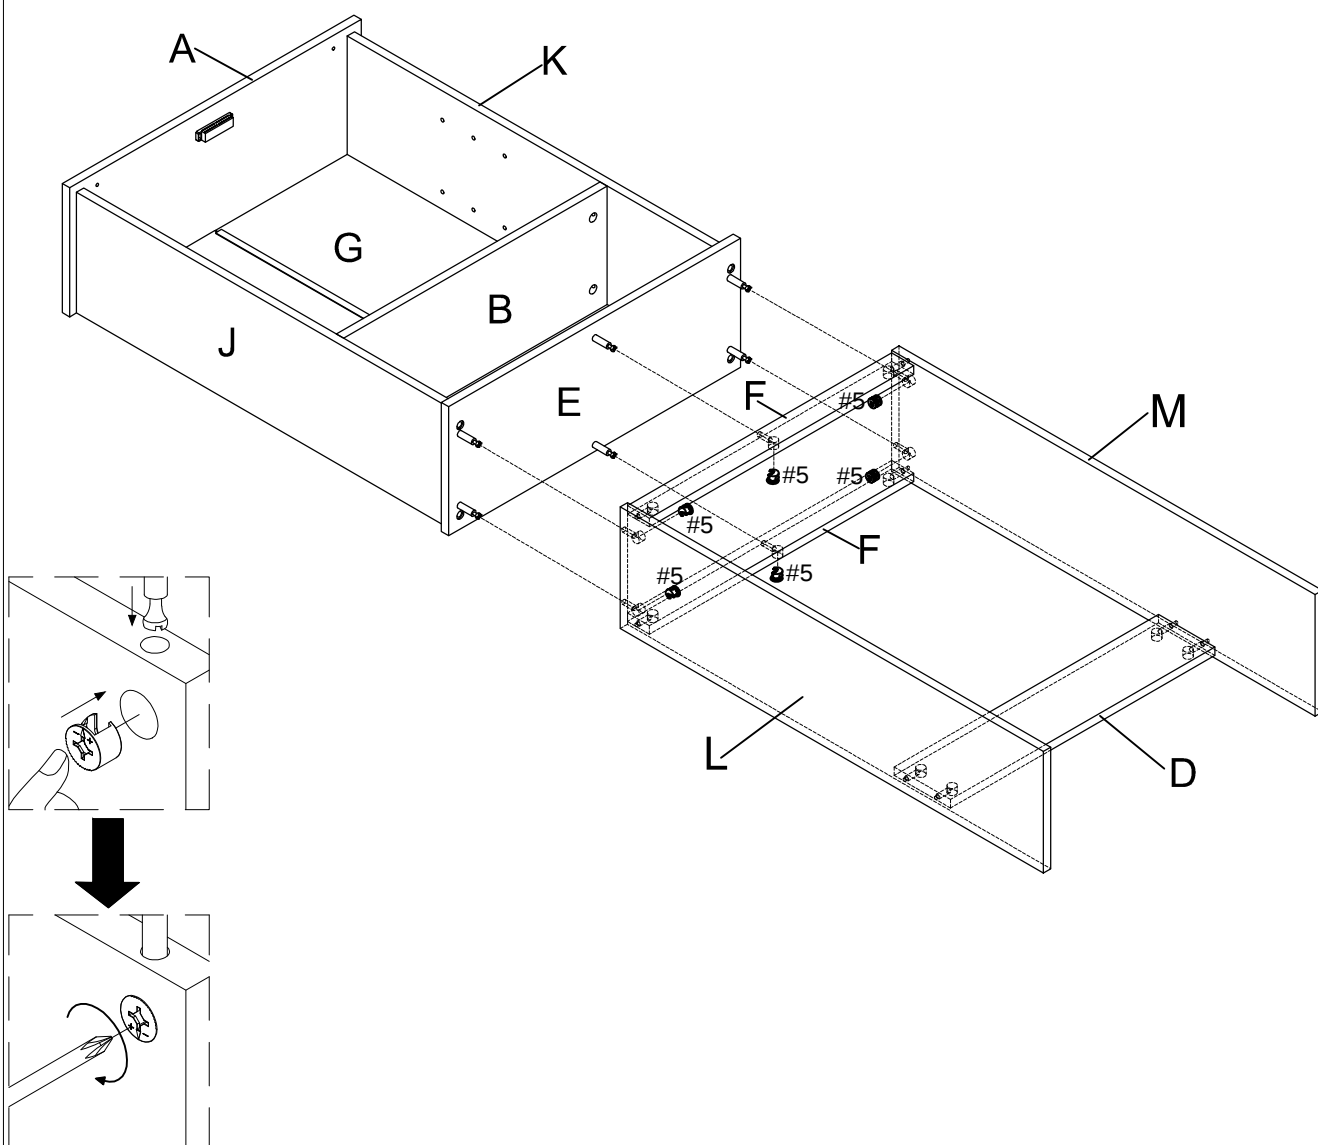 

  
 
Step 11.

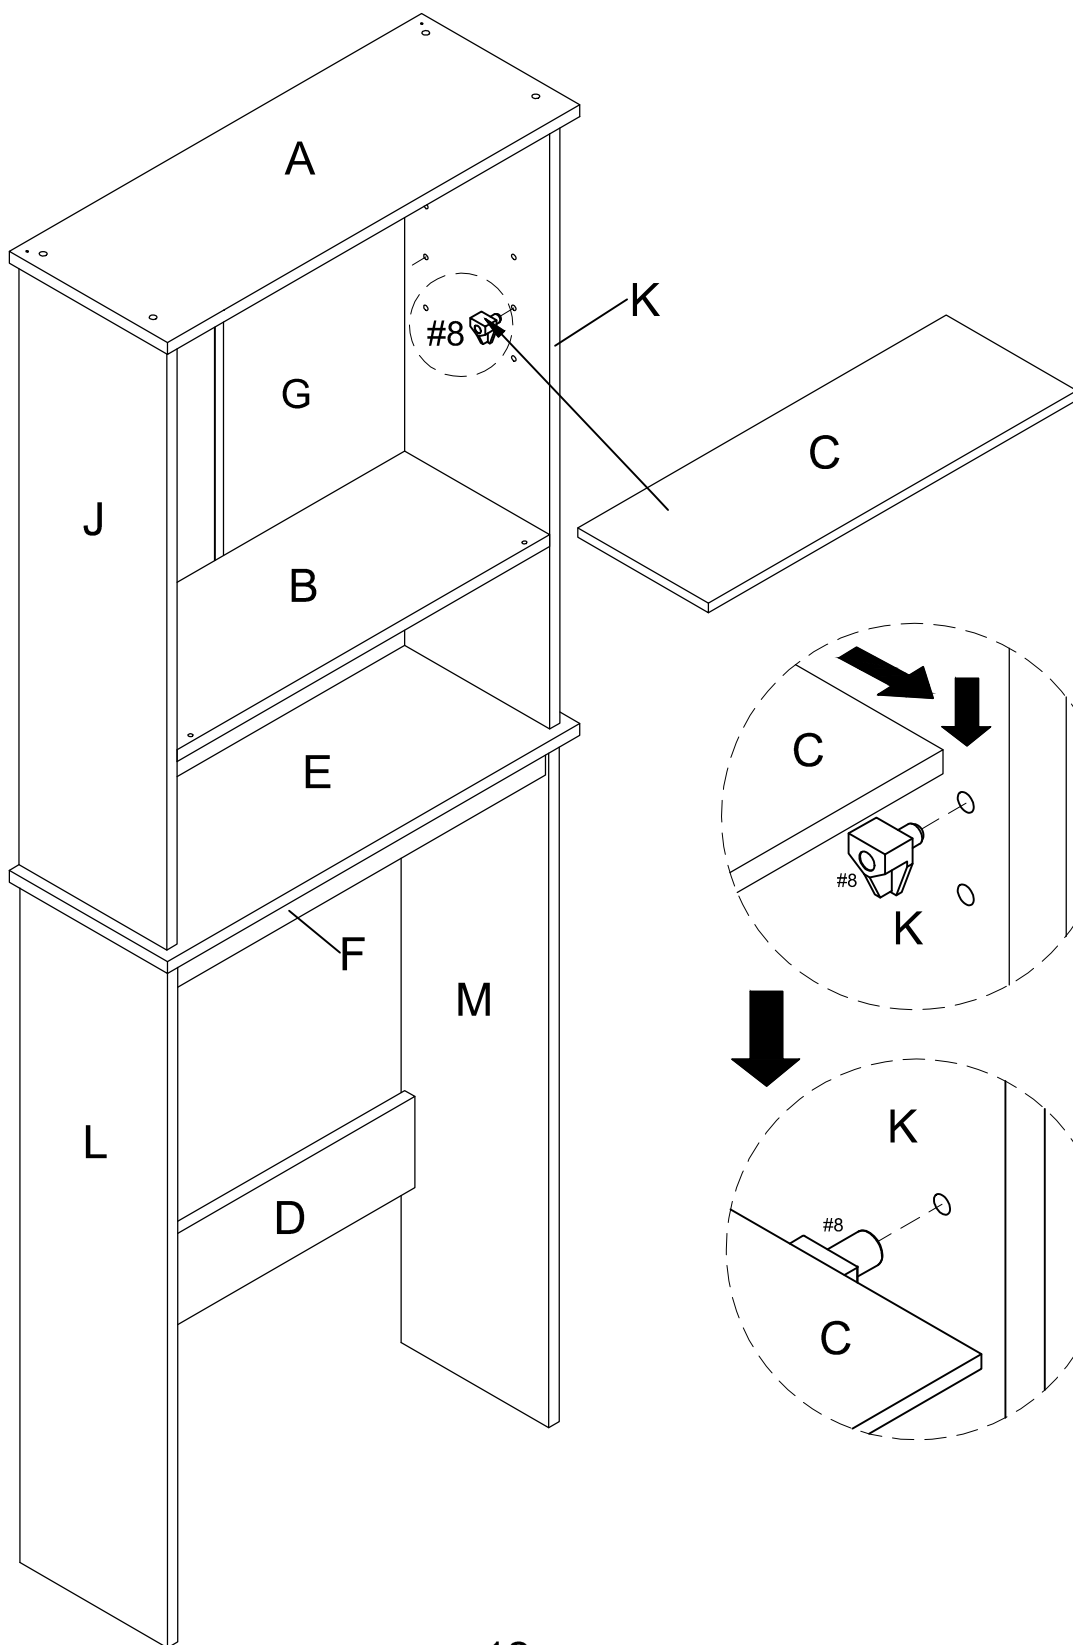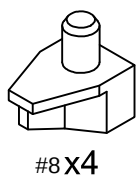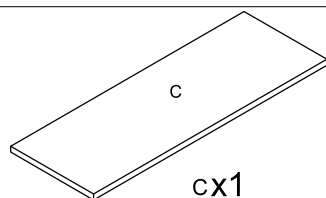

   
Step 12.

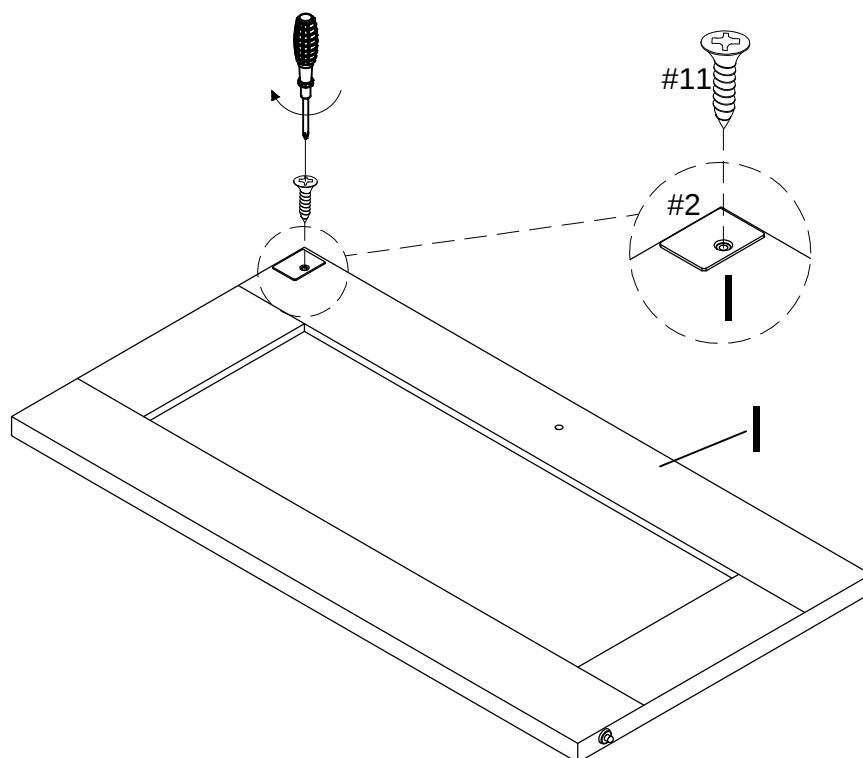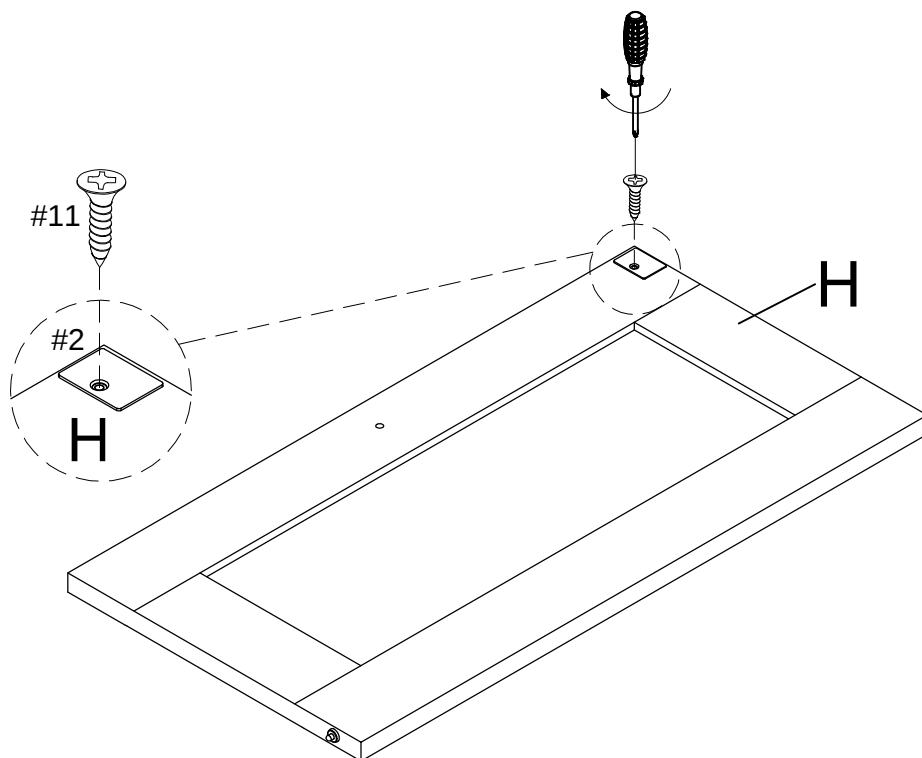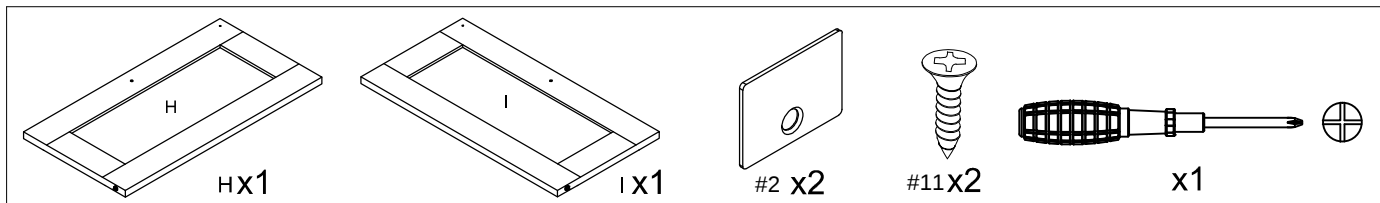

  Step 13.

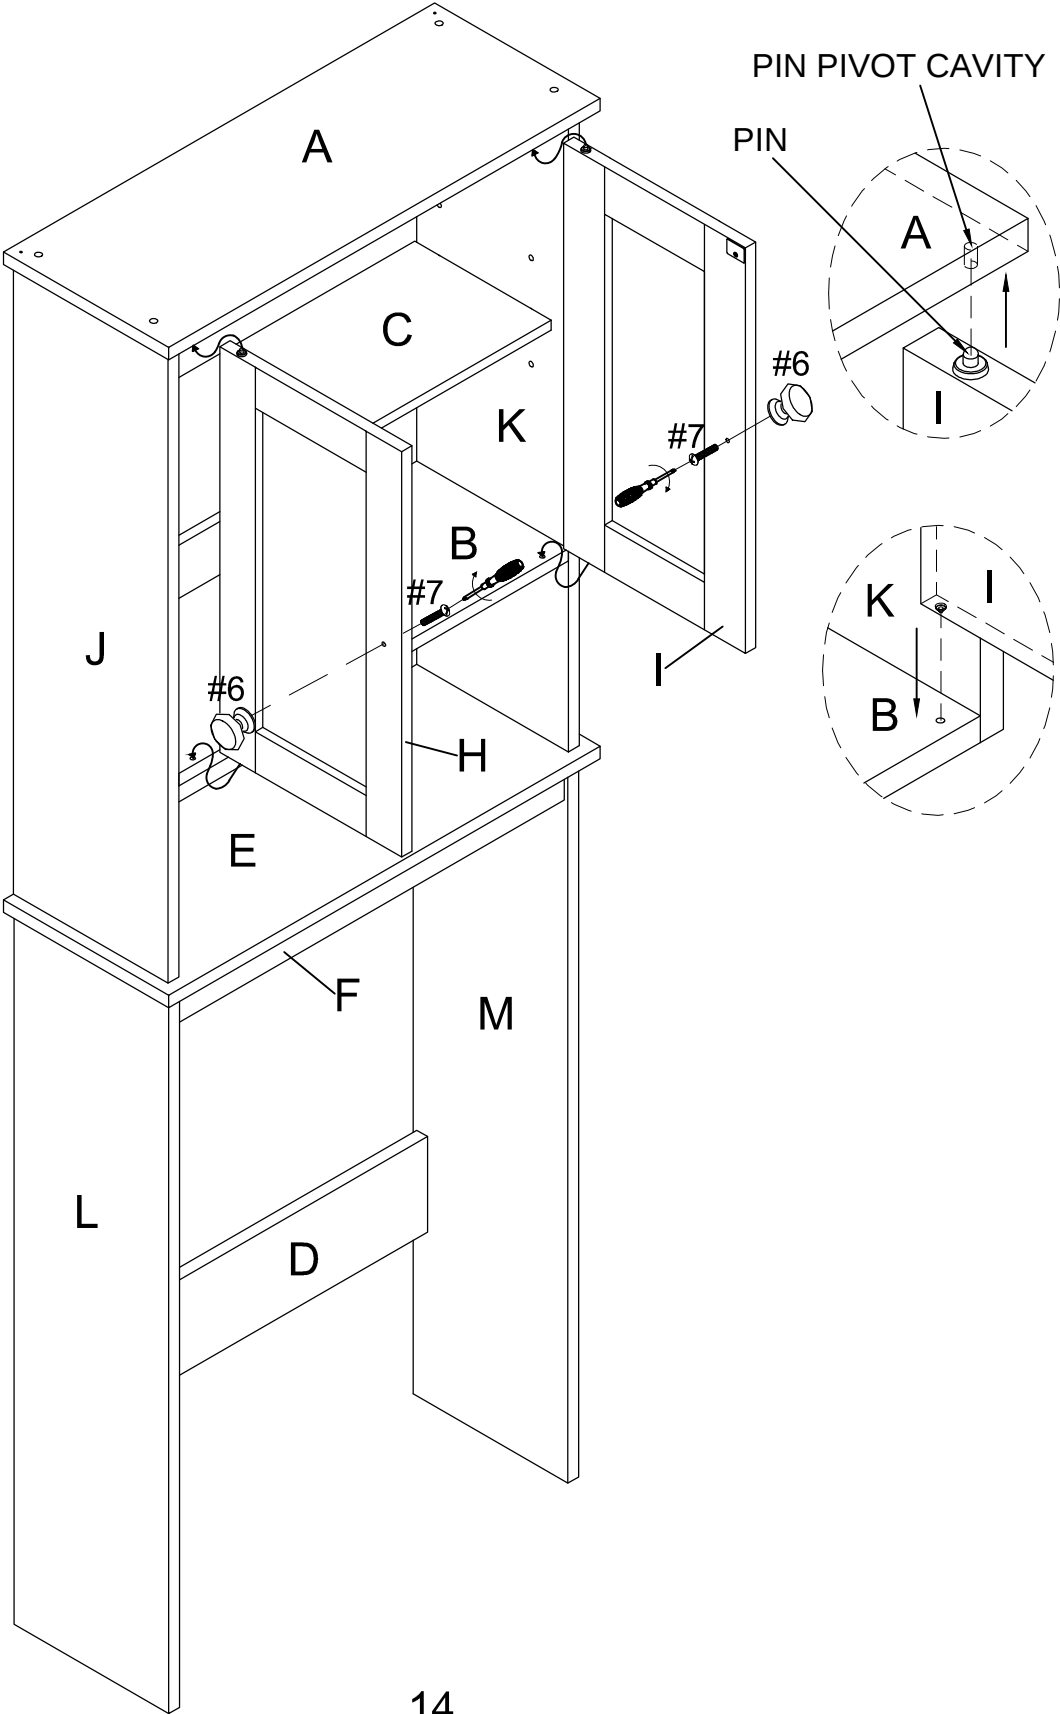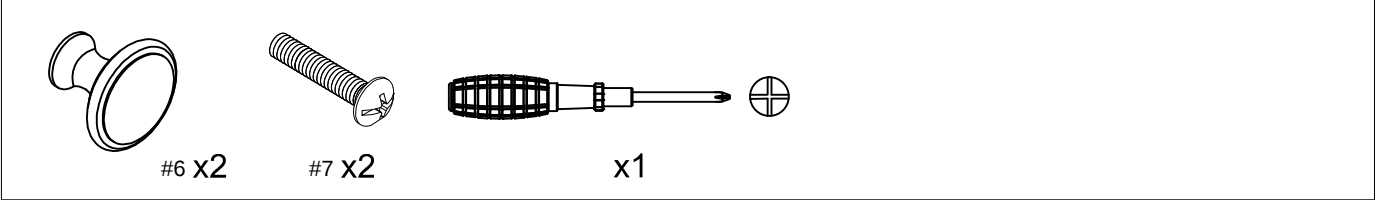

 
Step 14.





#3 x10





 
#9 x10




x1

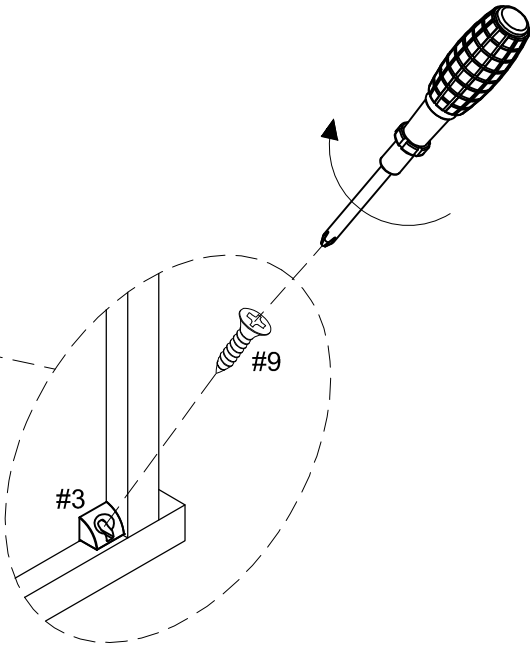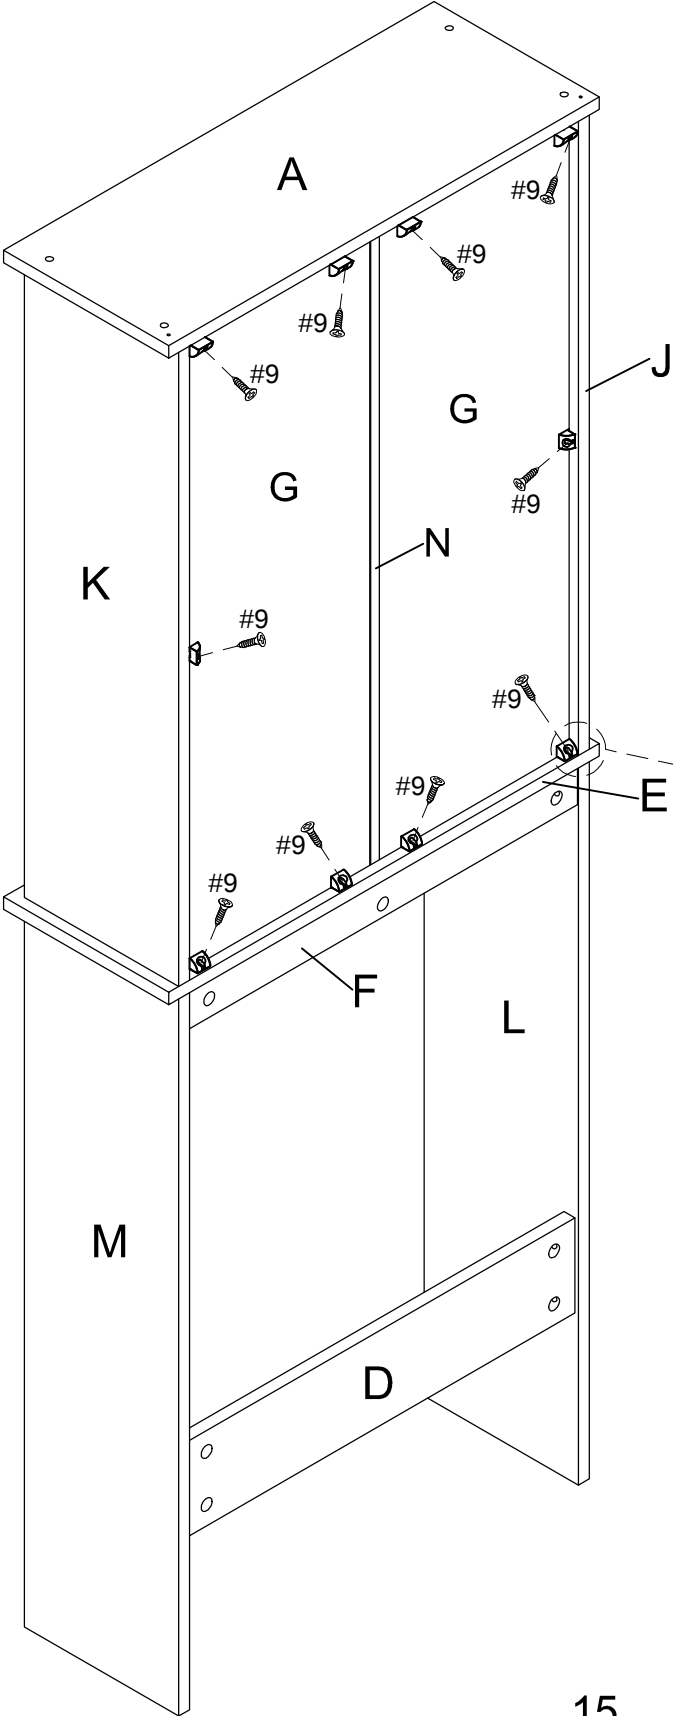  

   Step 15.
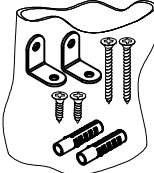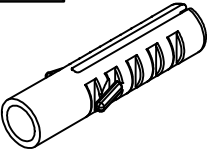
#12	#12-A	#12-B	#12-C	#12-D
				
Safety Strap Kit	30*30*2mm Angel Iron	Wall Anchor	Ø3.5*15mm Short Screw	Ø4*40mm Long Screw
1 SET	2 PCS	2 PCS	2 PCS	2 PCS

 Safety strap kit (#12) must be installed to prevent tipping, damage and/or injury.

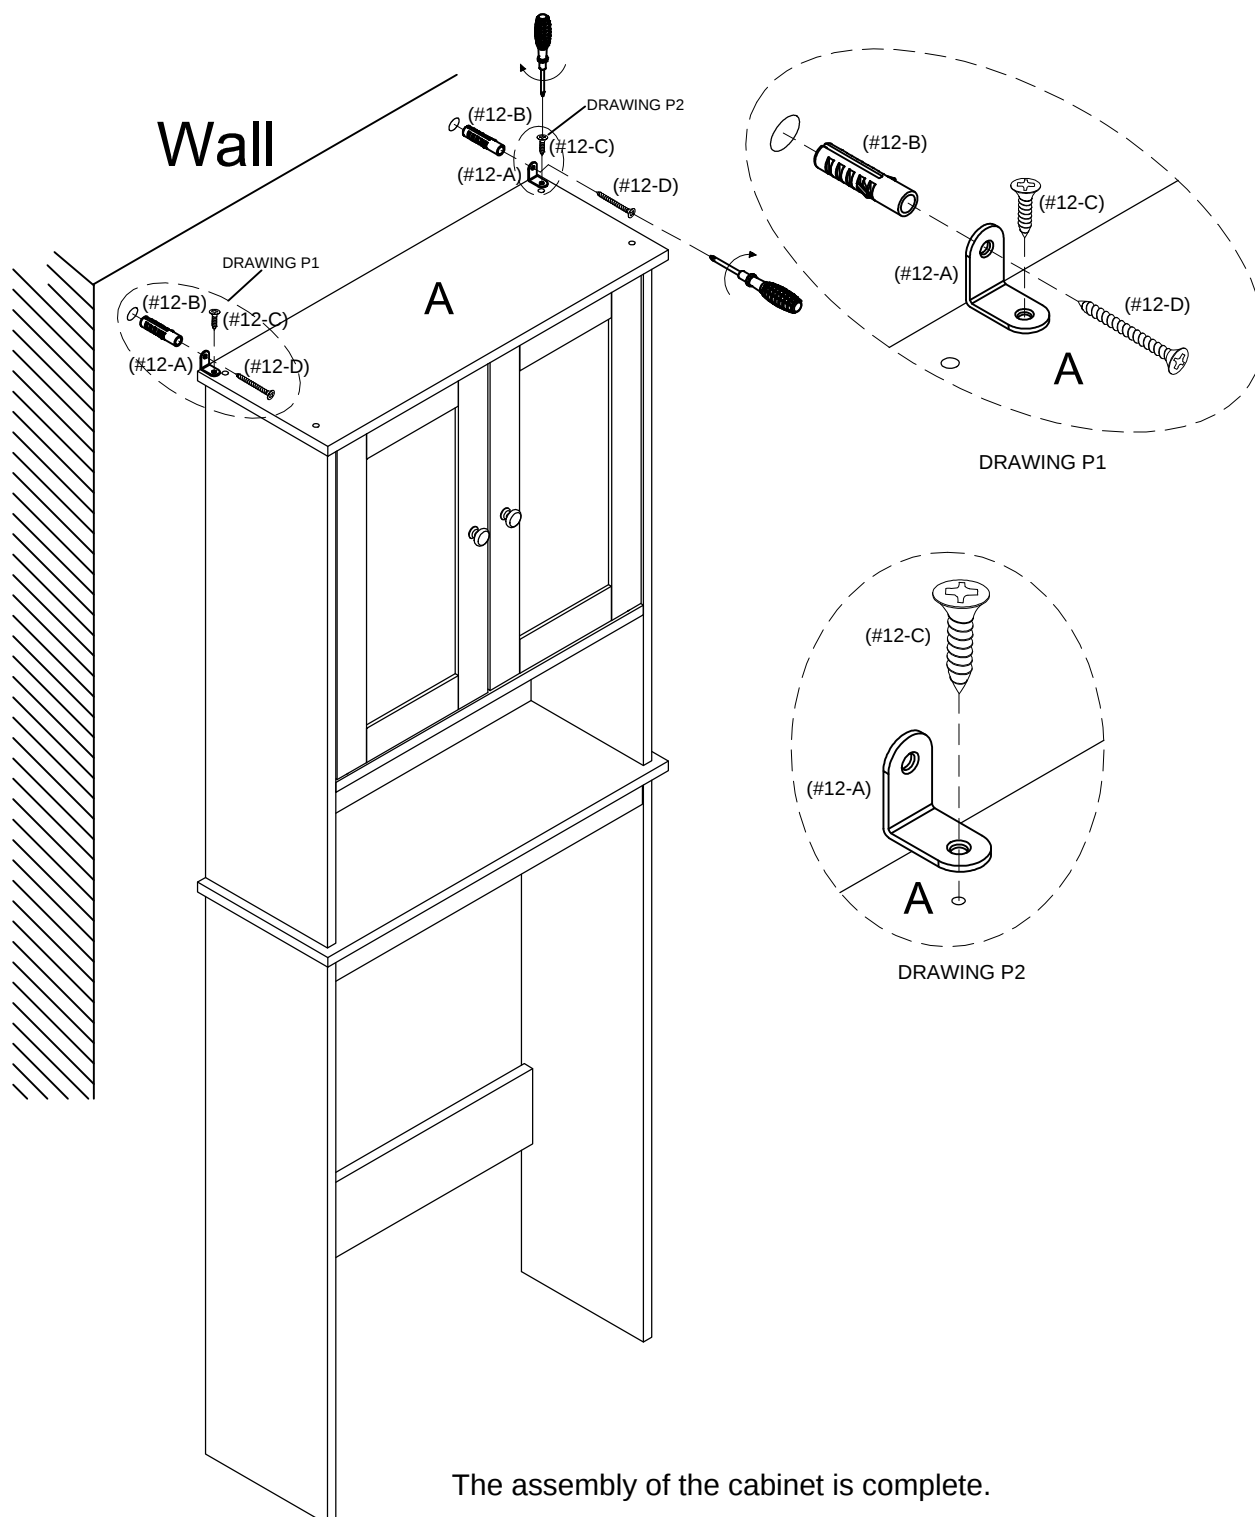

The assembly of the cabinet is complete.

Warning:

Seller is responsible for the product-related issues occurred upon receipt, but will not be responsible for the personal injury, property damage or loss resulting from the incorrect assembly, improper use, inadequate maintenance or neglect of this product.