


# **ASSEMBLY INSTRUCTIONS**

**CONSOLE TABLE** 


## **NESTING CONSOLE PARTS & HARDWARE LIST**

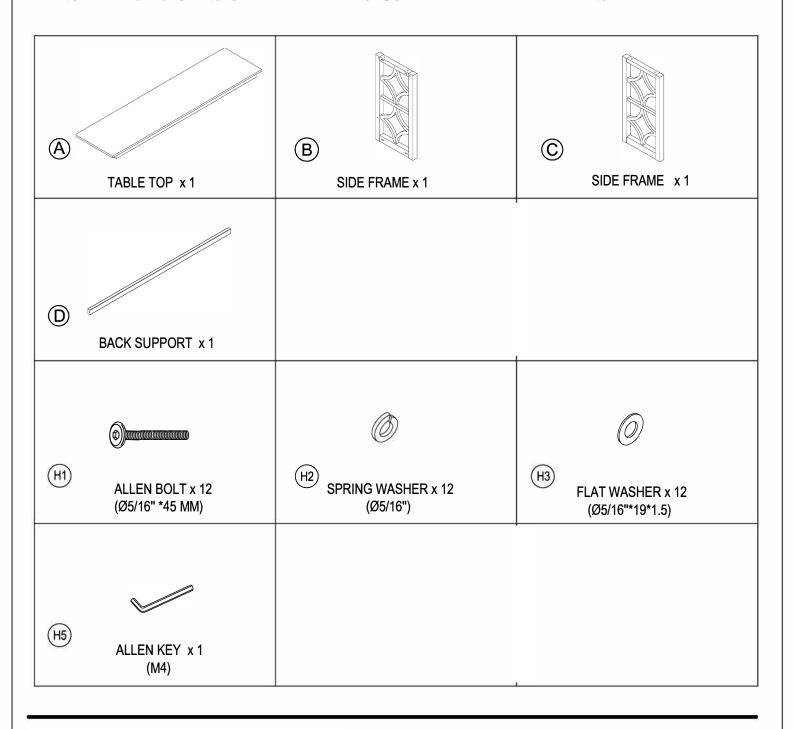

- 1. CHECK CAREFULLY FOR SMALL PARTS WHICH MAY COME LOOSE DURING SHIPMENT.
- 2. REMOVE ALL COMPONENTS FROM THE PACK AND PLACE ON A CLEAN, SOFT SURFACE TO ASSEMBLE.
- 3. UNITS SHOULD BE ASSEMBLED BY TWO OR MORE PEOPLE.
- 4. DO NOT OVER TIGHTEN SCREW/ BOLTS UNTIL ASSEMBLY IS COMPLETED.
  5. WITH USE, SCREW/ BOLT MAY BE COME LOOSE & MUST BE TIGHTENED PERIODICALLY.



## **ROLLING CONSOLE PARTS & HARDWARE LIST**

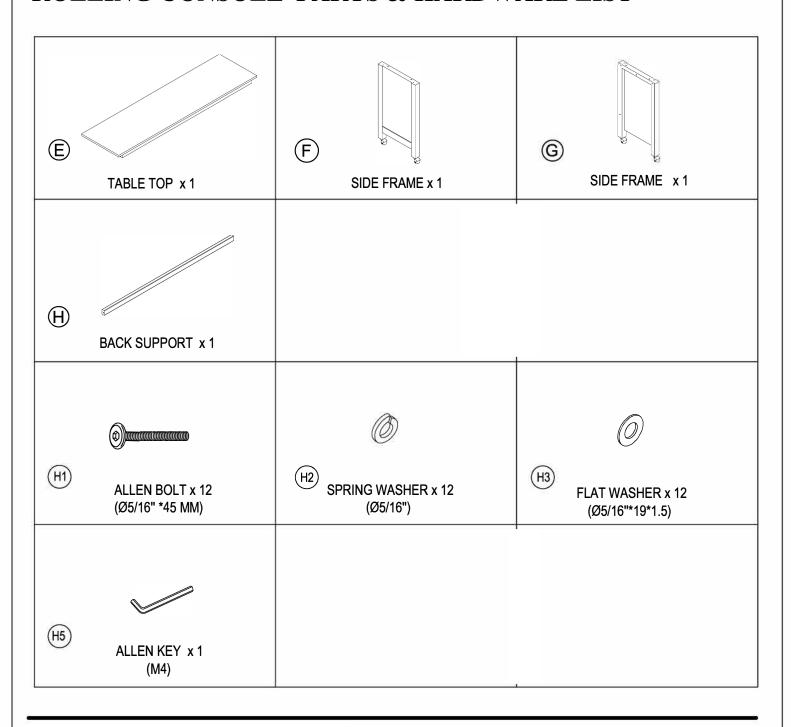


#### NOTES:

- 1. CHECK CAREFULLY FOR SMALL PARTS WHICH MAY COME LOOSE DURING SHIPMENT.
- 2. REMOVE ALL COMPONENTS FROM THE PACK AND PLACE ON A CLEAN, SOFT SURFACE TO ASSEMBLE.
- 3. UNITS SHOULD BE ASSEMBLED BY TWO OR MORE PEOPLE.
- 4. DO NOT OVER TIGHTEN SCREW/ BOLTS UNTIL ASSEMBLY IS COMPLETED.
  5. WITH USE, SCREW/ BOLT MAY BE COME LOOSE & MUST BE TIGHTENED PERIODICALLY.



## STOOL PARTS & HARDWARE LIST

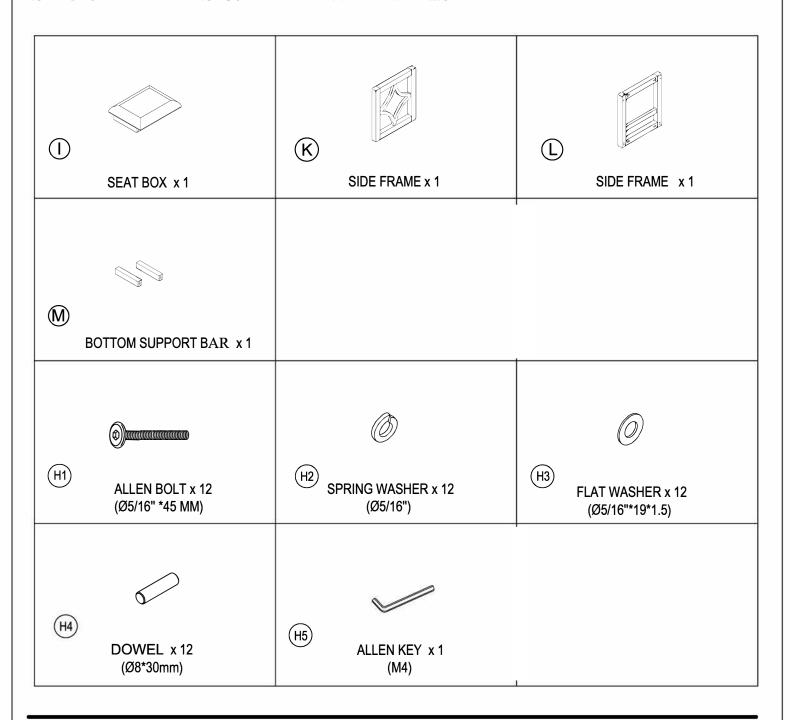


#### NOTES


- 1. CHECK CAREFULLY FOR SMALL PARTS WHICH MAY COME LOOSE DURING SHIPMENT.
- 2. REMOVE ALL COMPONENTS FROM THE PACK AND PLACE ON A CLEAN, SOFT SURFACE TO ASSEMBLE.
- 3. UNITS SHOULD BE ASSEMBLED BY TWO OR MORE PEOPLE.
- 4. DO NOT OVER TIGHTEN SCREW/ BOLTS UNTIL ASSEMBLY IS COMPLETED.
- 5. WITH USE, SCREW/ BOLT MAY BE COME LOOSE & MUST BE TIGHTENED PERIODICALLY.





#### HARDWARE BLISTER PACKS ARE STORED INSIDE THE NESTING CONSOLE

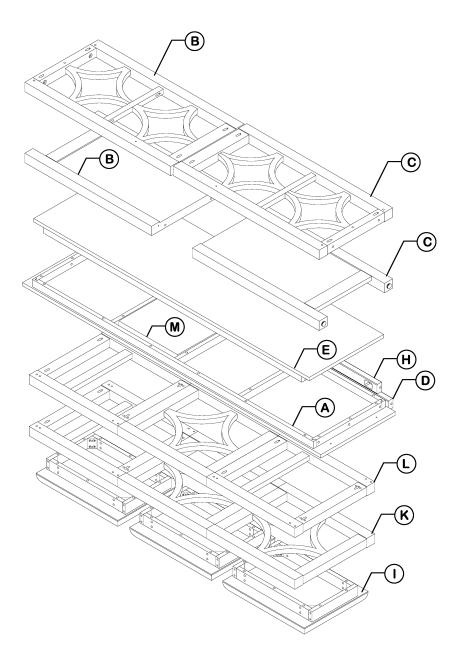

## **STEP 1 ( x1)**

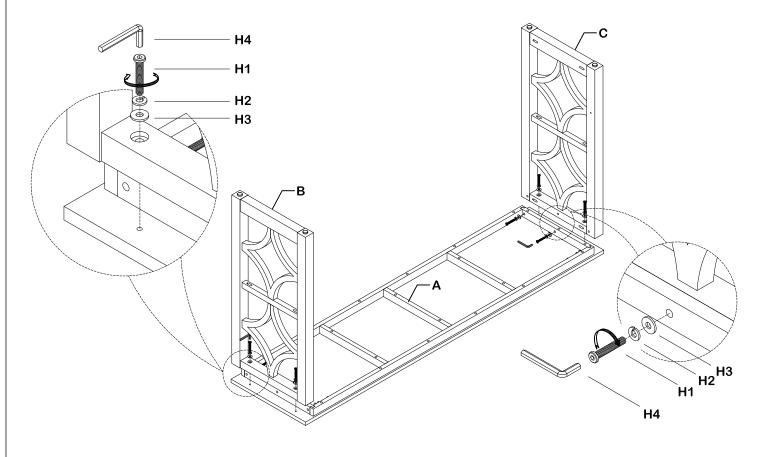


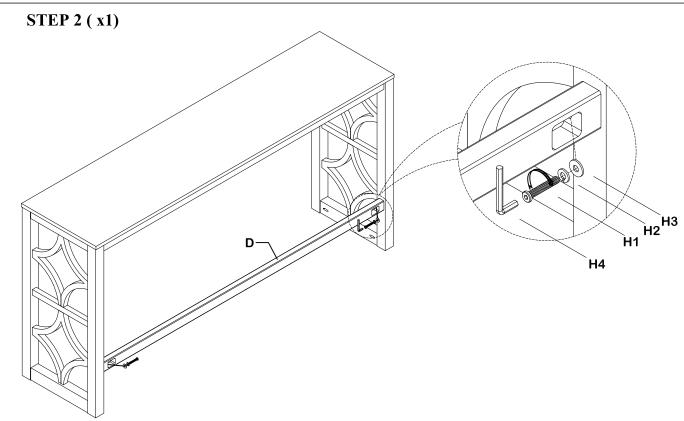

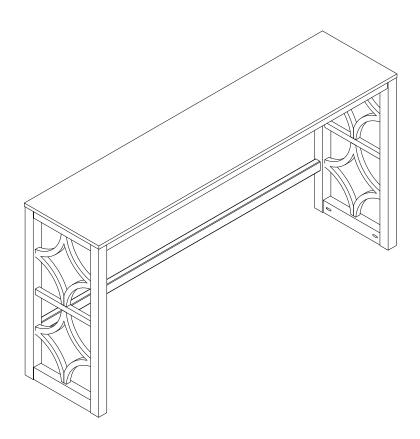


CONSOLE ASSEMBLY COMPLETED

## **STEP 3 ( x1)**

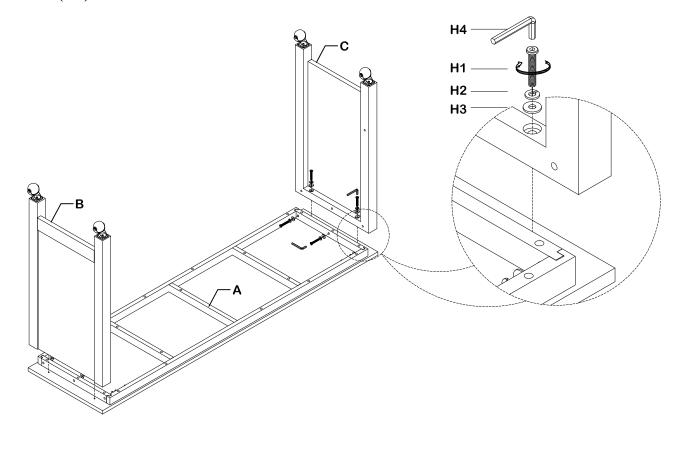


## **STEP 4 ( x1)**

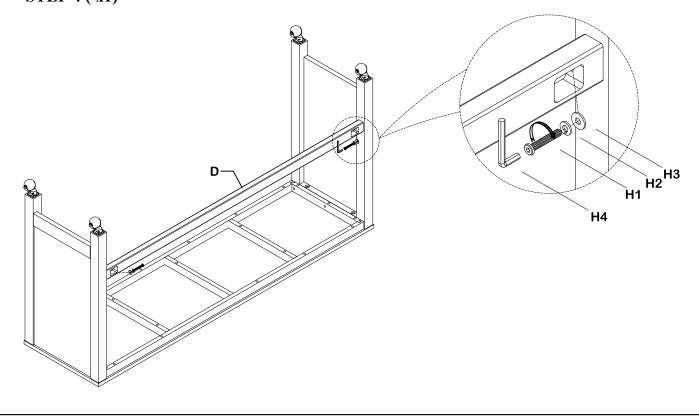




CONSOLE ASSEMBLY COMPLETED

# STEP 5 (x3)

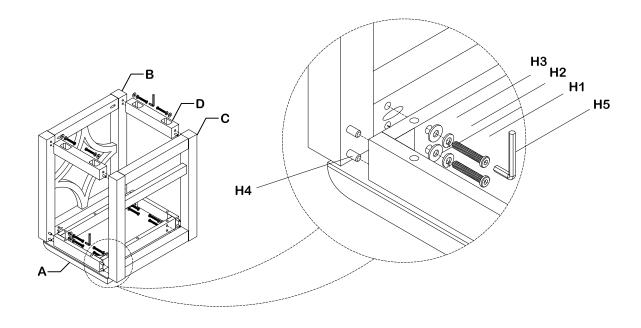

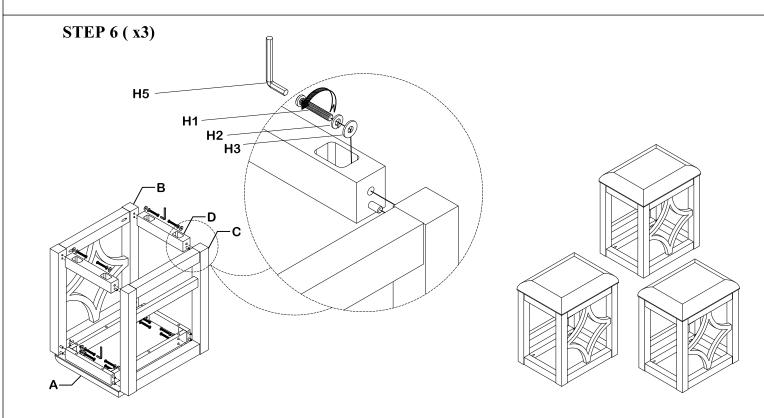

CONSOLE ASSEMBLY COMPLETED