 





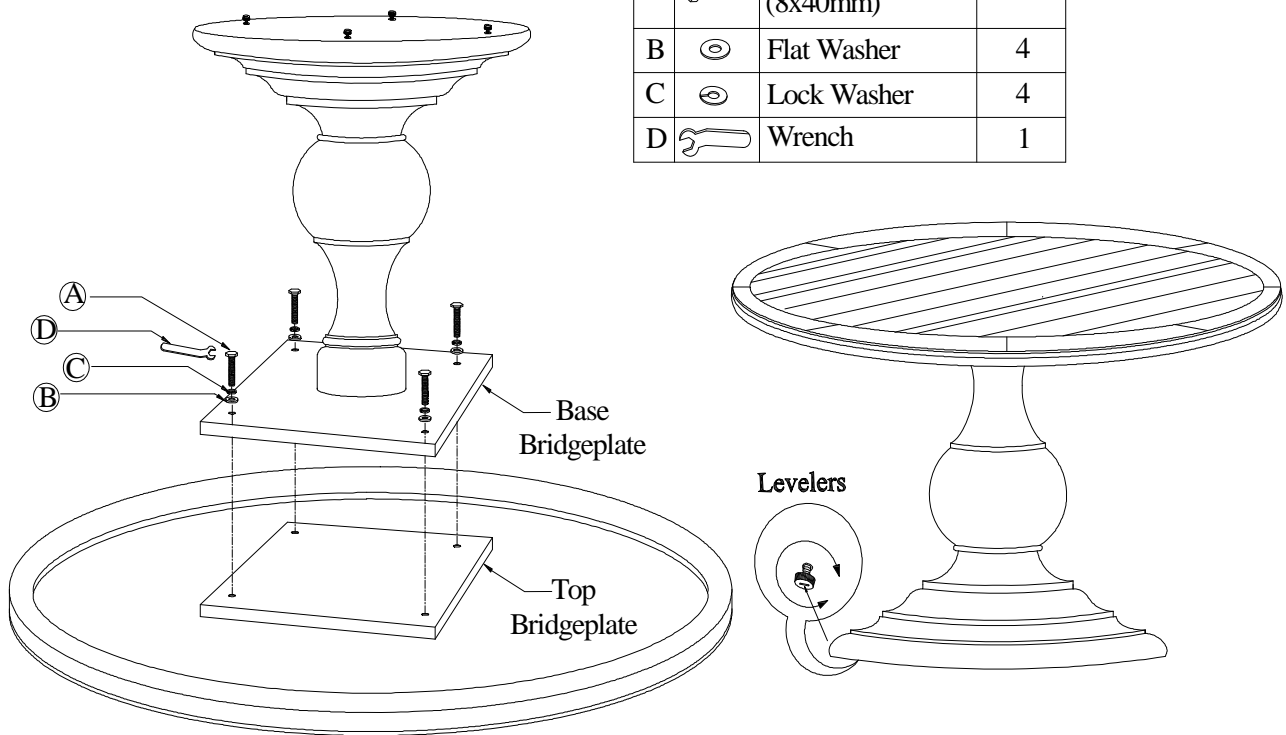 
ARTISTICA[®]

— HOME —

ASSEMBLY INSTRUCTIONS

2005-870C Axiom Round Dining Table

HARDWARE LIST			
PART		DESCRIPTION	QTY
A		5/16" x 1-1/2" Bolt (8x40mm)	4
B		Flat Washer	4
C		Lock Washer	4
D		Wrench	1



1. Place Table Top upside-down on flat, clean, non-marring surface.
2. Position Base Bridgeplate on Top Bridgeplate so that holes are aligned on both bridgeplates.
3. Use Wrench (D) to attach bridgeplates together with (4) of each: Flat Washers (B), Lock Washers (C), and Bolts (A). Fully tighten all bolts.
4. Return assembled table to its upright position and place in desired location.
5. There are Adjustable Levelers on the bottom of the table base. To level table for uneven floors, rotate leveler clockwise to raise and counter-clockwise to lower.

For additional consumer assistance, please contact your local Artistica Home dealer or our Customer Services Department at 1-336-474-5300, Monday-Friday, 8-5 Eastern.