

 
GLOBAL PROCUREMENT AND MARKETING LIMITED


LARGE TV UNIT

Assembly Instructions – Please keep for future reference

TVSCAMGRY

TVSCAMWHT

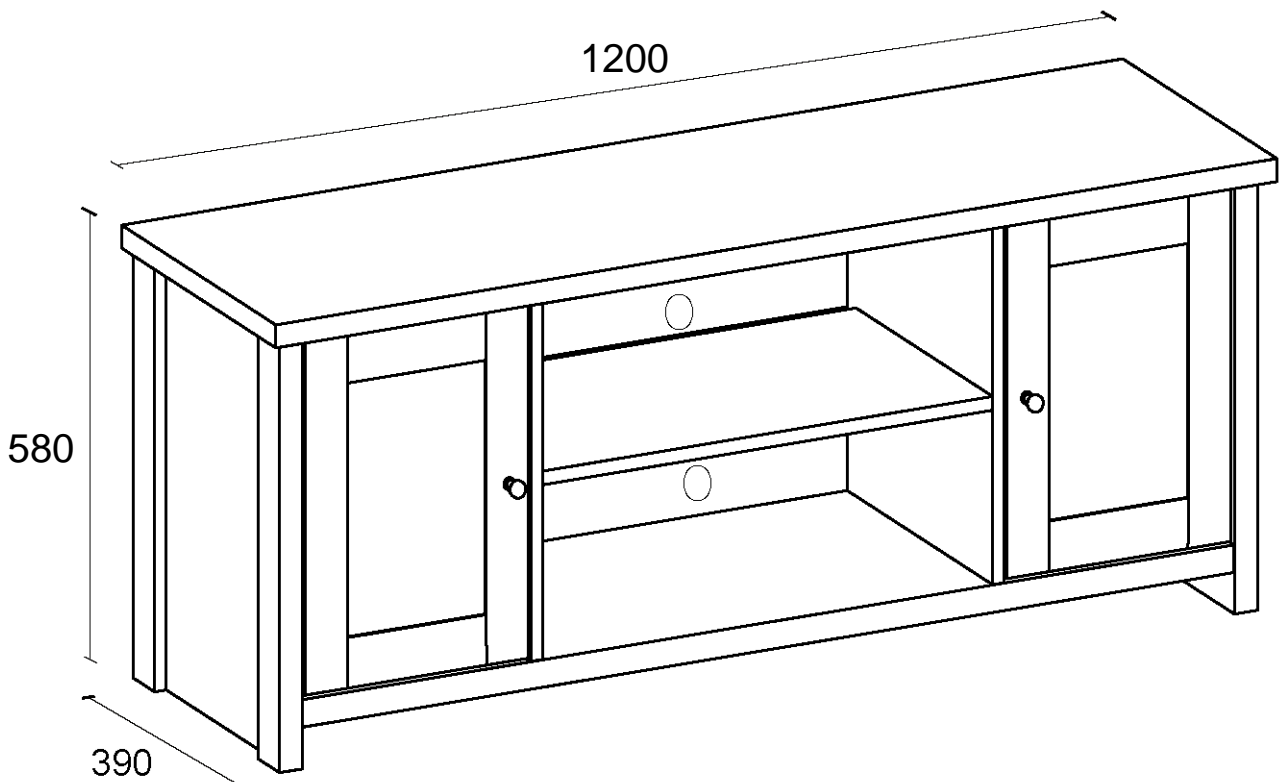

Dimensions	No. people	Assembly Time	SKU #
Width: 120cm Depth: 39cm Height: 58cm		45 mins (approx.)	TVSCAMGRY TVSCAMWHT

thank you

For purchasing this
GPM Limited
product

Important

- PLEASE READ THESE INSTRUCTIONS FULLY BEFORE STARTING ASSEMBLY
- PLEASE DO NOT THROW THE PACKAGING AWAY UNTIL YOU ARE SATISFIED WITH PURCHASE, GOODS NEED TO BE RETURNED IN ORIGINAL PACKAGING.

If you need help or have damaged or missing parts, please email aftersales@gpmfurniture.co.uk

⚠ Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 4 and 5.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft, level surface to avoid damaging the unit or your floor.
- We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.



use of power drill/drivers for inserting screws, as this could damage the unit.

 
 
Only use hand screwdrivers.

- Dispose of all packaging carefully and responsibly.

Care and Maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


SPECIAL TIPS FOR FITTING CAM-LOCKS AND QUICKFIT

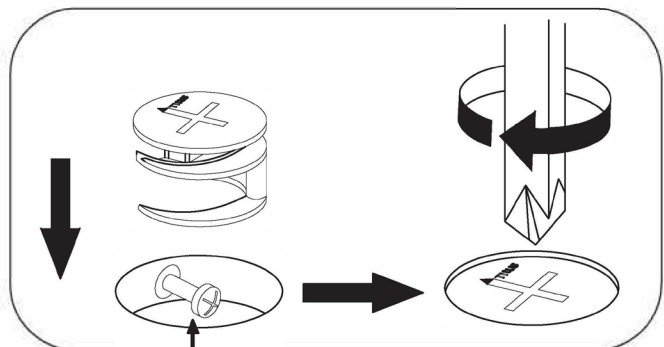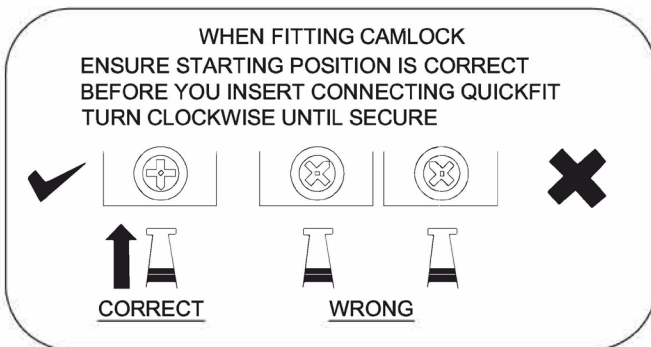

Quickfit head needs to be in centre

QUICKFIT

 
Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

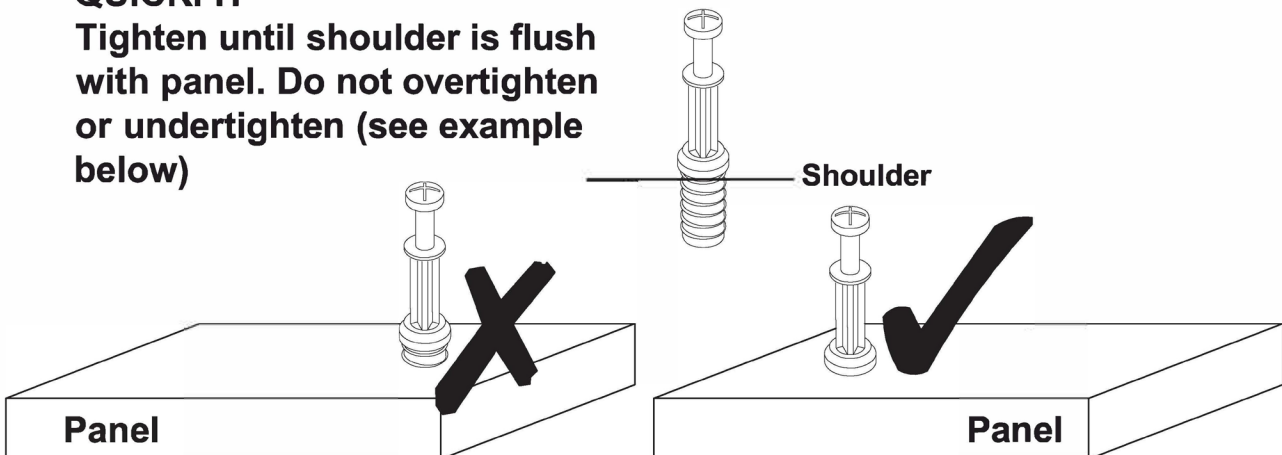

If you are unhappy with the product and wish to return it, please follow the retailer's returns procedure.

Exploded View

 If you have damaged or missing components,
email: aftersales@gpmfurniture.co.uk

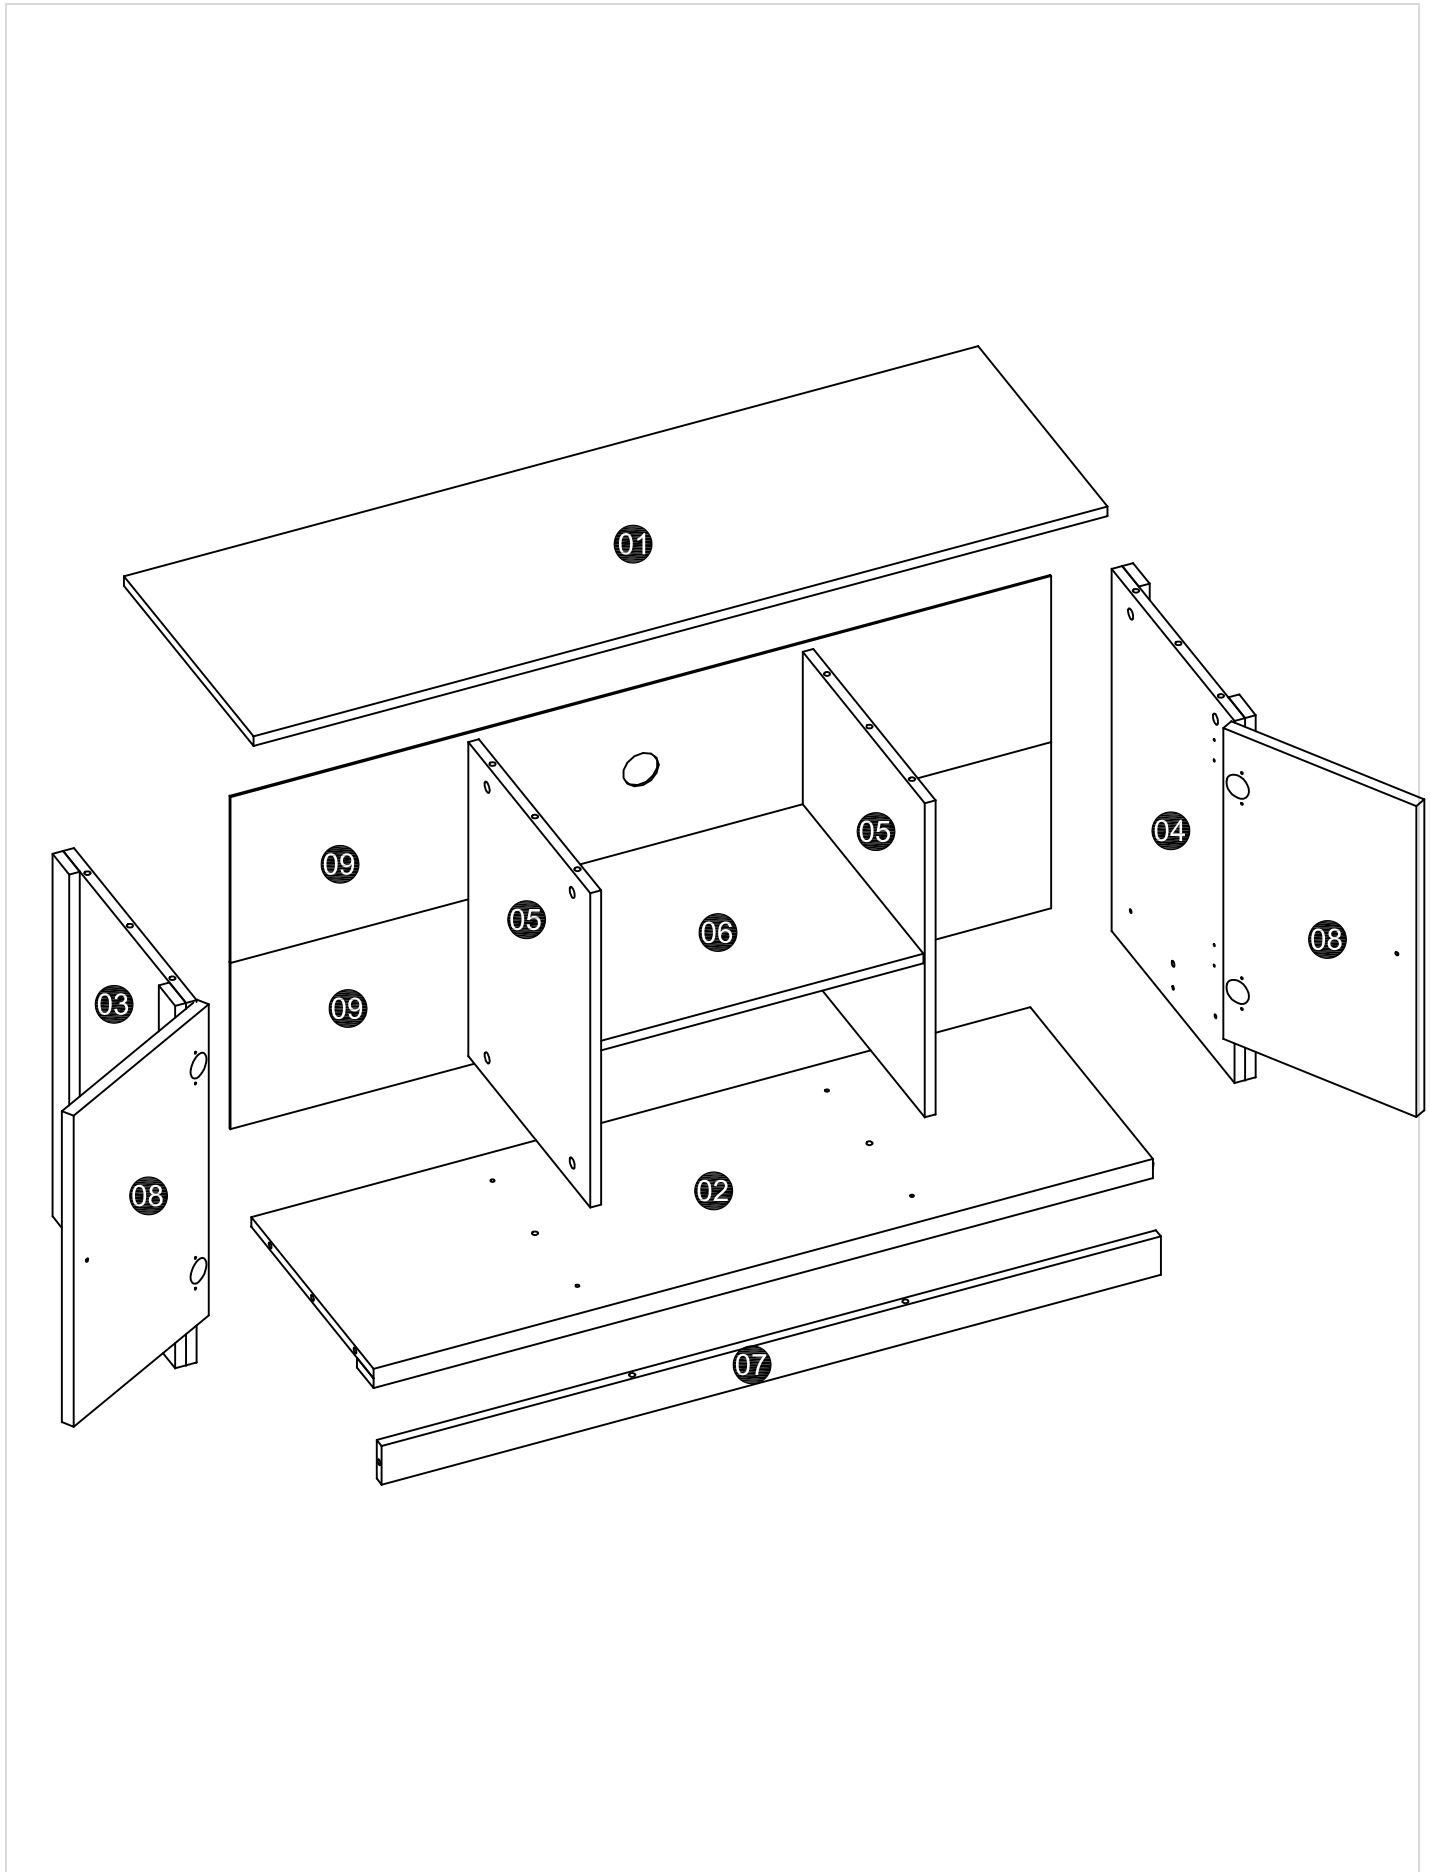

 


 

 
 
 


Components - Fixings


If you have damaged or missing components,
email: aftersales@gpmfurniture.co.uk

Please check that you have all the components listed below before constructing your item.

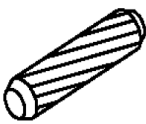
Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

(A) X22	 40mm	(B) X22	 15*11mm	(C) X12	 8*40mm	(D) X4	
(E) X2		(F) X2	 22mm	(G) X24	 3.5*14 mm	(H) X5	
(J) X26		(K) X2					

 Tools Required



 Ruler – Use this to measure your screws (mm)




Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please email aftersales@gpmfurniture.co.uk

Assembly Instructions

If you have damaged or missing components,
email: aftersales@gpmfurniture.co.uk

 
01

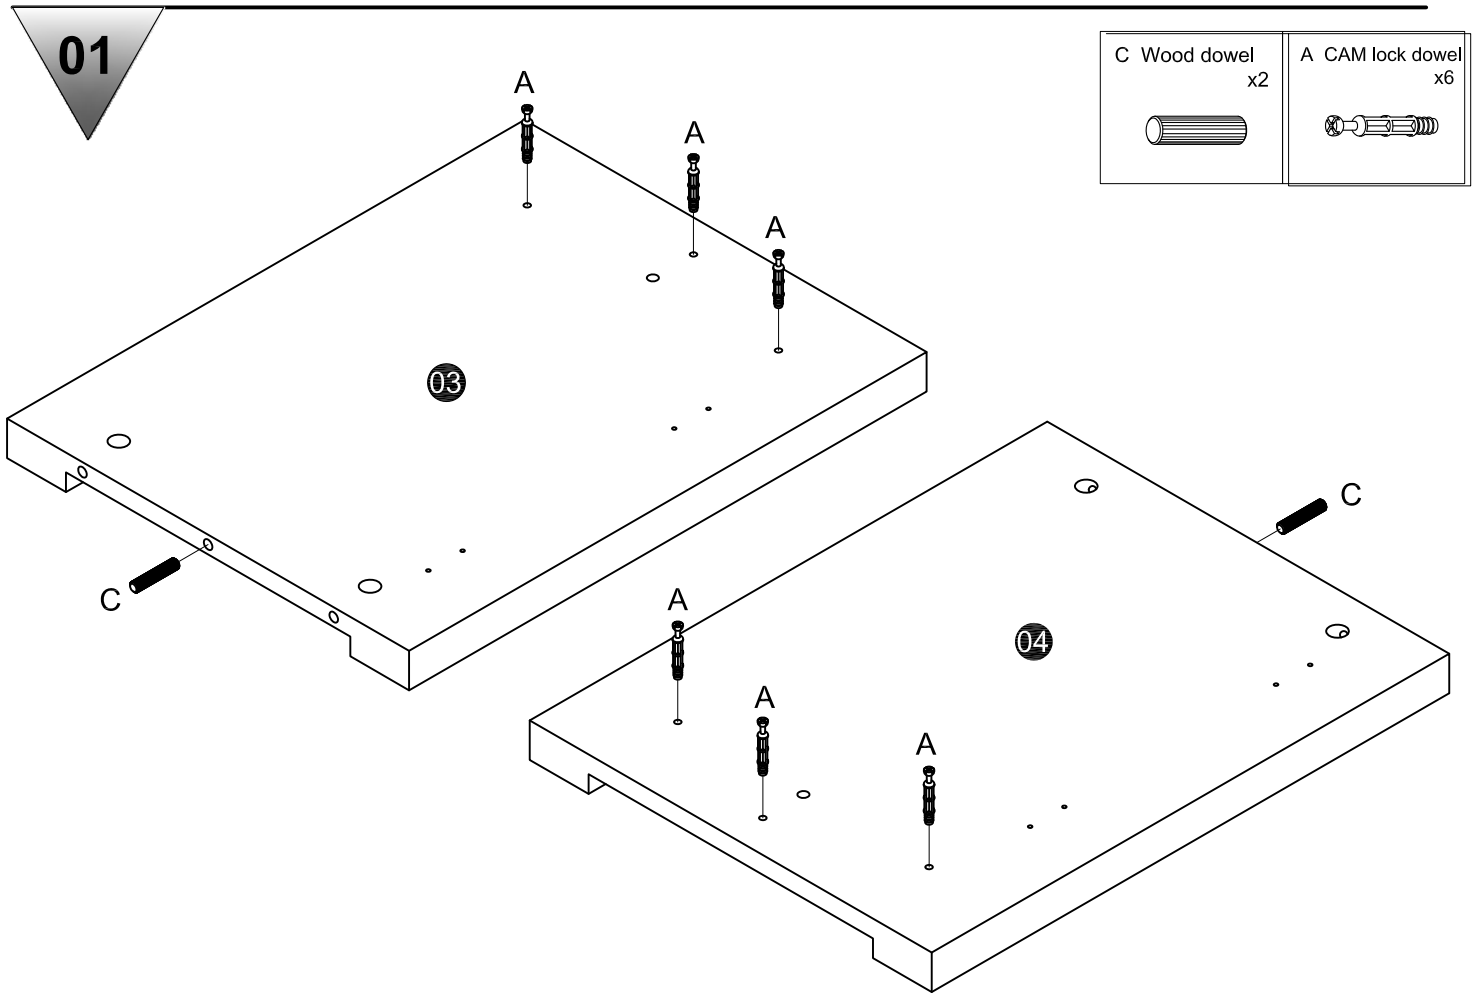


C Wood dowel
x2



 A CAM lock dowel
x6




02

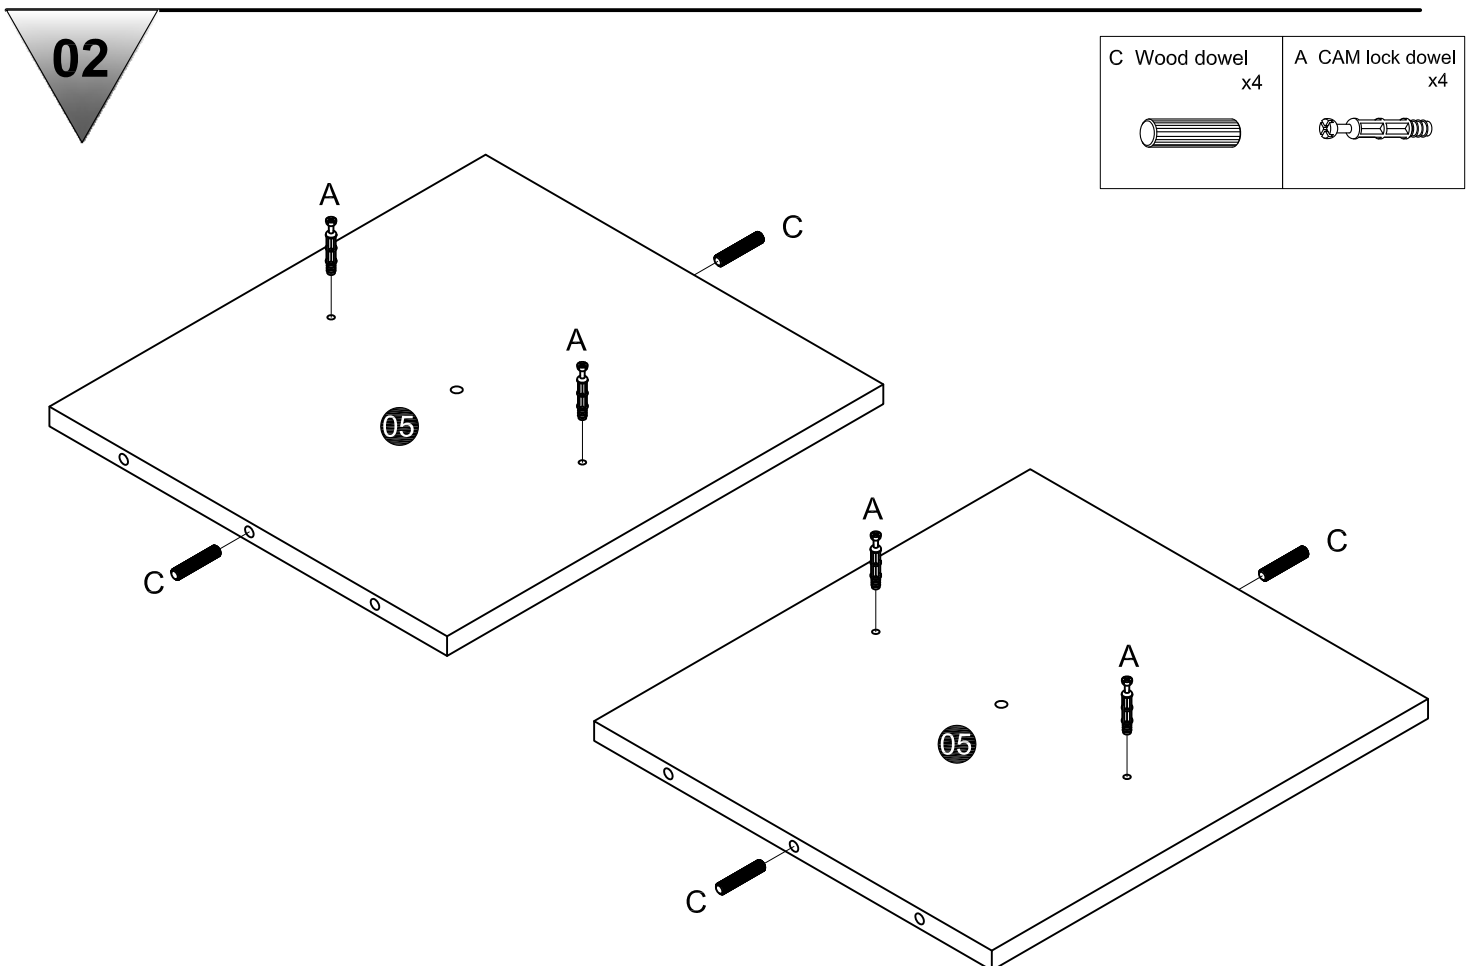 


C Wood dowel
x4

  
 



 
 


A CAM lock dowel
x4

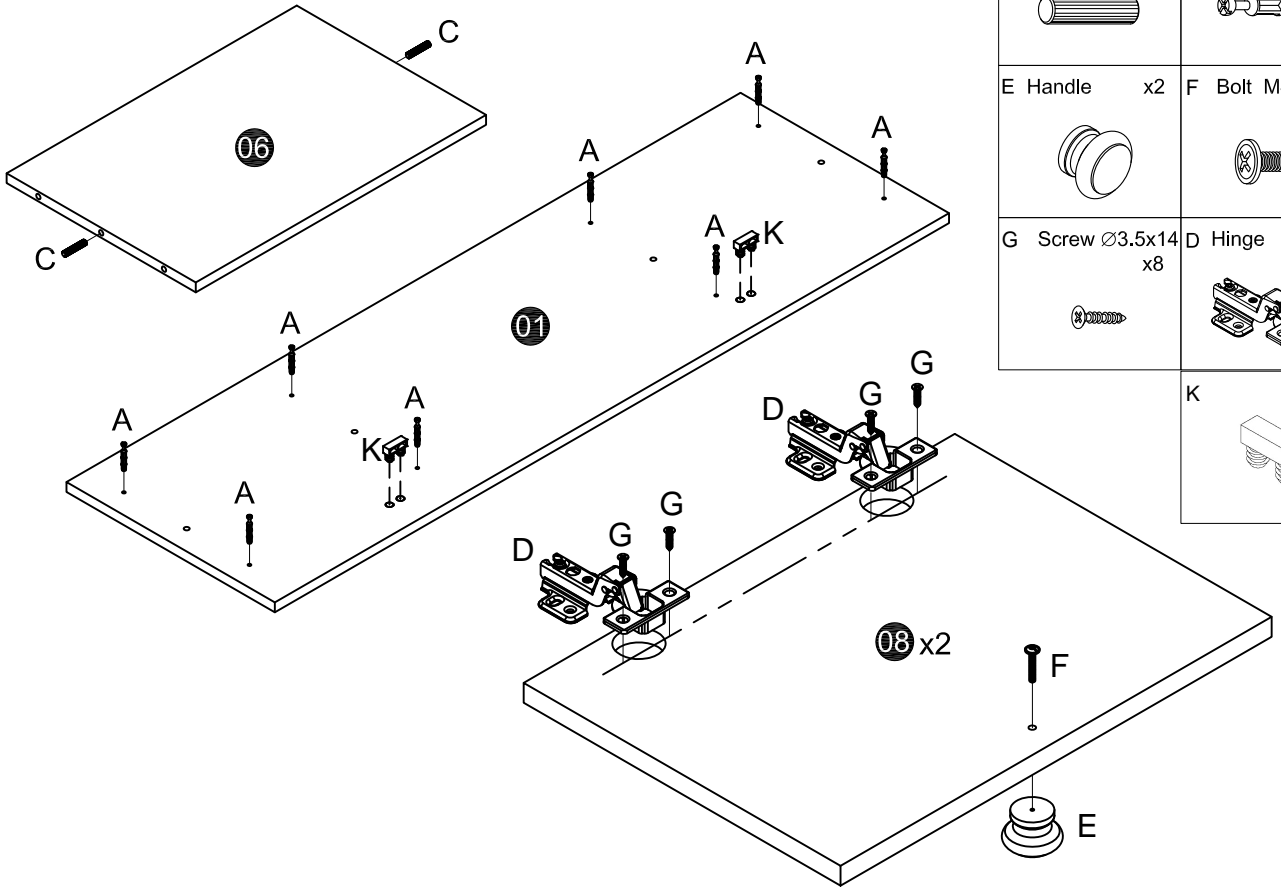 



 
03



C Wood dowel x2 	A CAM lock dowel x8 
E Handle x2 	F Bolt M4x22 x2 
G Screw $\varnothing 3.5 \times 14$ x8 	D Hinge x4 
	K x2 


04

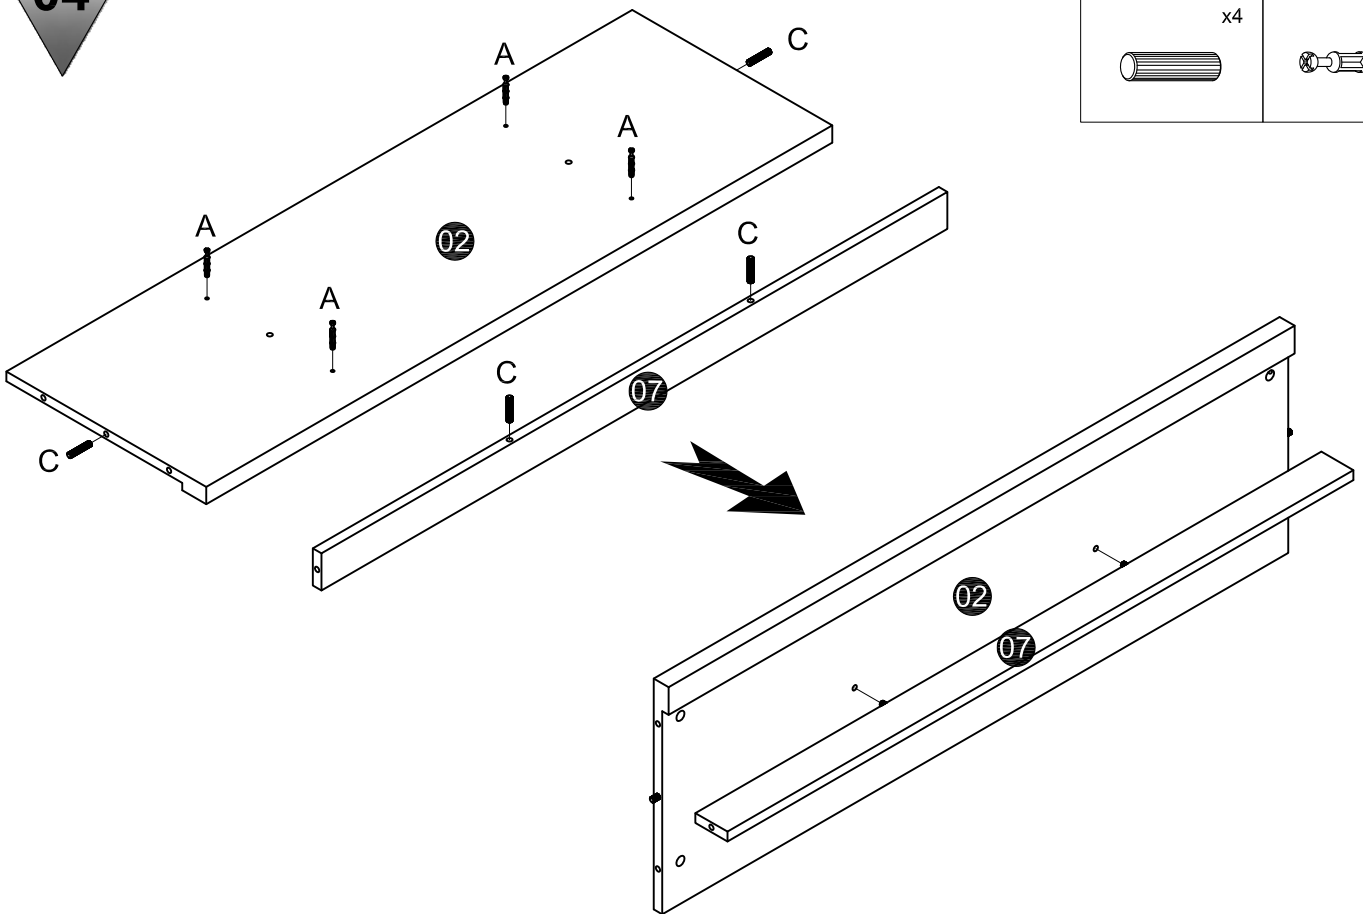

C Wood dowel x4 	A CAM lock dowel x4 
---	---


05

 B CAM lock x4

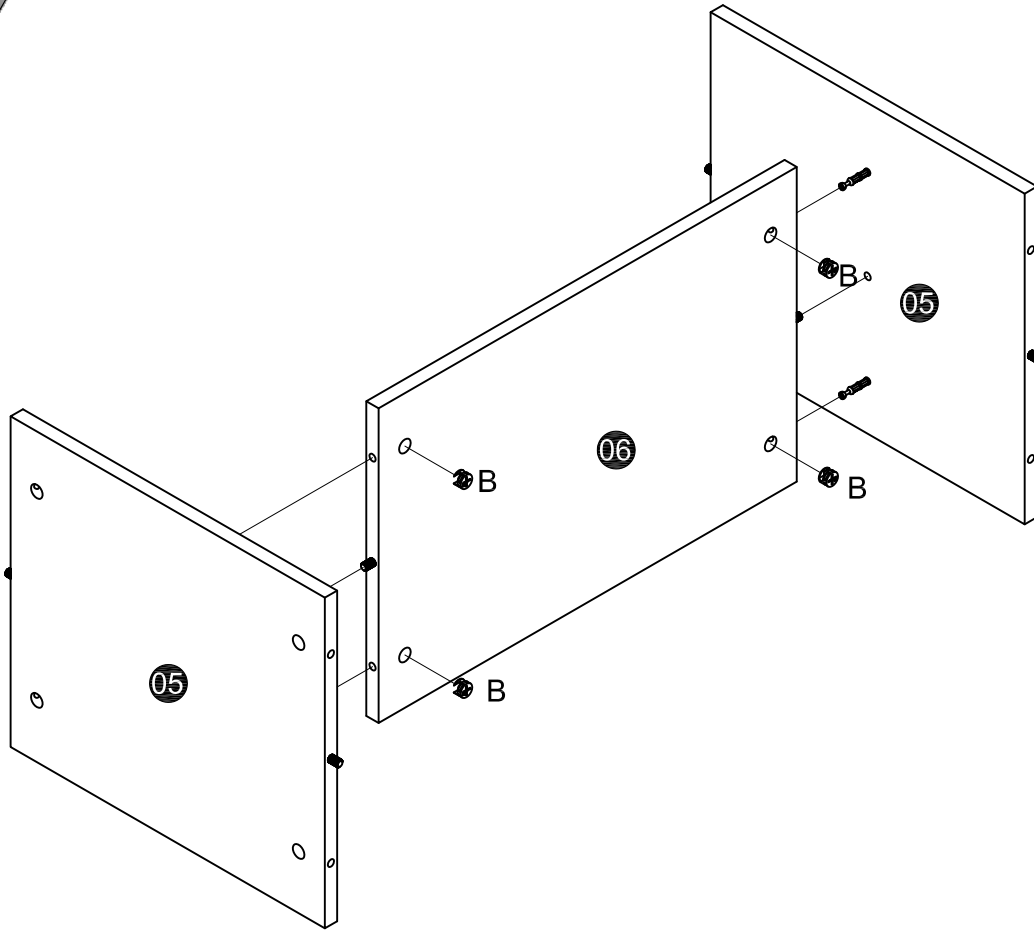


06

 
B CAM lock x4

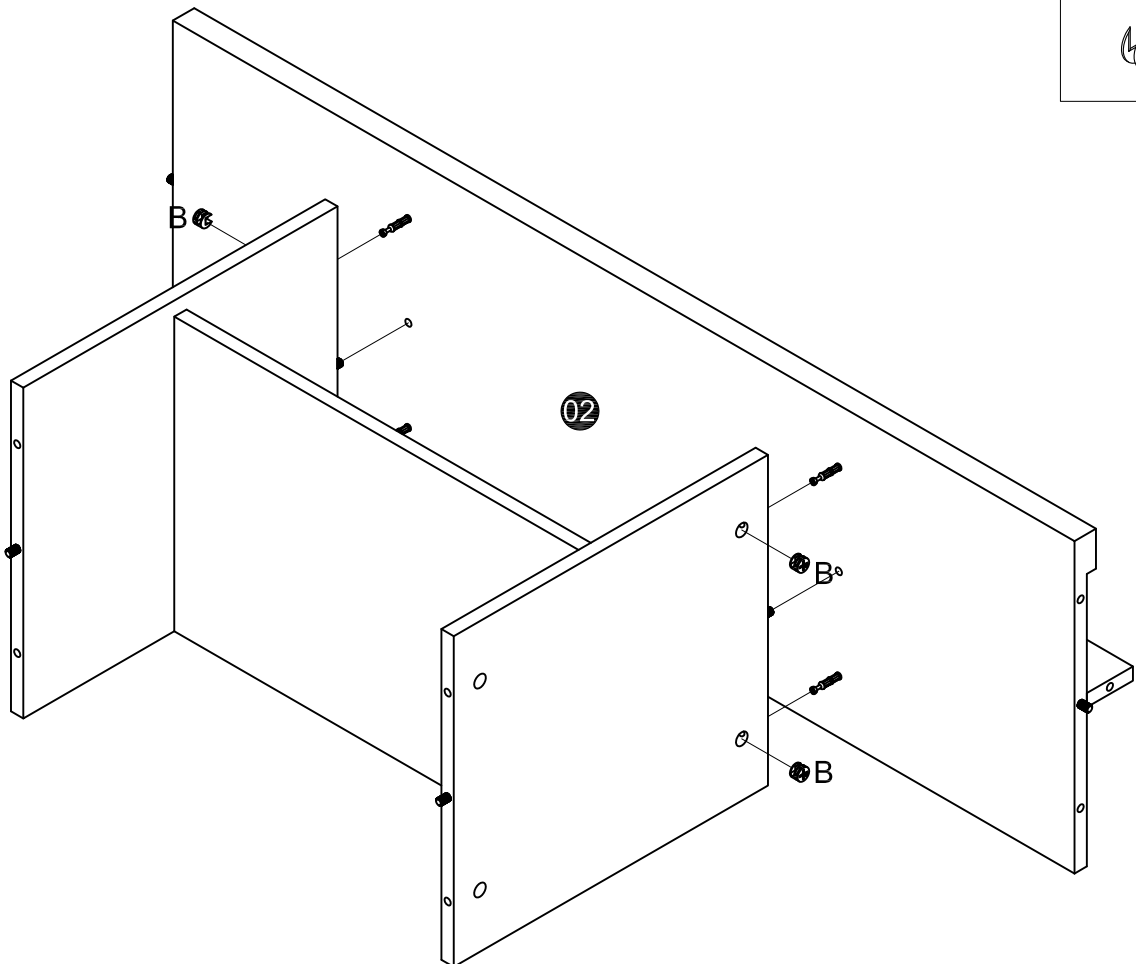


07

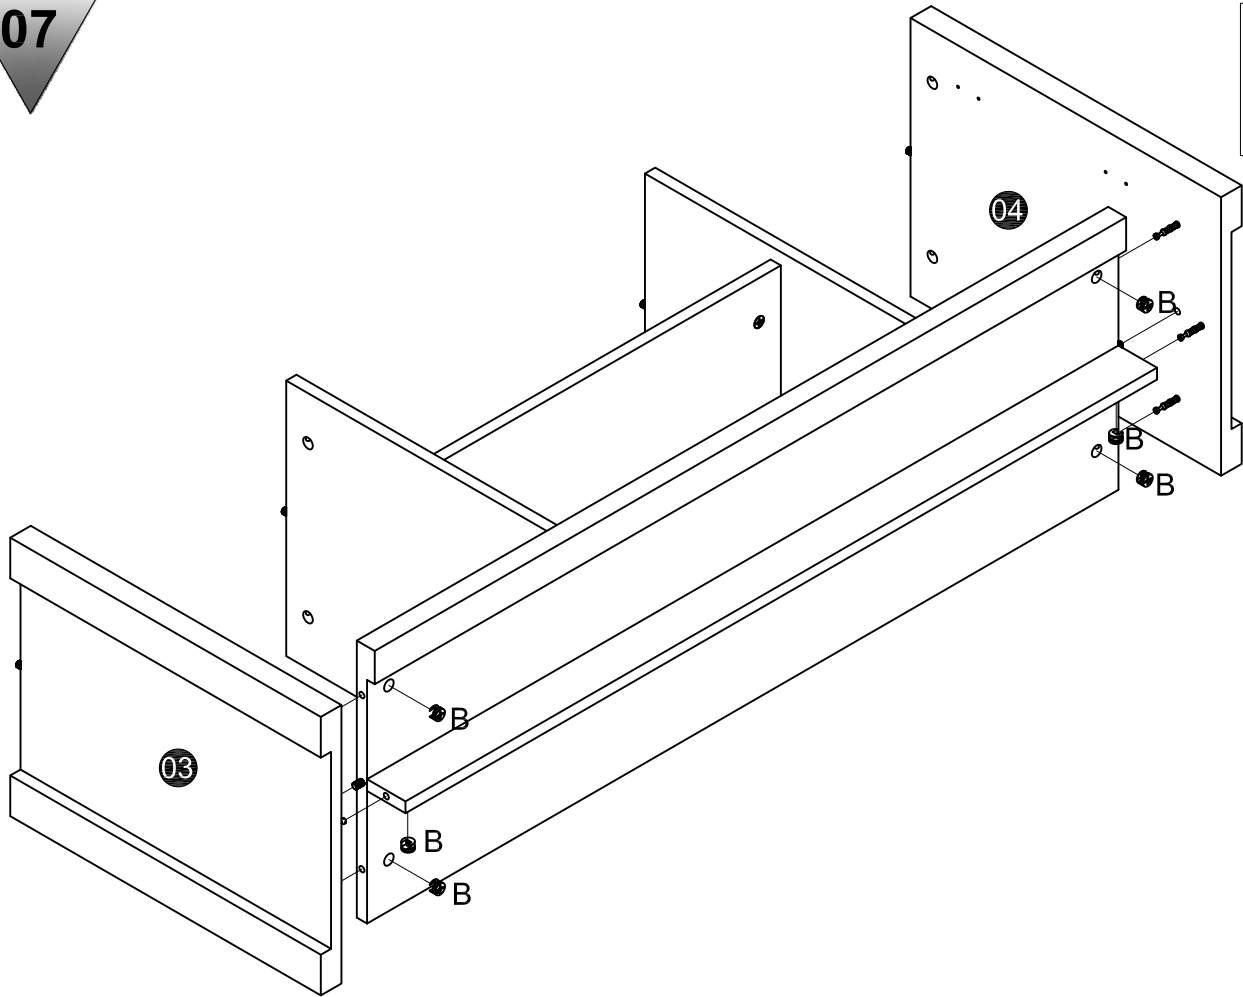 


B CAM lock x6



 
08

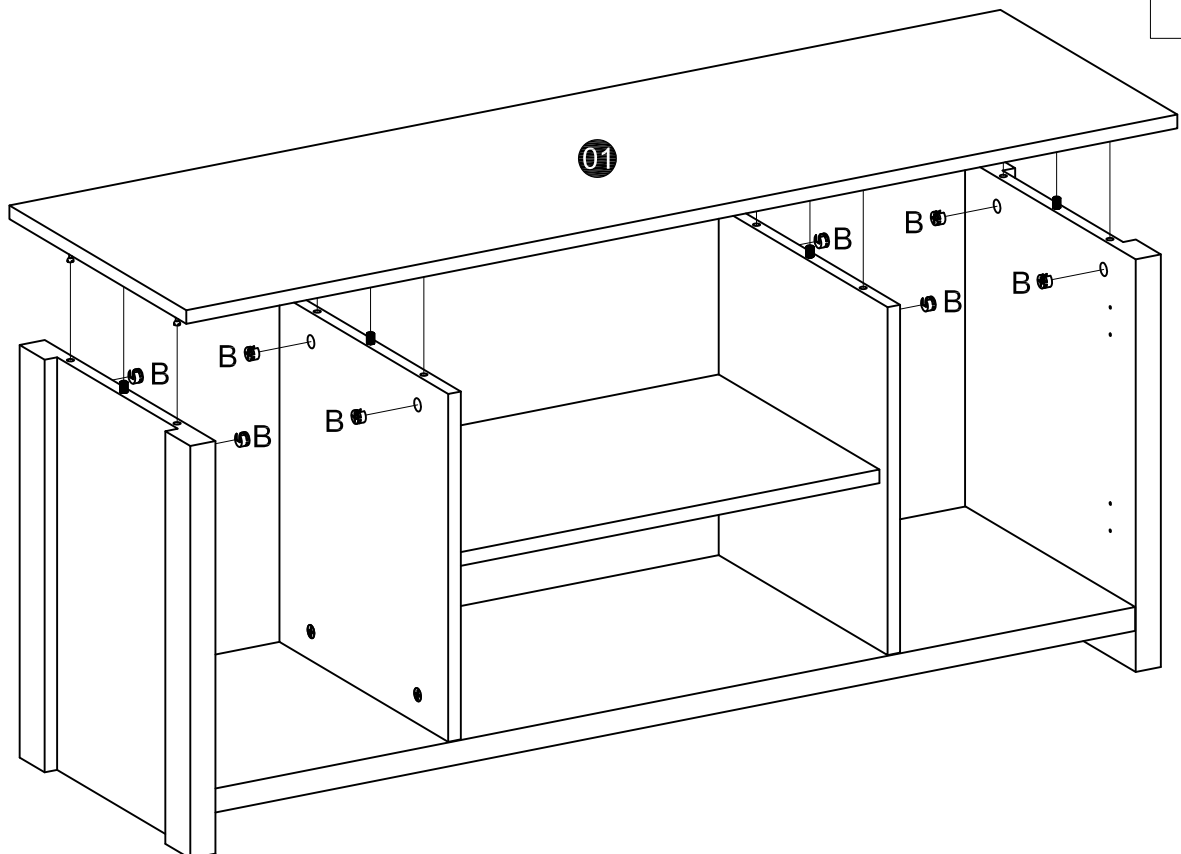



B CAM lock x8

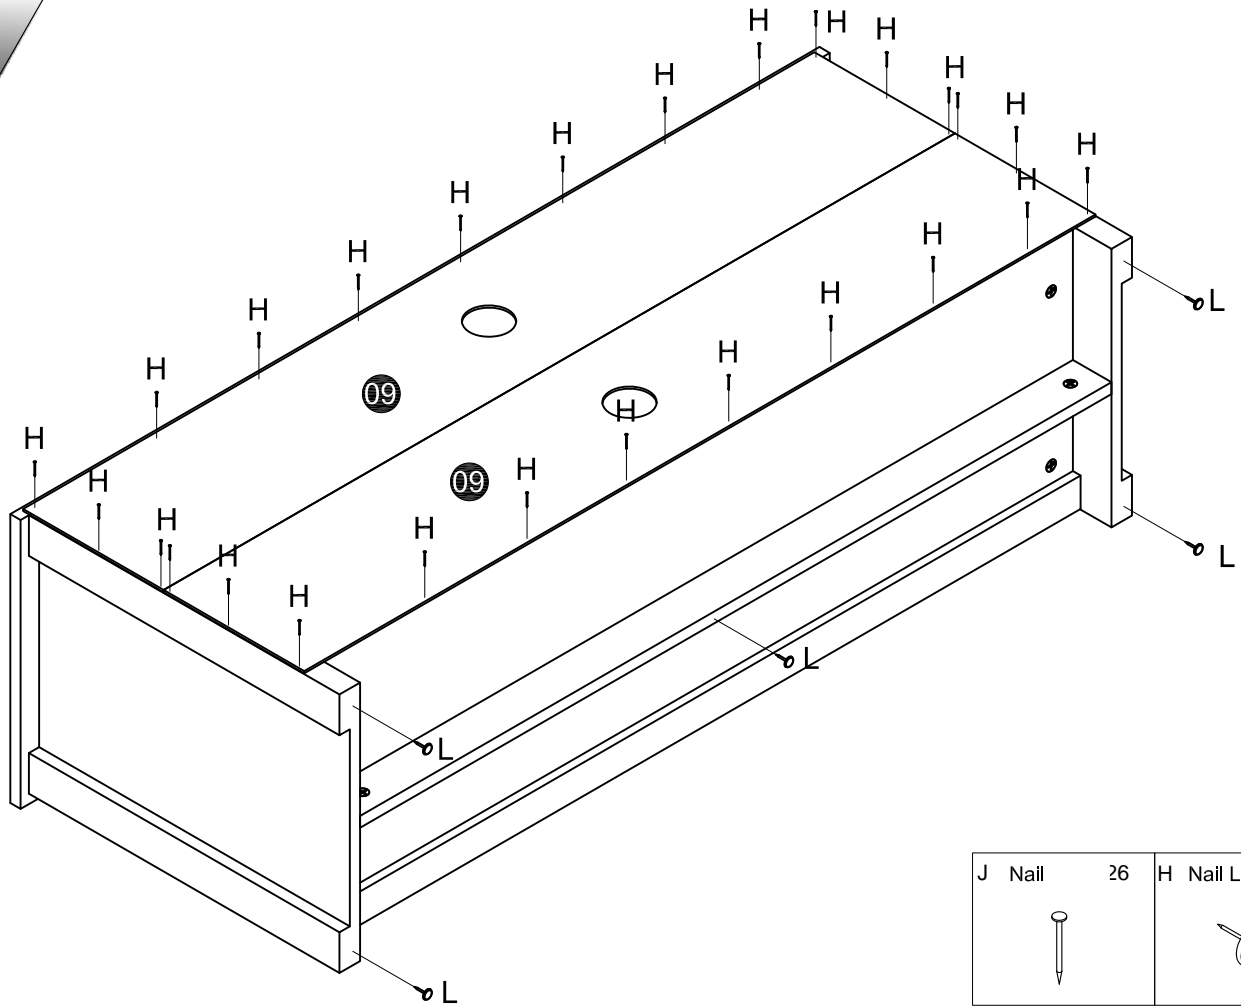 


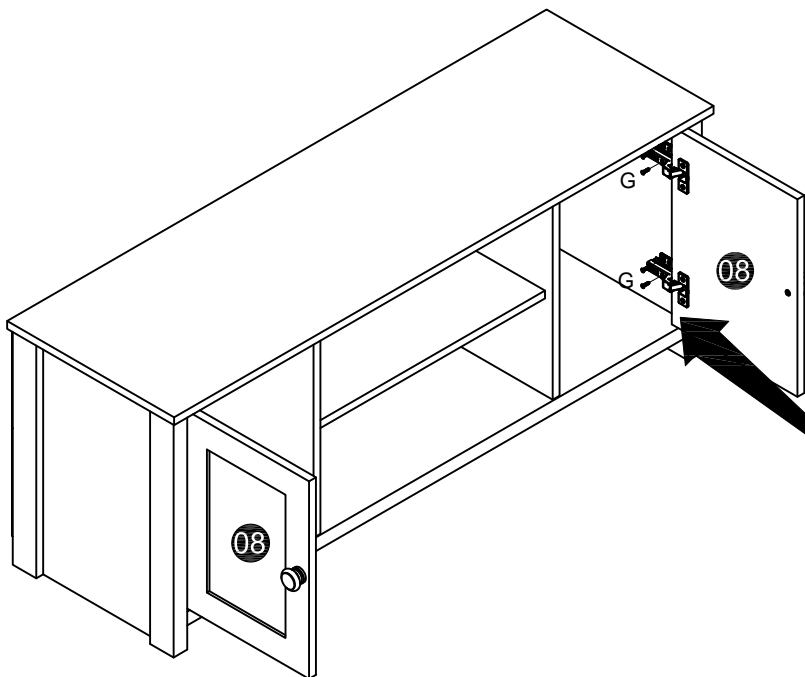 
09




J	Nail	26	H	Nail Leg	x5
					

10

G	M Screw	ø3.5*14
		x8









 Please do not tighten the screws!

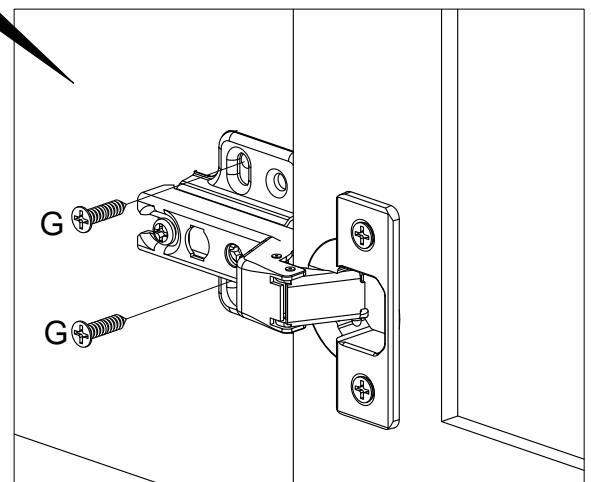


11

      Adjusting the doors (Adjusting the hinges)

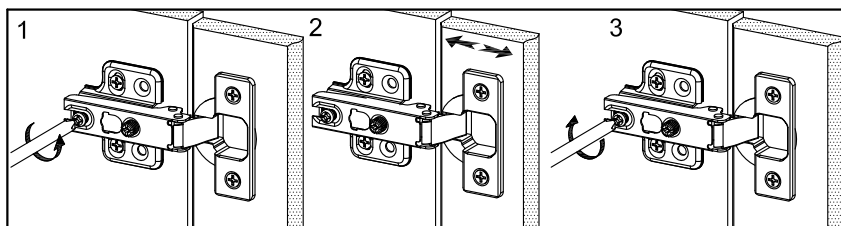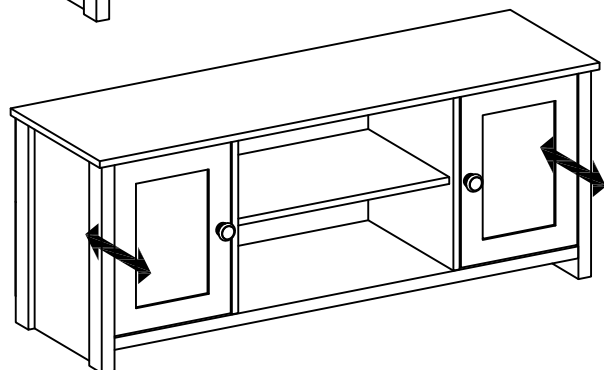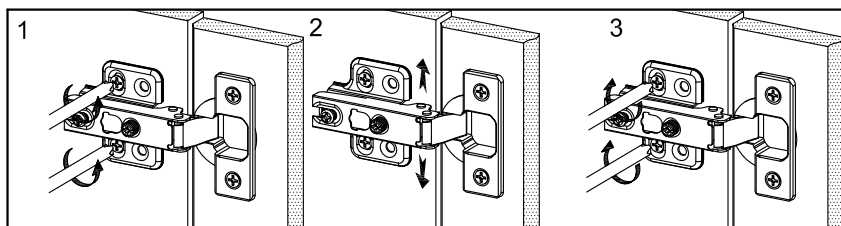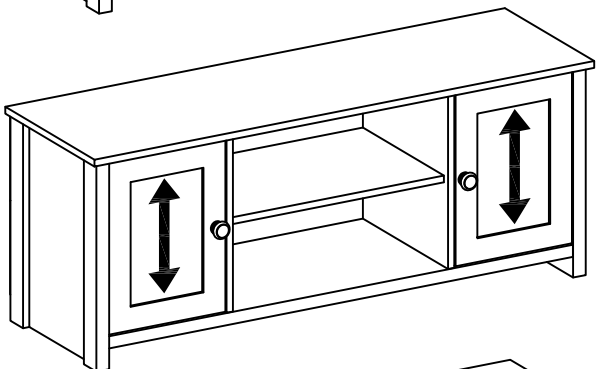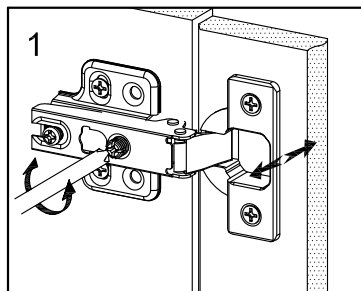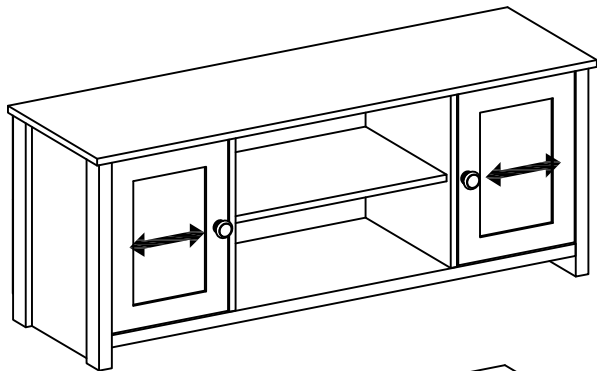

12

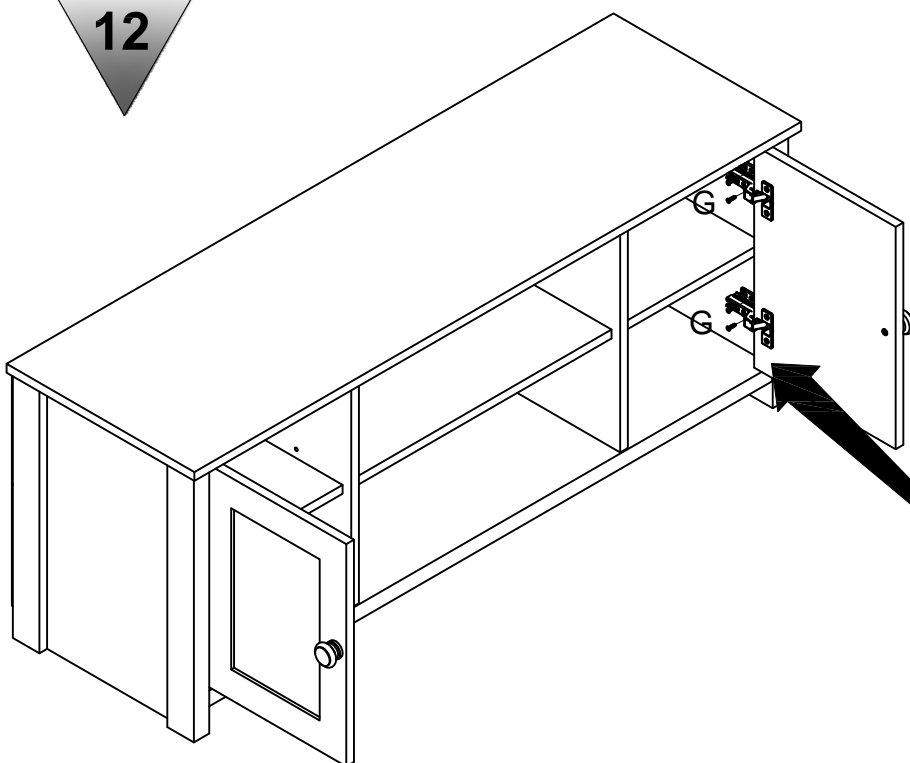 

G Screw $\varnothing 3.5 \times 14$
x 8



Before screwing the " G " screws make sure your doors are well adjusted.

