

INSTRUCTIONS MANUAL



Patio Wicker Swivel Chair

Loosely assemble before tightening.

IF YOU PURCHASED THE SWIVEL CHAIRS ONLINE AND HAVE ANY
QUESTIONS OR CONCERNS
PLEASE CONTACT US VIA EMAIL,TEXT,OR PHONE

EMAIL:service2outdoor@gmail.com
TEXT:+1 628-263-4608(TEXT ONLY)
PHONE:+1 877-561-6450

Date of Manufacture:25W03

Warning:

1. Very important!


After receiving the product, please check if all parts are intact.

Do not open the vacuum-sealed packaging of the mat immediately.

Only proceed with opening the packaging if you are satisfied with the product.

2. When unpacking the box, please use tools carefully to avoid scratching the mat.

Note: Since the mat is vacuum-packed, if you are not satisfied with the product after opening, it may affect the after-sales process.

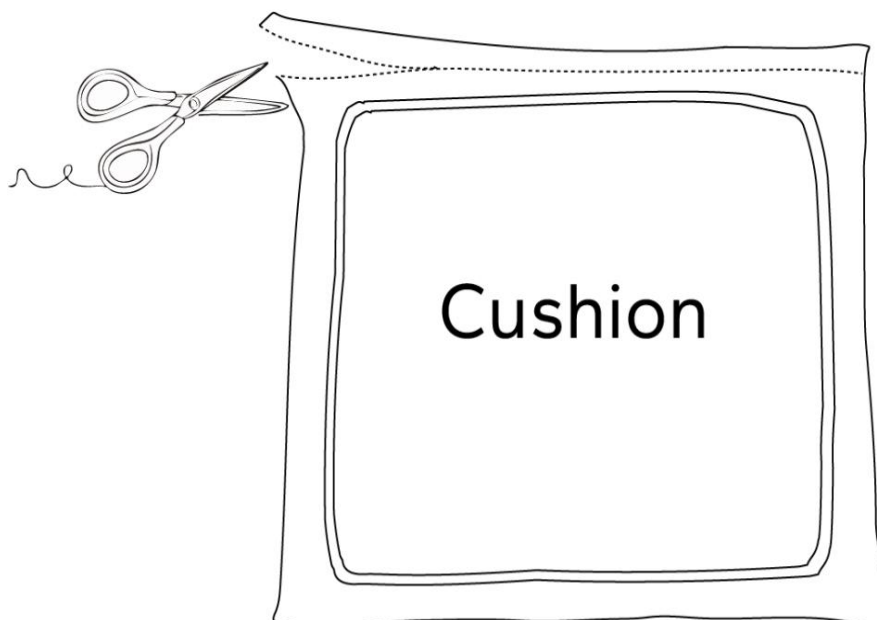

Warning and Cautions:

Thank you for choosing our furniture. Please read and understand this entire manual before attempting to assemble or install the product.

GENERAL BEST PRACTICES FOR ASSEMBLY

1. Familiarize yourself with the product and check all parts against the packing list. If any Parts are missing or damaged, do not install. Contact us immediately.
2. Some parts may contain sharp edges. Wear protective gloves, if necessary, during assembly.
3. Check all nuts and bolts periodically for tightness and, when required, tighten them again.
4. Pay attention to the parts orientation.
5. Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.

IMPORTANT

- Make sure to place the washer on the bolt before inserting it into the bolt hole.
- To ensure the best fit, assemble loosely before tightening.
- Tighten all bolts after all parts are assembled.

WARNINGS



Keep children and pets away from the working area during assembly and adjustments.

1. Keep the assembly area at least 6 feet from any obstruction, such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
2. When assembling and using this product, always follow basic safety precautions to reduce the risk of personal injury and product damage. Please read all instructions before assembly and use.
3. Check all bolts for tightness before use. IMPORTANT - check and tighten bolts often to keep them secure!
4. The chair is not to be used for standing purposes and will not function as a stool or step-ladder. Use on even surfaces only.
5. The chair supports a weight of 300lb (136.4 kg). Improper use of this product or failure to use it as directed may result in injury. Not intended for commercial use.

WARRANTY

•WHAT IS COVERED?

- The limited warranty is extended to the original purchaser and covers material and manufacturing defect, provided the item is properly maintained and used for personal residential purposes only.
- Warranty: 180 DAYS.
- Lost Accessories or Parts Policy: Costs for lost accessories or parts will be charged after 90 days from the date of purchase.

MAINTENANCE

- STAIN RESISTANT CUSHIONS CARE:** Keep cushions in storage on rainy days.
- SPILLS:** Immediately wipe up spills using a white damp cloth. Repeat if necessary until the stain is gone. Allow cushions to air dry.
- **FABRIC CARE:** Hand wash with cold water, non-chlorine bleach when needed, and lay flat to dry. Cool iron if necessary. Do not dry clean.
- **RESIN WICKER PRODUCT CARE:**
 1. General Cleaning: Before use, clean the product with a soft, dry towel. When not in use, wipe off any dirt or loose debris. For regular cleaning, use a mild soap and water solution, rinse thoroughly, and dry completely.
 2. Weather Protection: To prolong the life of your resin wicker, avoid prolonged exposure to intense sunlight or heavy rain. Whenever possible, use a protective cover when the furniture is not in use, especially during extreme weather conditions.
 3. Avoid Harsh Cleaners: Do not use strong detergents or abrasive cleaners, as these may damage the finish.
- Regular Maintenance:** Over time, nuts and bolts may loosen. Occasionally check and re-tighten them on all products as needed.

Assembly Instructions for 1PC Patio Wicker Swivel Chair

A	B	C	D
			
IPC Left leg	IPC Right leg	IPC Chair Seat	IPC Chair Seat Side Panel

E	F	G	H
			
IPC Chair Seat Side Panel	IPC Chair Back	IPC Chair Arm	IPC Chair Arm


I	J	K	L
			
IPC Chair Seat Front Panel	IPC Base	IPC U-Shape Fitting	IPC U-Shape Fitting

M	N	O	P
			
IPC Allen Wrench	4PCS Bolts M6*30	8PCS Bolts M6*18	24PCS Bolts M6*40


Q	R	S	T
			
Ø16*Ø6.5*1mm 28PCS washers	M6 8PCS Spring washers	IPC Allen wrench	IPC Spanner

U	V		
 IPC Back Cushion	 IPC Seat Cushion		


1. Secure side plate (E&D) to the chair leg (A&B) with 6 washers (Q) and 6 bolts (P) by using allen wrench (S). **Keep the bolts loose.**

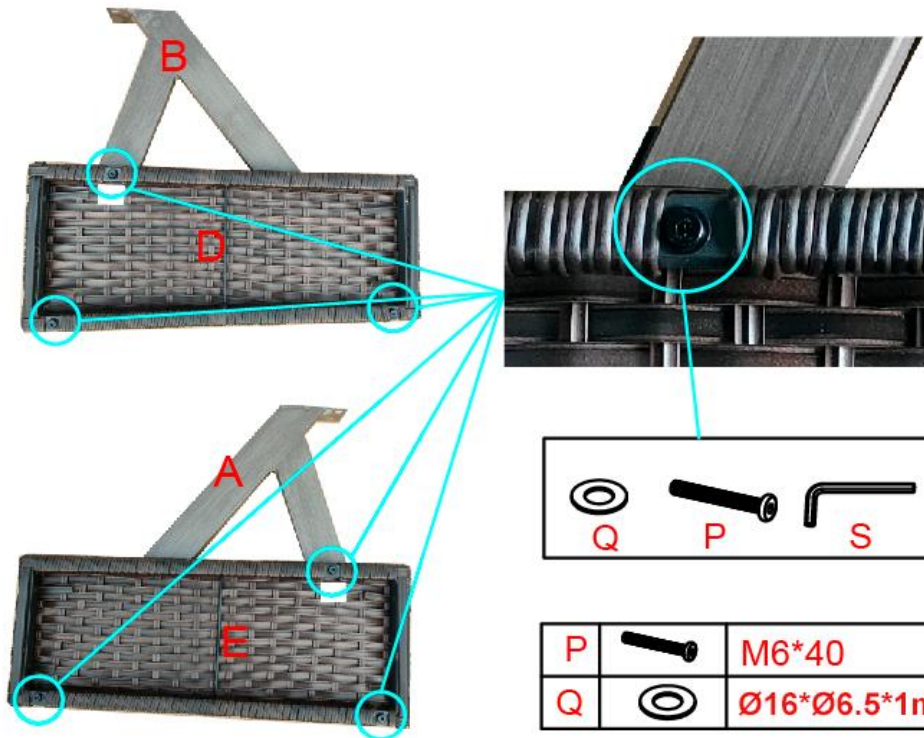

2. Secure chair seat (C) to chair seat front panel (I) with 2 washers (Q) and 2 bolts (P) by using allen wrench (S). **Keep the bolts loose.**

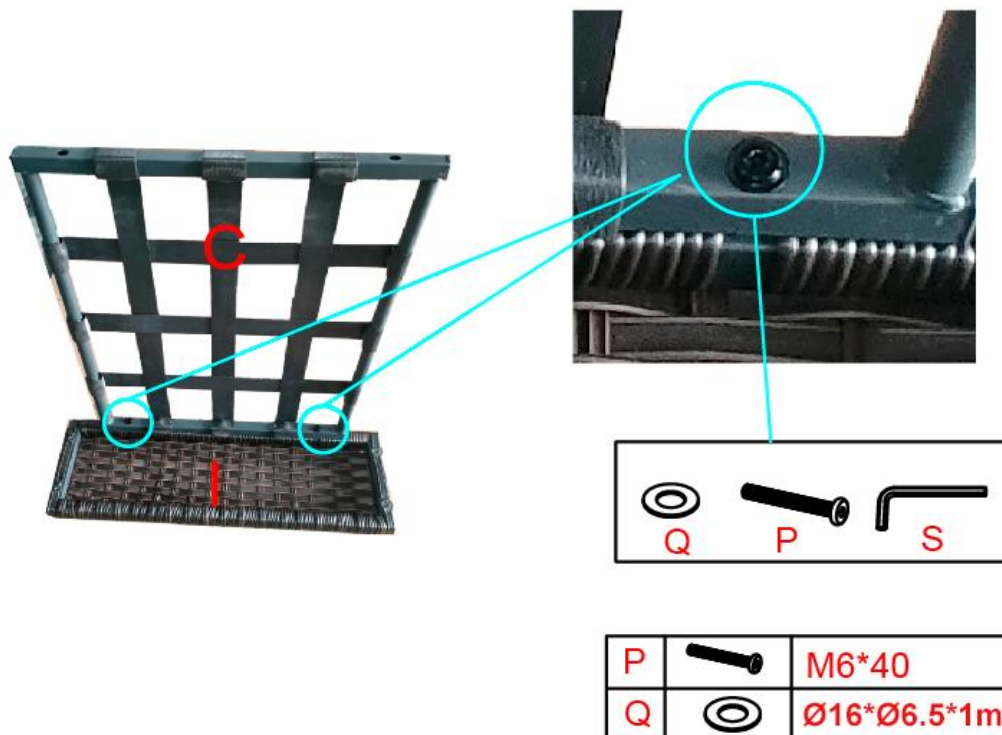


3. Secure chair seat side panel (D&E) to chair seat front panel (I) with 4 washers (Q) and 4 bolts (P) by using allen wrench (S). **Keep the bolts loose.**

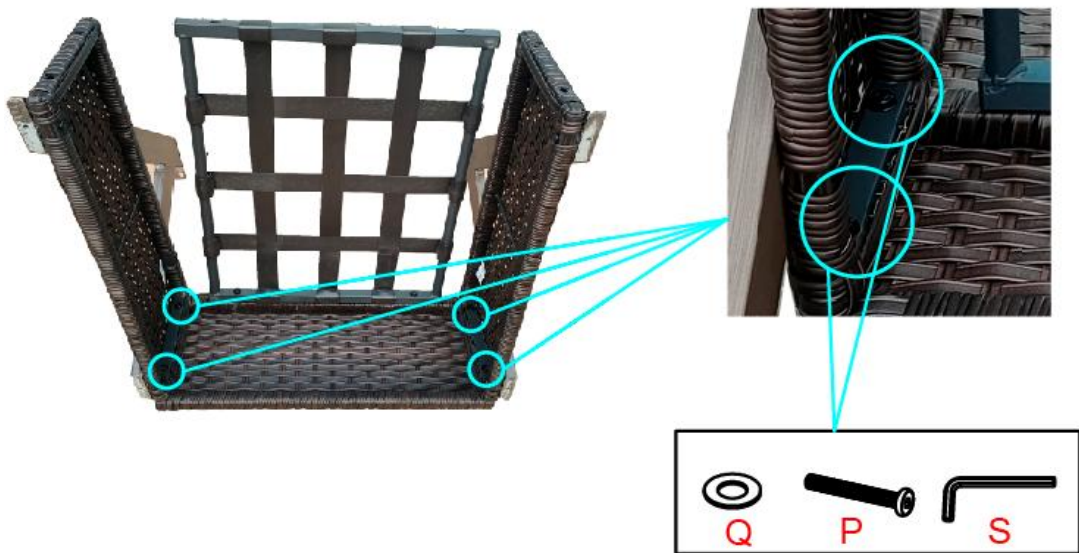


P		M6*40	4
Q		Ø16*Ø6.5*1mm	4

4. Secure chair seat (C) and side panel (D&E) to chair back (F) with 6 washers (Q) and 6 bolts (P) by using allen wrench (S). **Keep the bolts loose.**

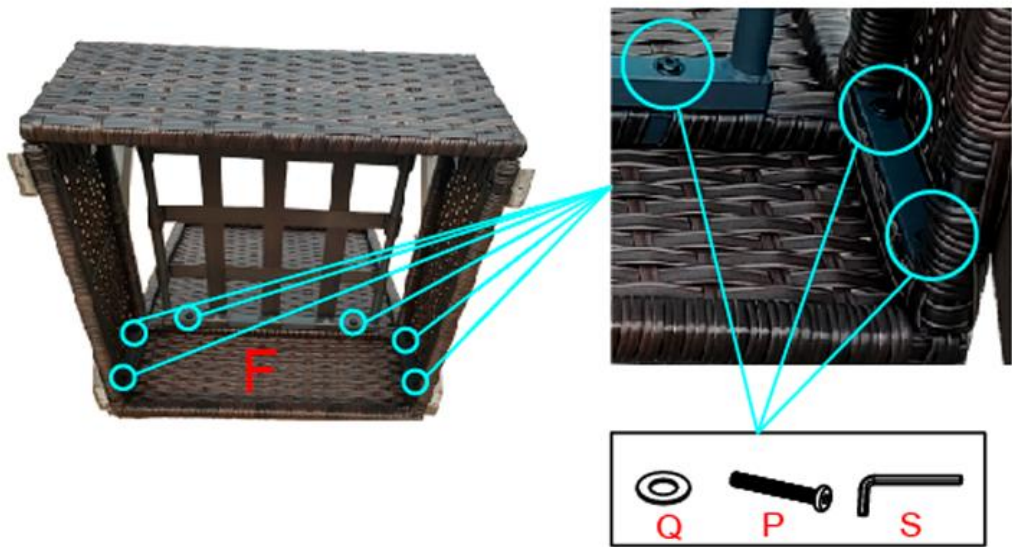


P		M6*40	6
Q		Ø16*Ø6.5*1mm	6

5. Secure chair arm (G&H) to chair leg (A&B) with 4 washers (Q) and 4 bolts (O) by using allen wrench (S). **Keep the bolts loose.**

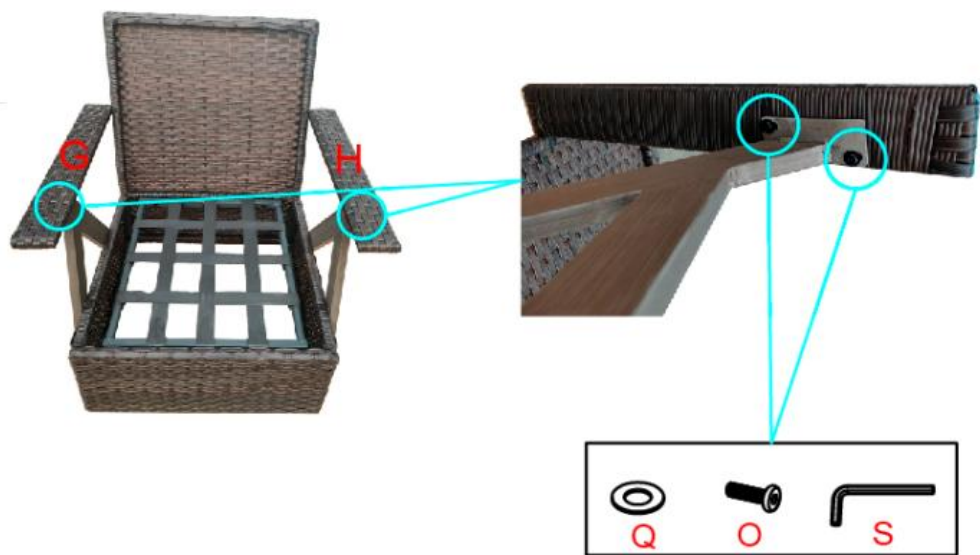


O		M6*18	4
Q		Ø16*Ø6.5*1mm	4

6. Secure chair arm (G&H) to chair back (F) with 2 washers (Q) and 2 Bolts (P) by using allen wrench (S). **Keep the bolts loose.**

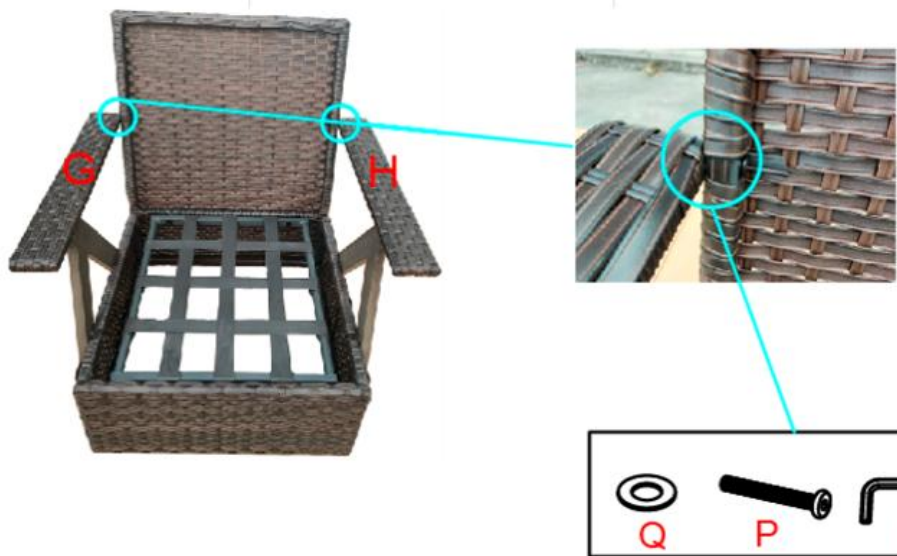


P		M6*40	2
Q		Ø16*Ø6.5*1mm	2

7. Attach the rocking base (K) to rocking base (J) with 2 washers (Q) and 2 bolts (O) by using allen wrench (S) . **Keep the bolts loose.**

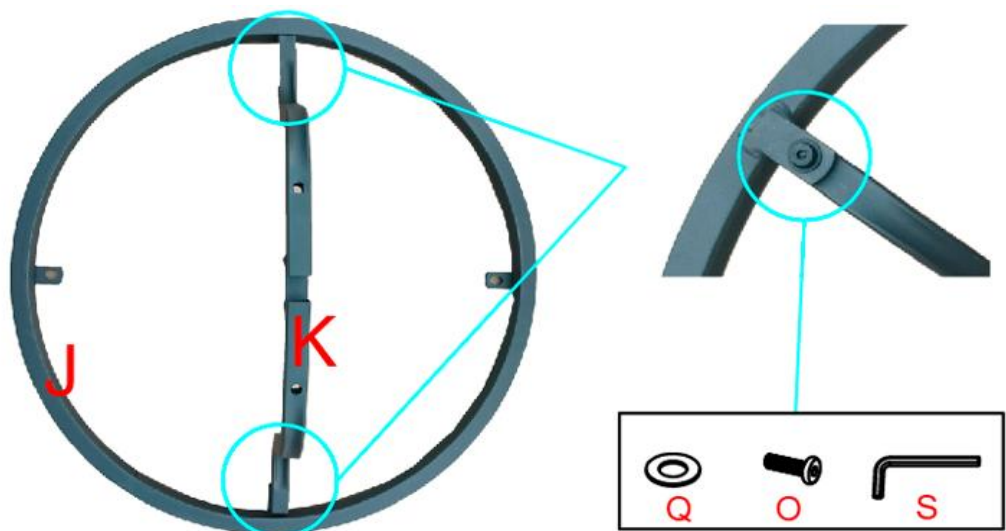


O		M6*18	2
Q		Ø16*Ø6.5*1mm	2

8. Attach the rocking base (L) to rocking base (J) with 2 washers (Q) 2 bolts (O) by using allen wrench (S) . **Keep the bolts loose.**

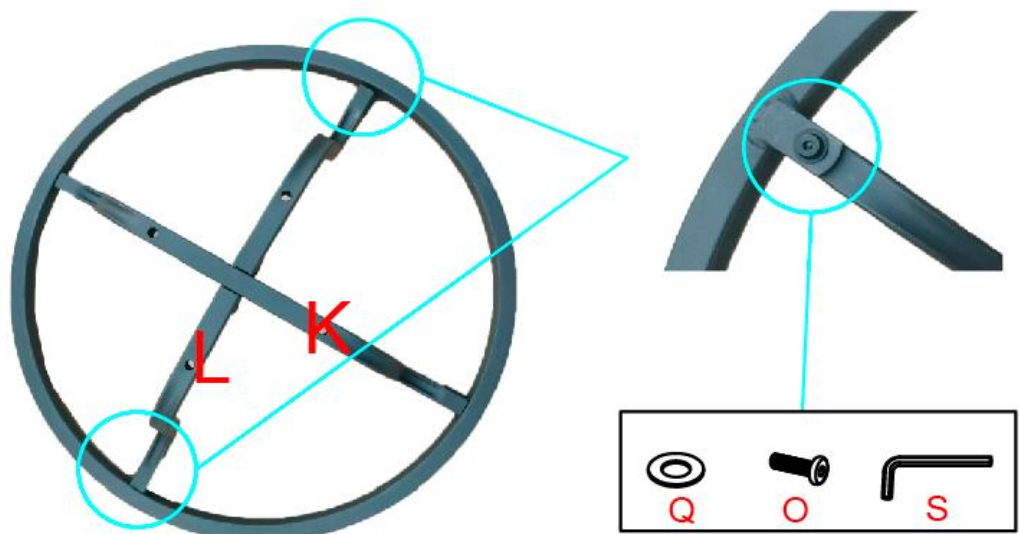


O		M6*18	2
Q		Ø16*Ø6.5*1mm	2


9. Secure swivel base (M) to rocking base (J) with 4 spring washers (R), 4 bolts (N) by using allen wrench (S) and spanner (T). **Keep the bolts loose.**

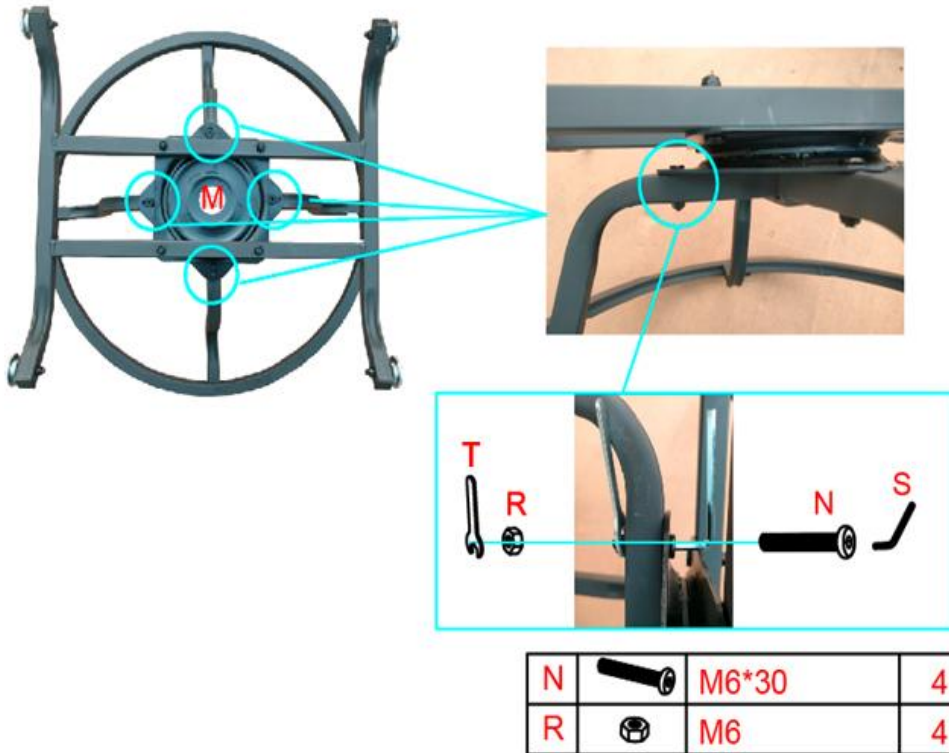

10. Attach rocking base (L) to chair leg (A&B) with 4 spring washers (R) and 4 bolts (P) by using allen wrench (S) and spanner (T). **Fully tighten all the bolts NOW !**

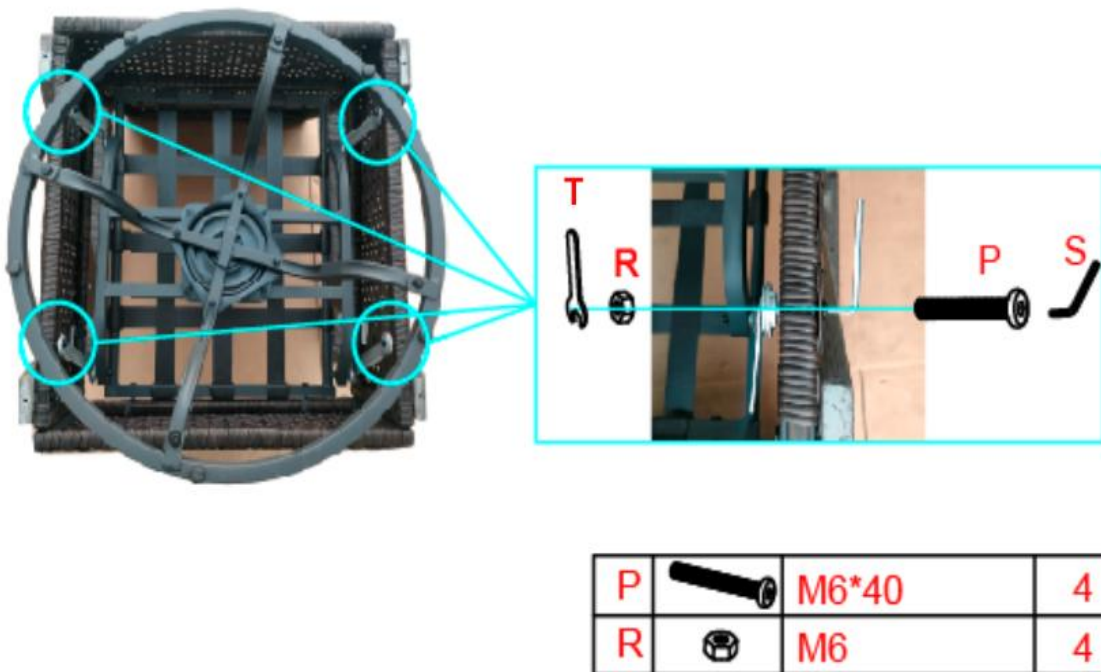

11.Put back and seat cushion (U&V) onto chair and now it is ready to use.

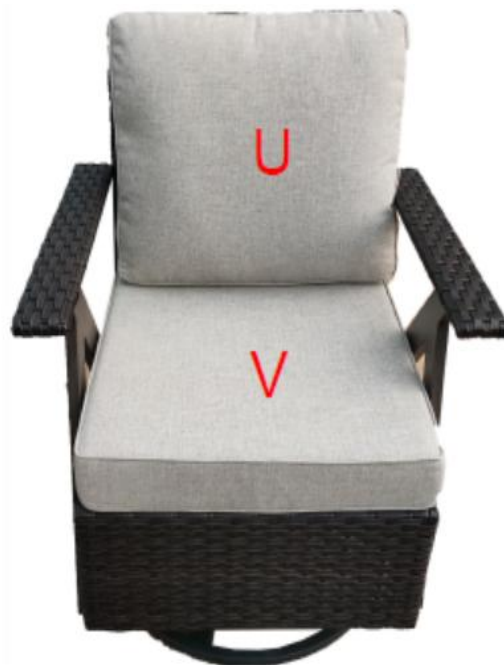

SPECIAL WARNING



**THIS CHAIR IS NOT A TOY.
DON'T OVER-SWING THE CHAIR.
OVER-SWING THE CHAIR MAYBE
MAKE THE CHAIR TIP OVER AND
RESULT IN INJURY.**



**DO NOT STAND ON THE
CHAIR. ANY IMPROPER USE
OF THIS PRODUCT MAY
RESULT IN INJURY.**