




 

 
 

 




# ASSEMBLY INSTRUCTIONS

 
ITEM NO : C5201/C5596 DINING CHAIR

1/1


HARDWARE LIST			
NO	PART		Q'TY
A		Ø5/16"x82mm	4
B		Ø5/16"x60mm	4
C		Ø5/16"x45mm	2
D		Ø5/16"x13mm	10
E		Ø5/16"x19mm	10
F		M4x38mm	4
G		5mm	1

PART LIST			
NO	PART		Q'TY
1		Chair back	1
2		Seat cushion	1
3		Left front leg	1
4		Right front leg	1
5		Left stretcher	1
6		Right stretcher	1


TOOLS REQUIRED ( NOT PROVIDED)




STEP 1

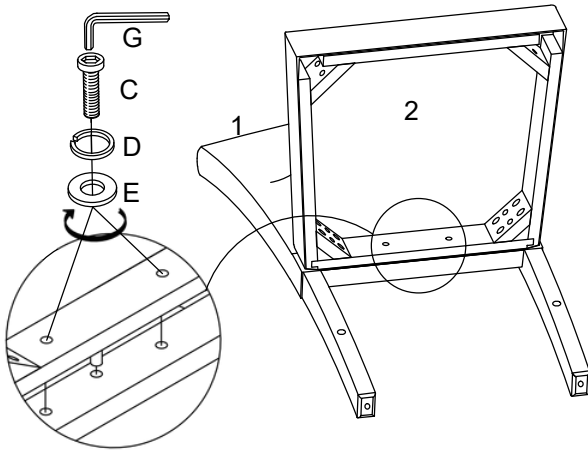


STEP 2

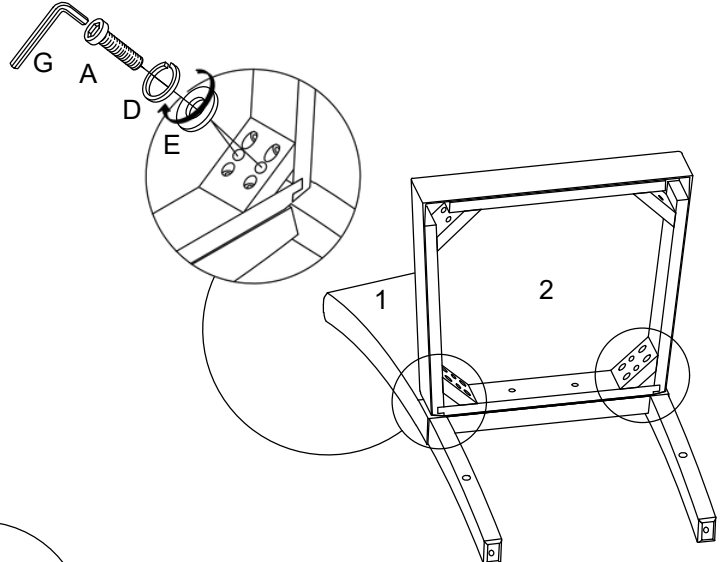

STEP 3

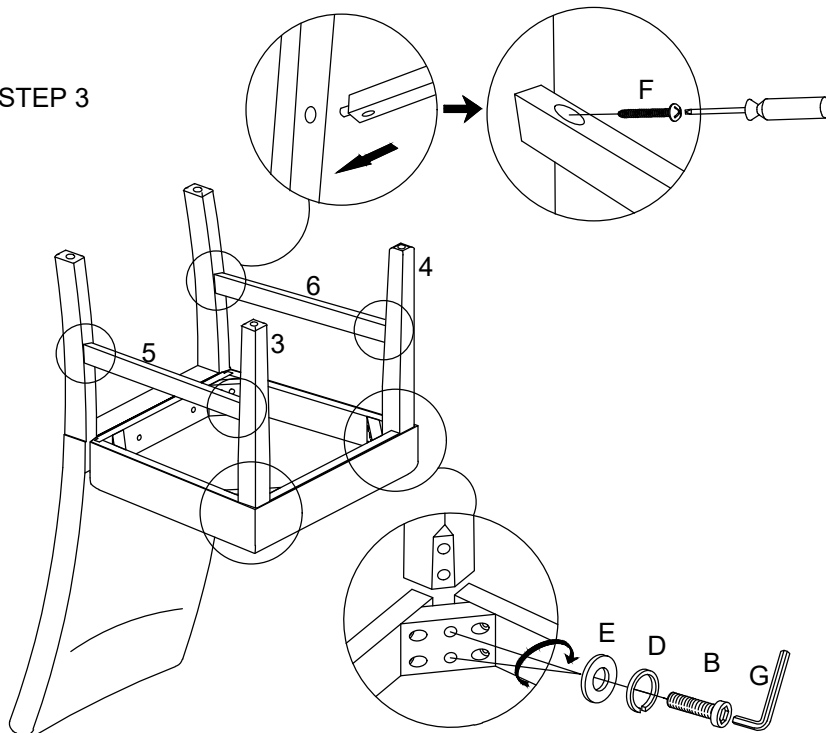

Completed

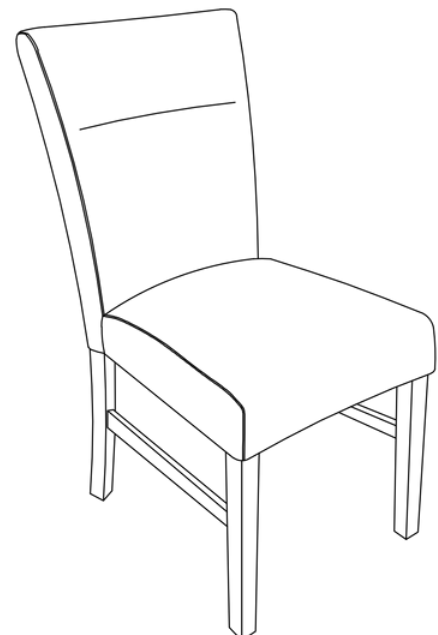

Do not tighten screws until completely assembled.