

STROLLER WAGON

Instruction manual

Item NO:WG414



E-mail Service :salesafterservice@outlook.com

Please read and keep the manual, as it contains important information for future reference.

WARNING

READ AND FOLLOW ALL WARNINGS AND INSTRUCTIONS! FAILURE TO DO SO COULD RESULT IN SERIOUS INJURY OR DEATH!

- **NEVER** leave children unattended. ALWAYS keep children in view while in the product.
- This product is not safe for sleep or unsupervised use. If baby falls asleep, remove baby as soon as possible and place baby on a firm, flat sleep surface such as a crib or bassinet.
- Adult assembly required. Take care when unpacking and assembling as it contains small parts and some items with sharp edges.
- To prevent a possible choking hazard, remove and discard packing material before using this product.
- Avoid serious injury from falling or sliding out. ALWAYS use restraint system.
- **DO NOT** carry or roll product on stairs or escalators with a child in it.
- **DO NOT** hang items on the parent's handle or place them on the canopy as they can tip the product over and injure a child.
- **ALWAYS** exercise care when going over curbs or steps, and never use the product for anything other than transporting your child. Use at a normal walking pace only; faster strolling can cause a loss of control and injury to the child.
- **DO NOT** place hot liquids in storage pockets. Spills can burn you or your child.
- **DO NOT** use the product if any parts are missing or broken.
- ALWAYS apply brakes when taking children in or out.
- **DO NOT** allow the child to stand on the footwell. The product may tip over and injure child.
- **DO NOT** allow the child to climb on, into or out of the Product unassisted.
- **DO NOT** carry additional children, goods, or accessories in or on this product except as advised in these instructions.
- The product is intended for use with one or two children and to accommodate only the additional weights in storage as listed in these instructions.
- To avoid tipping, always remove the heavier weight child from a seating position before removing the lighter-weight child.
- **DO NOT** allow the child to push or pull the product in any mode.
- **DO NOT** allow the child to sit, stand, or climb over the storage basket or child's tray.
- **DO NOT** step on parent's handle.
- **DO NOT** enable easy entry when the front seat is occupied.
- **DO NOT** allow the child to stand while the product is in motion.
- **DO NOT** allow the child to jump on the seat or footwell.
- **ALWAYS** ensure the product is in a fully locked position before using.
- Care must be taken when folding and unfolding products or changing handle modes to prevent finger injury to you or your child in hinge areas. Make sure the child is not in the seat or near the product when folding or unfolding.
- **NEVER** leave the product on a hill or incline, even with brakes set, to avoid the product from tipping.
- To avoid accidental rolling, ALWAYS set brakes when the product is not being used.

WARNING

AVOID STRANGULATION:

- **DO NOT** suspend strings or toys from the canopy.
- **DO NOT** place product anywhere near cords from window blinds, draperies, phones, etc.
- **DO NOT** place items with a string around your child's neck such as hood strings or pacifier cords.
- When making adjustments to the product, ALWAYS ensure that all parts of the body are clear of any moving parts of the product particularly when switching modes.
- The canopy is not intended to provide UV protection.
- Sharp or heavy objects placed in pockets may cause damage to the product, or injury to the child.
- The product is not suitable for running or skating.
- The product is for children 6-36 months within the weight and height.
- Prevent tipping, do not place the weight more than the maximum requirements.
- The maximum weight capacity of the tray is 4.4 lbs.
- **DO NOT** overload the tray as it can become unstable.
- The maximum weight capacity of the storage bag is 4.4 lbs.
- The maximum weight capacity of the wagon is 39 lbs for each child.
- The maximum weight capacity of the wagon in combination with any accessories is 156 lbs total.
- **DO NOT** place any child taller than 39 inches per seat in the product.
- **DO NOT** overload the product as it can become unstable.
- ALWAYS distribute weight as evenly as possible on each side of the product.

PARTS LIST



① Wagon Frame



② Canopy



③ Pull Handle



④ Front Wheel (x2)



⑤ Rear Wheel (x2)



⑥ Rear Wheel Axle



⑦ Integrated Tray



⑧ Removable Seats x2



⑨ Storage Bag

HARDWARE



Ⓐ Bolt (x1)



Ⓑ Screw (x5)



Ⓒ Clip (x1)




Ⓓ Nut (x1)

Tools Needed:



Screwdriver

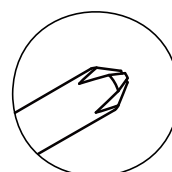

INSTALL THE WHEELS


STEP 1

Insert the rear wheel axle until it clicks into place, making sure to align the "L" and "R" markings on the axle with the corresponding "L" and "R" markings on the frame.



STEP 2



Align the rear wheel with the socket of the rear wheel axle and push it in until you hear a click (see illustration).

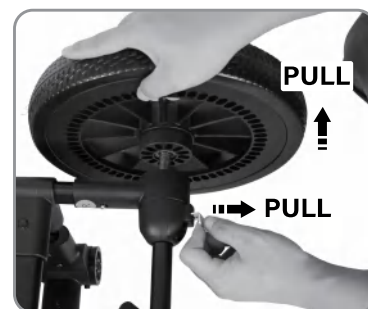

Remove the rear wheel:
While pulling the small iron plate outwards, pull the rear wheel outwards as well.

STEP 3



Insert the wheel into the front axle socket and push firmly until you hear a click, indicating it is locked in place. (See illustration.)

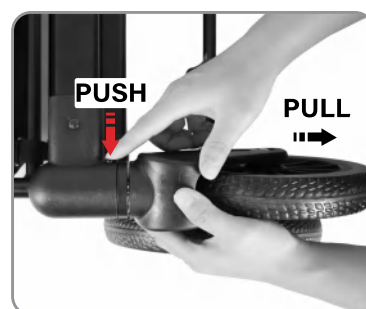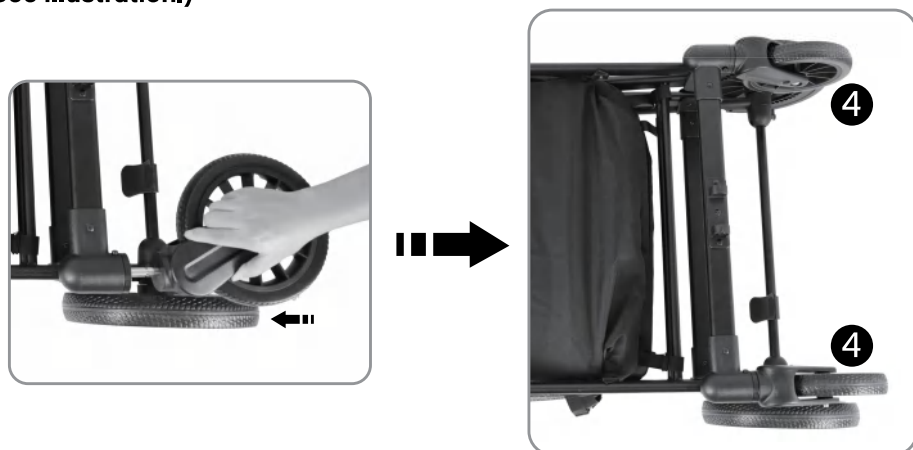

Remove the front wheel:
Press and hold the button while pulling the front wheel outward.

INSTALL PULL HANDLE

Take out the screw package and the telescopic handle. Attach the handle (see illustration) and secure it by tightening both screws clockwise.

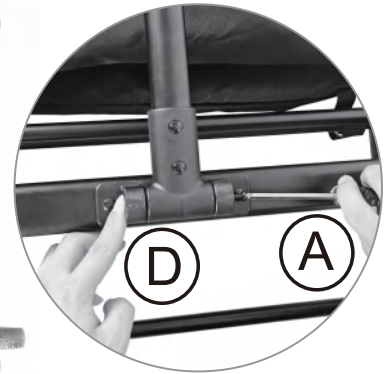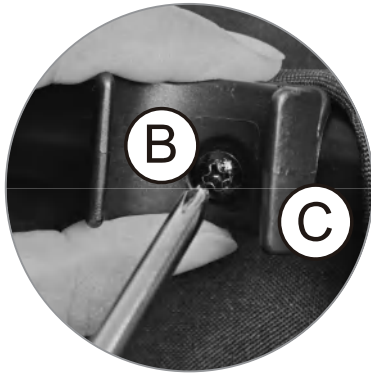

UNFOLD THE STROLLER

STEP 1

Unfasten the buckle.



STEP 2

Push down on the center of the stroller frame until you hear "click," indicating that the frame is fully opened and securely locked.



INSTALL THE SEATS

1. Insert clip into the stroller as the pictures shown. Repeat for another clip on seat. Then repeat on second seat if desired (Fig 1). Push down on each clip until they fit steadily in the stroller. Make sure clips are fully secure before seating children in seats.
2. Locate the zipper at the back of the seat and the zipper at the side of the stroller. Zip up the 2 zippers tightly. Then repeat on second seat (Fig 2).



①



②

WARNING:

The harness must always be fastened when a child is in the stroller wagon.


INSTALL THE CANOPY

STEP 1

1. Align the canopy with the designated slots on the frame, as shown in the figure.
2. To fix the sunshade canopy, refer to Figures 1 and 2 and then insert the screws (4x Component B) into the corresponding holes.
3. Use a cross-head screwdriver to tighten each screw, ensuring that the sunshade is securely fixed.
4. Press down gently on the dinner plate (Part 7) after placing it into the connection point. Continue until you hear or feel a click, indicating it is securely locked and stable (Fig 33).



1

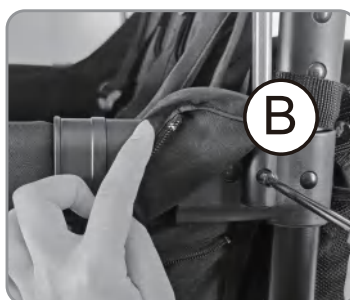

2



3

ADJUSTING THE HANDLEBAR

Press the circular button on the handle cover to adjust the handle to the desired height.



FOLDING WAGON

STEP 1

1. Pull up the dining plate from the outer side first, and then pull it up in the direction of the arrow to complete the disassembly.
2. Pull the clip out of the stroller as shown in the picture. Repeat this operation on the seat once. If necessary, repeat this step on the second seat (Fig 1).
3. Locate the zipper at the rear of the seat and the zipper on the side of the stroller. Open both zippers. Then repeat this operation on the second seat (Fig 2).





1



2



STEP 2

Please press the buttons on both sides of the baby carriage frame and lift it upwards to fold it inwards. After folding, fasten the buckle (see illustration).

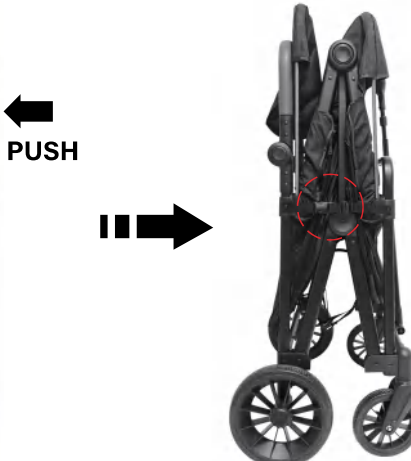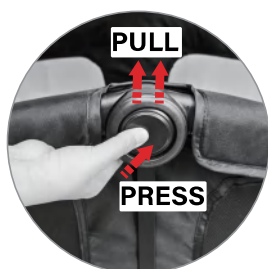

PROPER USE OF SAFETY LATCHES

1. Connect the shoulder strap buckle to the waist strap buckle. Repeat on both sides.
2. Insert the buckle into the holder until it clicks. Verify that it is firmly secured.
3. Repeat the same process on the other side.
4. To release the child, press the button in the center of the buckle.
5. Adjust the length of the shoulder and waist straps by sliding the adjusters as needed.

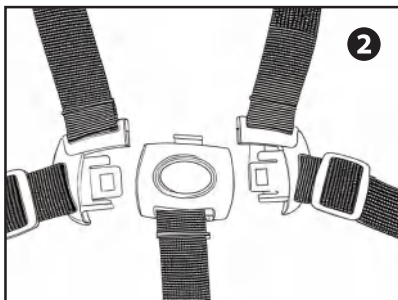
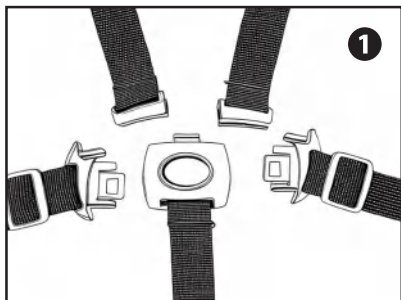


⚠ WARNING:

Do not use if harness is not secure.



PROPER USE OF STORAGE BAGS

STRANGULATION HAZARD: Must use short webbing mode when attaching the storage bag to the handle.

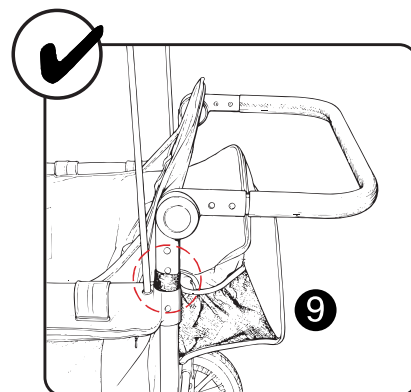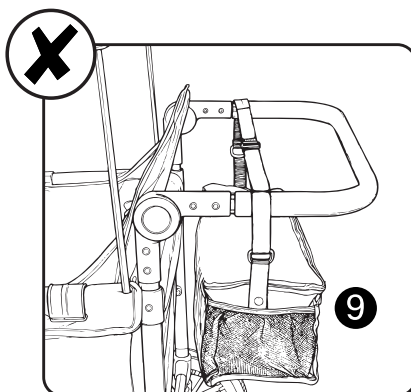

REAR WHEEL BRAKING FUNCTION

1. Locate the brake pedal near the rear wheels.
2. Firmly press the brake pedal down with your foot to engage the brakes.
3. Attempt to push the trailer slightly to verify that the brakes are holding. If engaged correctly, the trailer will not move.
4. To release the brakes, use your foot to lift the pedal back to its original position.

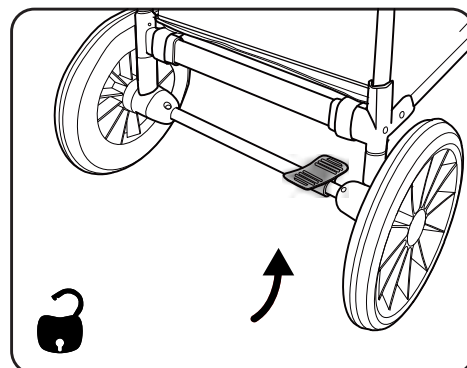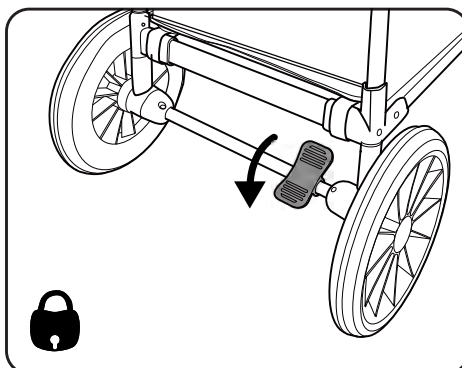

CARE AND MAINTENANCE

Cleaning the Wagon

- **Frame and Fabric:** Wipe the wagon frame and fabric with a soft, damp cloth.
- **Drying:** Allow all parts to air dry completely before folding or storing to prevent mold and mildew.
- **Canopy:** The canopy can be removed and hand-washed with a mild detergent.

Checking for Wear and Tear

- **Inspect Regularly:** Periodically check the wagon for loose screws, worn parts, or any damage.
- **Tighten Hardware:** Ensure all bolts, screws, and fasteners are tight and secure.
- **Wheel and Brake Functionality:** Regularly check the wheels and brake mechanism to ensure they are functioning properly.

Storage

- **Indoor Storage:** Store the wagon in a dry place to prevent rust and wear.
- **Avoid Extreme Temperatures:** Keep the wagon away from direct sunlight and extreme temperatures to protect the fabric and components.
- **Fold Properly:** Before storing, ensure the wagon is properly folded and locked to save space and prevent accidental damage.

YOU DID IT!

It's time to take your little one on a happy ride in this sturdy, versatile, and stylish stroller!

THANK YOU

Thank you for your Stroller Wagon purchase! If you have any questions or concerns, we're here to help. Our team is dedicated to providing you with quick solutions and excellent service.

E-mail Service :salesafterservice@outlook.com