 
 

AYS904-RH

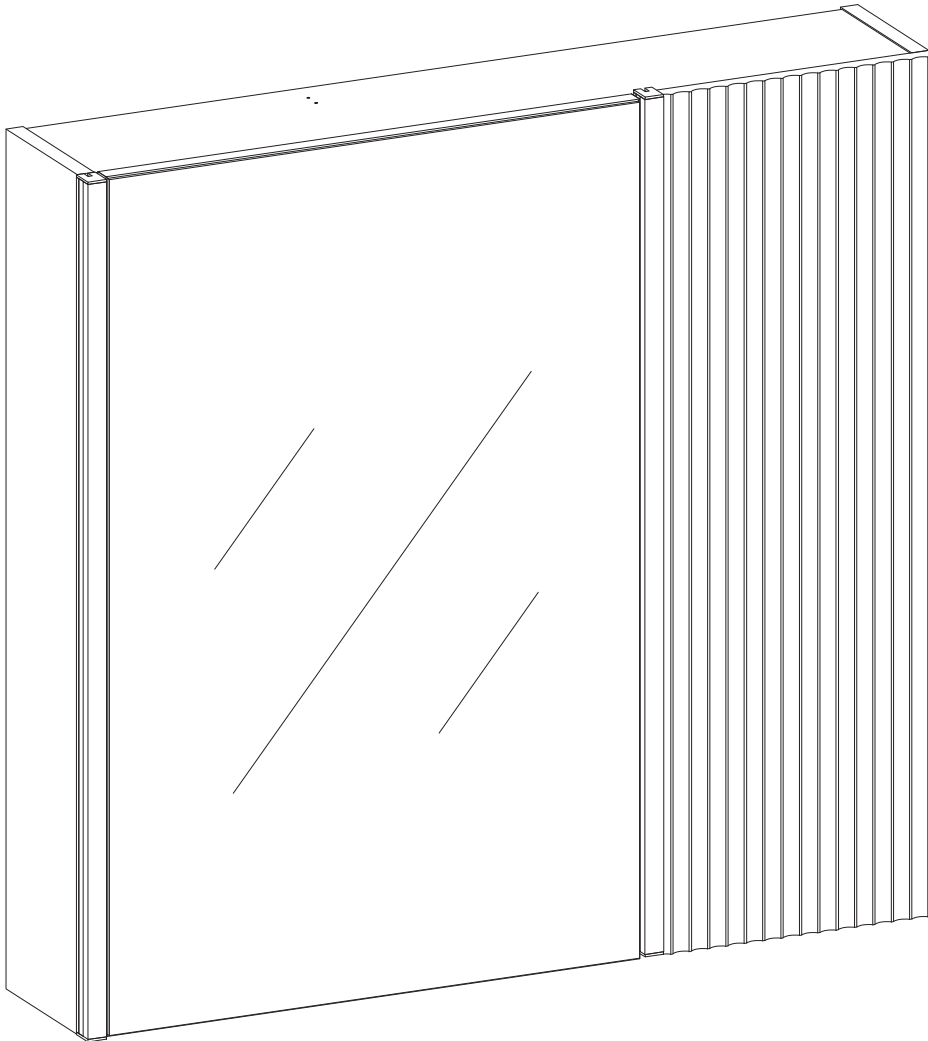

Please thoroughly review the installation instructions prior to commencing the installation process. Ensure that all tools are utilized appropriately and with due care. Should you encounter any questions regarding the product or the installation procedure, do not hesitate to contact us. We will make every effort to assist you in resolving any issues.

We aim to provide you with a distinctive experience.

Before You Start

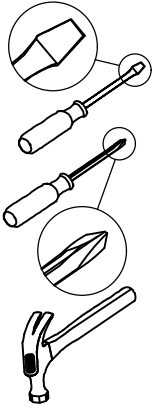 


- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification

 
Not actual size

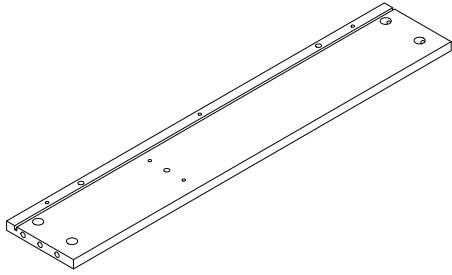


①
TOP
Qty:1

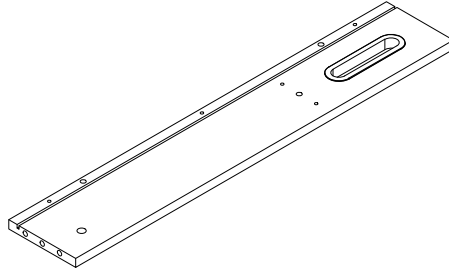 


②
BOTTOM
Qty:1

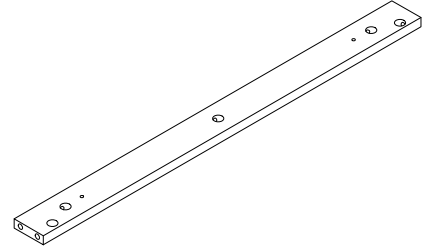 


③
RAIL
Qty:2

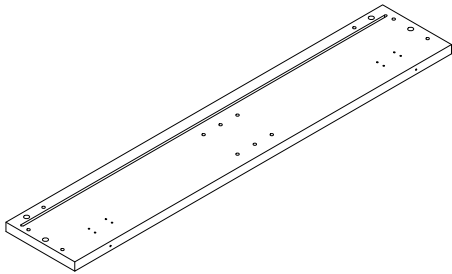 


④
LEFT SIDE PANEL
Qty:1

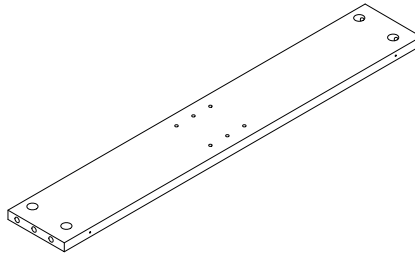 


⑤
MIDDLE SIDE PANEL
Qty:1

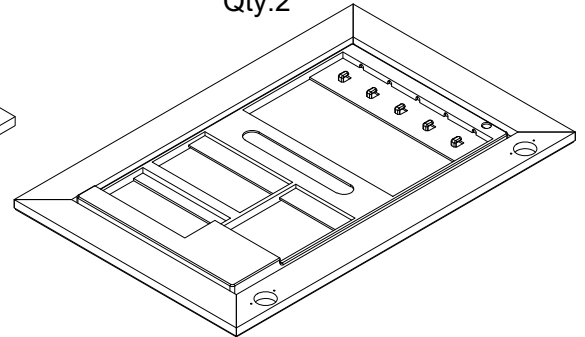 


⑥
MIRROR DOOR
Qty:1

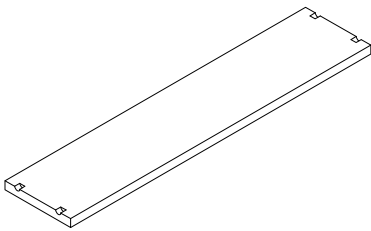 


⑦
LEFT ADJUSTABLE SHELF
Qty:1

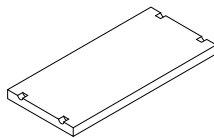 


⑧
RIGHT ADJUSTABLE SHELF
Qty:2

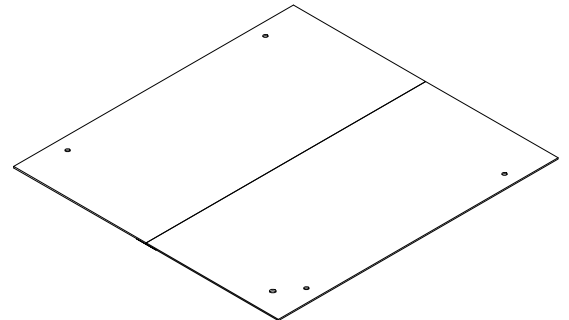 

⑨
BACK PANEL
Qty:1

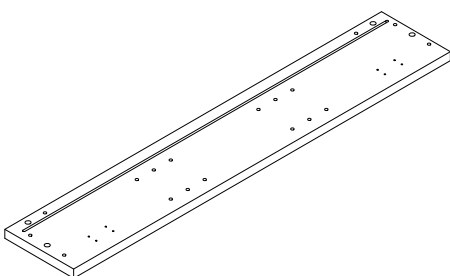 


⑩
RIGHT SIDE PANEL
Qty:1

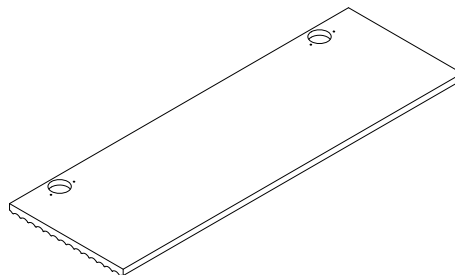 


⑪
DOOR
Qty:1

 
Part List

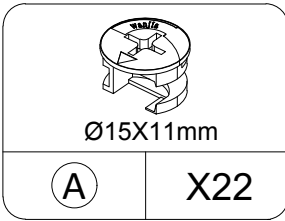


CAM LOCK
spare:2

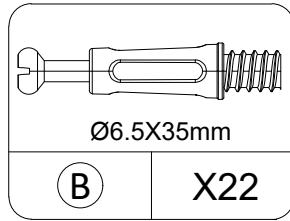 


CAM BOLT
spare:2

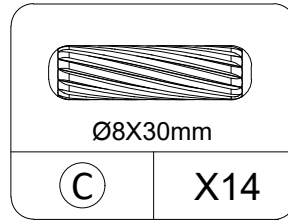 


WOODEN DOWEL
spare:2

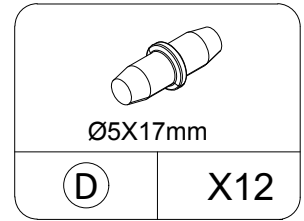 


SHELF SUPPORT
spare:2

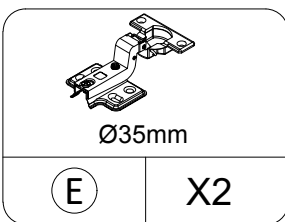 


HINGE

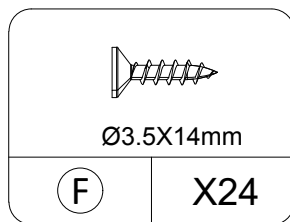 


SCREW
spare:2

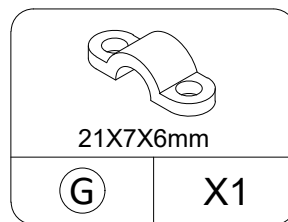 


LAMP BELT BUCKLE

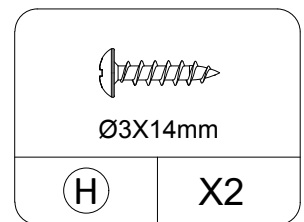 


SCREW
spare:1

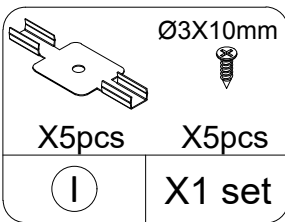 


LED STRIP IRON SHEET SCREWS

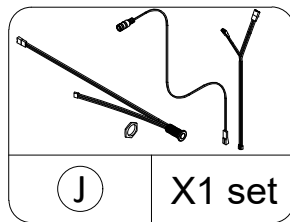 


ELECTRIC WIRE

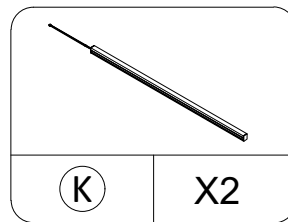 


LED STRIP TUBE

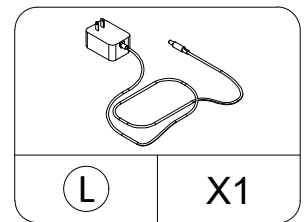 


LIGHT STRIP ADAPTER

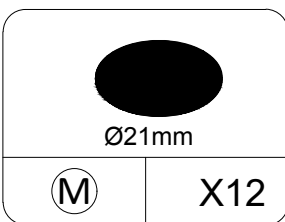 

PERFECT STICKERS
spare:2

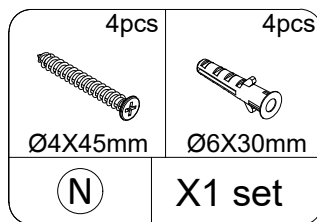 

ANTI-TIPPING HARDWARE

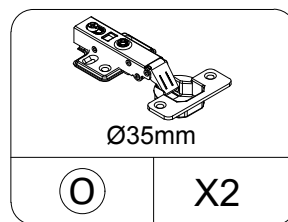 


HINGE

Part List


Cam Lock Fastening System

 Insert the cam bolt into the hole first, then insert the cam lock and lock it.




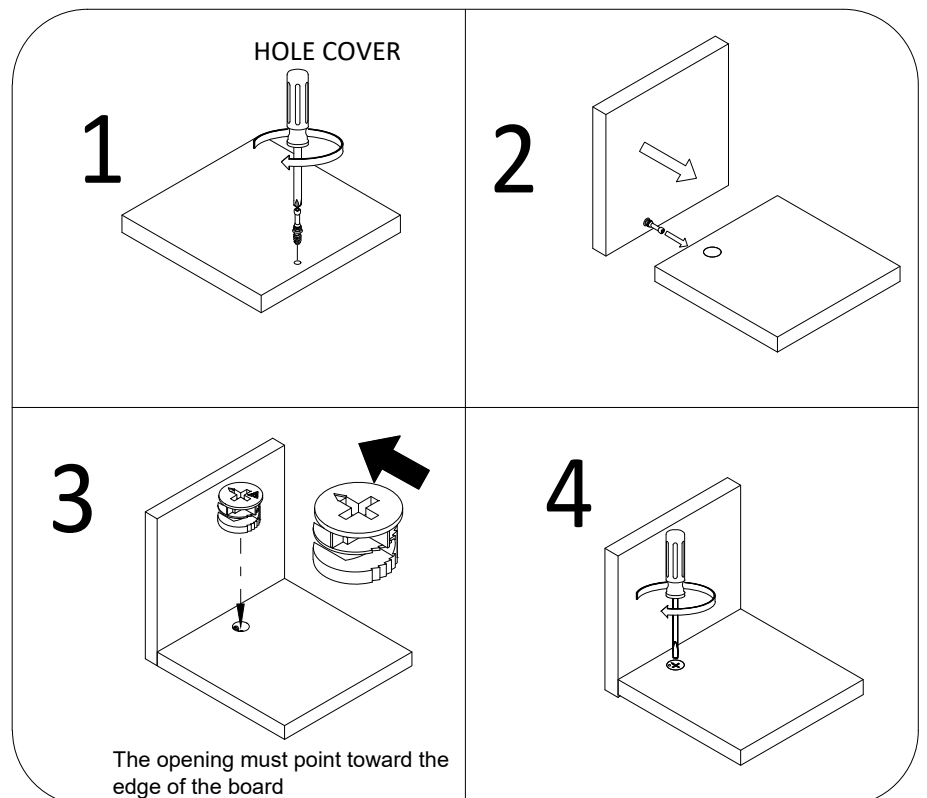


Board Identification



 
Not actual size

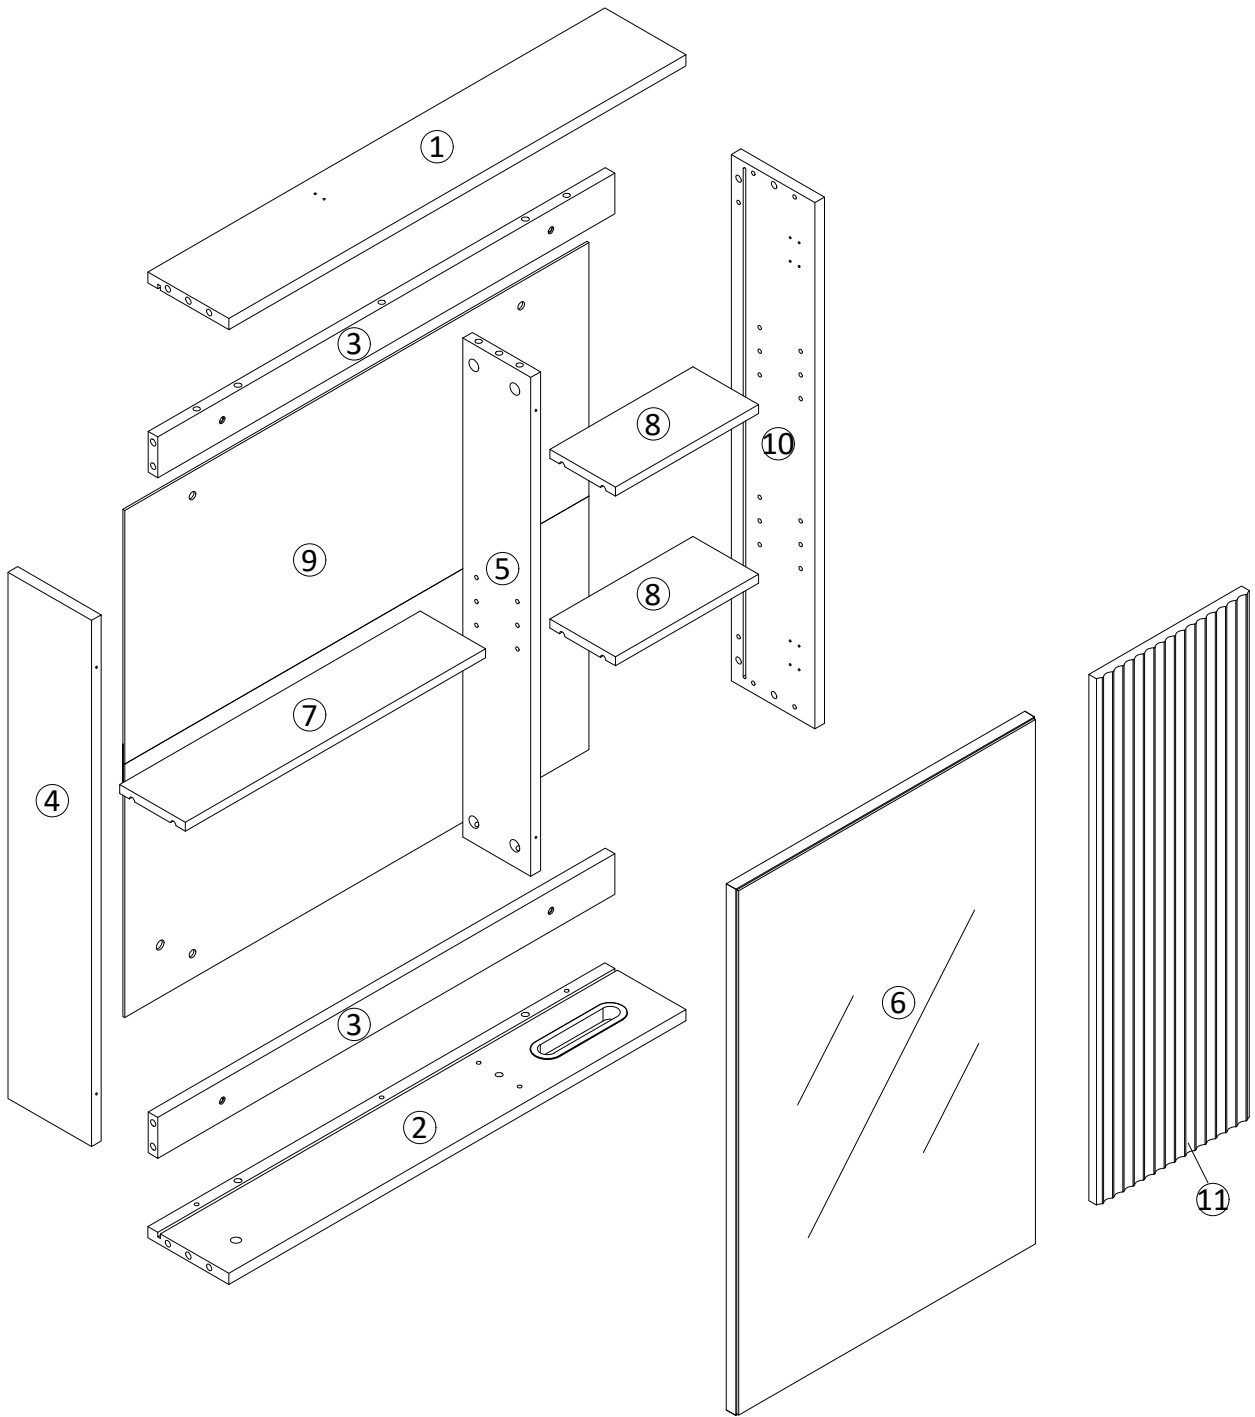

    
STEP 1

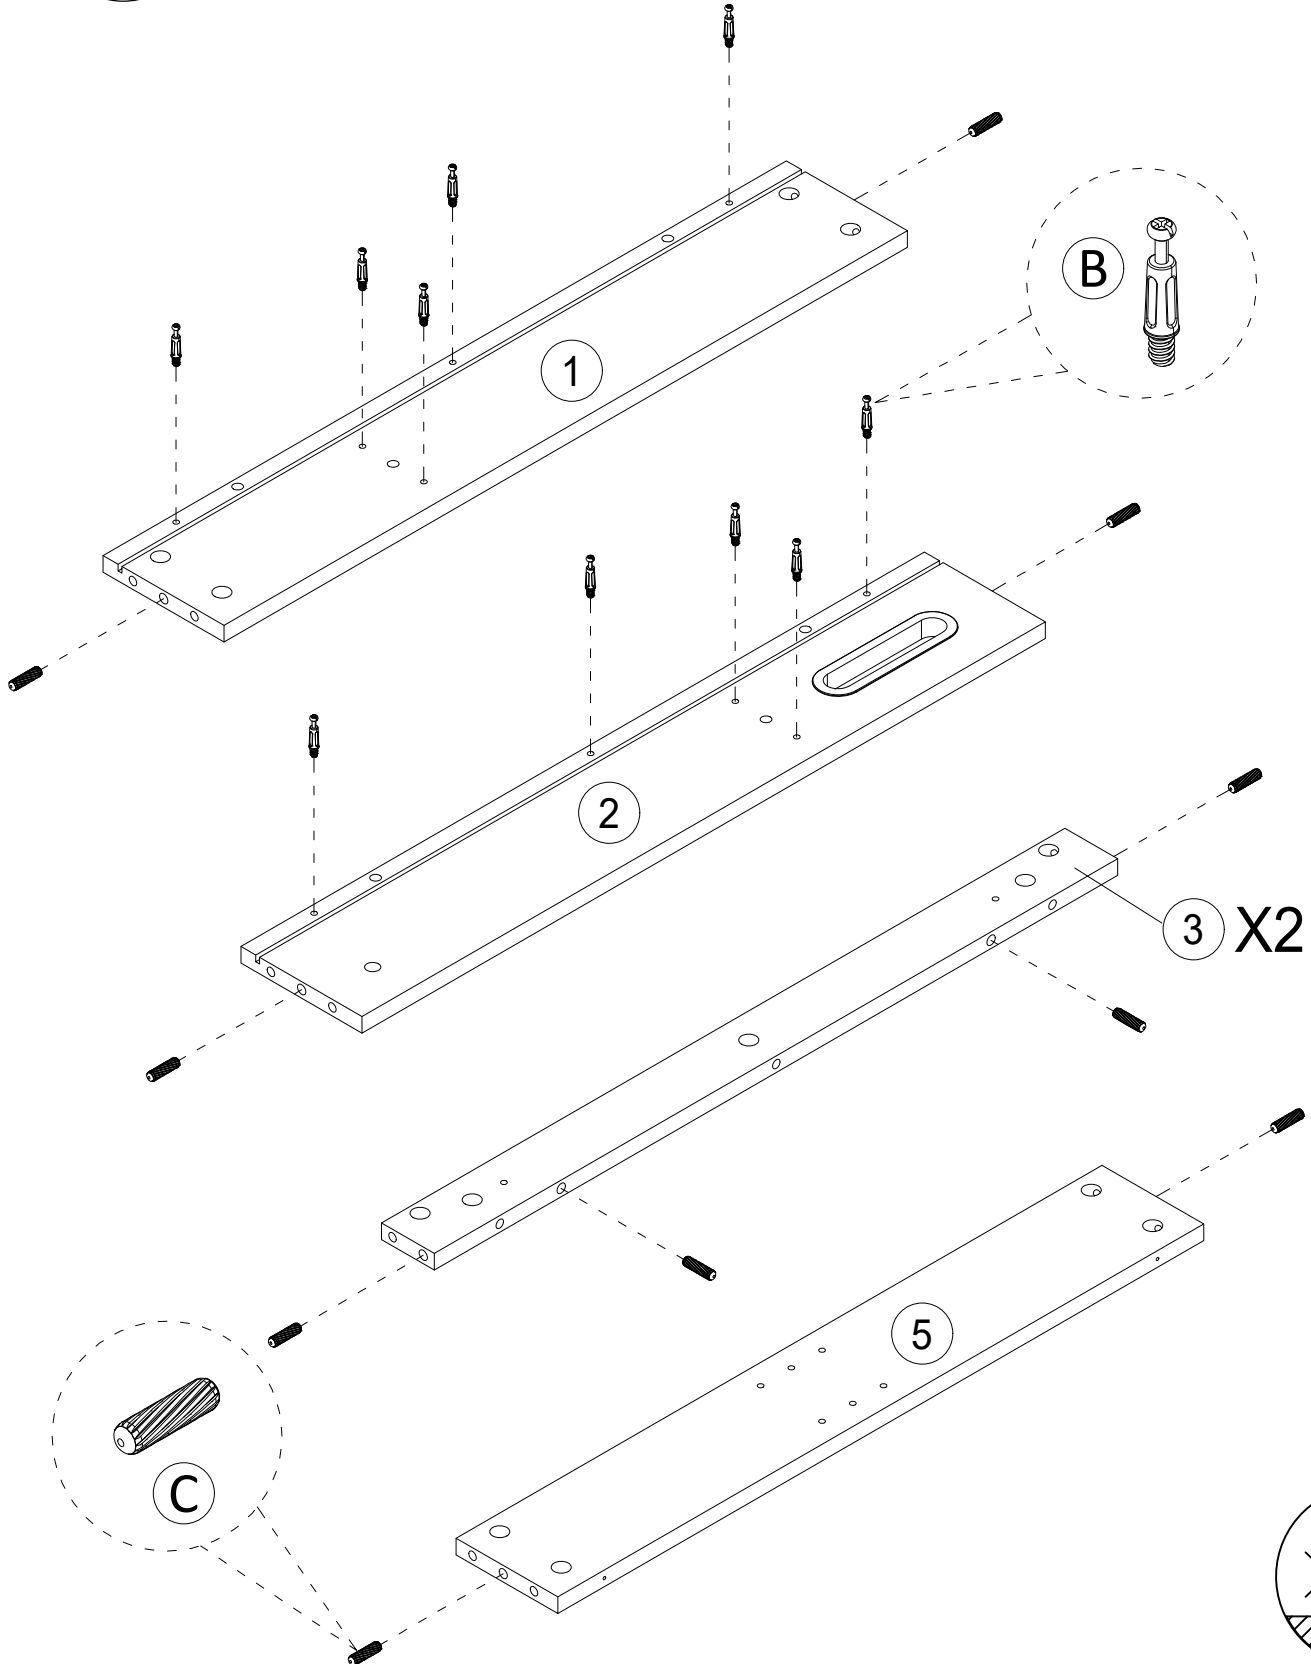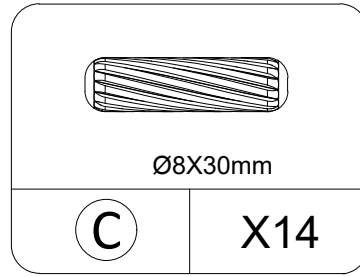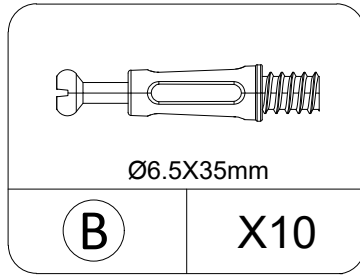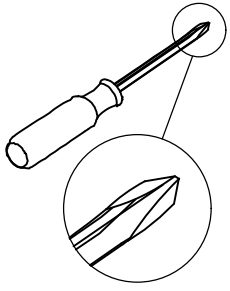

   STEP 2

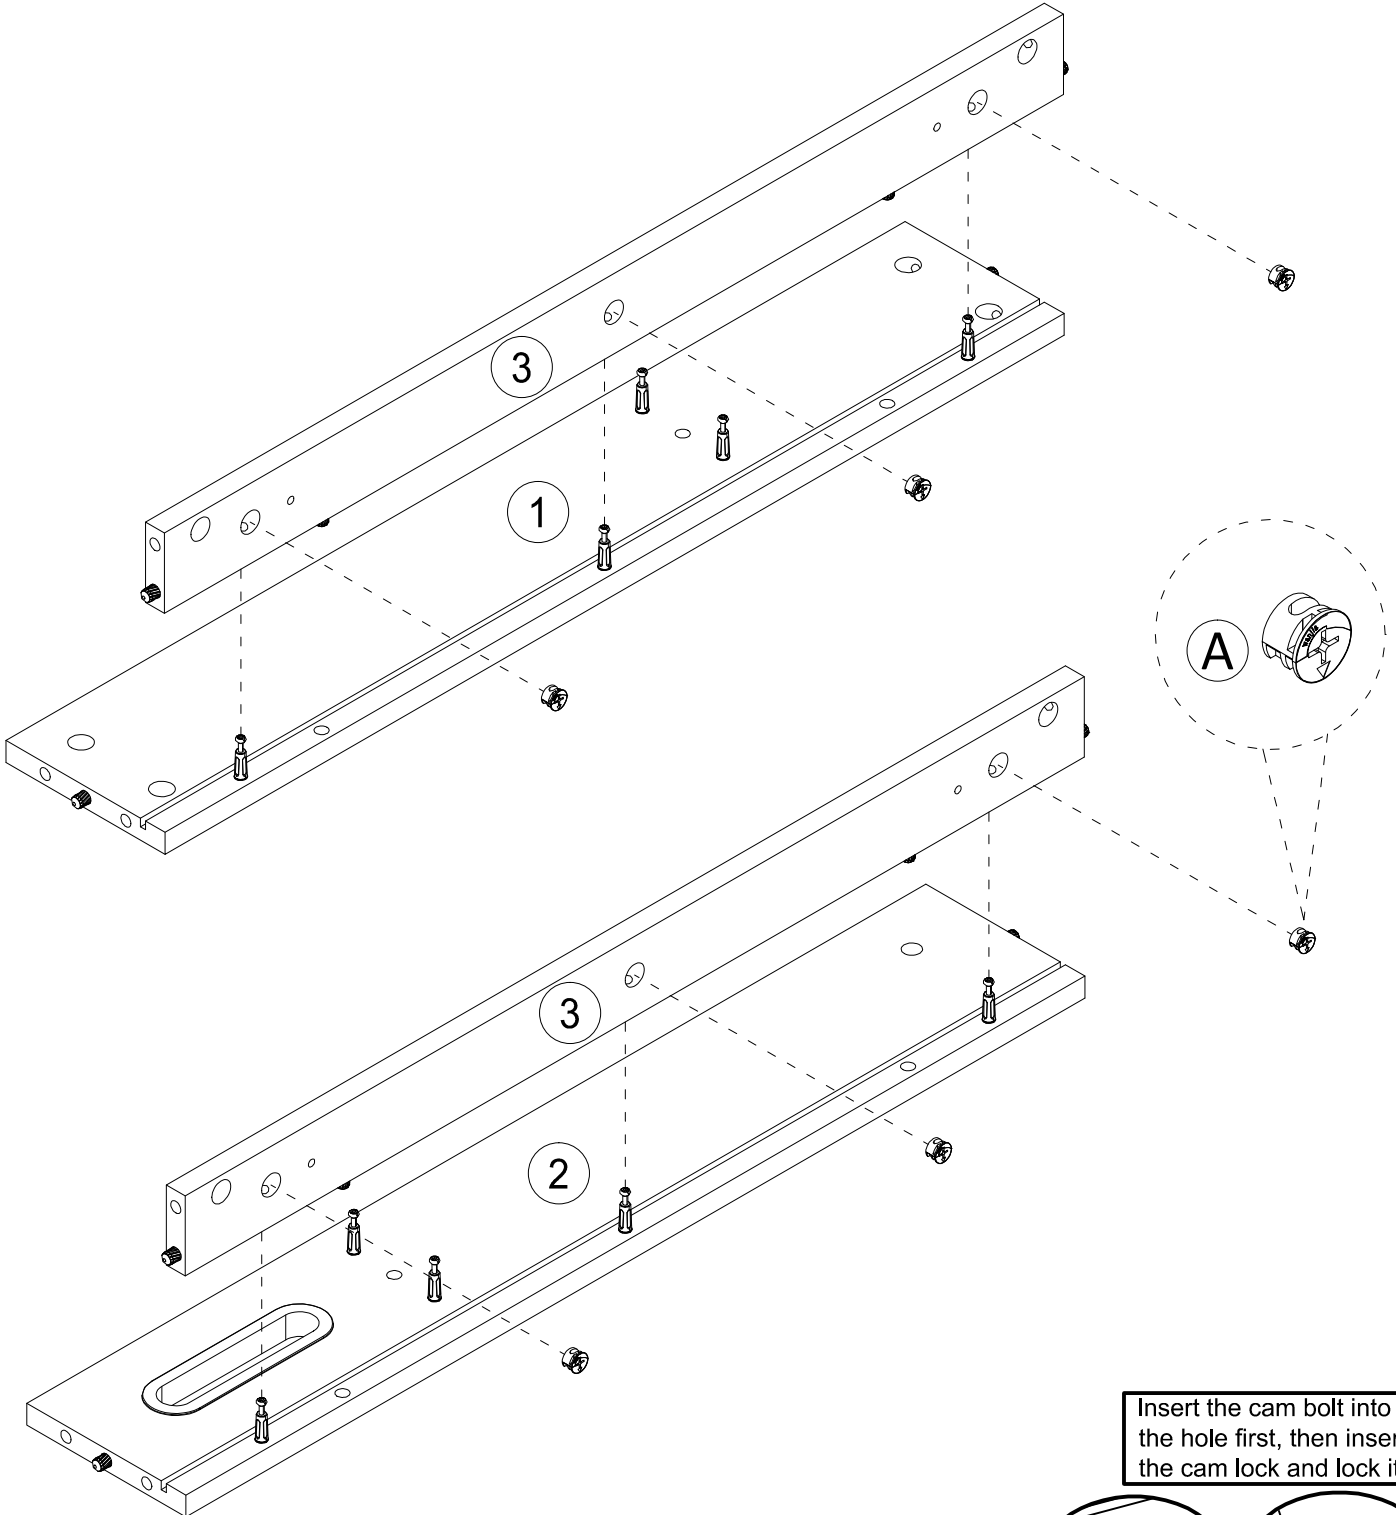
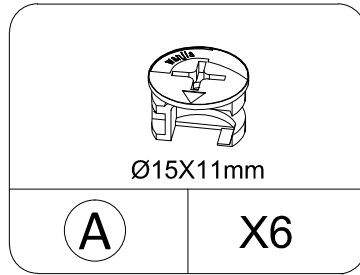
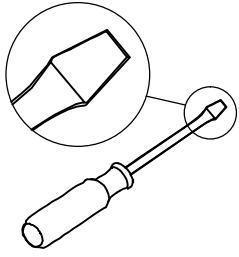


 Insert the cam bolt into the hole first, then insert the cam lock and lock it.

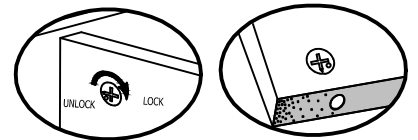


Proper orientation of CAM LOCK

   STEP 3


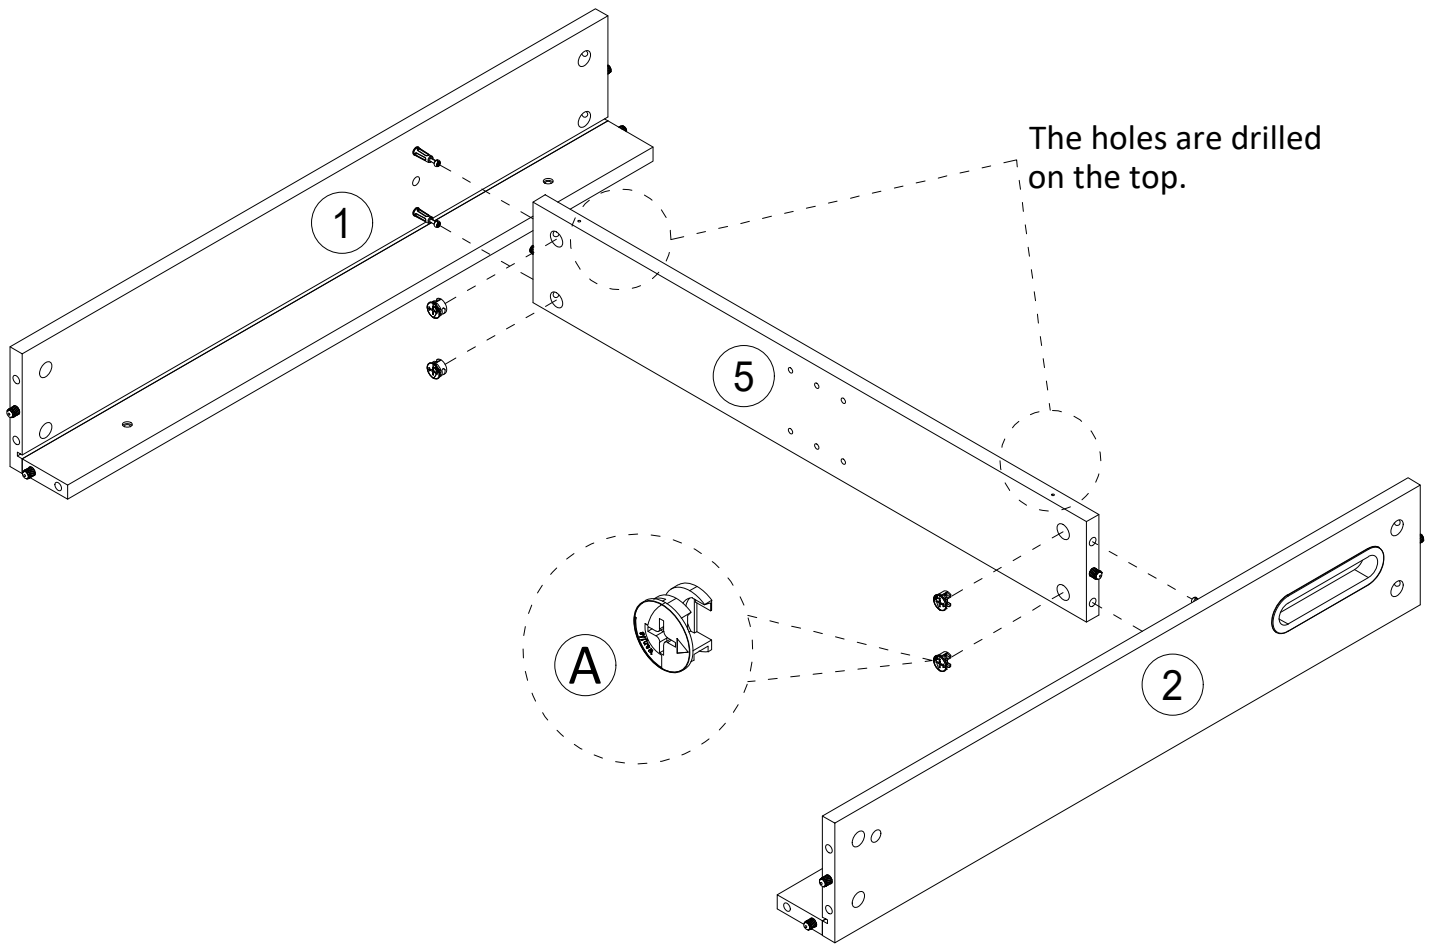
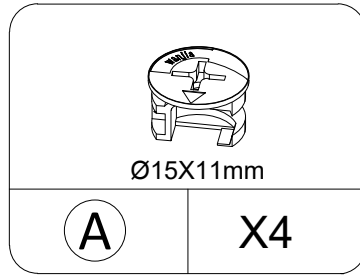
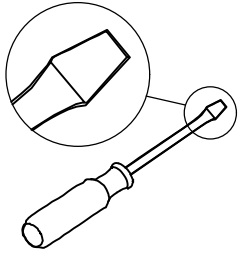


 Insert the cam bolt into the hole first, then insert the cam lock and lock it.




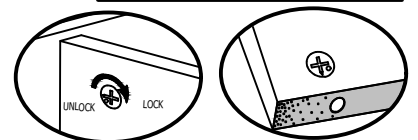


Proper orientation of CAM LOCK

    
STEP 4

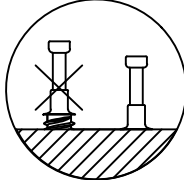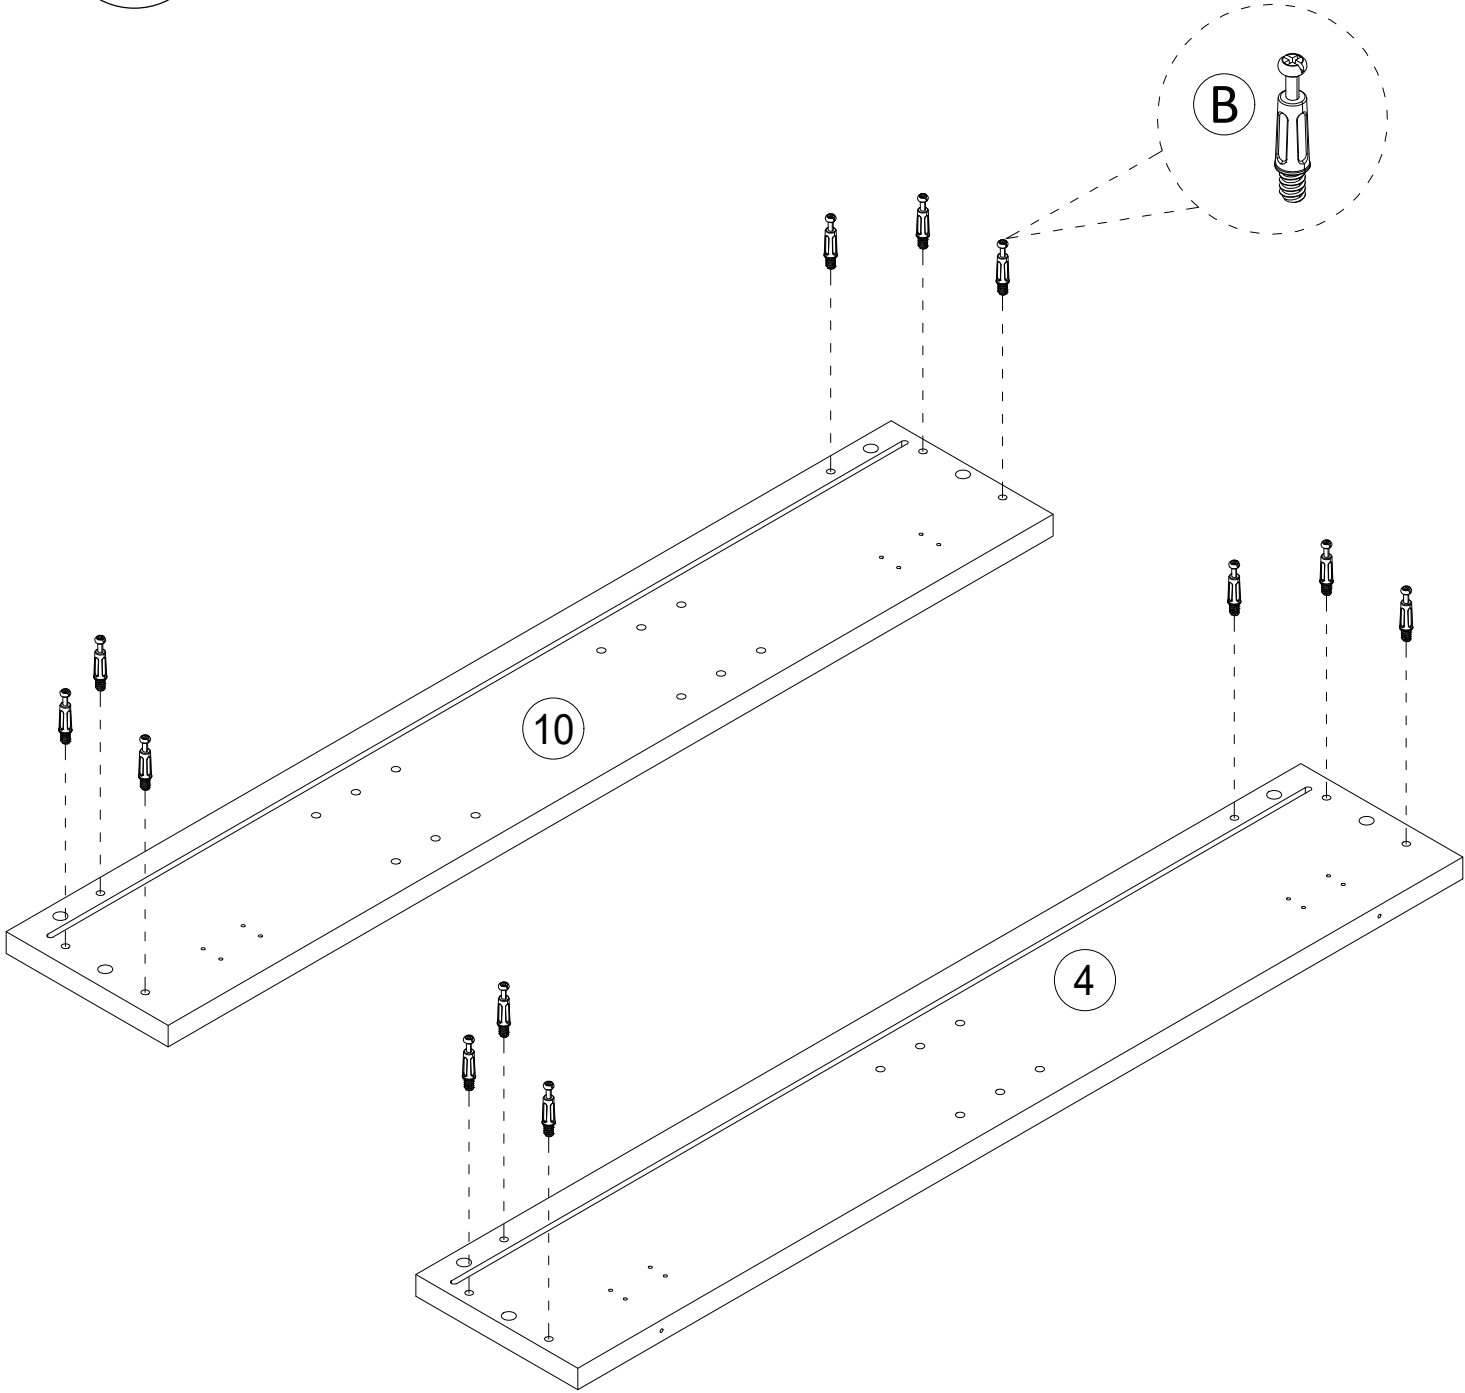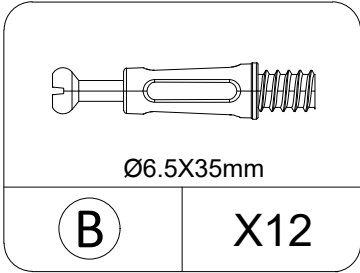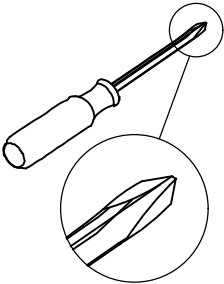

    STEP5

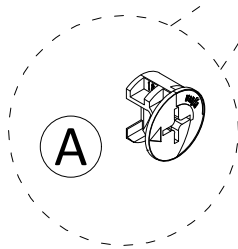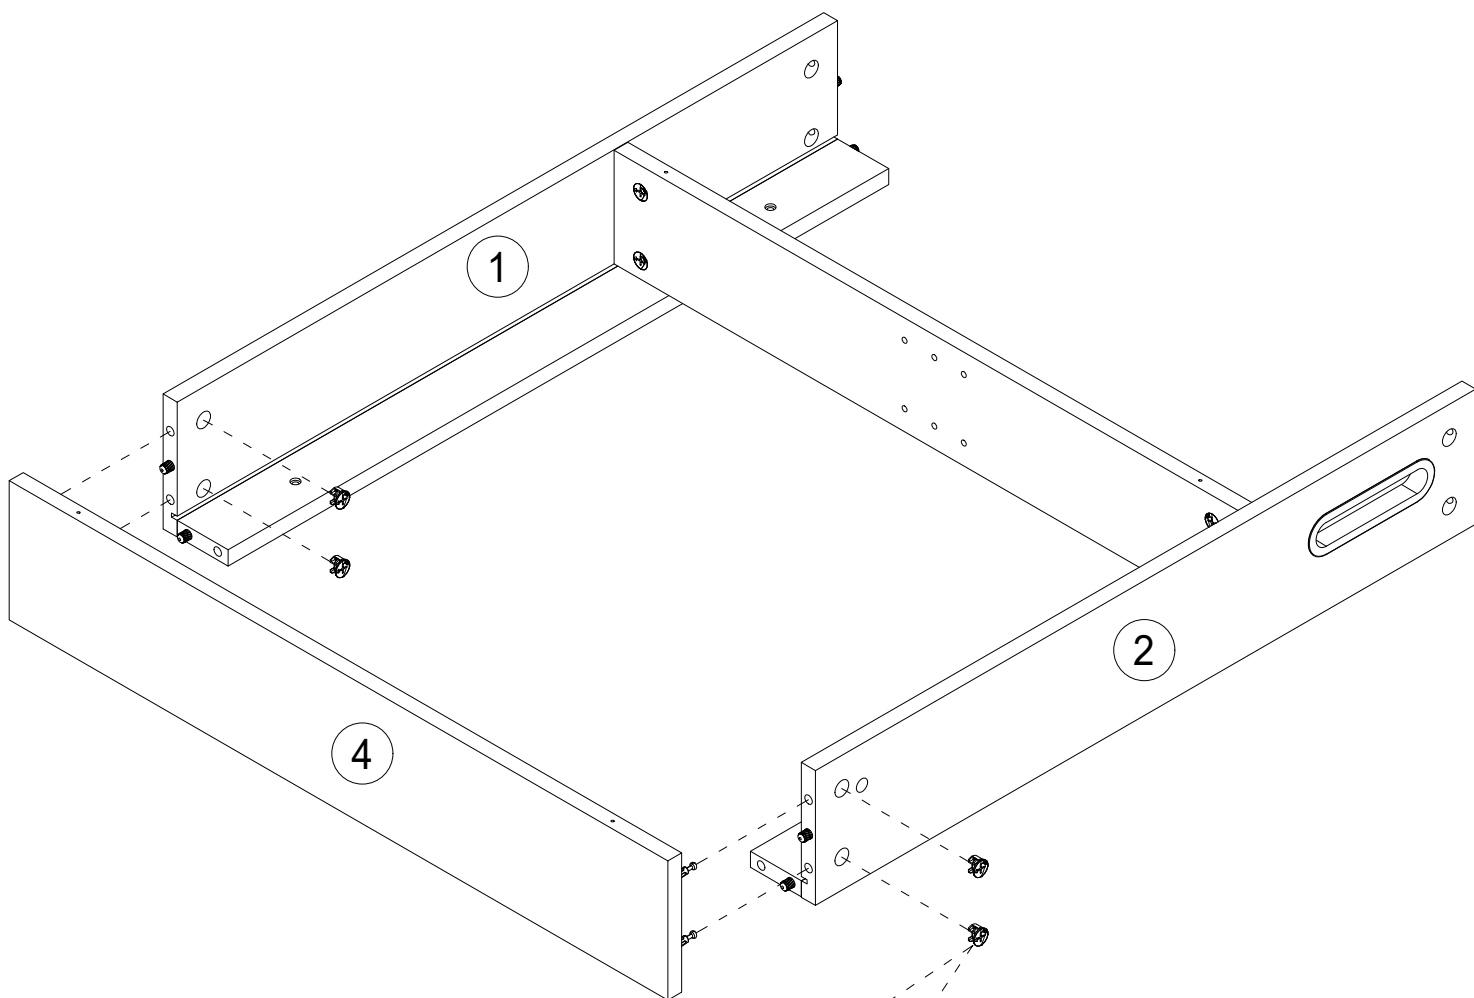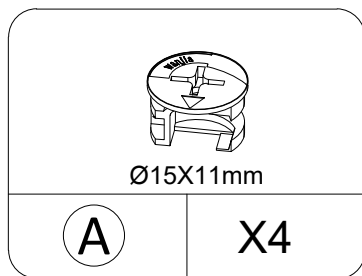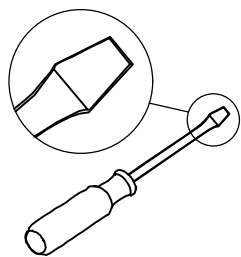


 Insert the cam bolt into the hole first, then insert the cam lock and lock it.



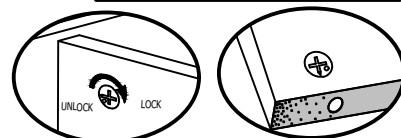


Proper orientation of CAM LOCK

 
STEP 6

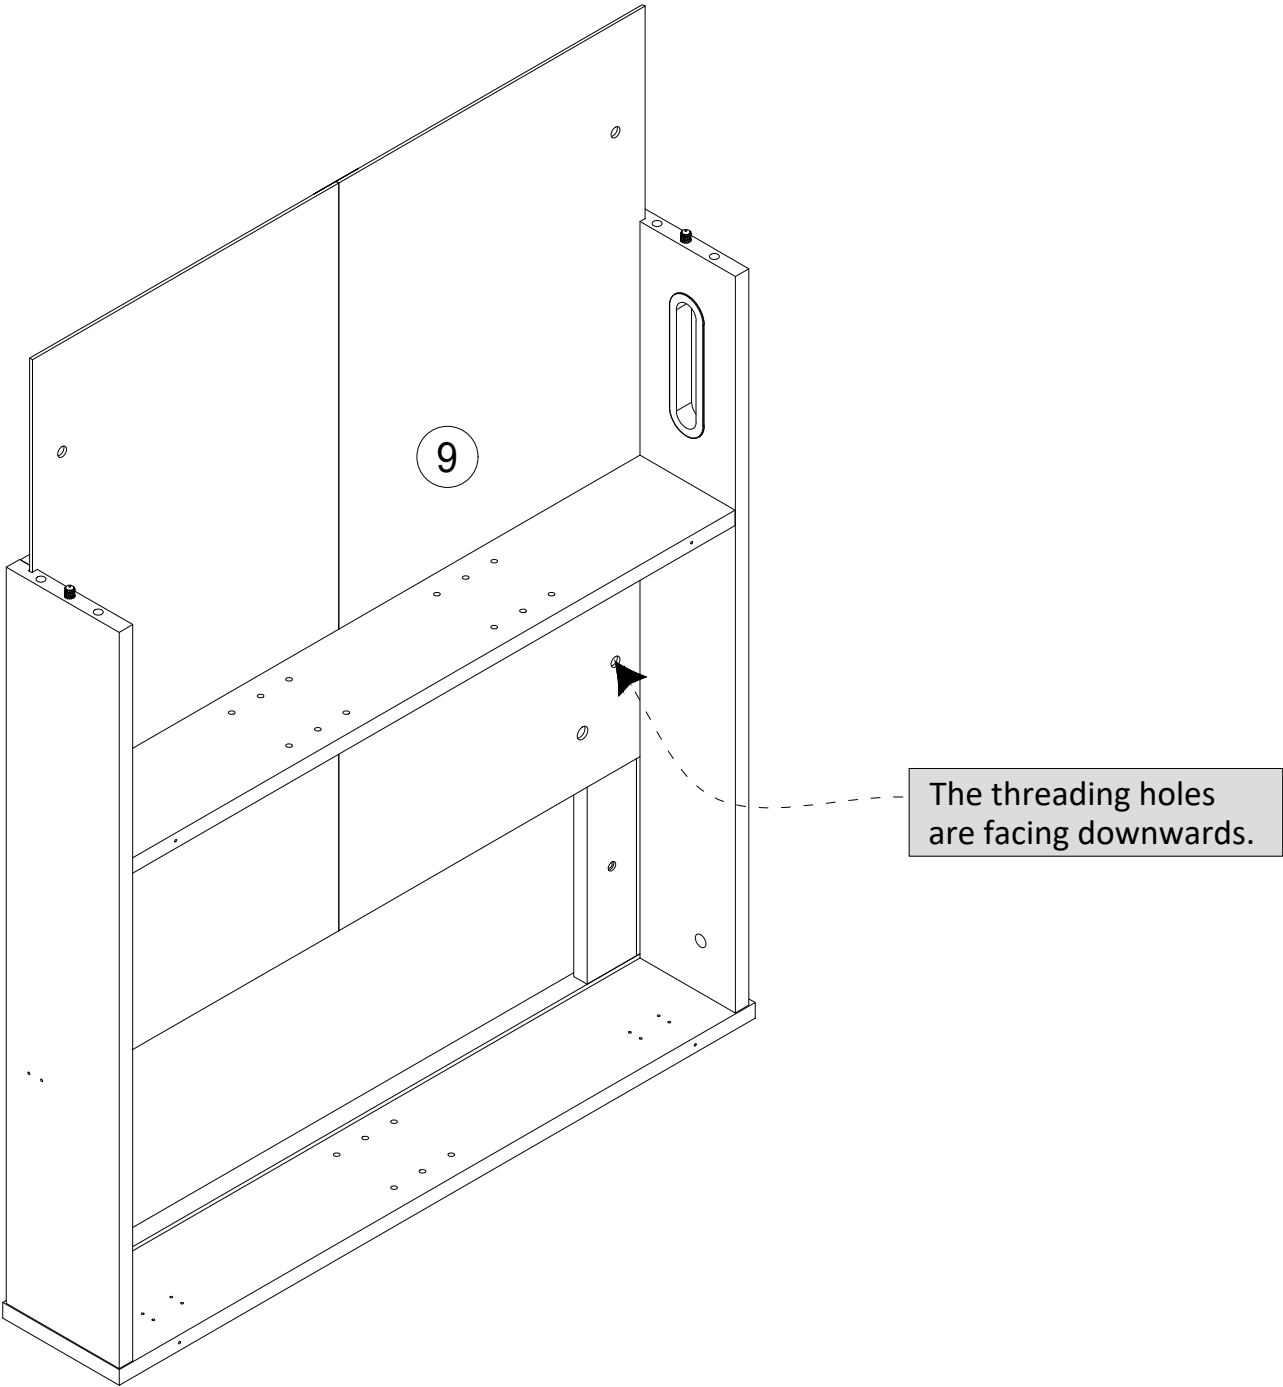


 
 
 
STEP 7

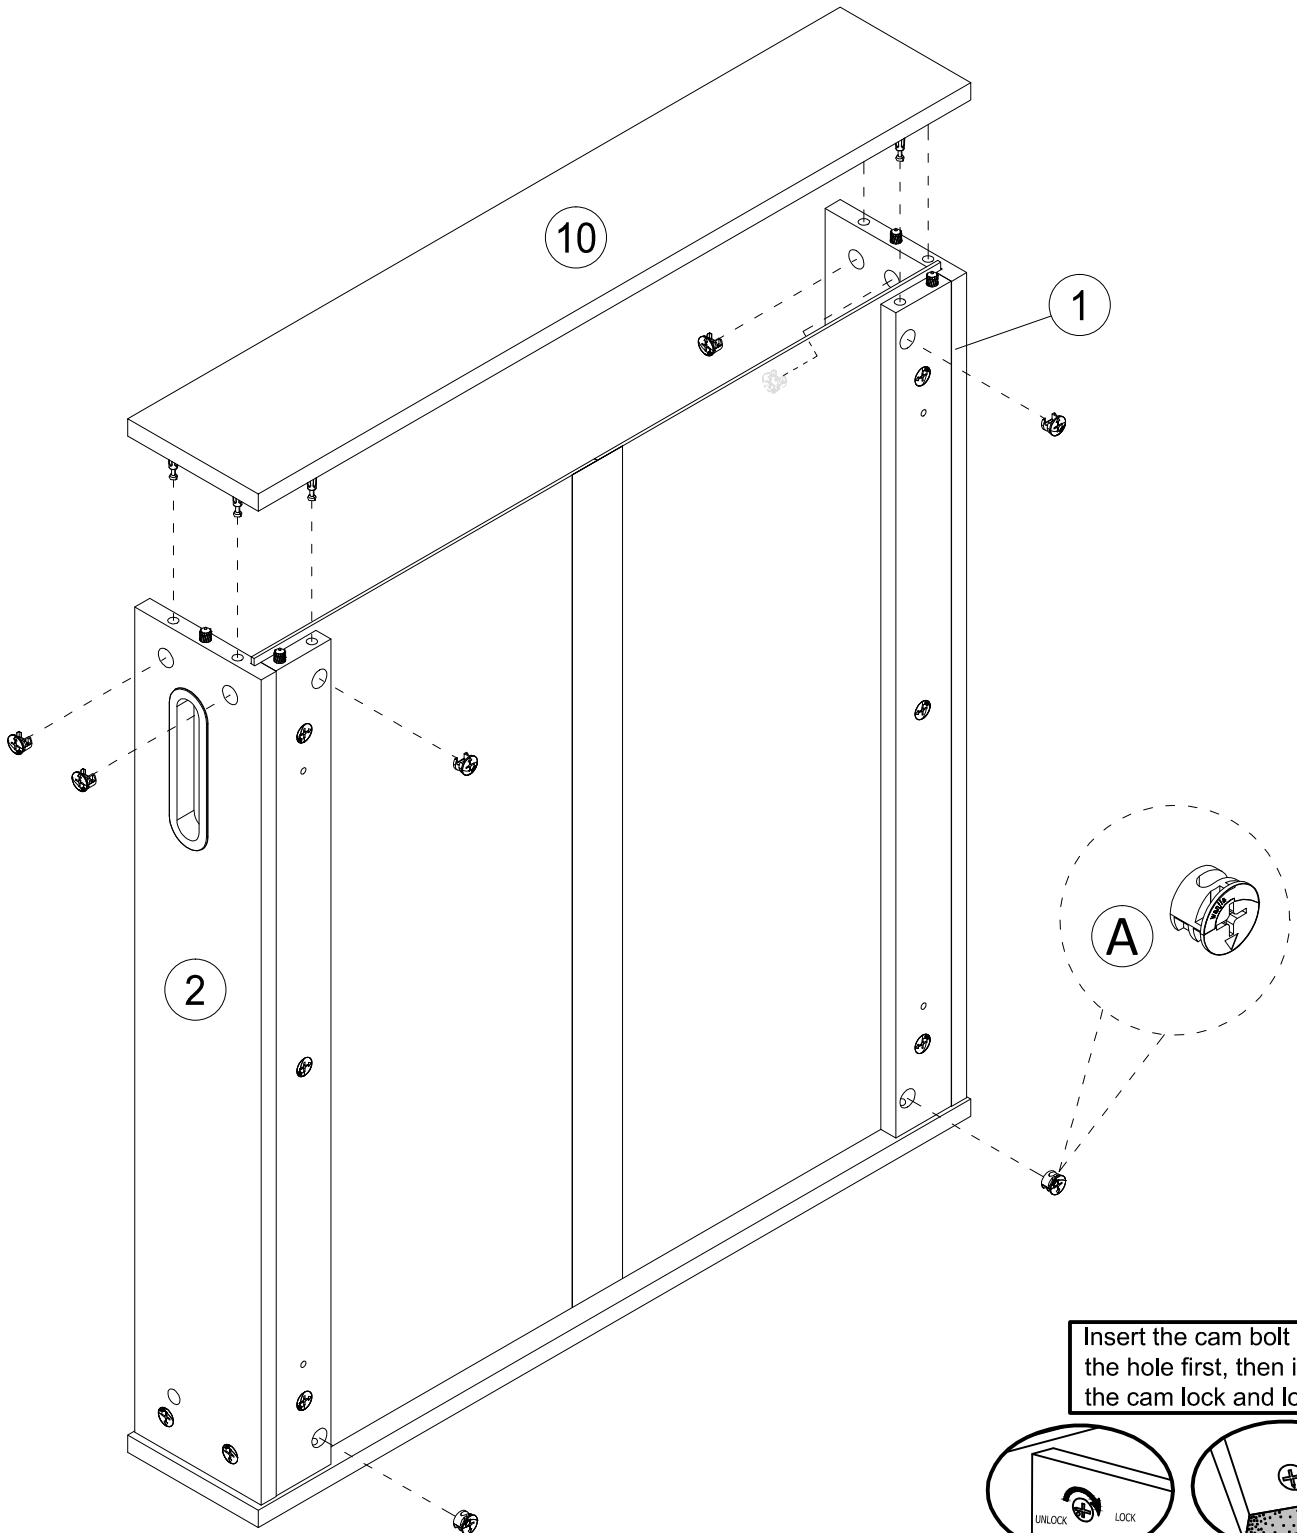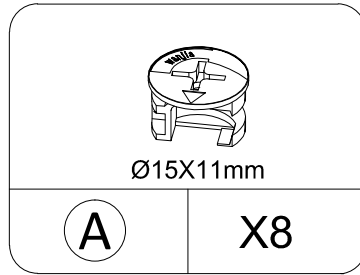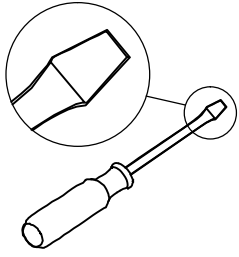

 
Insert the cam bolt into the hole first, then insert the cam lock and lock it.

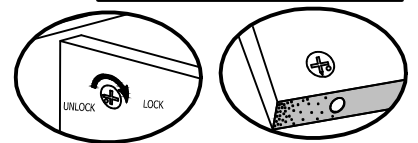

    
STEP 8

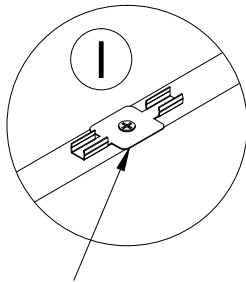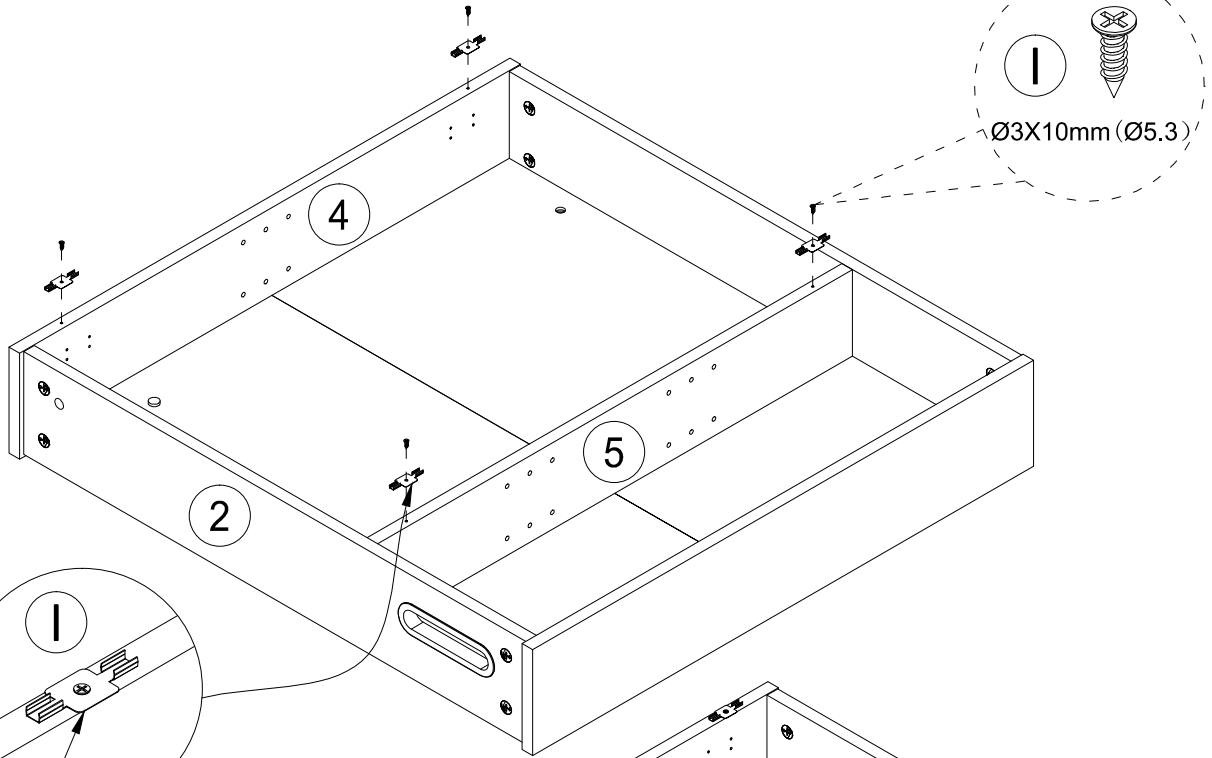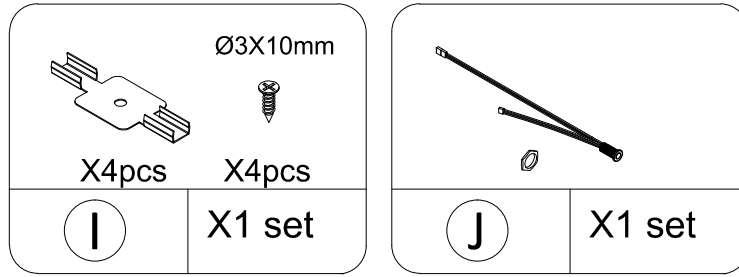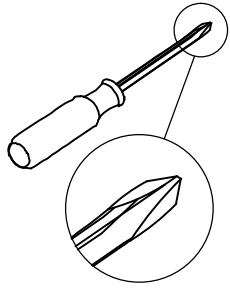

 The edge of the iron arrowhead is parallel to the board.

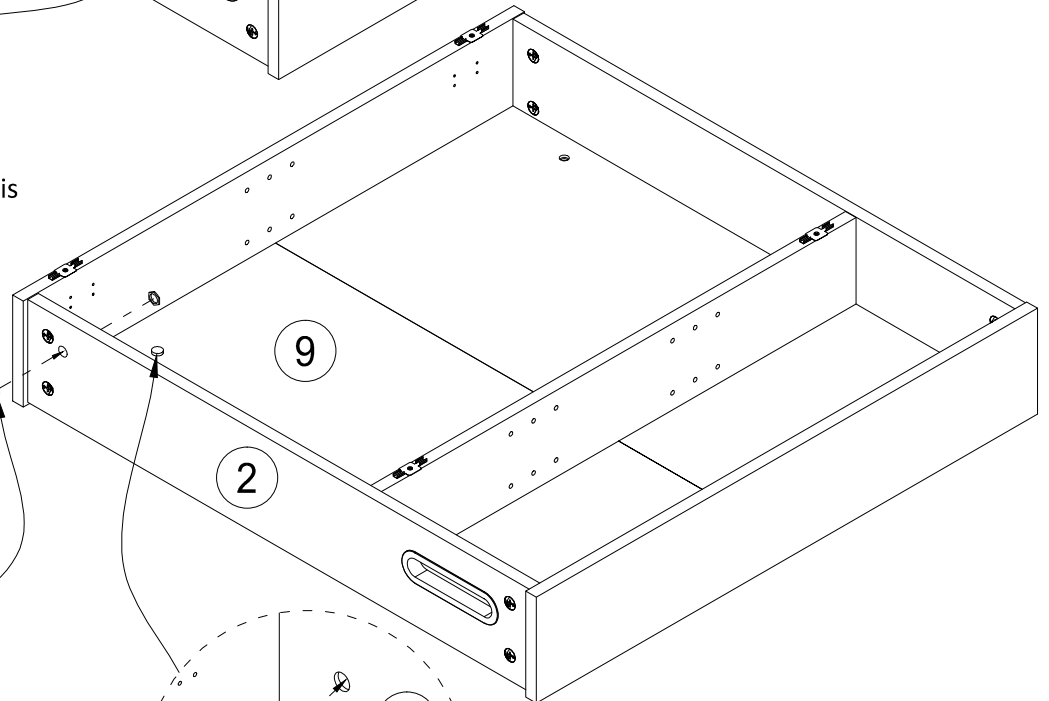


 STEP 1

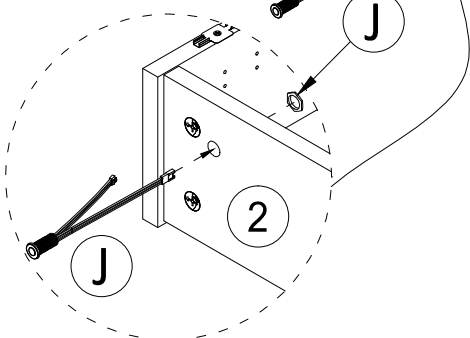




First, unscrew the nut counterclockwise. Then insert the switch into Panel No.2. Finally, tighten the nut.

 STEP 2

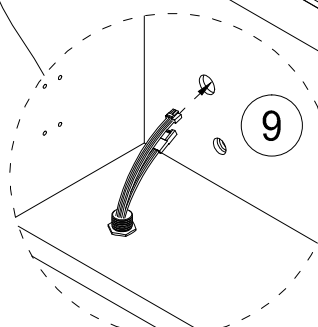






Two wire connectors extend out from the hole in the No. 9 backpanel.

   STEP 9

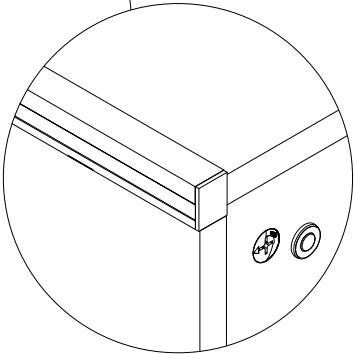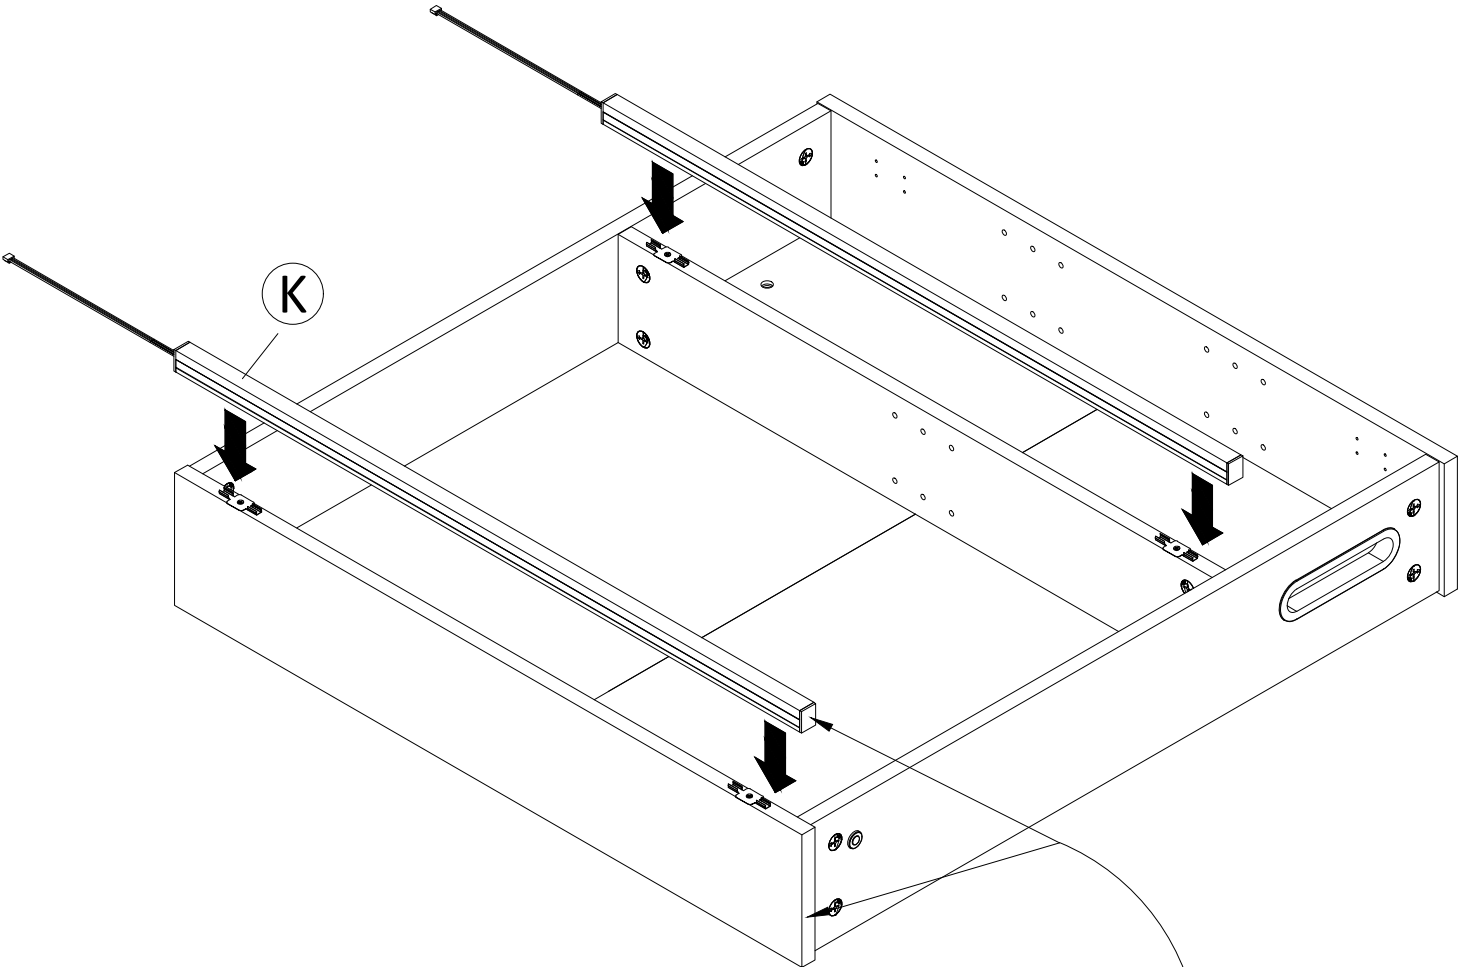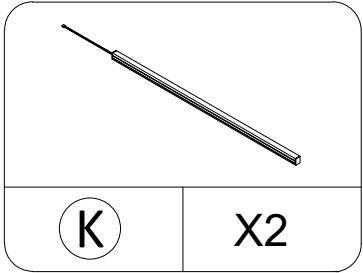


The bottom plate is flat. Press down with force.

     
STEP10

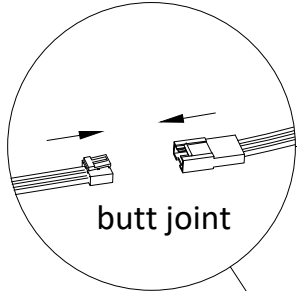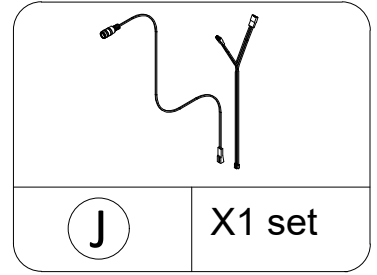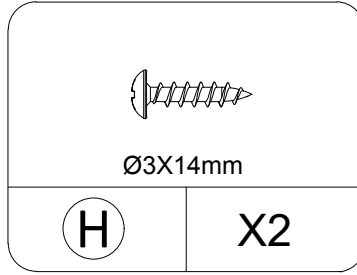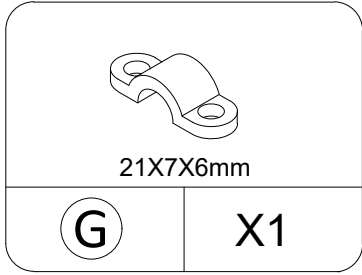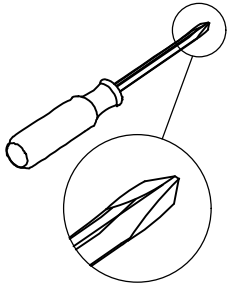

 
STEP2

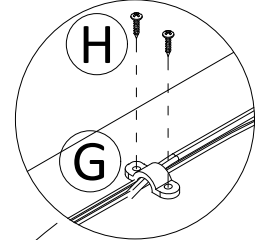


 
STEP3

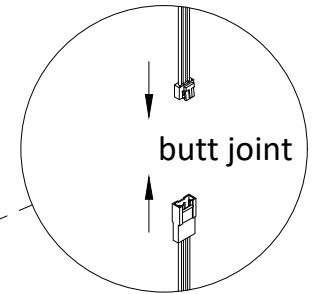

 
STEP1

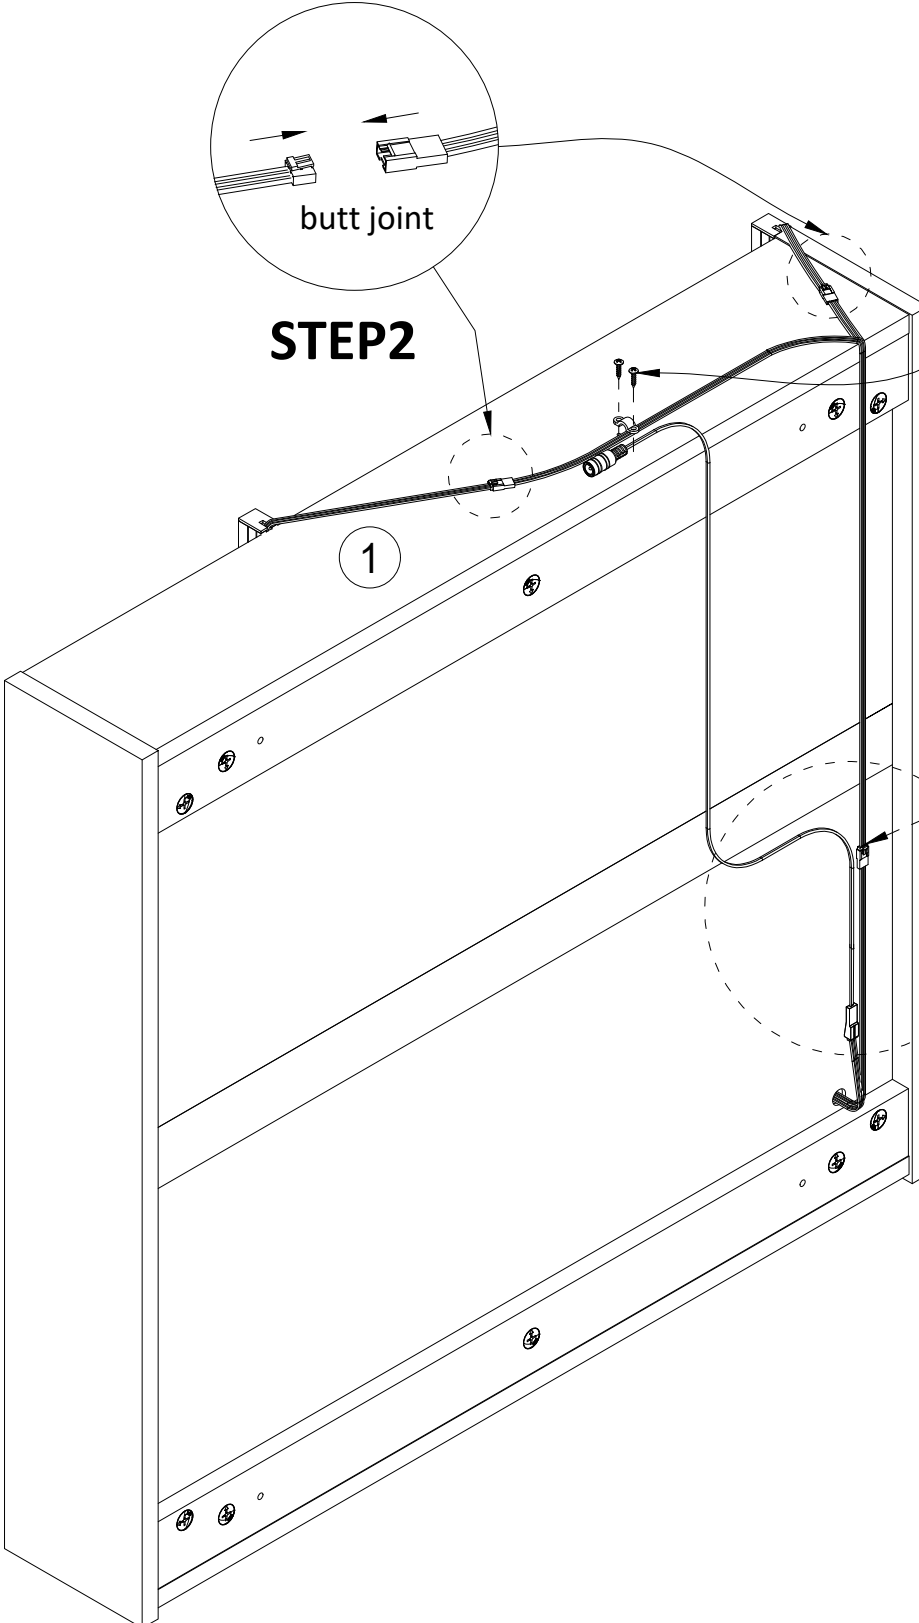

  STEP11(this step requires 2 people)

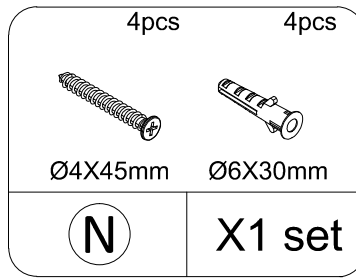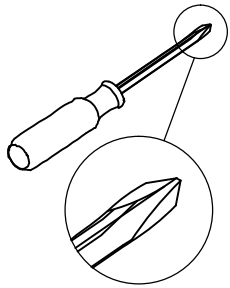


 1. Put the cabinet against the wall and mark the hole locked against the wall with a marker.

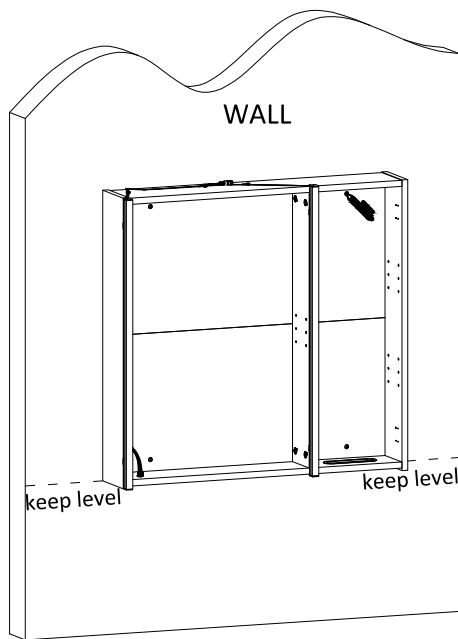


1

 2. Use an electric drill to drill 4 holes with a diameter of Ø 6 and a depth of 50mm at the marked location.

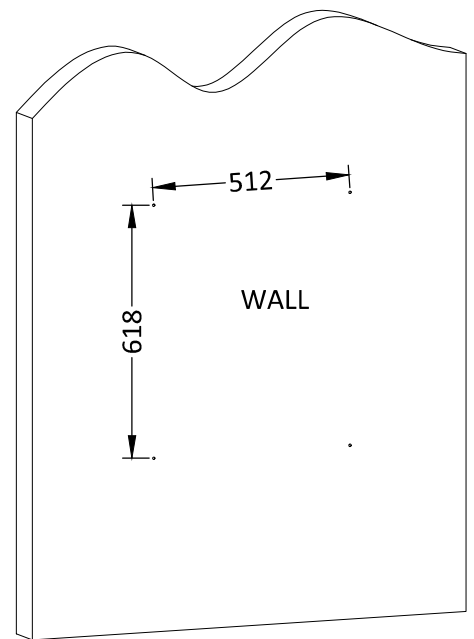



2

 3. Place anchors (N) into the hole.

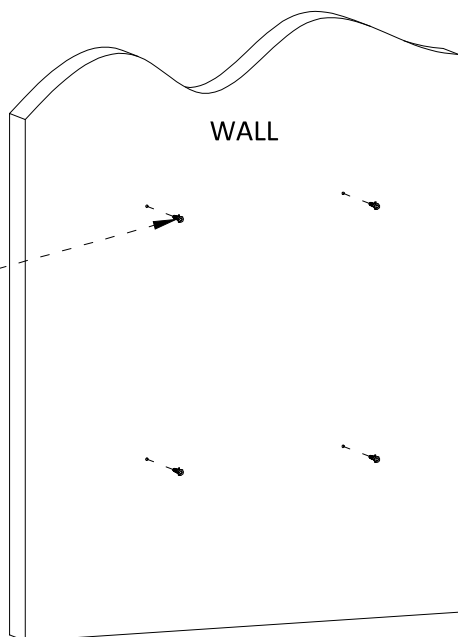




3

  4. Push the cabinet close to the wall, align it with the holes, and then tighten it with screws(N).

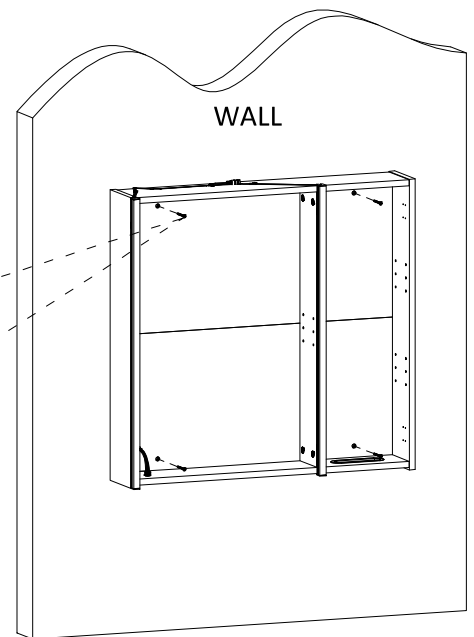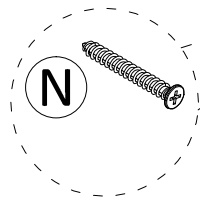






4

   STEP 12

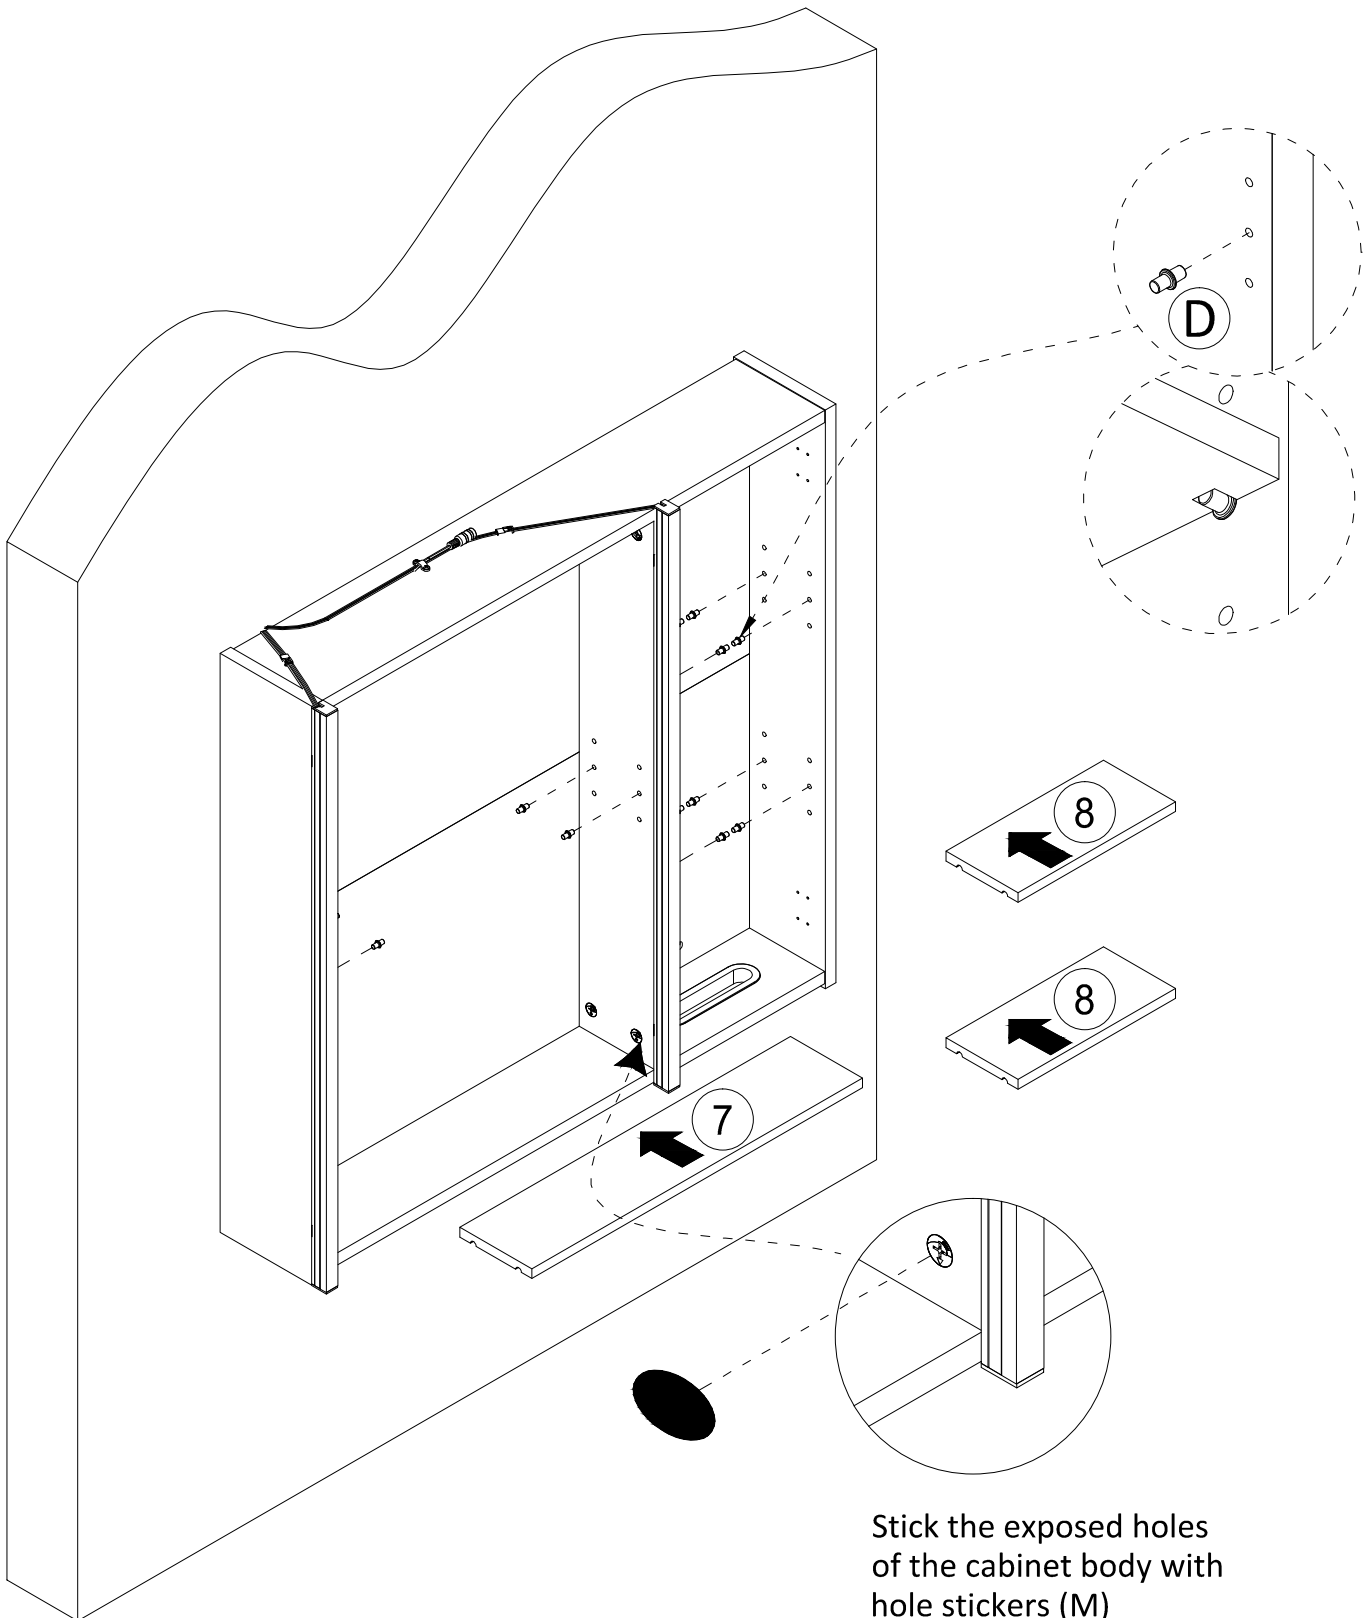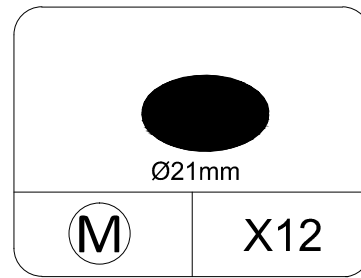
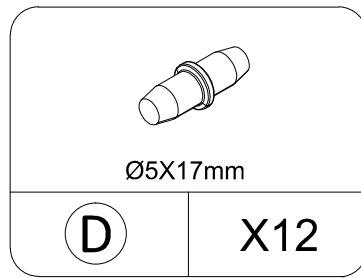


Stick the exposed holes of the cabinet body with hole stickers (M)

     
STEP 13

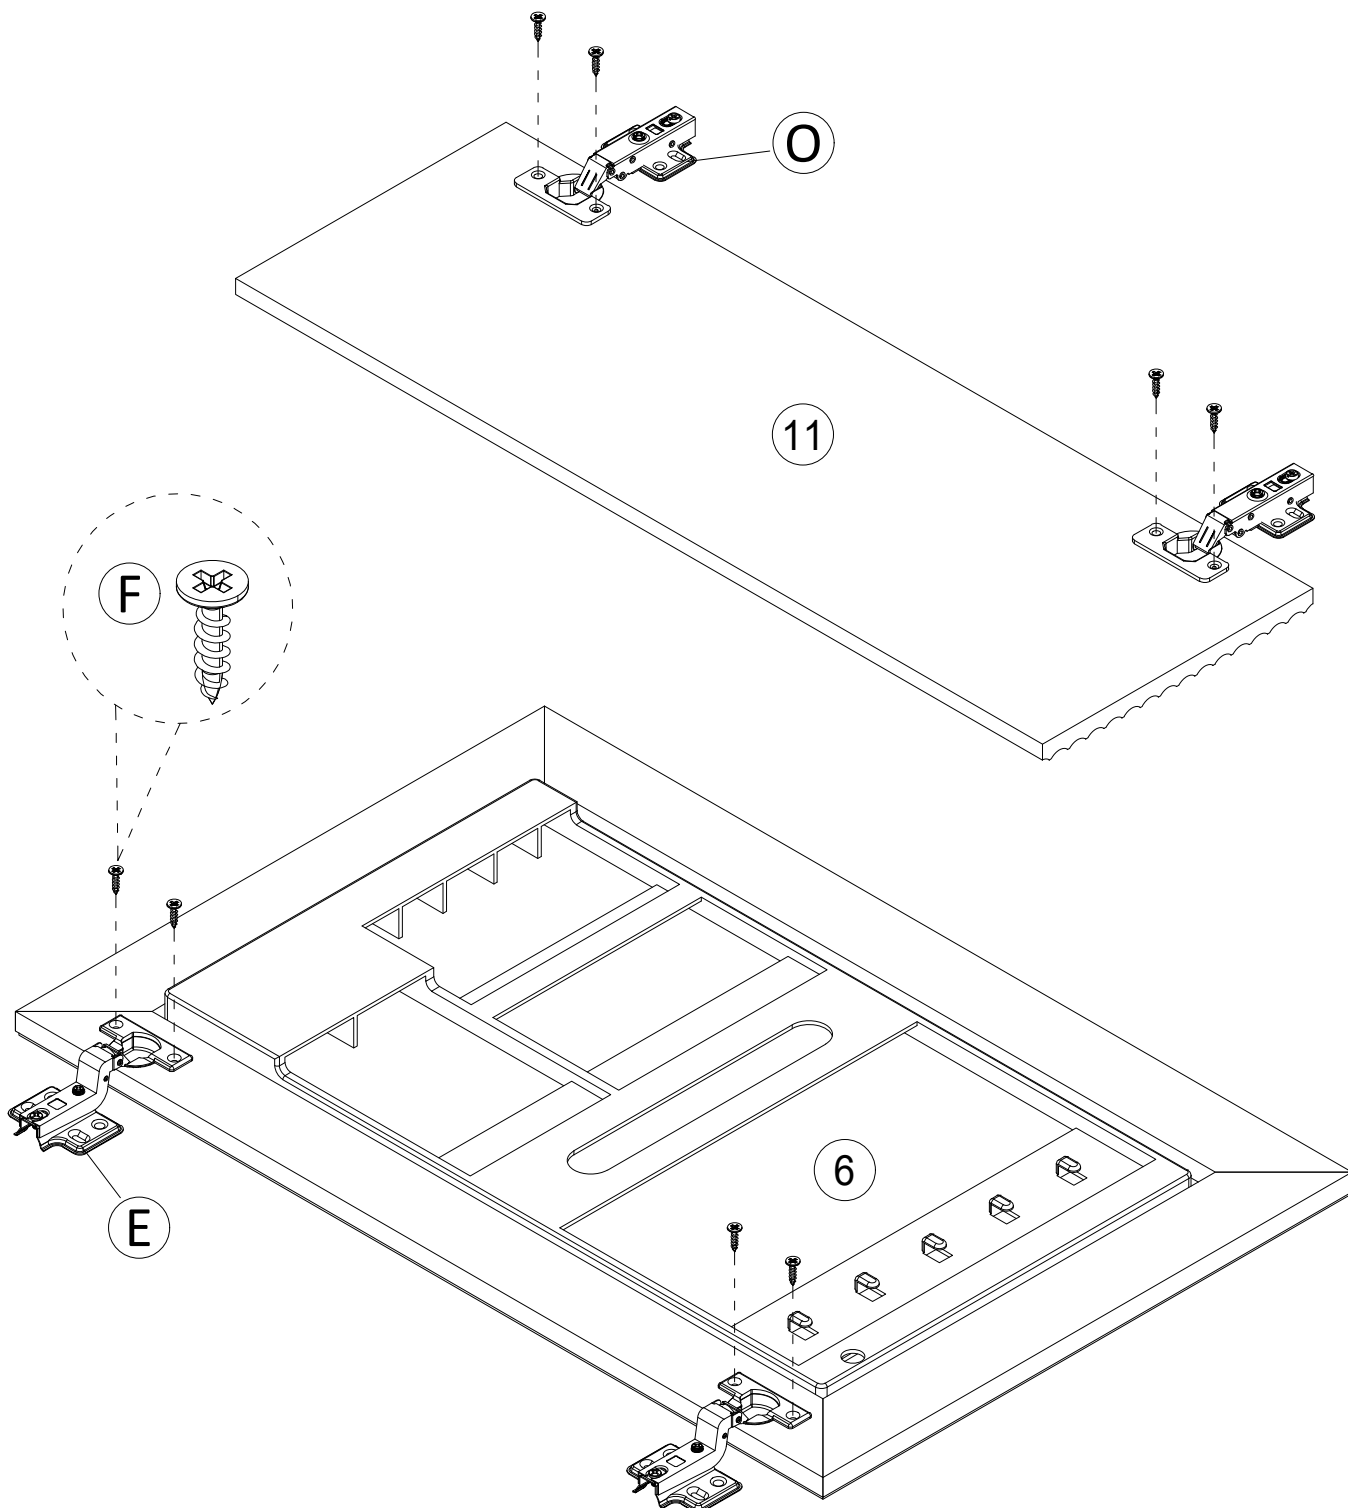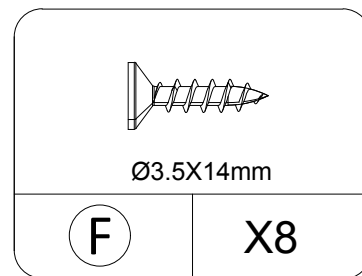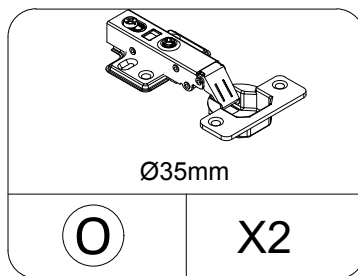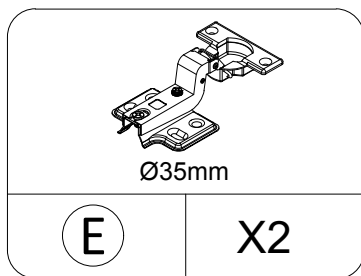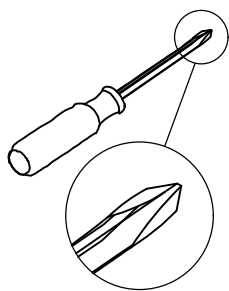

 
 
STEP14

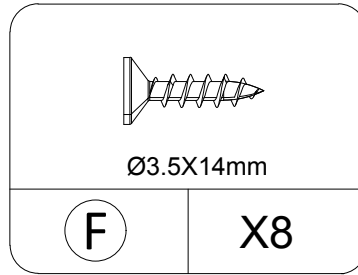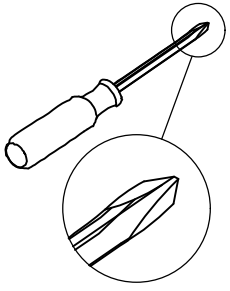


THIS STEP REQUIRES 2 PEOPLE

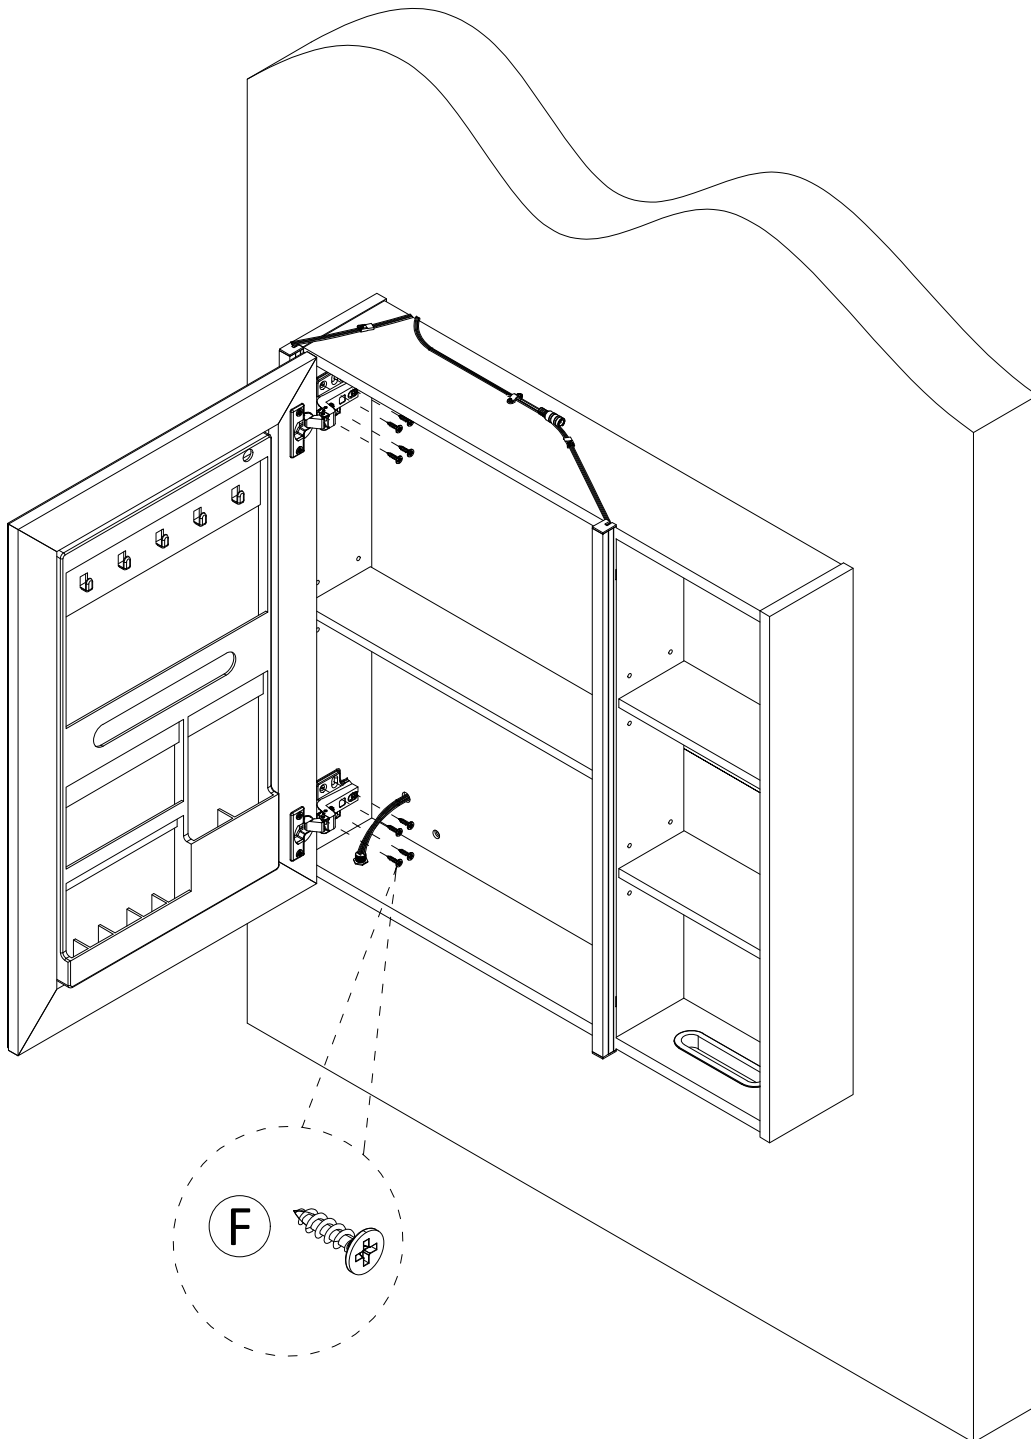 

 
 
STEP15

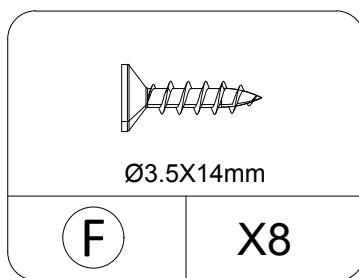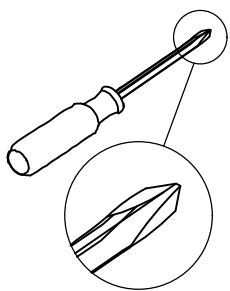


THIS STEP REQUIRES 2 PEOPLE

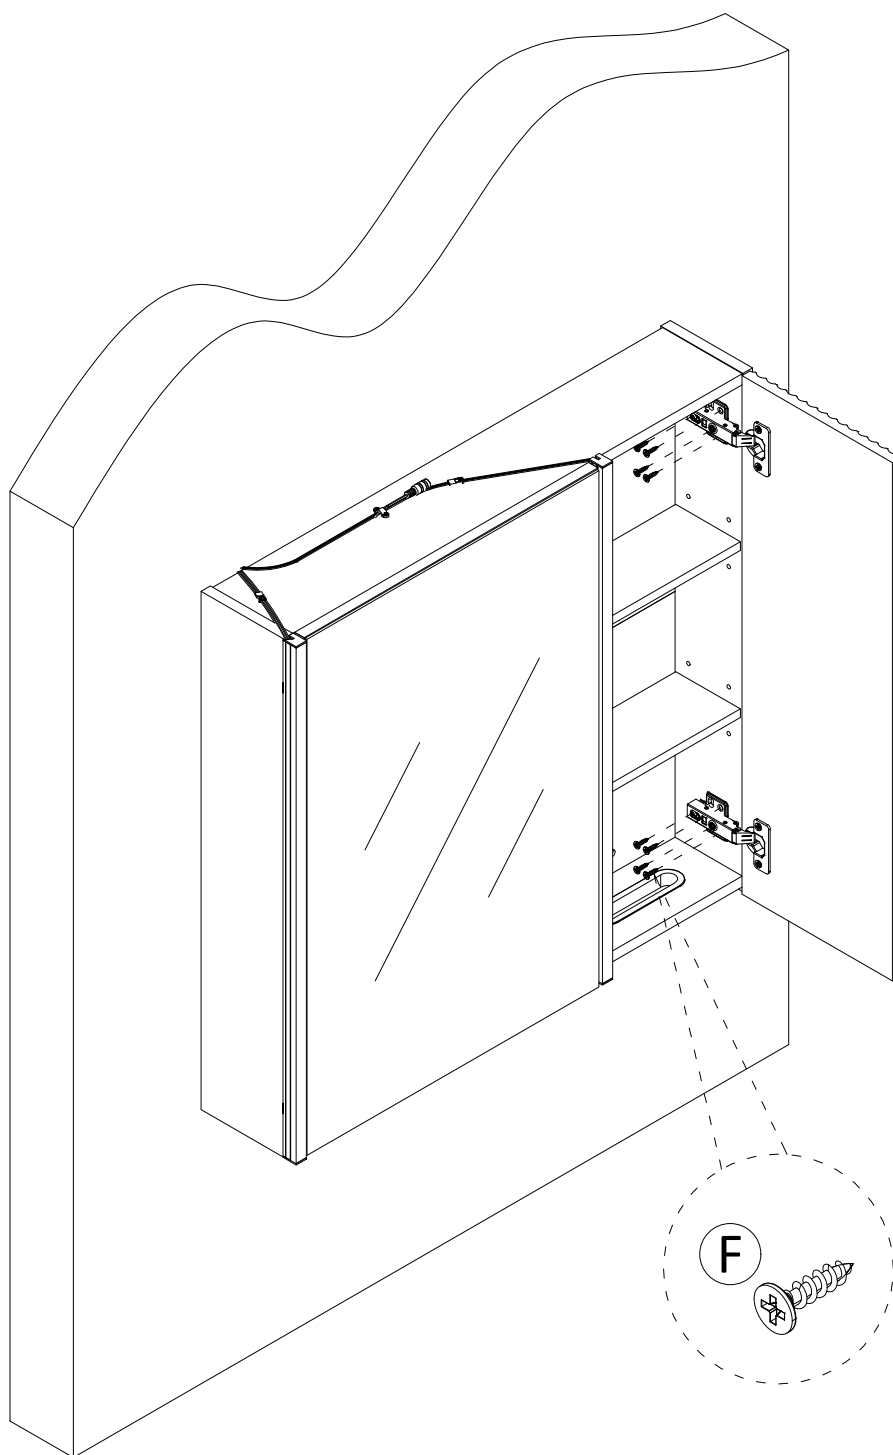 

  
STEP16

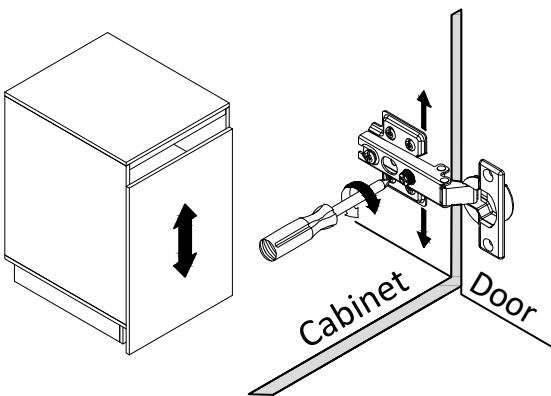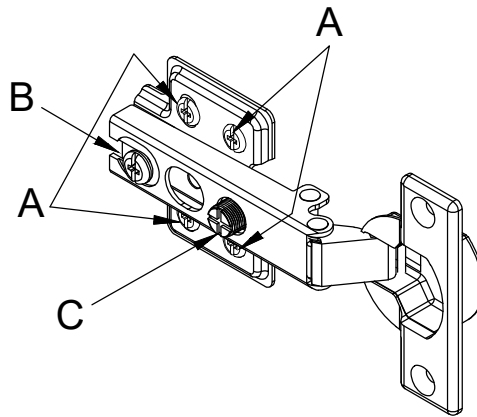

 To adjust the vertical height.
Loosen the two screws "A" on both hinges.
Two of them are usually in slotted holes which allows you to adjust up or down by a few mm.
Then tighten back up.



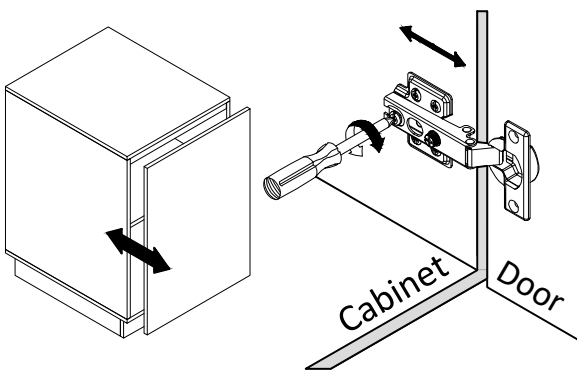


 To adjust depth.
Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

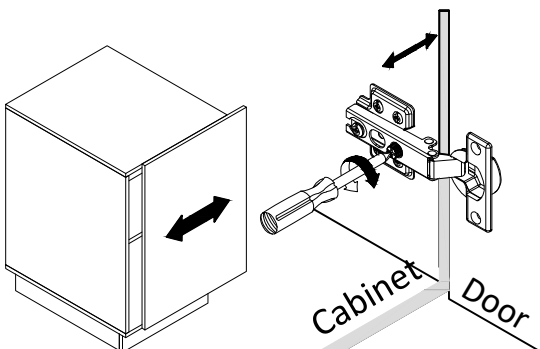

To adjust side ways.
Turning the screw "C" on BOTH hinges on each door.

   STEP17

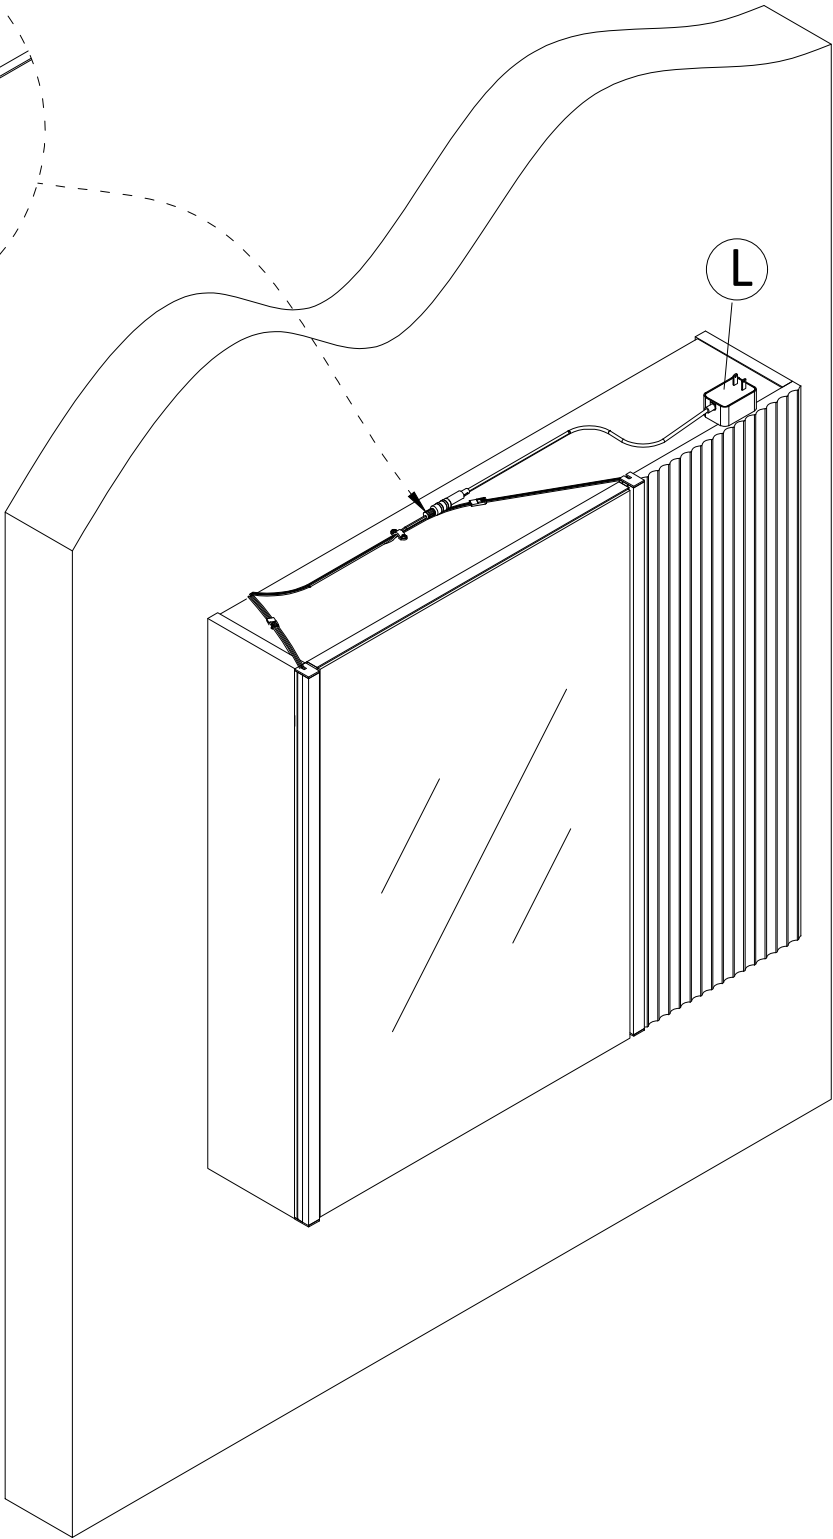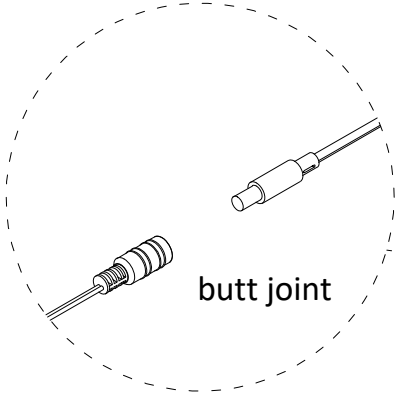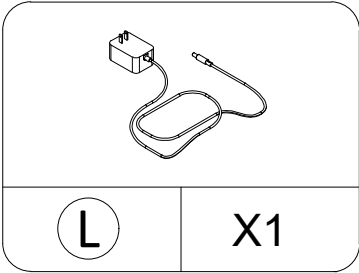

⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label.

Do not remove!

⚠ AVERTISSEMENT



Des enfants sont décédés à cause du basculement du meuble.

Pour réduire le risque de la chute du meuble :

- TOUJOURS installer le dispositif anti-basculement fourni.
- NE JAMAIS mettre un téléviseur sur ce produit.
- NE JAMAIS laisser les enfants se tenir debout, grimper ni s'accrocher sur les tiroirs, les portes ou les tablettes.
- NE JAMAIS ouvrir plus d'un tiroir à la fois.
- Placer les articles les plus lourds sur les tiroirs inférieurs.

Cette étiquette est permanente.

Ne pas retirer !

⚠ ADVERTENCIA



Los niños han muerto por el vuelco de los muebles. Para reducir el peligro de el mueble se vuelca:

- SIEMPRE instalar el dispositivo anti-volcadura suministrado.
- NUNCA ponga un televisor en este producto.
- NUNCA permita que los niños se paren, se suban o se cuelguen de los cajones, puertas o repisas.
- NUNCA abra más de un cajón a la vez.
- Coloque los artículos más pesados en los cajones inferiores.

Esta es una etiqueta permanente.

¡No quitar!