 
 



INSTALLATION MANUAL

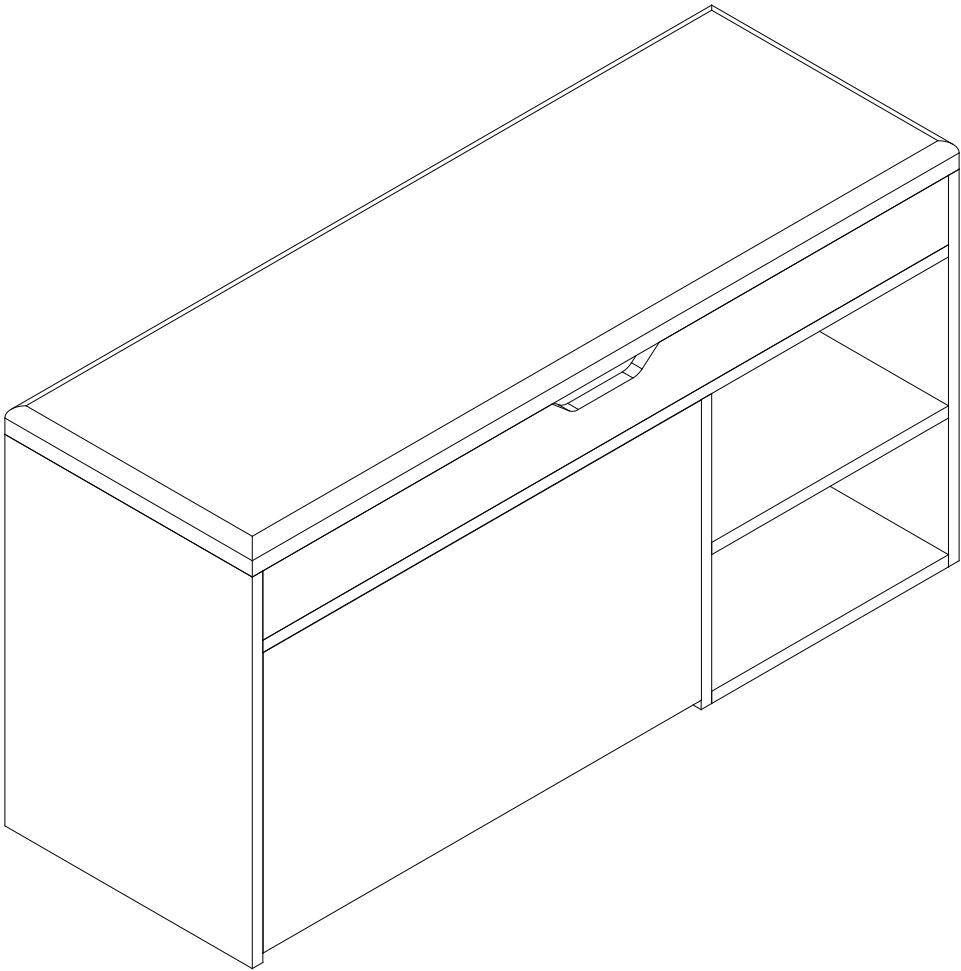

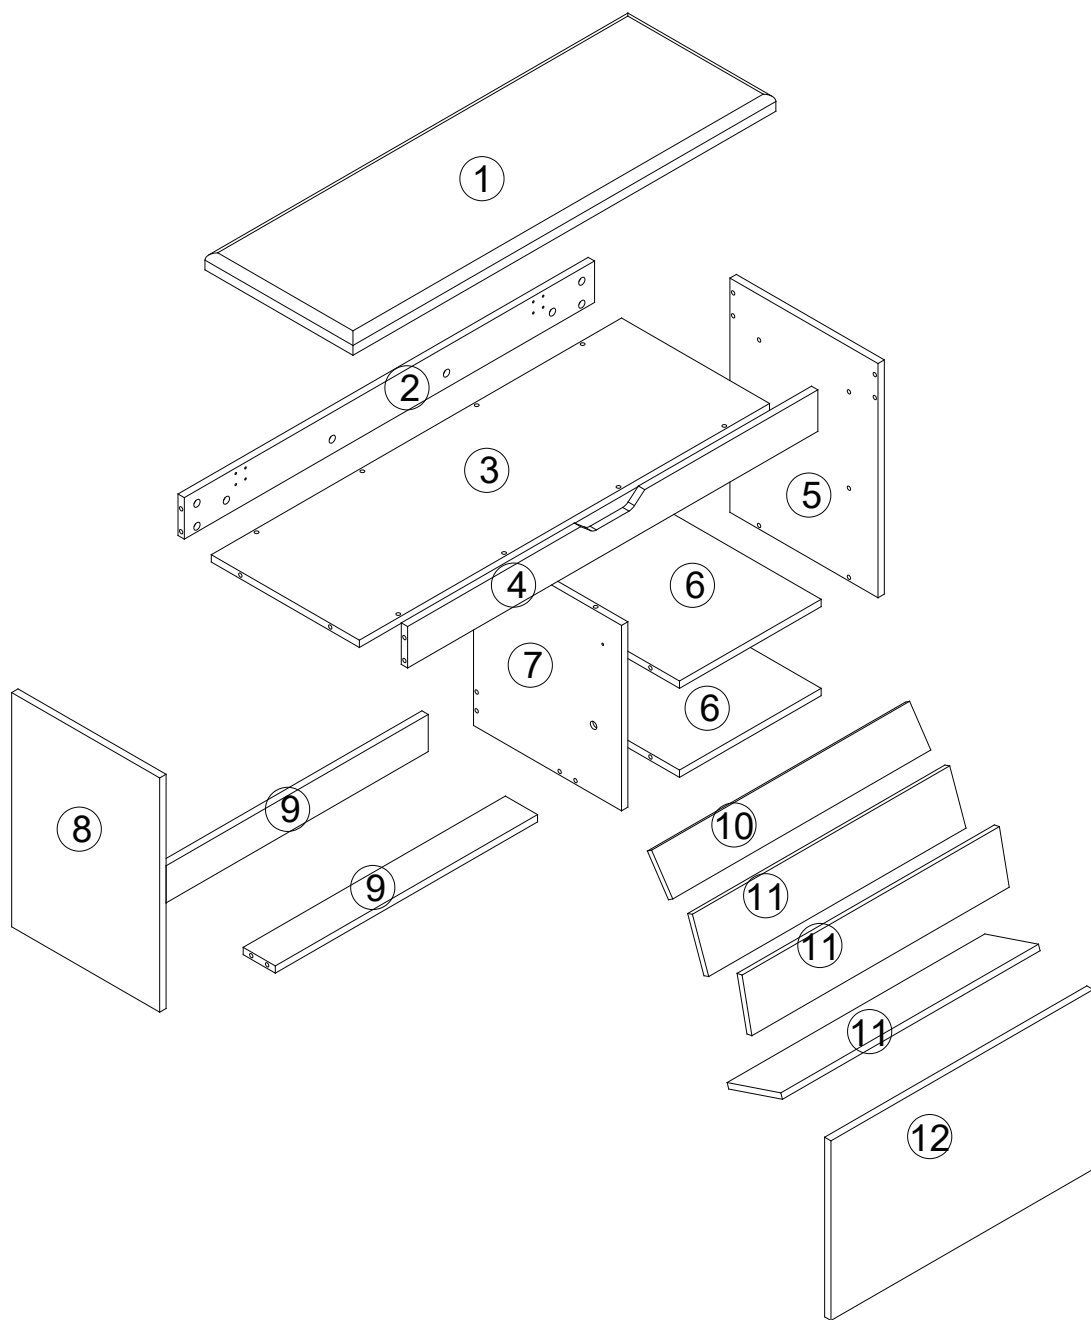

1 - x1	6 - x2	11 - x3
2 - x1	7 - x1	12 - x1
3 - x1	8 - x1	
4 - x1	9 - x2	
5 - x1	10 - x1	

 HARDWARE




A	SCREW & PLASTIC LOCK	x38
---	-------------------------	-----




B	SCREW & METAL LOCK	x38
---	-----------------------	-----



C	SCREW	x28
---	-------	-----

 

D		x1
---	--	----

 

E		x1
---	--	----




F		x2
---	--	----



G		x2
---	--	----




H		x2
---	--	----

 

J		x2
---	--	----


1. Screw installation method

 When the screw is installed, please keep it in line with the board, and do not tighten it too tightly

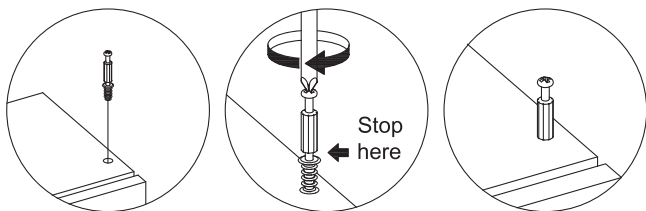


2. Check the Nut direction








 
This direction of the marked nut is consistent with the direction in which the screw is inserted

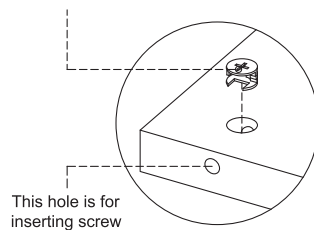

 
3. Installation on the board with fixing screws

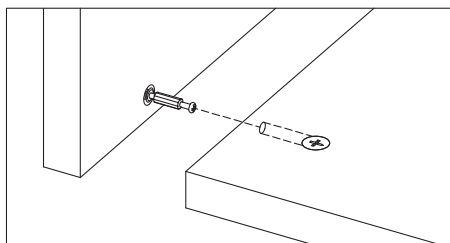

        
3. Rotate slowly until it stops

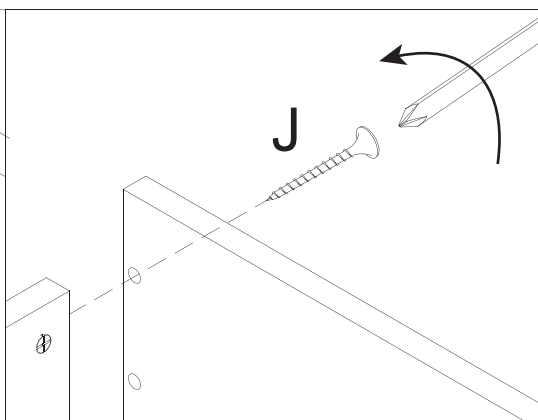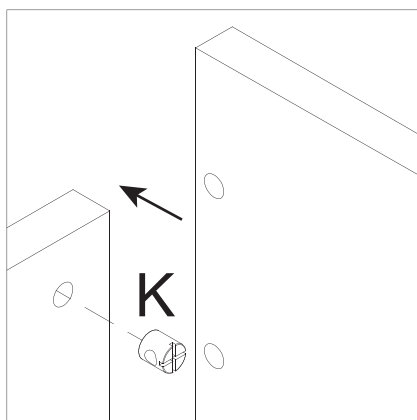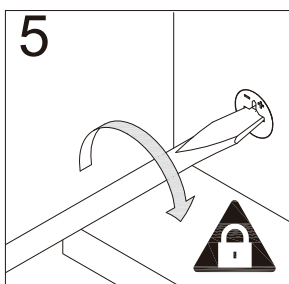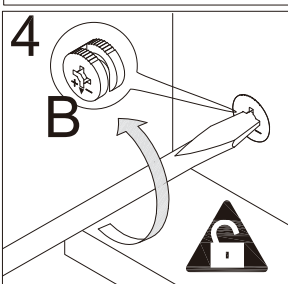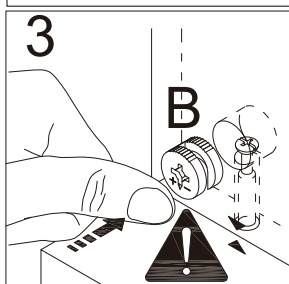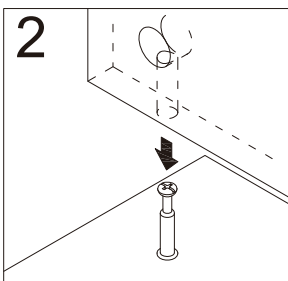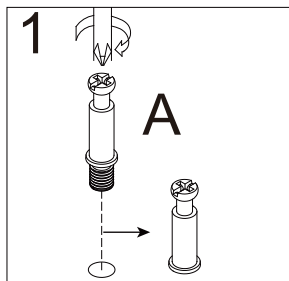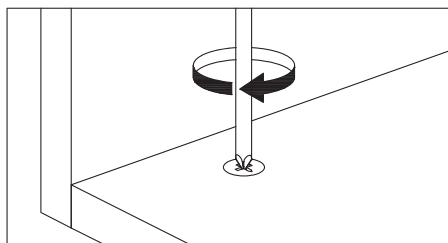

 
Step 01

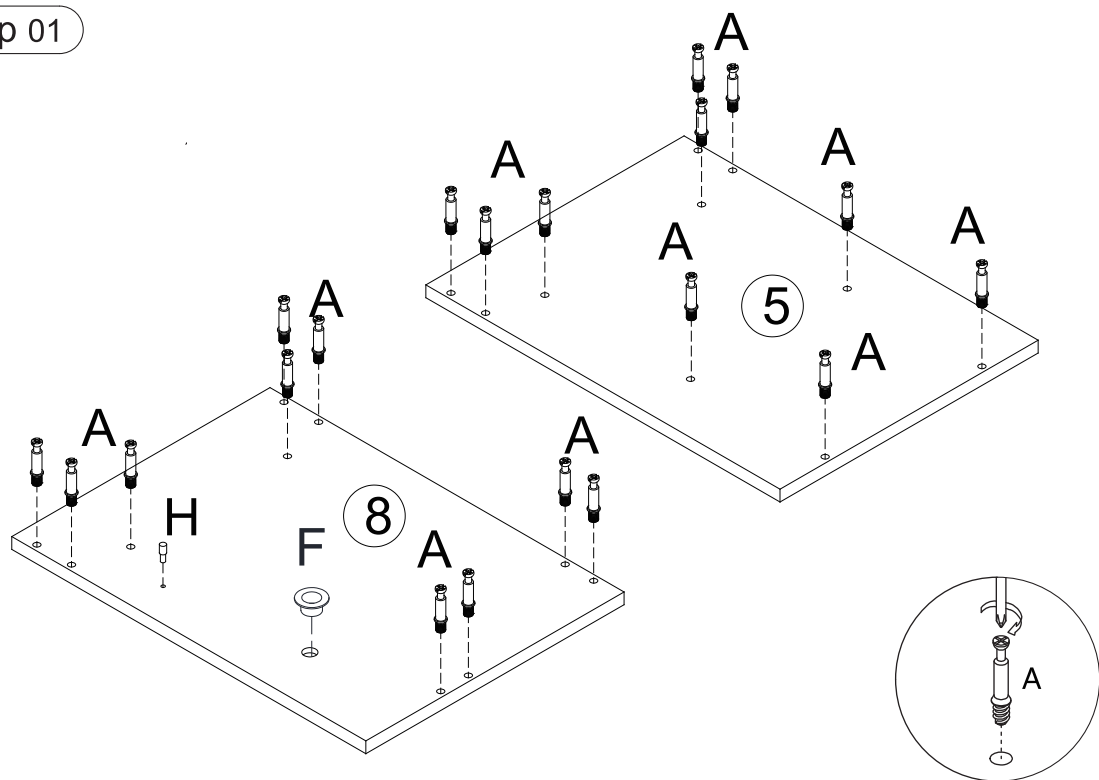

 
Step 02

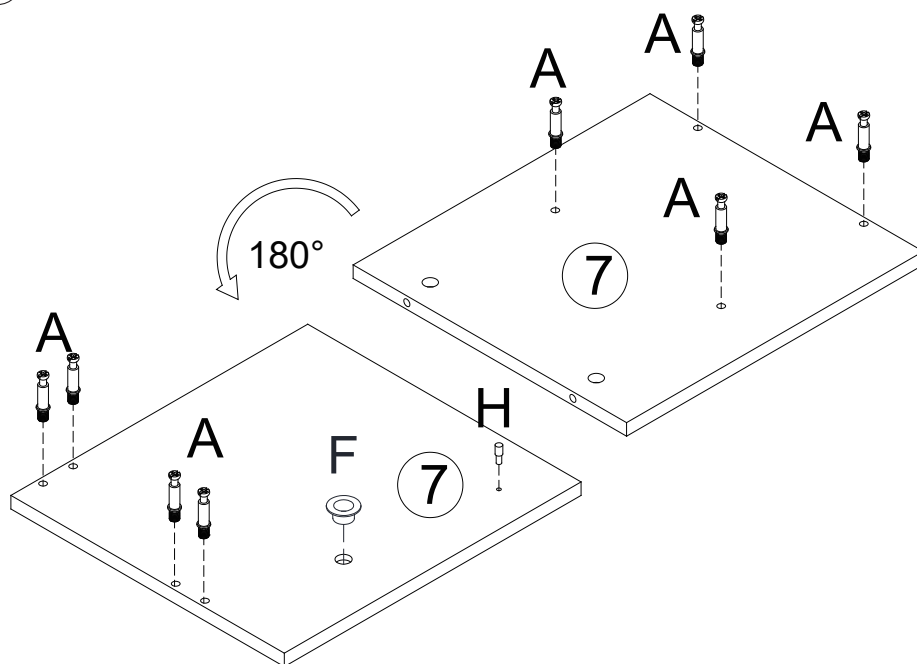

 
Step 03

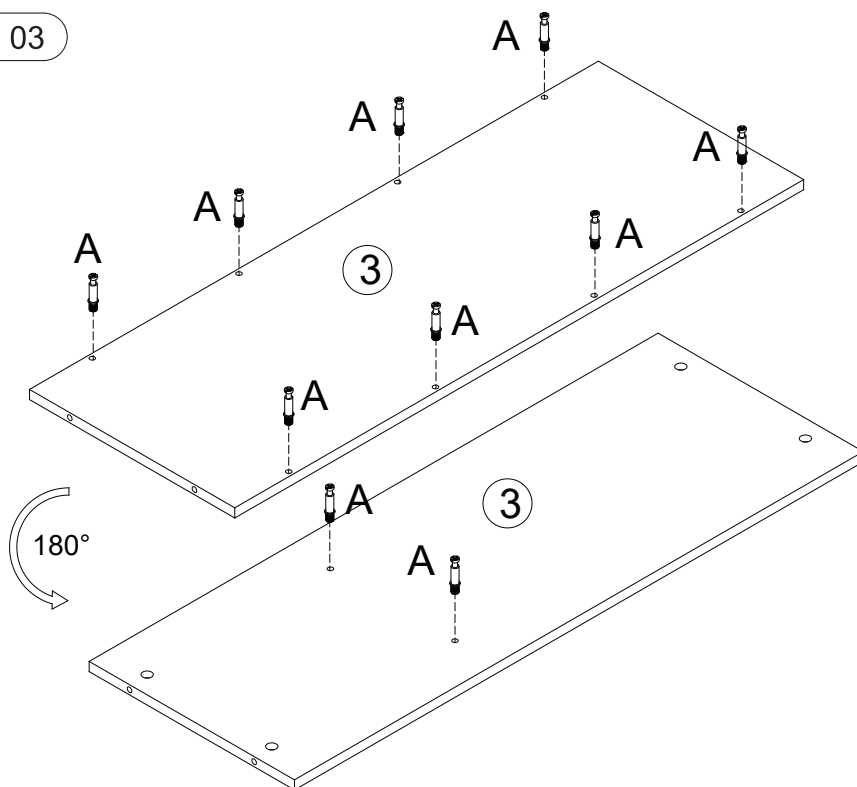

 
Step 04

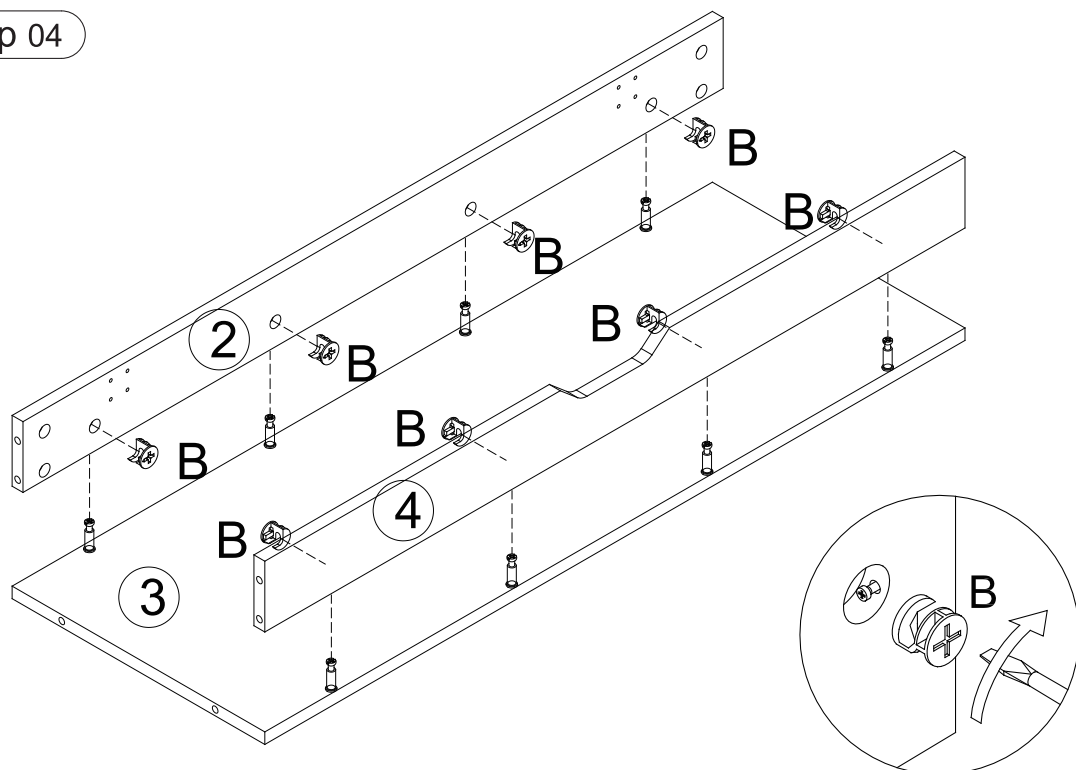

 
Step 05

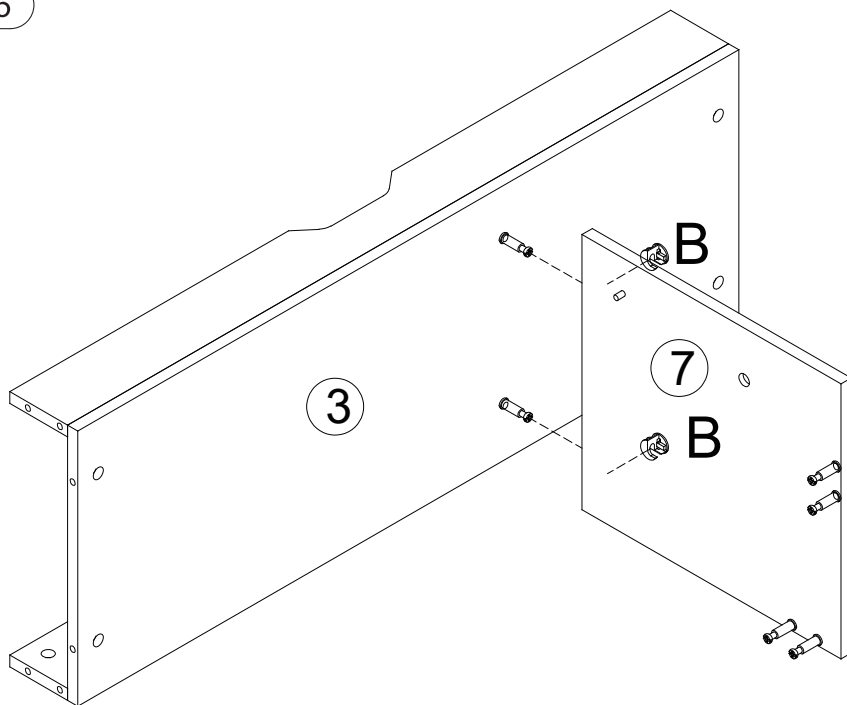

 
Step 06

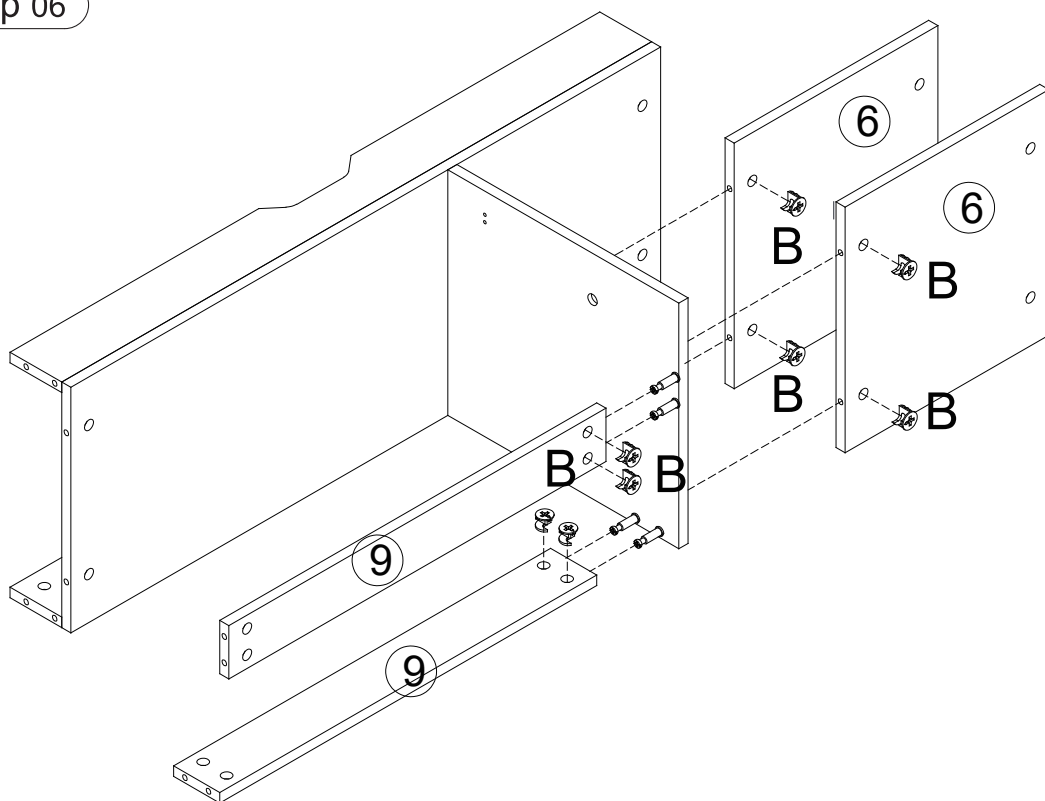

 
Step 06

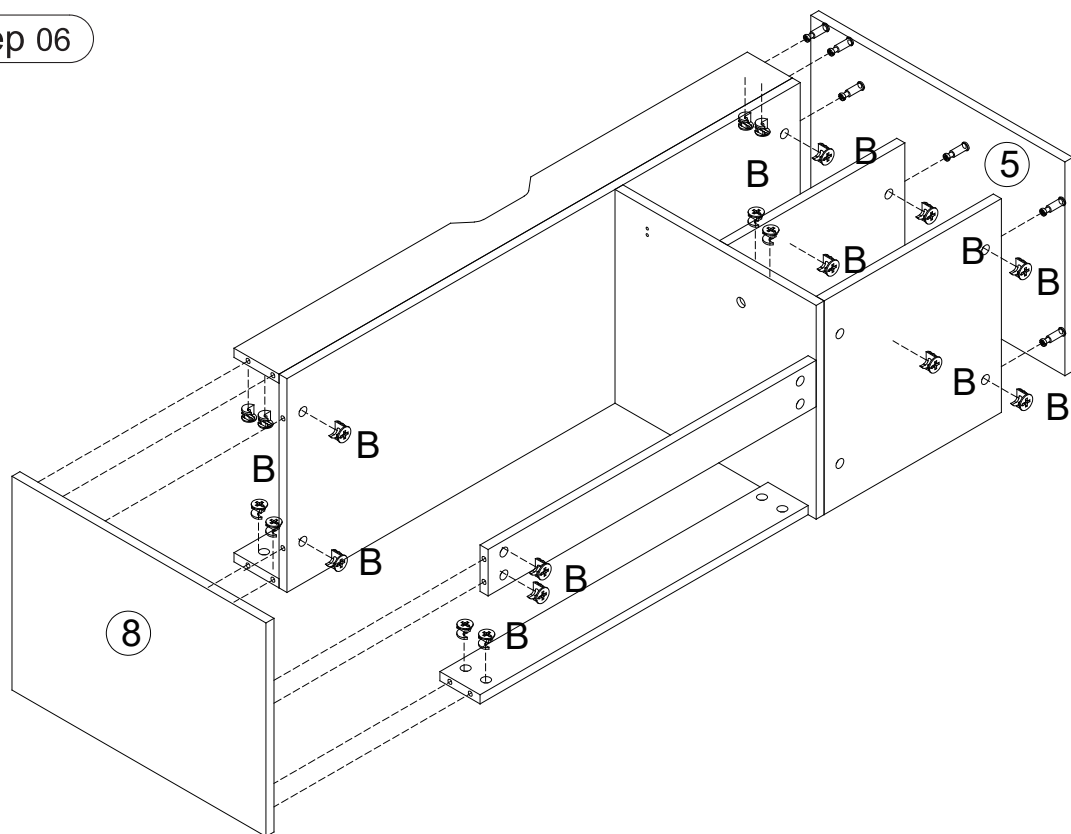

 
Step 07

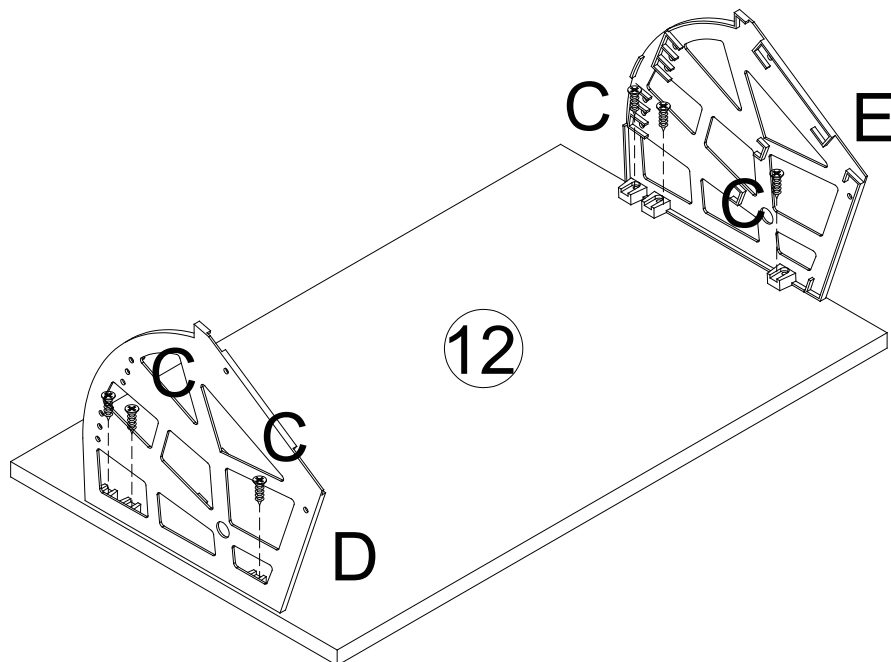

 
Step 08

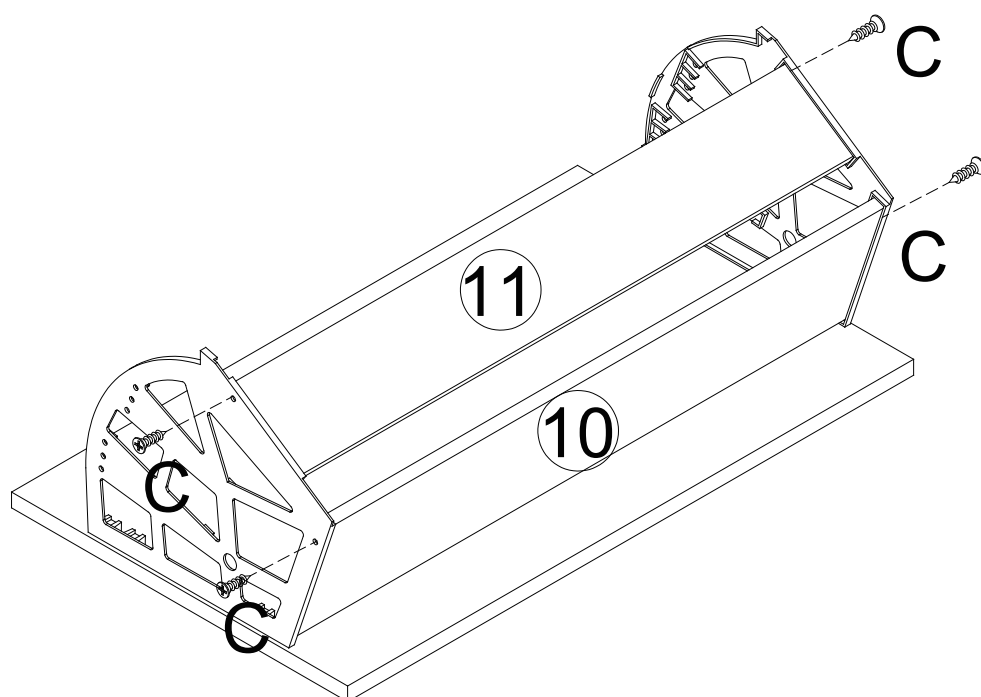

 
Step 09

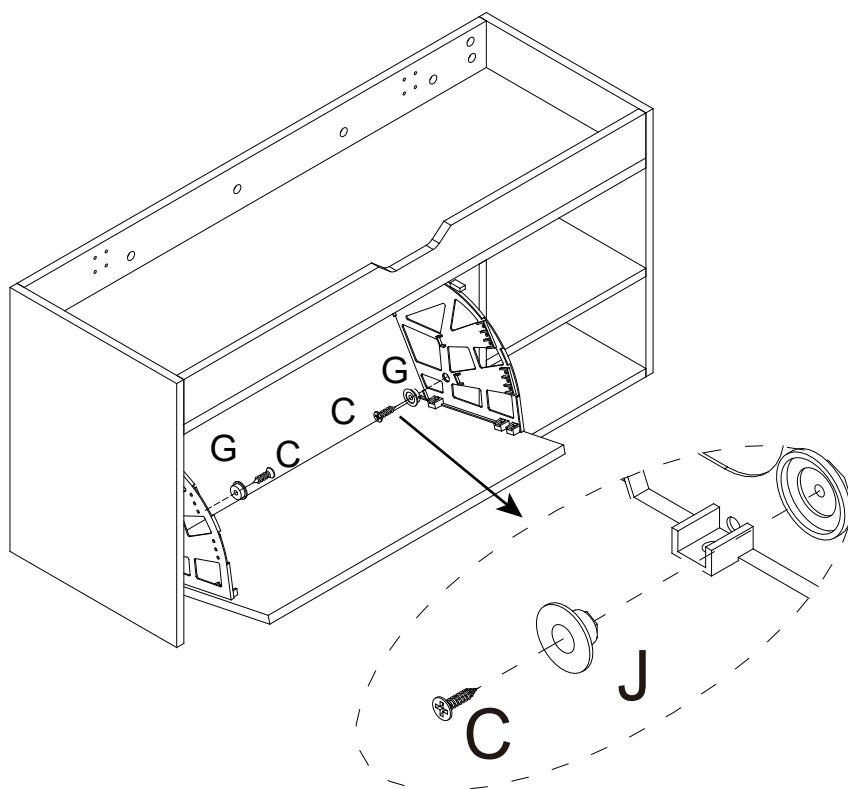

 Step 10

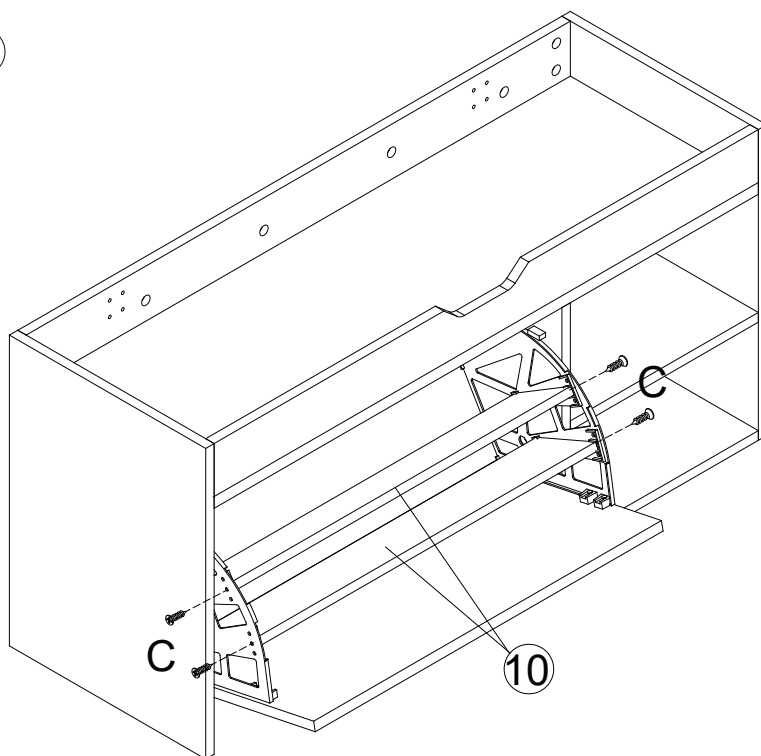

 Step 11

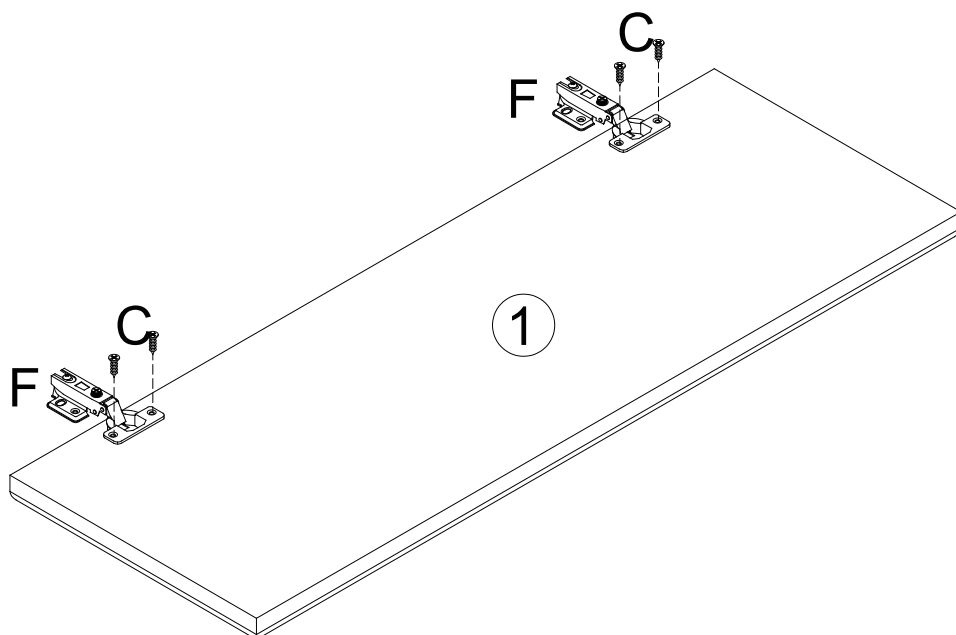

Step 12

