

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate www.vevor.com/support

AIR FRYER OVEN

MODEL NUMBER: TM184-E

We continue to be committed to provide you tools with competitive price.


"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR[®]

TOUGH TOOLS, HALF PRICE

AIR FRYER OVEN

 TM184-E

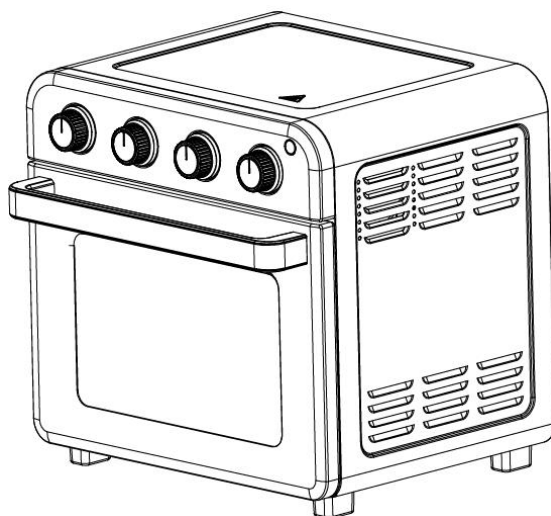

NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

 CustomerService@vevor.com

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there is any technology or software updates on our product.

Thank you for purchasing the Air Fryer Oven. Please read the User Manual carefully before use and keep it in a convenient place for future reference.

SPECIFICATION

- 1.MODEL NO.: TM184-E
- 2.POWER: 120VAC 60Hz 1800W
- 3.PRODUCT SIZE: 355*351*350mm
- 4.TEMPERATURE RANGE: 200° F-450° F
- 5.TIME RANGE: 0~ 60 Min

IMPORTANT SAFEGUARDS

Fire and electric shock are present in all electrical appliances and may cause personal injury. Read this manual and follow the safety precautions below.

1. Check whether the voltage you use is in line with the rated voltage of the product.
2. Do not touch hot surfaces, using heat-resistant pads or other supports until the appliance cools.
3. Please do not use components from non-designated manufacturers. This will cause harm to the user or pose a potential hazard.
4. Do not immerse the main unit or power cord or plug in water or other liquids to prevent electric shock.
5. When cleaning and not using, please unplug the plug. Before installing disassembling parts and cleaning utensils, make sure that the utensils are completely cooled.
6. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person in order to avoid a hazard.
7. During the operation of the appliance, certain components are very hot and should not be in direct contact. Limited to contact handles or knobs.

8. When removing the plug, grasp the plug and pull out the power cord, and do not pull the cord.
9. Don't let the power cord hang on the table or place it on a hot surface.
10. Do not approach inflammable gases or electric furnaces or put them in a hot oven.
11. Do not use a metal cleaning brush to clean.
12. Take good care of this appliance, do not allow a child under 8 years of age to take it and its power cord. However, this appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if given supervision or instruction concerning using the appliance safely and understanding the hazards.
13. Do not move the appliance when there is hot oil or other hot liquids in the appliance.
14. Do not use it outdoors. Do not use appliances for other purposes.
15. Do not cover appliances with towels or other articles to ensure the flow of heat and steam. When appliances are covered or in contact with flammable materials, they are prone to fire.
16. Appliances can not be used by persons with reduced physical, Sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way.
17. Children should be supervised to avoid playing with the appliance.
18. In the absence of supervision, the child should not do the cleaning and maintenance work.
19. The main machine of utensils should not be washed in water. When using the cloth to clean, attention should be paid to preventing water from entering the main machine to avoid the danger of short circuits, damage, or leakage in the second use.
20. Pay attention to hot steam. When the appliance is in operation, it generates heat and emits steam. Take appropriate measures to prevent injury and burns.
21. The appliance cannot be operated as an external timer or a separate remote control system.
22. This appliance is suitable for households and similar purposes.

23. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.

24. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to "off," then remove the plug from the wall outlet.

25. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

26. A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Extension cords are available and may be used if care is exercised in their use. If an extension cord is used: The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance;

The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

SAVE THE INSTRUCTIONS

FIRST USE

1. When using this product for the first time, the product may have a little smoke or other flavors. This is a normal phenomenon and will disappear soon. Make sure the product has good ventilation.


2. Please check that all parts and accessories of the product are intact and undamaged.

3. Clean all parts of the product according to the "Cleaning and Maintenance" section.

4. Dry the parts thoroughly and assemble them into the inside of the product. Then, the product can be put into use.

OPERATION INSTRUCTIONS

Control Panel

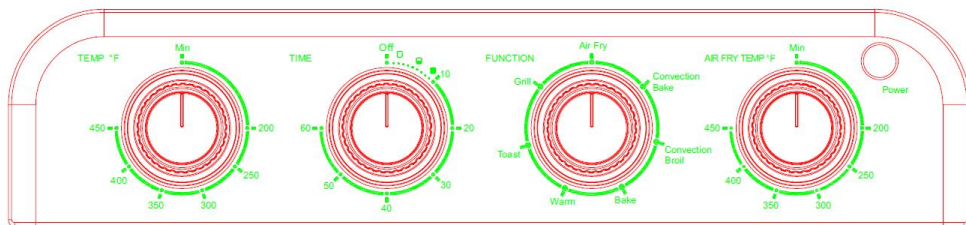

Operation instructions:

- 1.First,place the electric oven on the platform and make sure the timer knob is in the "Off" position. Then plug the electrical cord into the socket.
- 2.Place the prepared food on the baking sheet of the electric oven and close the glass door of the electric oven.
- 3.Set the thermostat knob in the desired position
- 4.Select the function knob to the desired position.
- 5.Turn the timer knob to set the appropriate baking time and the body will start working.


(For a better cooking effect, preheat it for 5 minutes before baking food so that the oven chamber is heated to the expected temperature, and then put in the food.)

A bell will ring at the end of the baking time. If the baking time is unsatisfactory the baking time can be slightly longer to achieve the best results. After the time is over, open the oven door and take out the food.

Attention:

- ①When the prepared food is put into the electric oven, the time knob should be located in the "off" position.
- ②With the temperature increase in the oven heating process, the heating element will gradually turn red. In order to prevent excessive cooking of baked food, please choose good baking time according to your personal experience or do not leave the electrical appliance when using.
- ③This appliance must not be used for other purposes. This product design is only suitable for household use.
- ④When the oven door is fully open, items are not allowed to be placed in order to avoid turning over.

Wiring Diagram

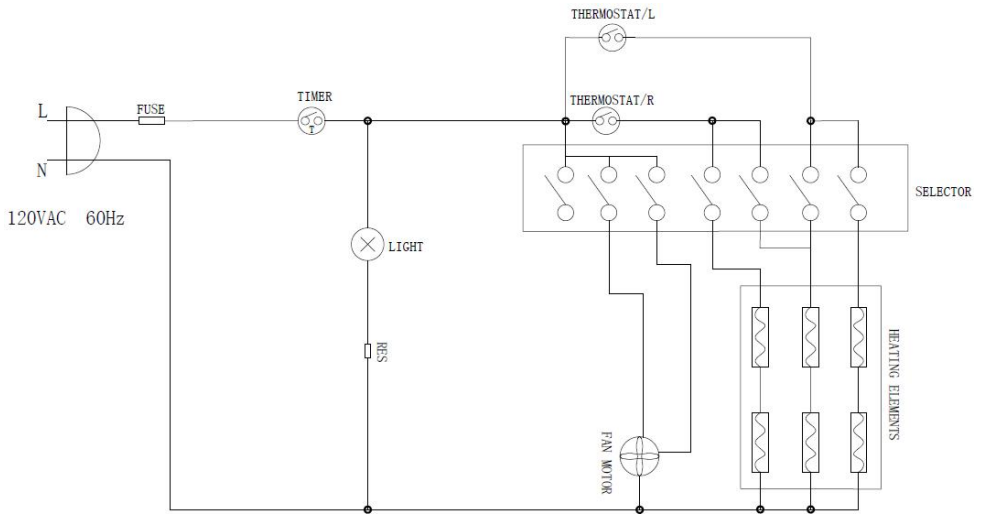

CLEANING AND MAINTENANCE

1. The product must be disconnected from the power supply and cooled thoroughly before cleaning.
2. Please use soft dry cloth to wipe the inner cavity of the product. Do not use sharp or frictional materials to wipe the product's internal cavity to protect the metal coating of the inner cavity.
3. The plate can be washed with water directly, and the water traces are dried with a dry cloth. Do not soak with detergent or similar detergent.
4. Before packing and storing products, make sure that the products are completely cooled, clean and dry.

ATTENTION ENVIRONMENT PROTECTION

Attention Environment Protection

Please obey local law: put wasted electric products and devices into proper waste recycling station.

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support