

Mini Pancake Maker

USER'S MANUAL

I . Technical parameter

Name	Mini Pancake Maker
Model	FY-GL03
Voltage	220V/50Hz
Power	1000W
Dimension	420*345*190mm

II . Precautions

1. The voltage for using must be coordinated with the supplied voltage.
 2. Install a tripodal socket with good ground-connection beside the equipment.
 3. The temperature can be adjusted in the range of $25^{\circ}\text{C} \pm 5\%$.
 4. There is timer-setting equipment in this appliance. It only shows operating time and has no connection with electric function.
3. When temperature of this equipment goes up to 250°C , paint a layer of edible vegetable oil onto mould. Then make pulp, and put them into template, and cover it. Adjust the timer on right side (the range of setting time is 0 ~ 5 minute, operator can set time with their own). When time is to the setting one, the oven will give out a sound “Ting” to point out operator that time is up, the production is finished. Then operator can make other food. When food all is finished, operator should cut off electricity.
 4. User can make time setting according to the difference of prescription of pulp and luster of food customer likes. Generally, the more time lasts the darker luster will be, whereas, it is not. But time cannot be too short, or food will not be hot and with no luster.
 5. Cleaning: This equipment can be washed by wet towel with cleaner, but it cannot be washed by water directly and in water. Or its electric will be destroyed.

III. Instruction

1. Plug in socket, press power switch then indicator is on, equipment begins to heat. When temperature goes up to 250°C , the equipment stop heating automatically. When temperature lowers 250°C the equipment get through electricity automatically and heats again. It does repeatedly in this way to make sure temperature is constant in the range of 250°C .
2. It needs 12 minutes from pressing power switch to the temperature of oven goes up to 250°C .