 
 


INSTRUCTION MANUAL

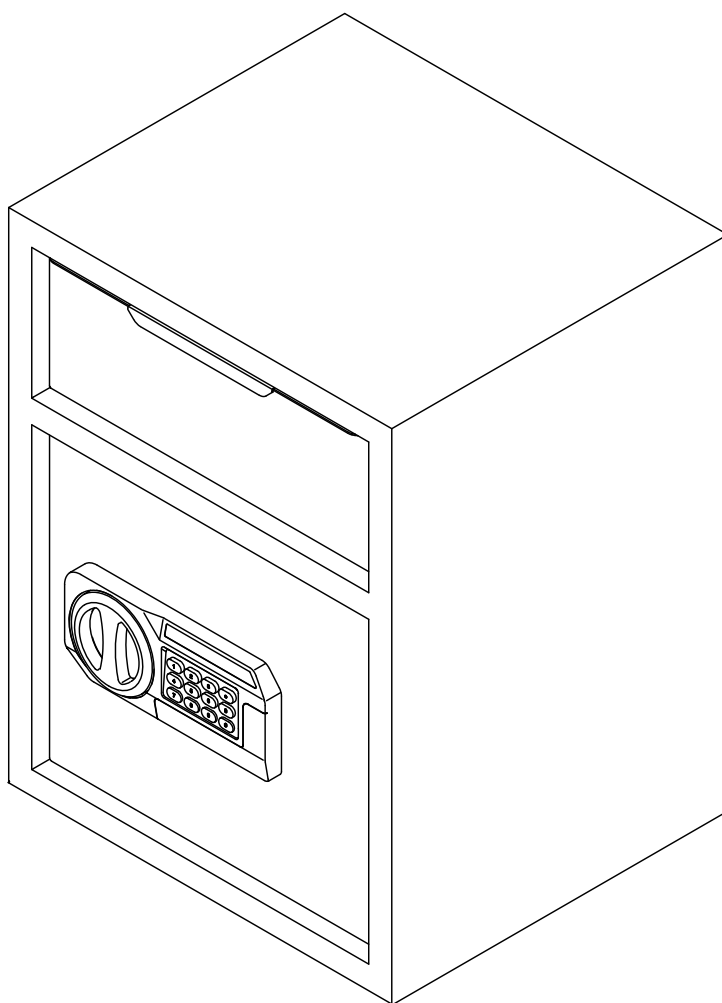 


Never keep emergency keys in your safe !

Component Description

 
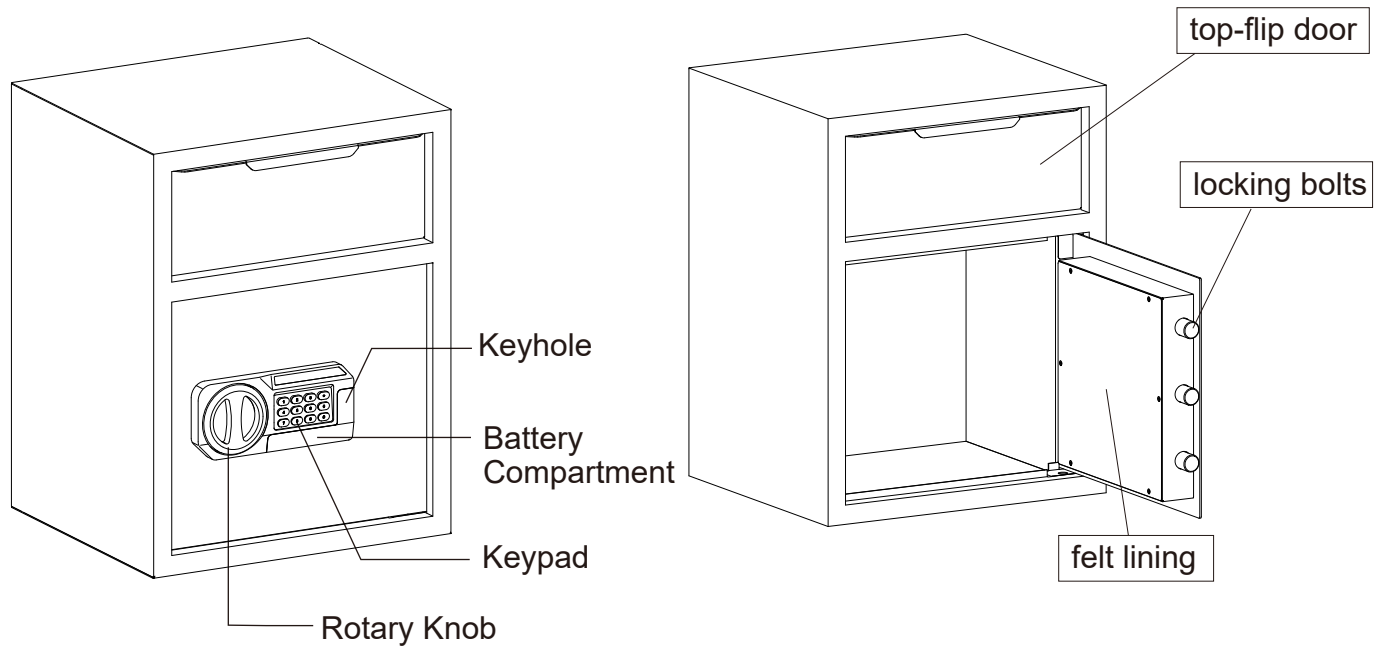 


Schematic Drawing of Control Panel

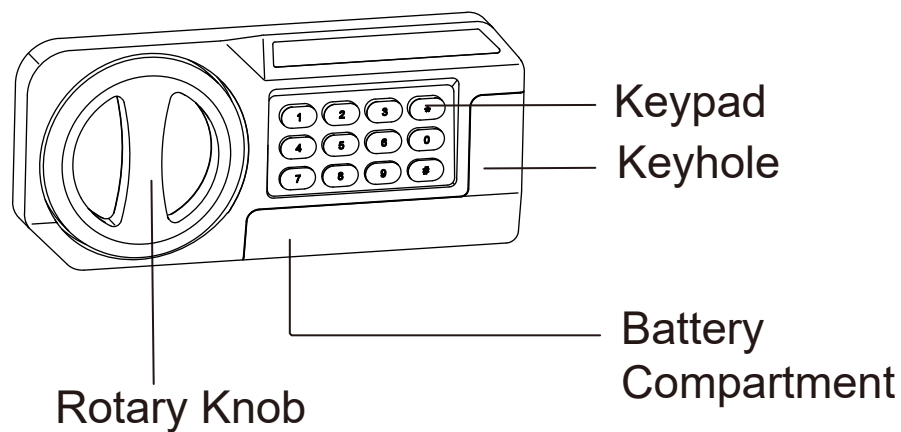


Thank you for choosing our product! Please take a moment to carefully read the following pages and familiarize yourself with the proper operating procedures.

Parts List

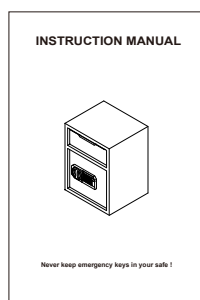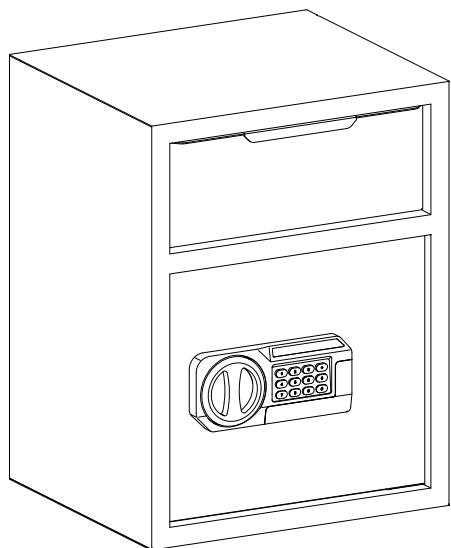

Instruction Manual*1

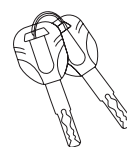

Emergency Key*2

Lighting

When entering the correct password or correct fingerprint to open the door, the lighting inside the box will be on for 25 seconds.

User Manual

1、General Instructions

- ① The safe is shipped in the open-door condition. Open the door and correctly install four AAA batteries. A single “beep” sound indicates that the power is connected and the system is activated.
- ② Each time a numeric key is pressed, the buzzer will beep once, indicating the input has been accepted.
- ③ If no further key is pressed within 20 seconds after any key operation, the system will enter sleep mode.
- ④ The “*” and “#” keys have the same function, both used for confirmation
- ⑤ If an incorrect password is entered, the buzzer will beep five times. After three consecutive incorrect attempts, the system will lock for 20 seconds. After recovery, if another three consecutive incorrect attempts occur, the system will lock for 5 minutes. During the lock period, the buzzer will beep once per second.

2、User Code Setting and Modification

- ① With the door open, press the “**SETTING-BUTTON**” button located on the inside of the door. The buzzer will beep twice and the yellow indicator light will turn on, indicating that the user code can be set or changed.
- ② Enter your desired 3–8 digit user code (Recommendation: For security reasons, do not set the user code the same as the master code.). Then press the “#” key to confirm. A “**beep**” sound will be heard and the yellow indicator light will turn off, indicating the code has been successfully set.

Example: Press

SETTING-BUTTON

1 2 3 4

#

*The yellow indicator turns off, indicating the user code **1 2 3 4** has been successfully set.*

3、 Master Code Setting and Modification

- ① With the door open, first press 0 0 on the keypad. The yellow light will flash twice. Then press the “ **SETTING-BUTTON** ” button inside the door. The yellow indicator light will turn on, indicating the master code can be set or changed.
- ② Enter your desired 3–8 digit master code, then press “ # ” to confirm. A “ **beep** ” sound will be heard and the yellow indicator light will turn off, indicating the code has been successfully set.

Example: Press



The yellow indicator turns off, indicating the master code 1 2 3 4 5 6 has been successfully set.

4、 Unlocking

- ① Enter the correct user code or master code, then press “ # ” to confirm. A “ **beep** ” sound will be heard, the electromagnetic lock will release for 6 seconds, and the green indicator light will turn on. You may then open the door.
- ② If the code entered is incorrect, pressing “ # ” will trigger five beeps.

5、 Mute Function

- ① Press and hold the “ **1** ” key for 3 seconds. The green light will stay on briefly, and the buzzer will be muted.
- ② Press and hold the “ **1** ” key for 3 seconds again. The green light will stay on briefly and the buzzer will sound once, indicating that the buzzer sound is enabled.

6、 Low Battery Warning

When opening the safe, if the red indicator light on the panel turns on, it indicates low battery voltage. Please replace the batteries as soon as possible.

7、 Technical Specifications

- ① Low voltage threshold: 4.6V ± 0.3V
- ② Current: < 5μA
- ③ Default power-on code: 159 (Master code not set)

After-sales service

Hello there!
We're excited to offer you seamless service.

- ① Comprehensive installation videos
- ② Activate warranty options
- ③ Expert post-sales support
- ④ Exclusive discounts
- ⑤ And more additional services



Our goal is to enhance your shopping experience.
We look forward to hearing from you.

whenever you need us!

Thank you!
