 


TV STAND

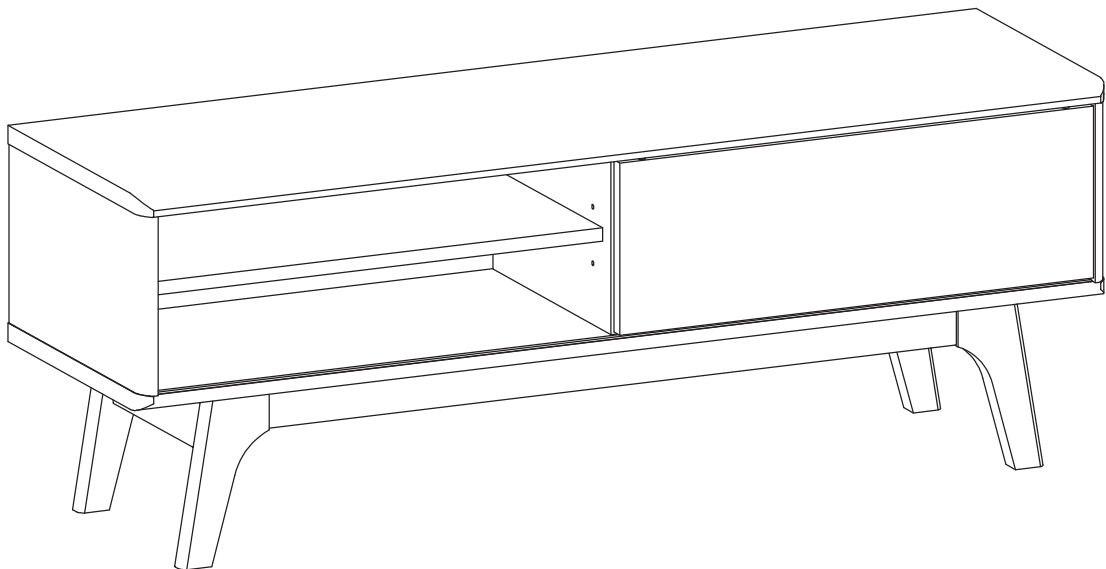


 

 
 

 

 


 

 
Thank you for purchasing the **TV STAND** !

Before you start, here is some helpful advice:

1. We suggest you spend a short time reading through this leaflet and then follow the simple step-by-step instructions.
2. Owing to the size and weight of the desk, we recommend that it is assembled by two adults, on a carpeted or padded area, in the room that it is intended for. Approximate assembly time: 60 minutes.
3. Please do not use any tools other than those provided or recommended in these instructions.
4. Please do not throw away any of the packaging or instructions until you have checked all the components and hardware and the furniture is fully assembled.
5. Assemble all components loosely until advised to tighten. Depending on use, it may be necessary to tighten the components from time to time, so please save the tools that have been provided.
6. Please keep all pieces out of reach of children.




Hardware :

A  Ø 6 x 35 mm x 9	B  Ø 15 mm x 9	C  Ø 8 x 30 mm x 36	D  M 7 x 50 mm x 5	E  L 4 x 1
F  M 12 x 35 mm x 6	G  Ø 5 x 15 mm x 8	H  M 3.5 x 13 mm x 2	I  M 8 x 39 mm x 2	J  9 x 14 x 10 mm x 8
K  M 3.5 x 15.5 mm x 8	L  25 x 25 x 2 mm x 4	M  Ø 8 mm x 2	N  Ø 15 mm(Long) x 4	O  Ø 15 mm(Short) x 1
P  Screwdriver (Not Include) x 1				

TV STAND

 
Components:

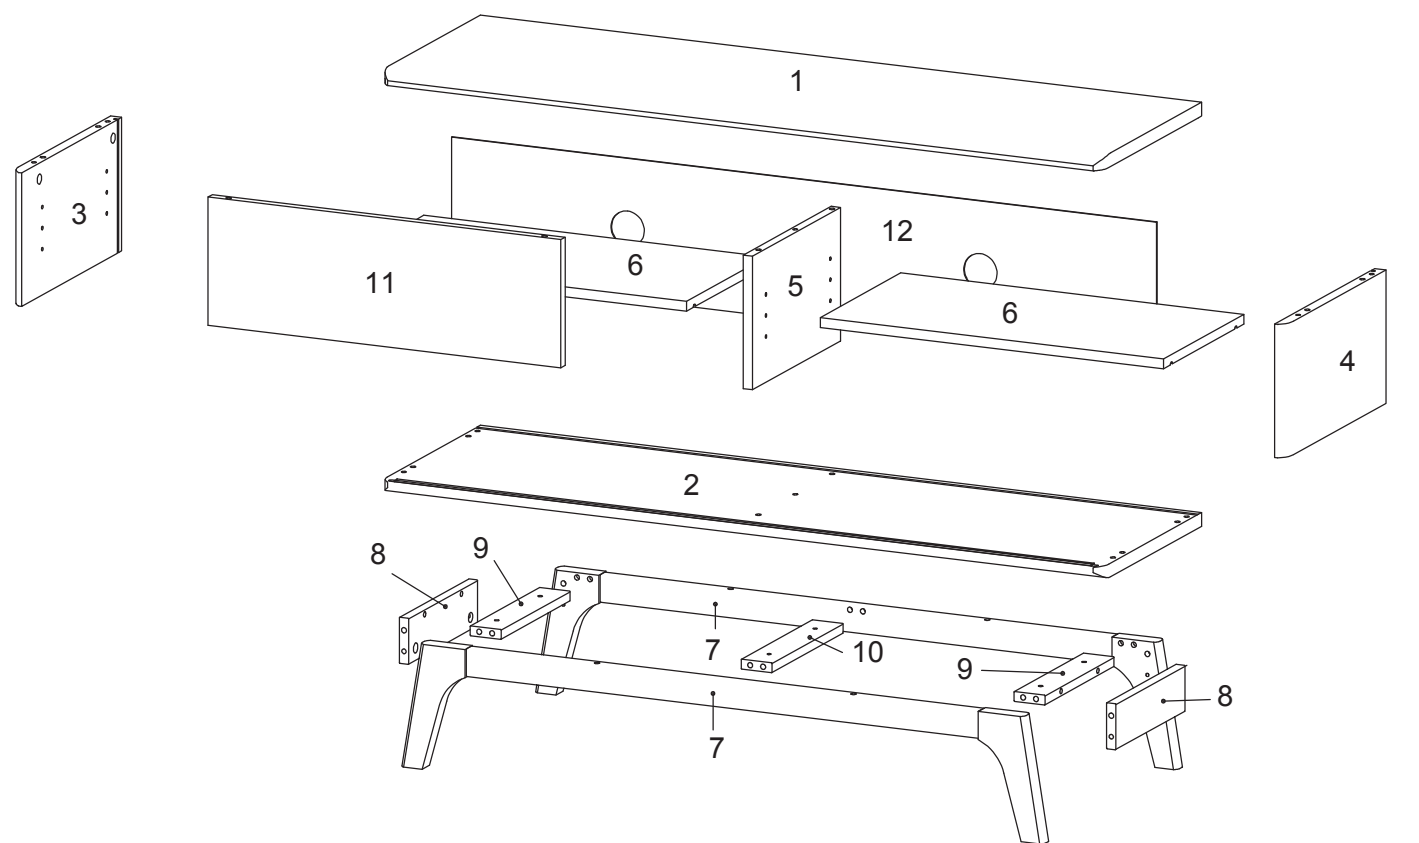




1	Top Board	x1	2	Bottom Board	x1	3	Side Board Left	x1	4	Side Board Right	x1
5	Center Board	x1	6	Adjustable Shelf	x2	7	Leg	x2	8	Support Board 1	x2
9	Support Board 2	x2	10	Support Board 3	x1	11	Door	x1	12	Back Board	x1

 TV STAND

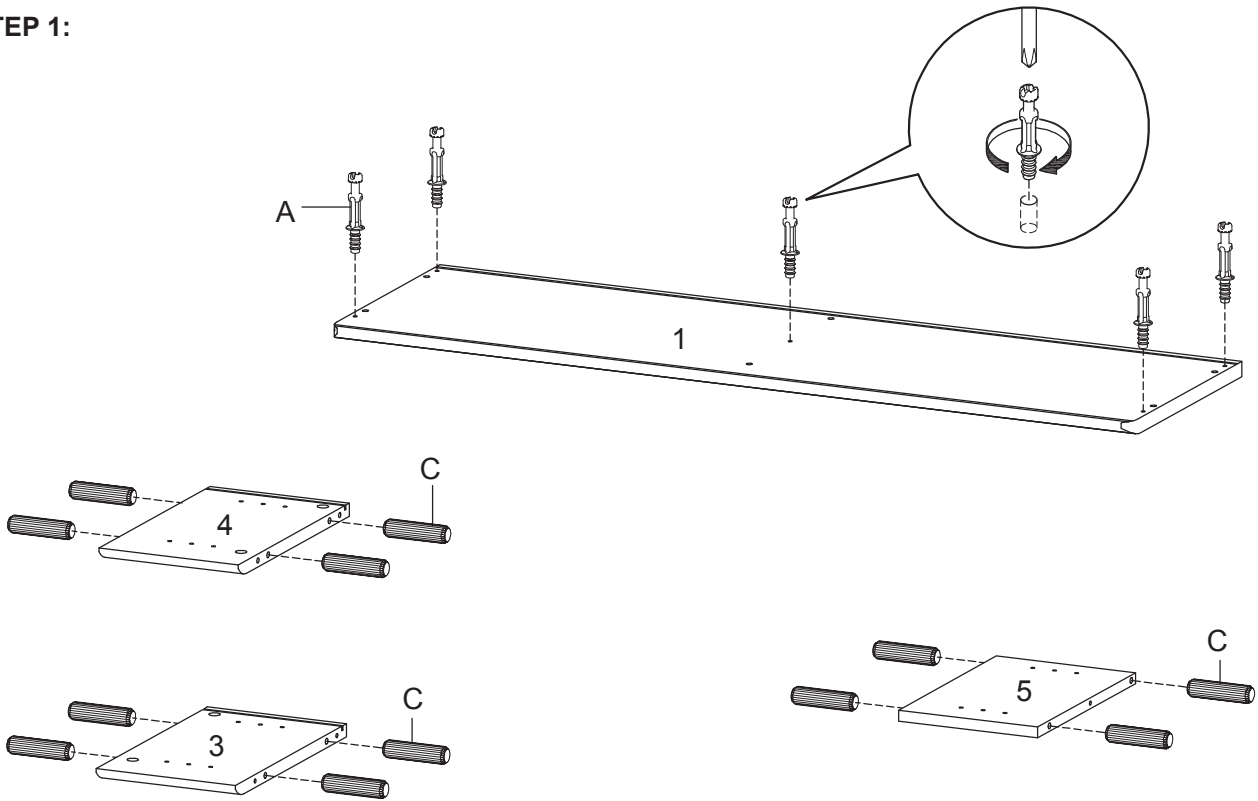
STEP 1:







		
Ax5	Cx12	Px1

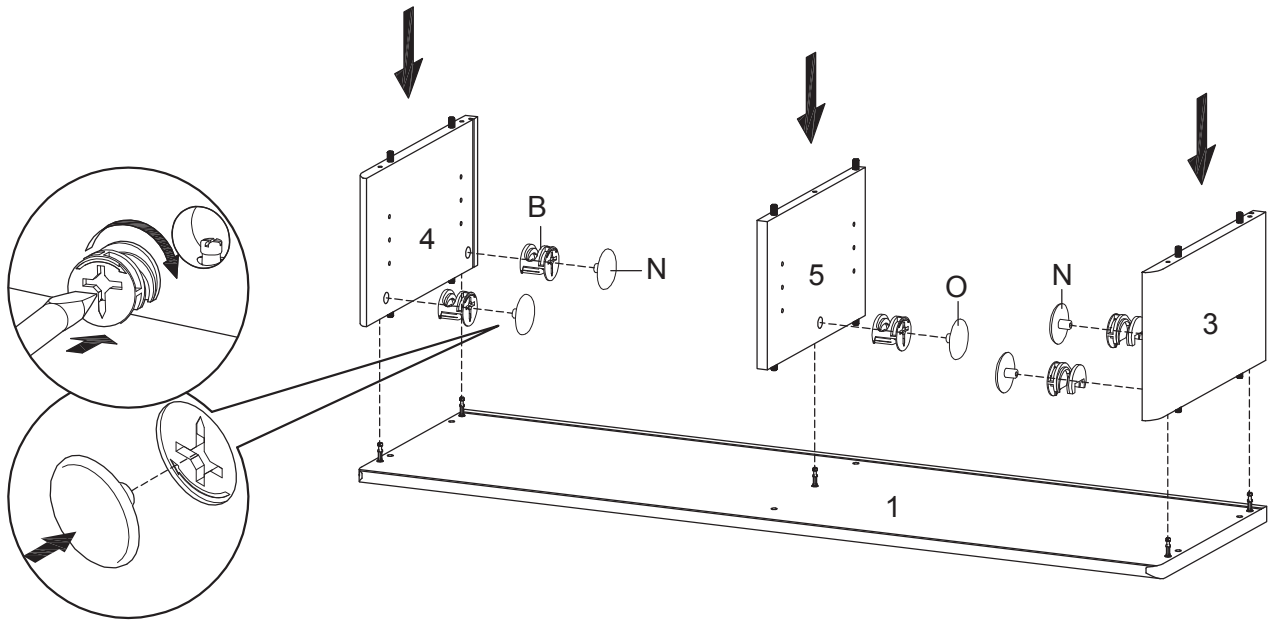 Hardware required. Screwdriver not included

STEP 2:




			
Bx5	Nx4	Ox1	Px1


Hardware required. Screwdriver not included

TV STAND

 STEP 3:


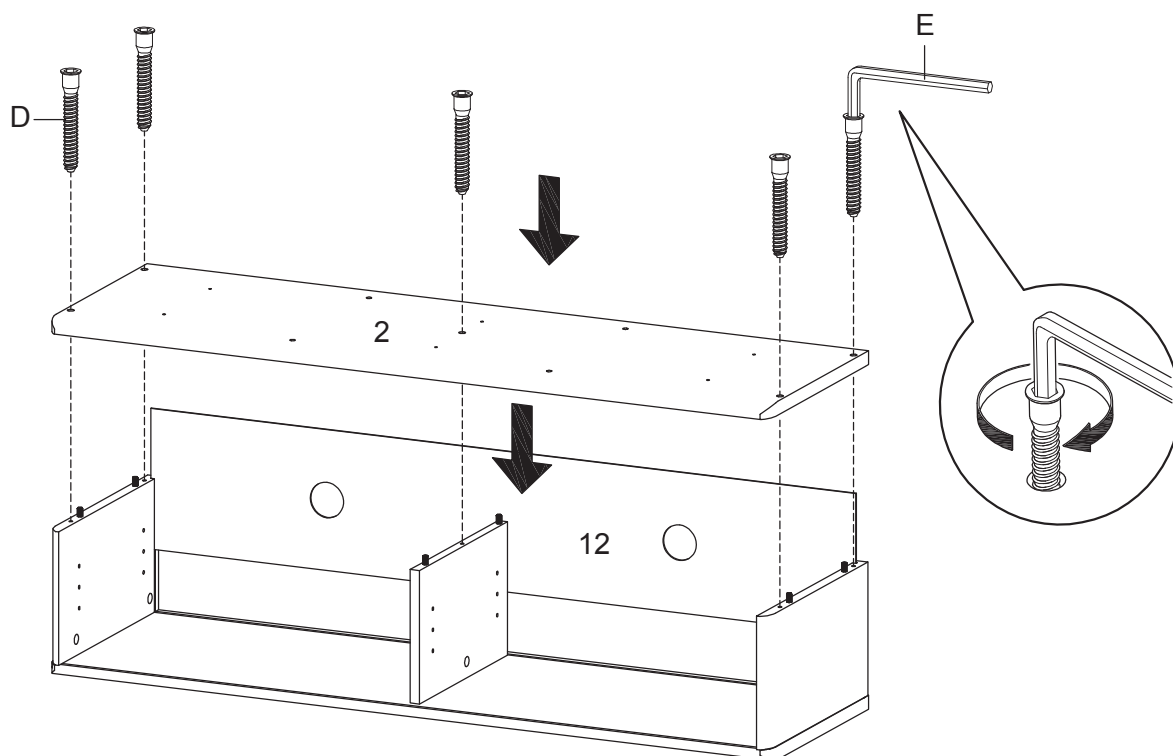


 Attention: Insert part 12 (Back Board) first and then part 2 (Bottom Board)



Hardware required

   
STEP 4:

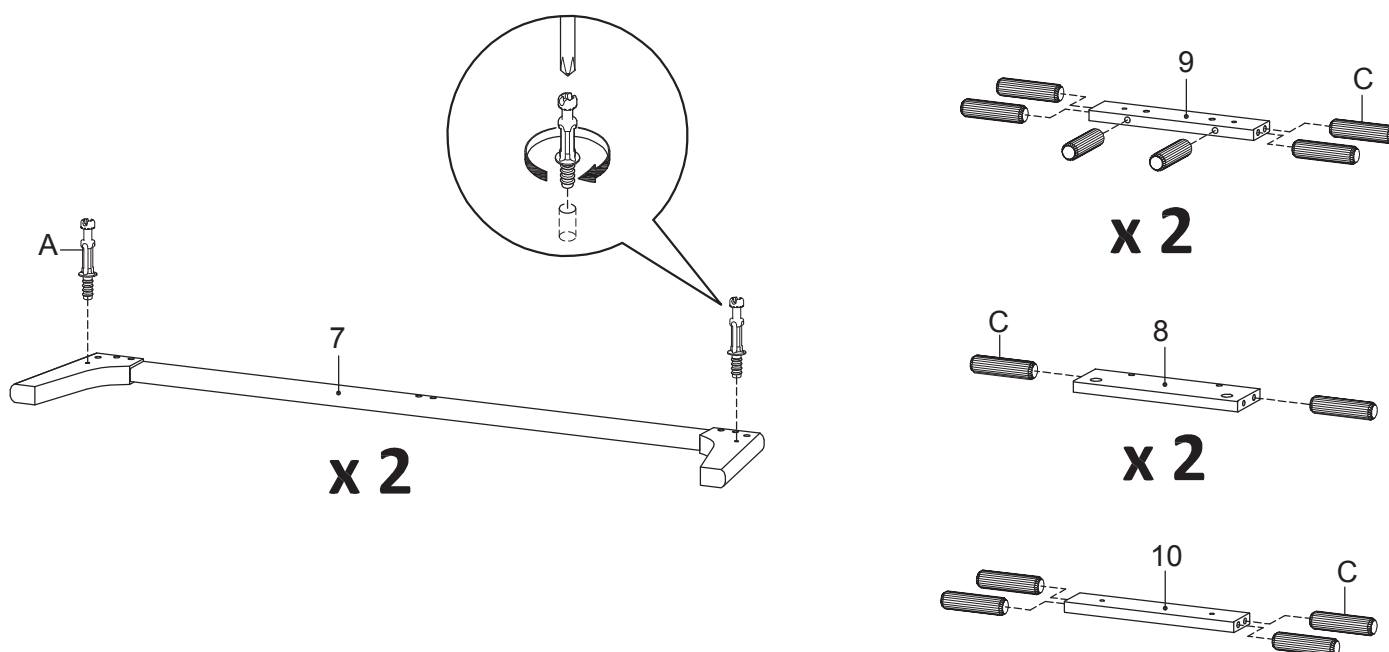
 


Hardware required. Screwdriver not included

TV STAND


STEP 5:

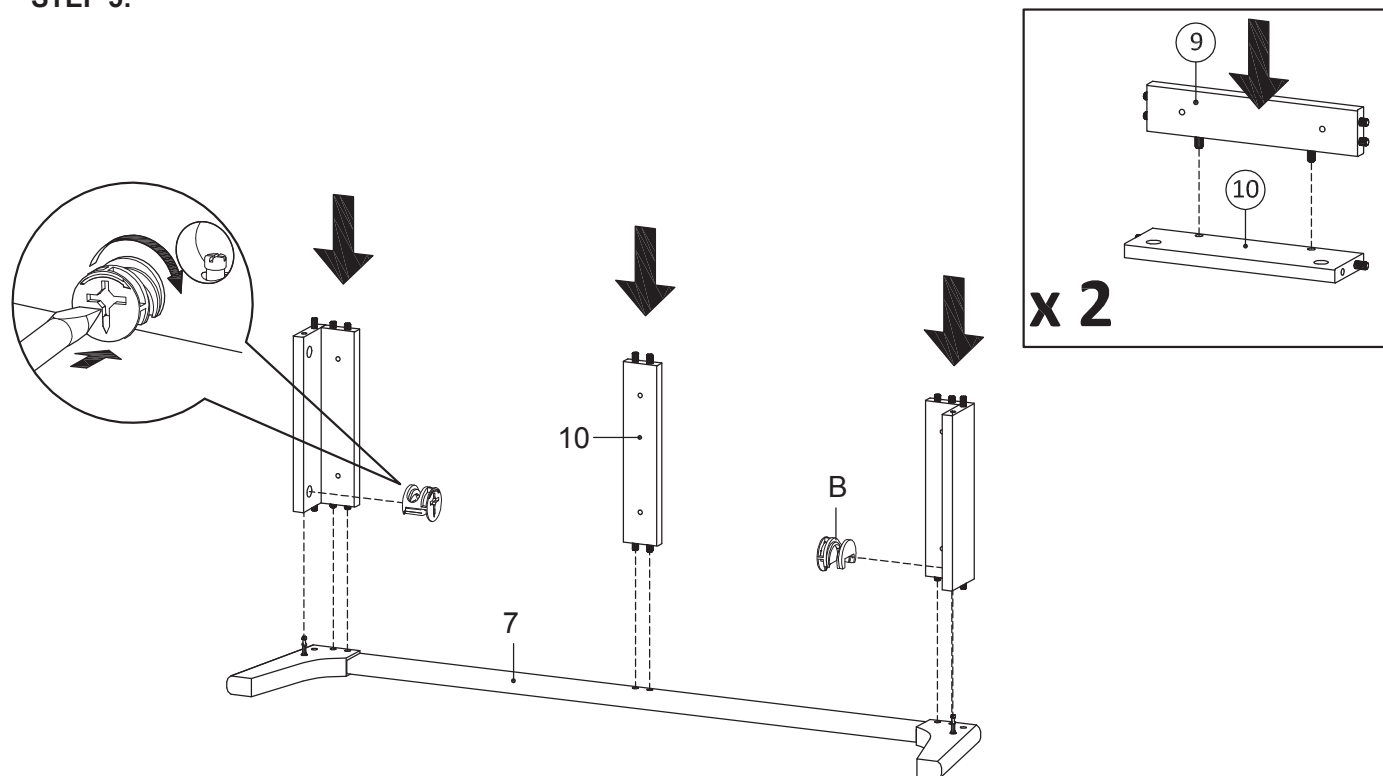



	
Bx2	Px1

 Hardware required. Screwdriver not included

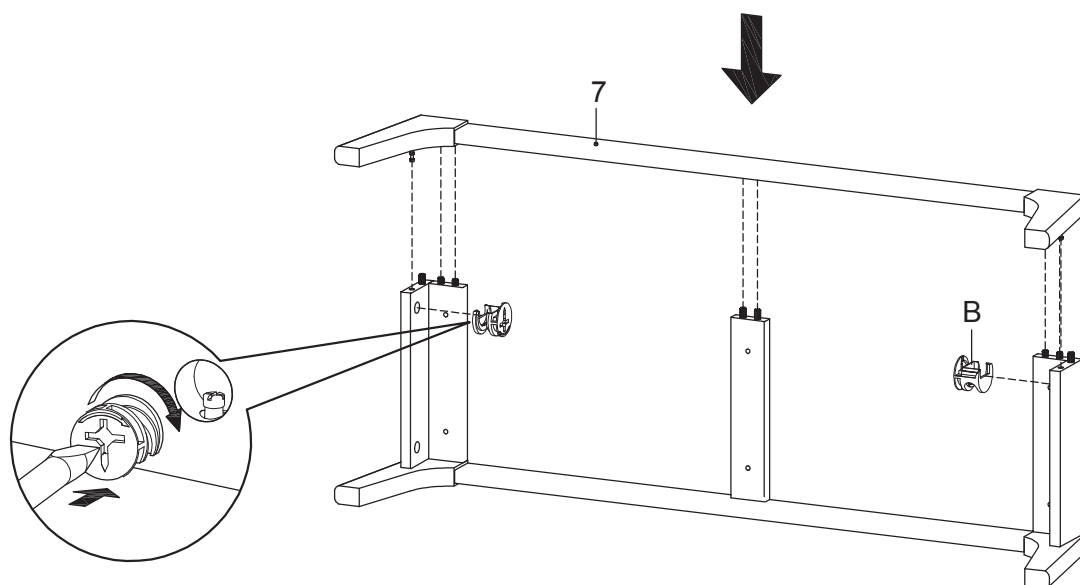STEP 6:





	
Bx2	Px1

Hardware required. Screwdriver not included

TV STAND

 
 
STEP 7:

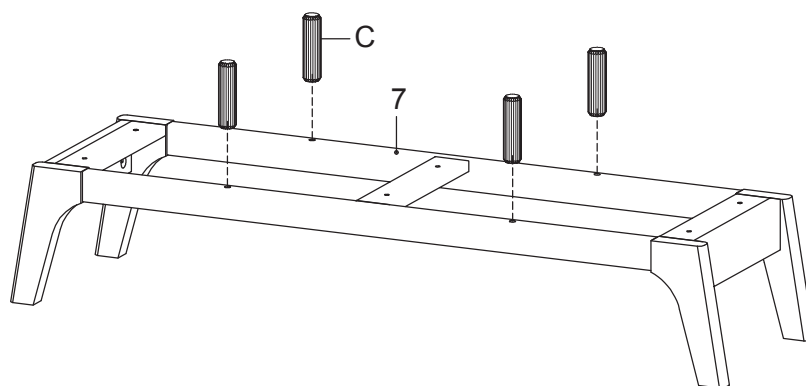

Cx4

Hardware required

  STEP 8:

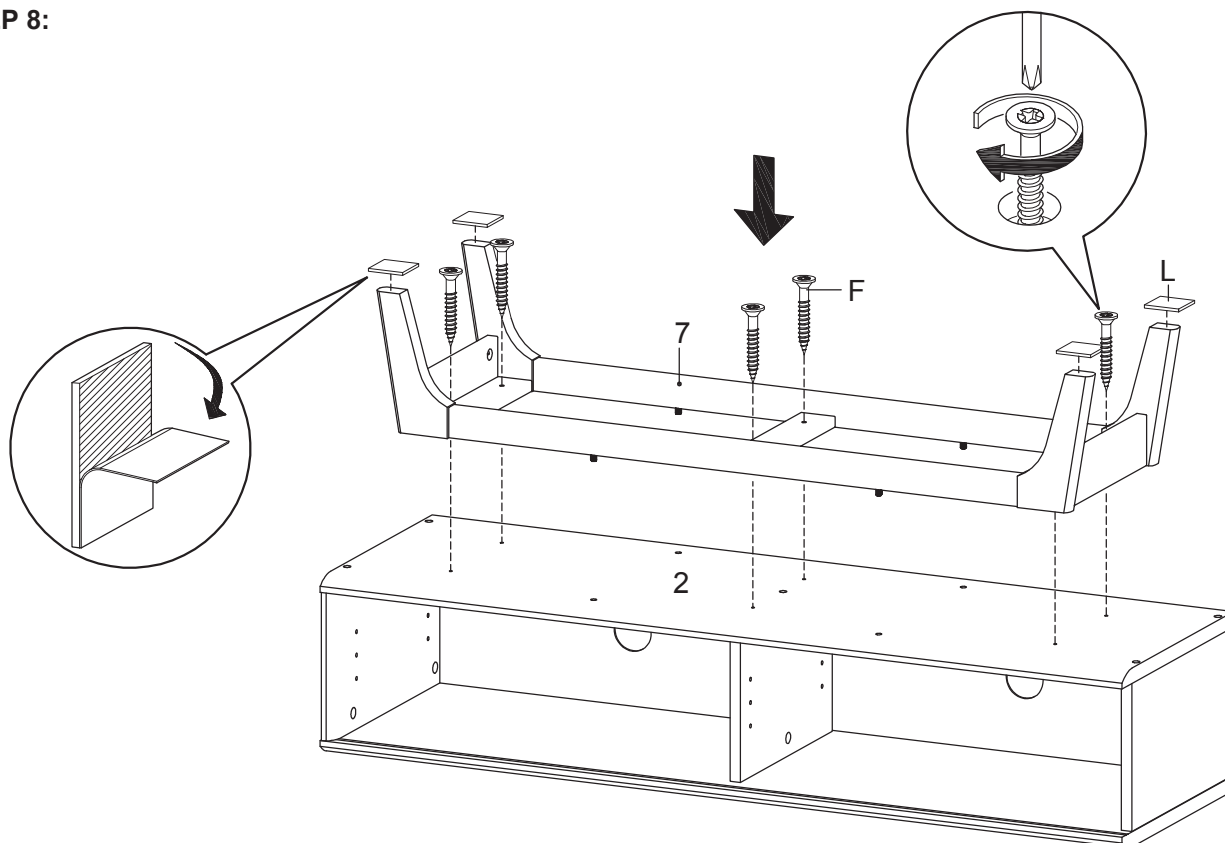



Fx6

Lx4

Px1


Hardware required. Screwdriver not included

  STEP 9:

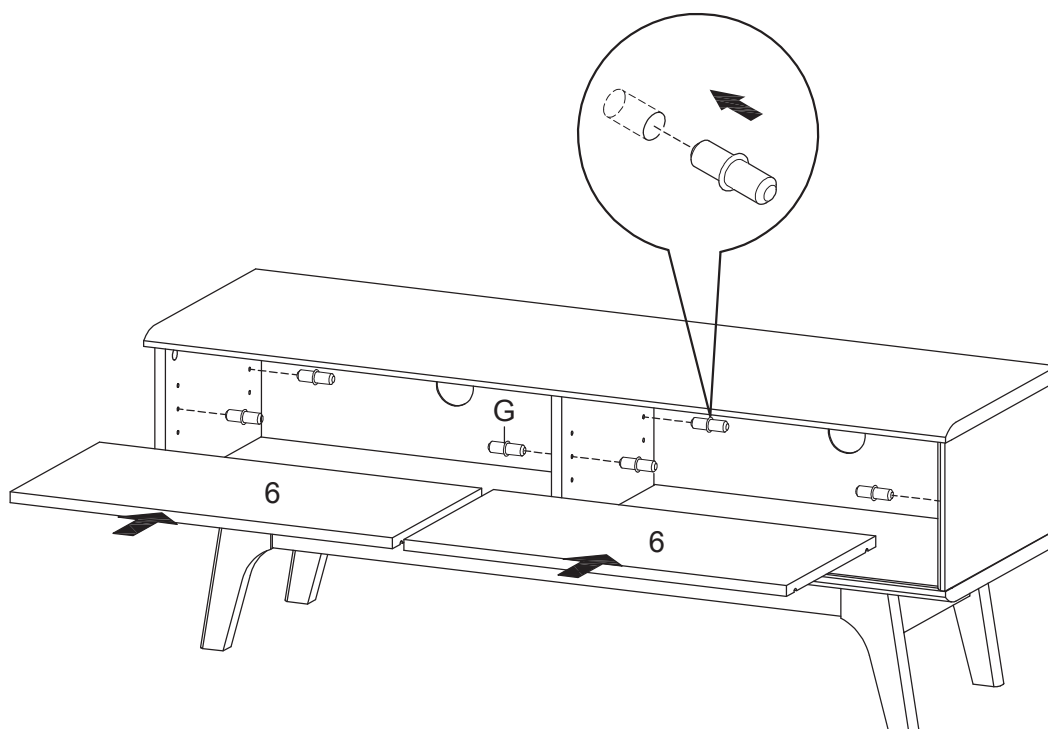

Hardware required


 
STEP 10:

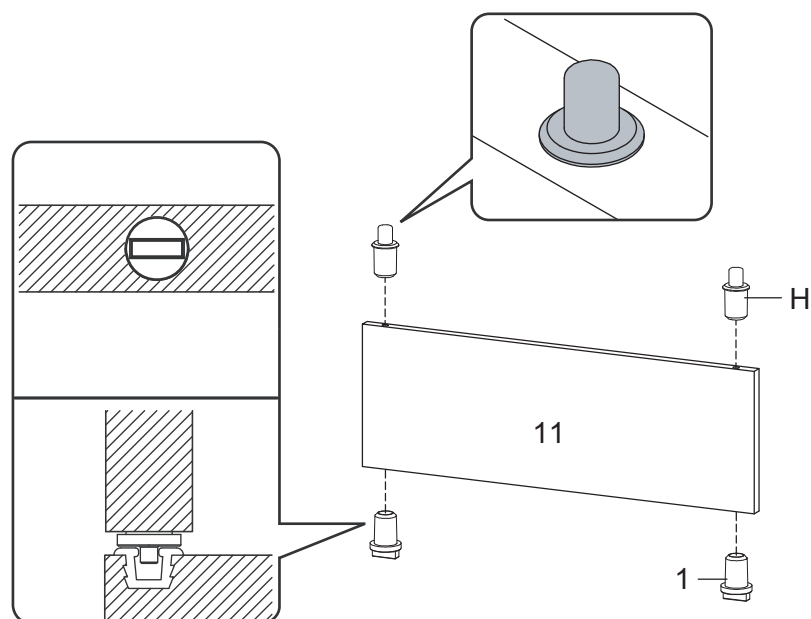

Hardware required





TV STAND

  STEP 11:

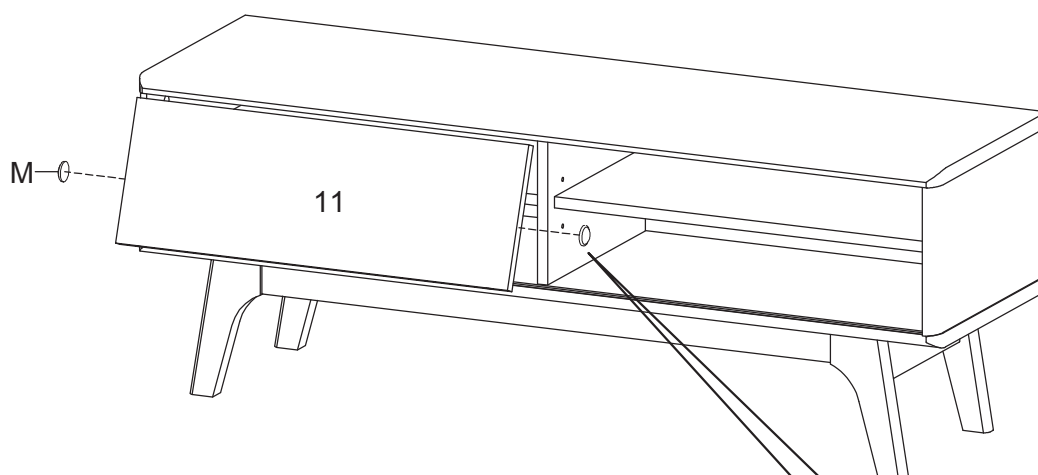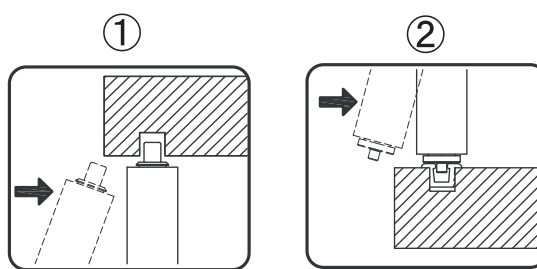

Mx2

    Hardware required

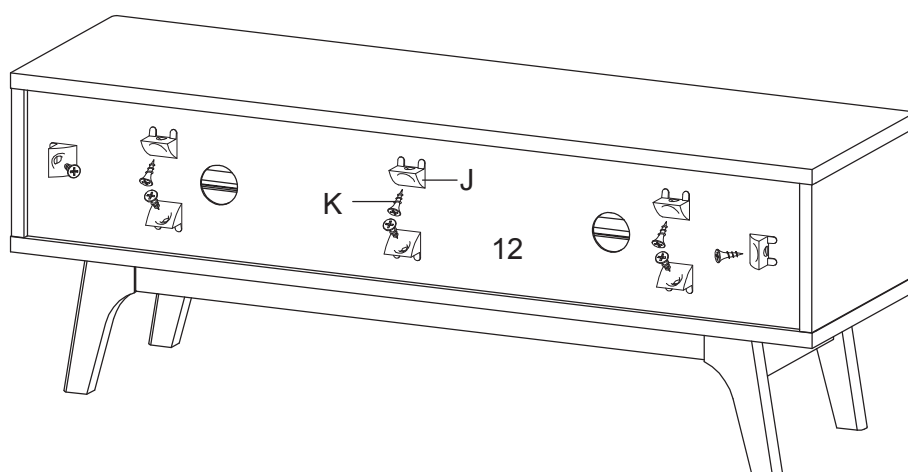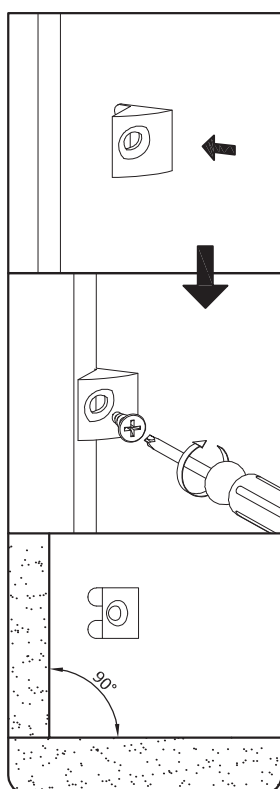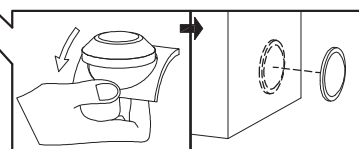


Jx8

Kx8

Px1

Hardware required. Screwdriver not included

 STEP 13:

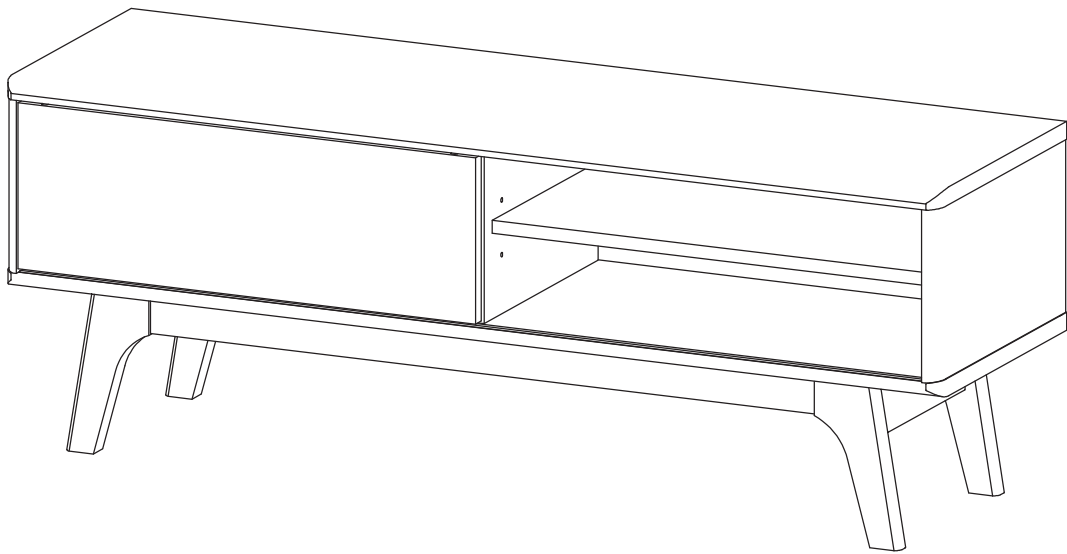

Assembly is completed. The TV Stand is ready to enjoy now !