

 
Backyard Storage Tent

Instruction

Remove all contents from packaging

How To Setup


1. Unfold and extend both Long Rods.



2. Spread the tent flat across the floor with the door of the tent facing upwards.


3. **PUSH** one of the Extended Long Rods through the sleeve at the front left corner of the tent, and out of the right side.

4. **PUSH** the remaining **Extended Long Rod** through the sleeve immediately behind the front left corner of the tent, and out of the right side.

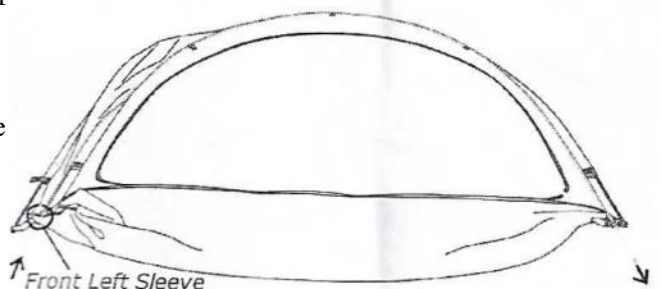

Note: The following step requires **2 PEOPLE** in order to setup.

5. Along the seam of each sleeve opening, located at the end is an Ear Slot **BOTH** open ends of **EACH** Extended Long Rods into the **Rimmed Hole** of the respective Ear, perform this for each rod one at a time.

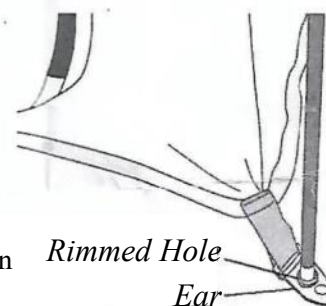


6. Unfold and extend all 5 Short Rods 7. Insert an **Extended Short Rod** in between each of the 5 slots indicated on the diagram and their corresponding hole on the front.

Note: The tips of each rod must fully protrude from each hole.

8. (When installing the tent on soil).

You can peg the tent down to the ground by inserting each of the included 4x L-Shaped Pegs into the remaining holes of each Ear.

Note: Please insert these pegs at an angle, pointing towards the tent in order to fully secure the tent to the ground.

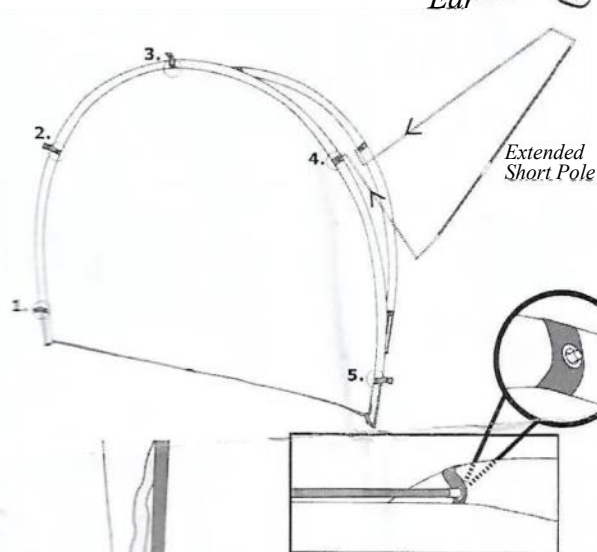

Cleanina

The product may be cleaning with a mild soap detergent as this can break down the fabric.

Safety

- This product is not intended as a children's people sleep or play in.
- Take care when assembling not to poke either yourself or other with the ends of the rods.
- Keep this product well away from naked flames and sources of heat.
- NEVER cook inside.
- NEVER store cooking equipment inside this product.
- Do not keep pets or animals in the product.
- Take care when disassembling when trying to remove rods, **push** out the rods through the sleeve.

solution. **DO NOT**

toy or as a shelter for