

About Your New Plane

Thank you for purchasing our products, we wants your child to enjoy this product for years

Input:Shown on the charge Charge time: 8-12hours,AT Most 20hours

▲ WARNING!

• The product contains small parts, which are 'or adult assembly only. Keep small children

• Always remove protective material and poly bags and dispose before assembly.

It has the potential hazards of using the ride-on electric toy in areas other than private

FOR THE SAFETY OF YOUR CHILD,

KEEP THIS GUIDE FOR FUTURE REFERENCE.

This toy contains batteries that are non-replaceable.

ALWAYS WEAR YOUR HELMET WHEN RIDING THIS PRODUCT!

ADULT ASSEMBLY REQUIRED.

away when assembling.

Never allow more than one rider.


Warning: Not to be used in traffic.


PLEASE READ ALL WARNINGS AND ASSEMBLY/USE INSTRUCTIONS.

Avoid use underburning


F 7A,Self-resetting

Keep these points in mind as you read this gude:

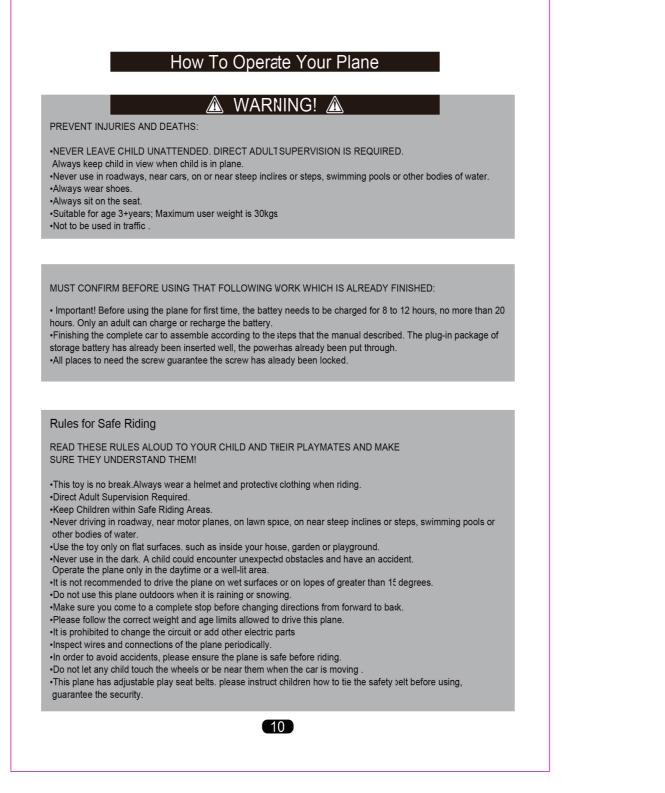

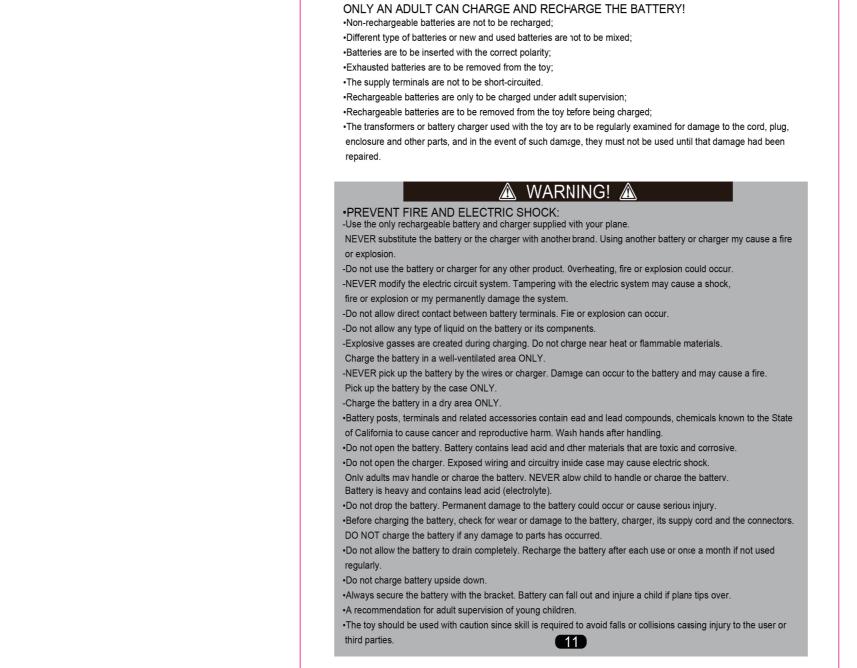

Charging Your Plane

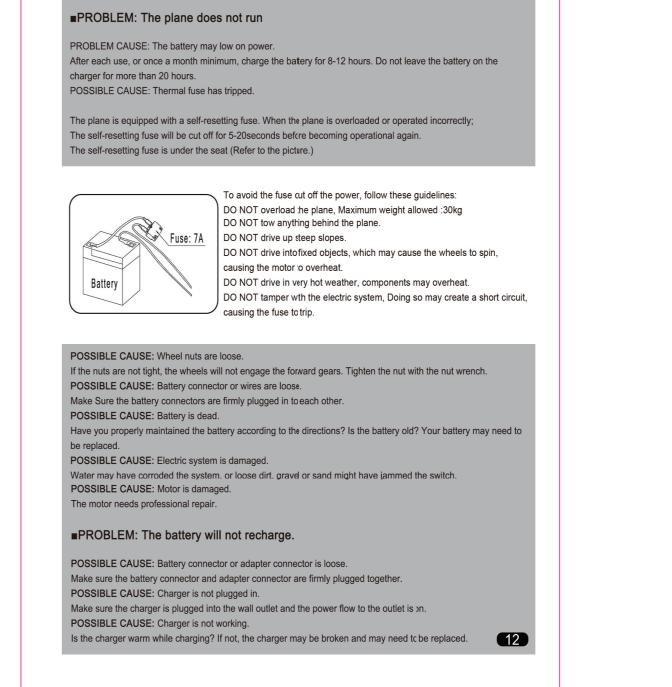

This is normal and not a cause for concern. It may also be silent when charging, which is also normal. ■PROBLEM: Charger feels warm when recharging battery. THIS IS NORMAL AND NOT A CAUSE FOR CONCERN. Maintaining Your Plane s parents' responsibility to check main parts of the toy before using, Must regularly examine for potential hazard such as the battery, charge, cable or cord, plug, screws are fastening enclosure of other parts and that in the ever of such damage, the toy must not be until that damage h₁d been properly removed. •Make sure the plastic parts of the plane are not cracked or broken. Occasionally use a lightweight oil to lubricate moving pars such as wheels. •Park the plane indoors or cover it with a tarp to protect it rom wet weather. •Keep the plane away from sources of heat, such as stoves and heaters. Plastic parts may melt. •Recharge the battery after each use. Only an adult can handle the battery. Recharge the battery at least once a month when the plane Raider is not being used. Do not wash the plane with a hose. Do not wash the plane with soap and water. Do not drive the plane in rainy or snowy weather. Water will damage the motor, electric system and battery. •Clean the plane with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax. Do not use abrasive cleaners. •Do not drive the plane in loose dirt, sand or fine gravel which could damage moving parts, motors or the electric •When not using, all the electrical source should be turn off. Turn off the power switch and disconnect the battery

■PROBLEM: The plane does not run very long.

3 to 12 hours. Do not leave the battery on the charger for more than 20 hours.

■PROBLEM: Battery buzzes or gurgles when charging.

the battery should operate for one to three years. Replace the battery with a new One.

You may not be charging the battery long enough. After each use, or once a month minimum, charge the battery for

The battery will eventually lose the ability to hold a charge. Depending on the amount of use, and varying conditions,

POSSIBLE CAUSE: Battery may be undercharged.

POSSIBLE CAUSE: Battery is old.

•Return an exhausted battery to your local approved lead-acid battery recycle, such as a local seller of automotive Contact your local waste management officials for other information regarding the environmentally sound recycling and disposal of lead-acid batteries. •The battery must be charged only by adult .Please charce the product before using! •The toy should not be connected to excessive powers (more than the quantity specified herein), and it should not be operated during charging process. Any rechargeable battery must only be charged under adult's supervision. Battery charger shall regularly check the wires, plugs. casing and other parts for damage and found damage should stop using and restored. Open the battery cover on the remote control, and put two pieces of batteries, paying attention to batteries polarity Replace the battery cover and lock with screws (please replace the battery according to the above steps and should be done by adult) . All batteries should be inserted with the correct polarity. ■Non-rechargeable battery should not be charged, please remove any running-off battery from the toy. Do not use old and new batteries together, or mix different types of batteries. •The battery charger used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they must not be used until that damage had been repaired.

ASTM F963; GB6675,GB19865; EN71 and EN62115 standard.

•Your sealed lead-acid battery must be recycled or disposed of in an environmentally sound manner.

•Do not dispose of a lead-acid battery in your regular, household trash. The incineration, land filling or mixing of

Do not dispose of your lead-acid battery in a fire. The battery may explode or leak.

sealed lead-acid batteries with household trash is prohibted by law.