


ASSEMBLY INSTRUCTIONS

ENTERTAINMENT CONSOLE

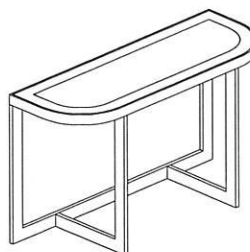

TOOLS REQUIRED:

Allen Wrench (supplied, Part # D)
Screw Driver (Not Supplied)

BEFORE YOU START:

1. Check the hardware against the hardware list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

1. Turn the top upside down on a clean soft surface.
2. Attach the back "U" leg to top using Bolt (A), Lock Washer (B) and Flat Washer (C) and tighten with the Allen Wrench (D). As Shown in Figure 1.
3. Attach two front legs to the top and back "U" leg using Bolt (A), Lock Washer (B) and Flat Washer (C) and tighten with the Allen Wrench (D). As Shown in Figure 2.
4. Tighten all bolts before setting table back upright.

Figure 1


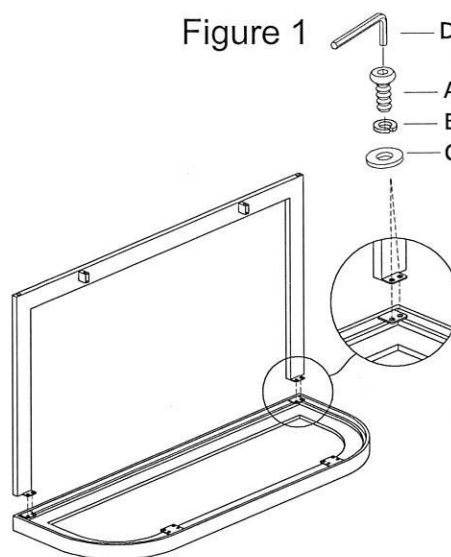


Figure 2

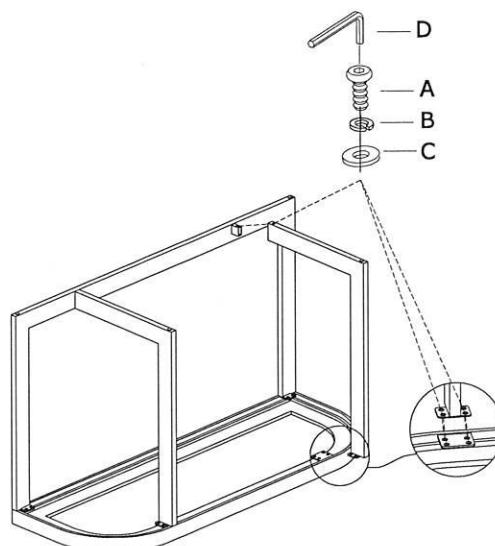

HARDWARE LIST			
NO.	Drawing	Description	Q'TY
A		Allen Bolt ($\phi 1/4$ "x1/2 ")	14pcs
B		Lock Washer $\phi 1/4$ "	14pcs
C		1/4"x5/8 Flat Washer	14pcs
D		4mm Wrench	1pc

Thank you for purchasing furniture