

TV STAND

ASSEMBLY INSTRUCTION



ASSEMBLY INSTRUCTION

 
ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.









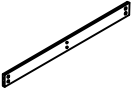
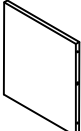
Warning !!

1. Don't attempt to repair or modify parts that are broken or defective .Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.




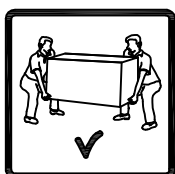

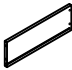

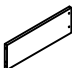



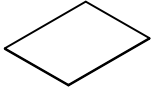


ASSEMBLY TIME PER UNIT: 30 MINUTES

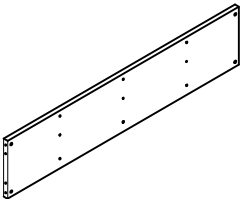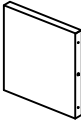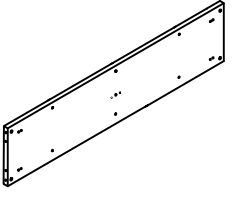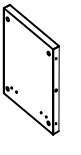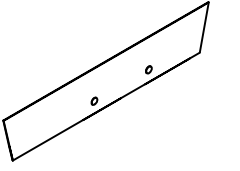



PARTS IDENTIFICATION

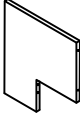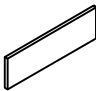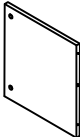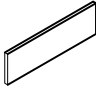(A) TOP		1 PC	(E) LEFT SIDE PANEL		1 PC
(B) BOTTOM PANEL		1 PC	(F) RIGHT SIDE PANEL		1 PC
(C) BACK PANEL		1 PC	(G) CORNER CONNECTING PIECE		4 PCS
(D) DRAWER SUPPORT BOARD		1 PC	(H) LEFT DIVIDER PANEL		1 PC


ASSEMBLY INSTRUCTION

(I) MIDDLE DIVIDER PANEL		1 PC	(O) LEFT DRAWER FRONT PANEL		1 PC
(J) RIGHT DIVIDER PANEL		1 PC	(P) RIGHT DRAWER FRONT PANEL		1 PC
(K) LEFT DOOR		1 PC	(Q) DRAWER LEFT SIDE PANEL		2 PCS
(L) RIGHT DOOR		1 PC	(R) DRAWER RIGHT SIDE PANEL		2 PCS
(M) REAR LEFT LEG FRONT RIGHT LEG		2 PCS	(S) DRAWER BACK PANEL		2 PCS
(N) FRONT LEFT LEG REAR RIGHT LEG		2 PCS	(T) DRAWER BOTTOM PANEL		2 PCS

ASSEMBLY INSTRUCTION

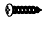
Z	HARDWARE PACKAGE		
NO	DESCRIPTION	FIGURE	Q' TY
1	LARGE CAMBOLT L=29mm		26pcs
2	LARGE CAMLOCK Ø15mm		26pcs
3	SMALL CAMBOLT L=20mm		8pcs
4	SMALL CAMLOCK ET12mm		8pcs
5	DOWEL Ø8×25mm		21pcs
6	SMALL SCREW Ø4x16mm		18pcs
7	MEDIUM SCREW Ø4x30mm		10pcs
8	EXTRA LARGE SCREW Ø4x40mm		6pcs
9	FLAT HEAD SCREW Ø8x40mm		4pcs
10	WRENCH M5mm		1pc
11	WASHER Ø8X16X2mm		4pcs
12	HINGE 301Cmm		4pcs
13	IRON LEG 80x25x152mm		1pc
14	NAIL		40pcs
15	SMALL STICKER Ø20mm		12pcs
16	LARGE STICKER Ø22mm		4pcs
17	THE RESTRAINT STRAP 197×5×1mm		1pc
18	BRACKET 12×12×1mm		2pcs
19	SMALL SCREW ø4X25mm		1pc
20	WALL SCREW ø5X40mm		1pc
21	PLASTIC ANCHOR ø8X40mm		1pc
22	GLUE		1pc

 ASSEMBLY INSTRUCTION

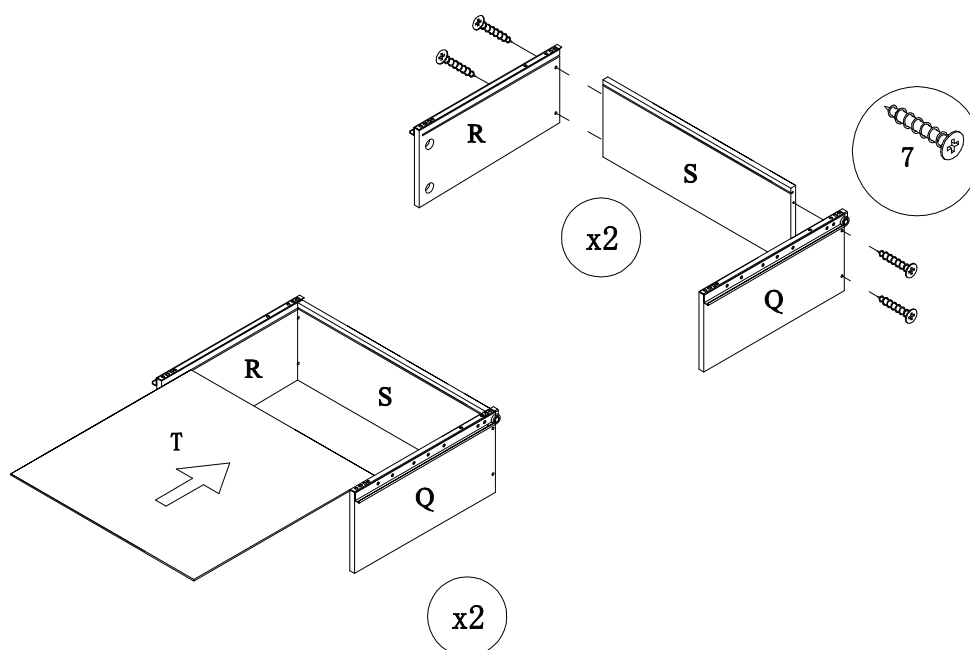


STEP1

 
STEP2

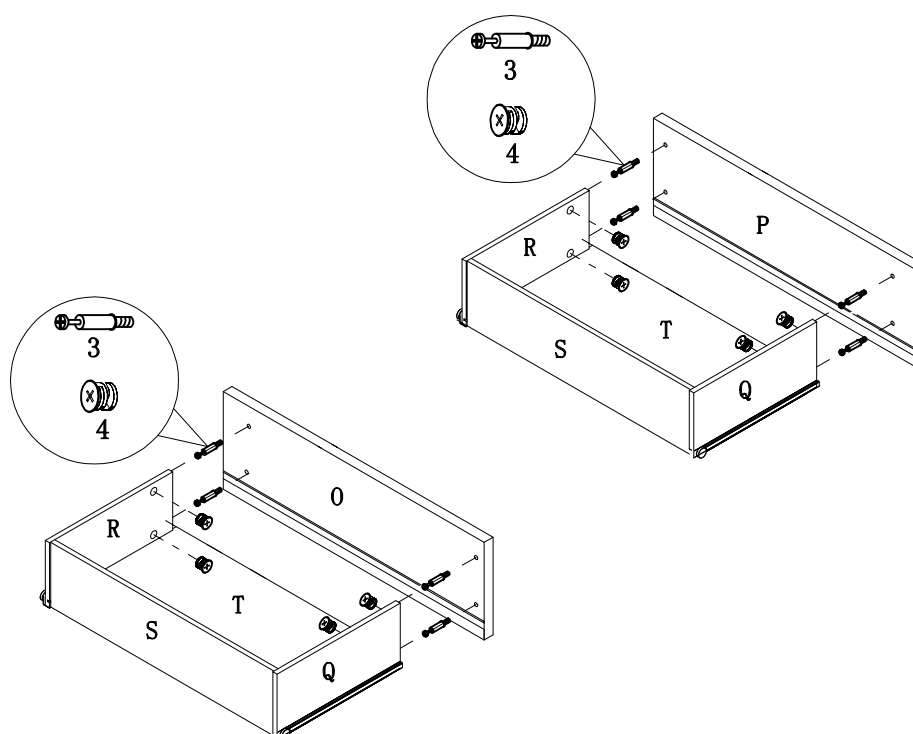

ASSEMBLY INSTRUCTION

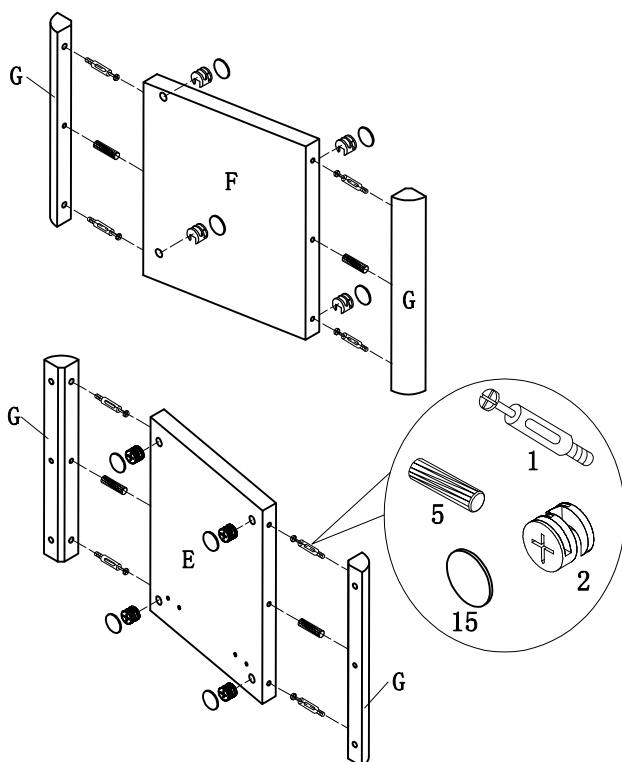 


 STEP3

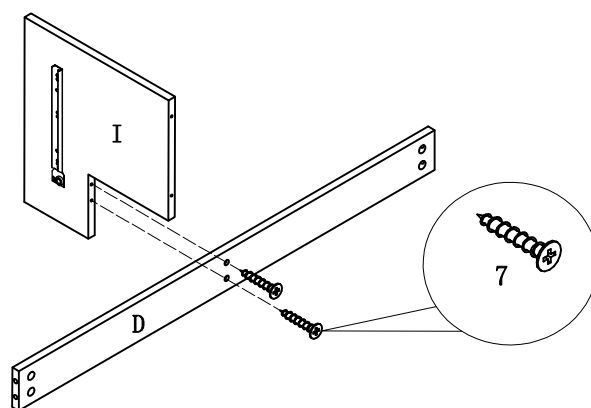


STEP4

 STEP5

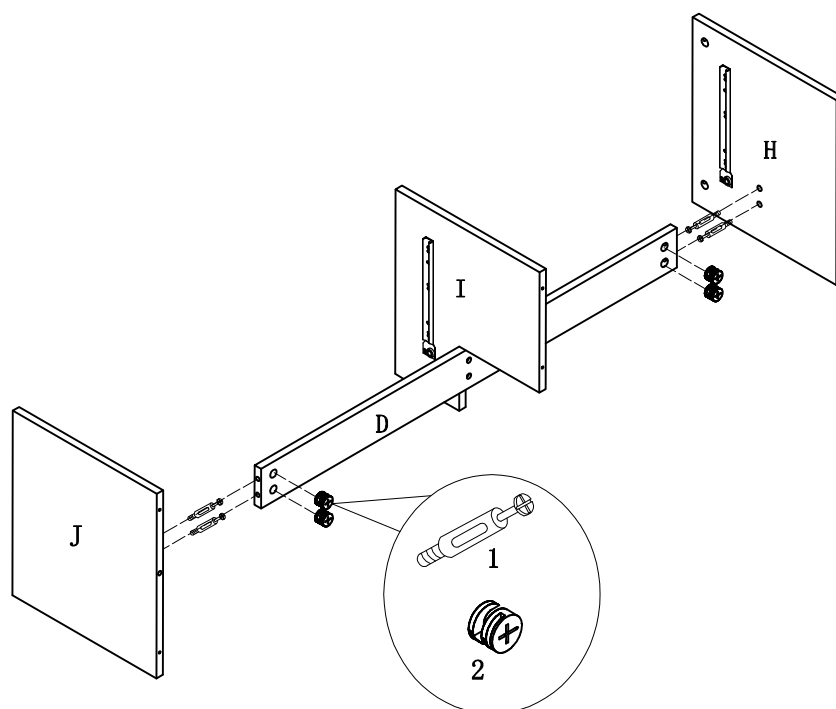


ASSEMBLY INSTRUCTION

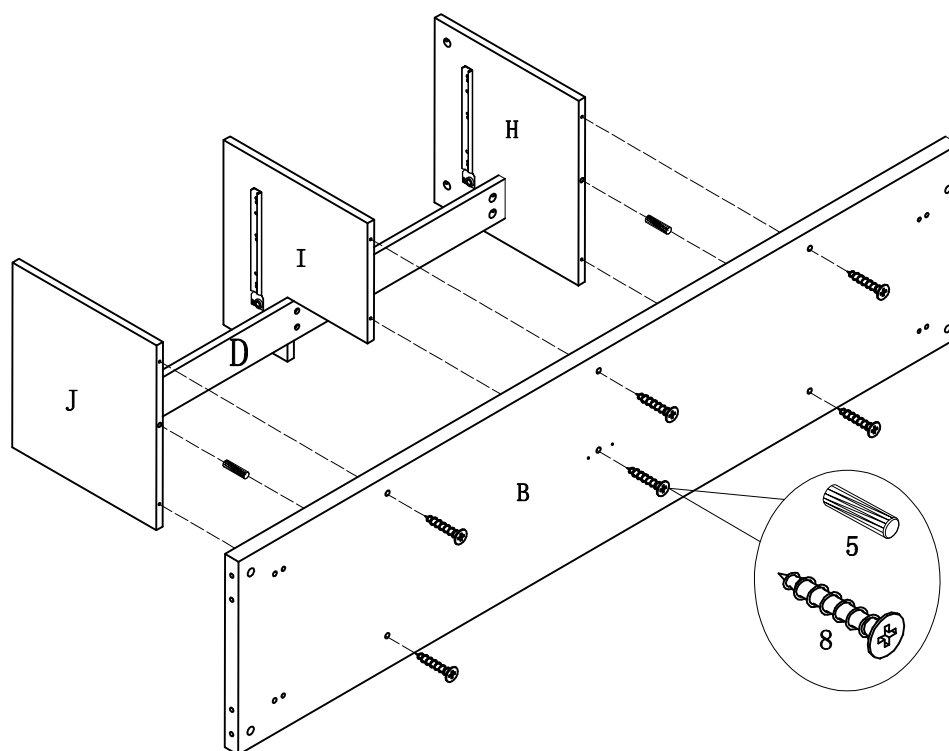 


STEP6

 STEP7

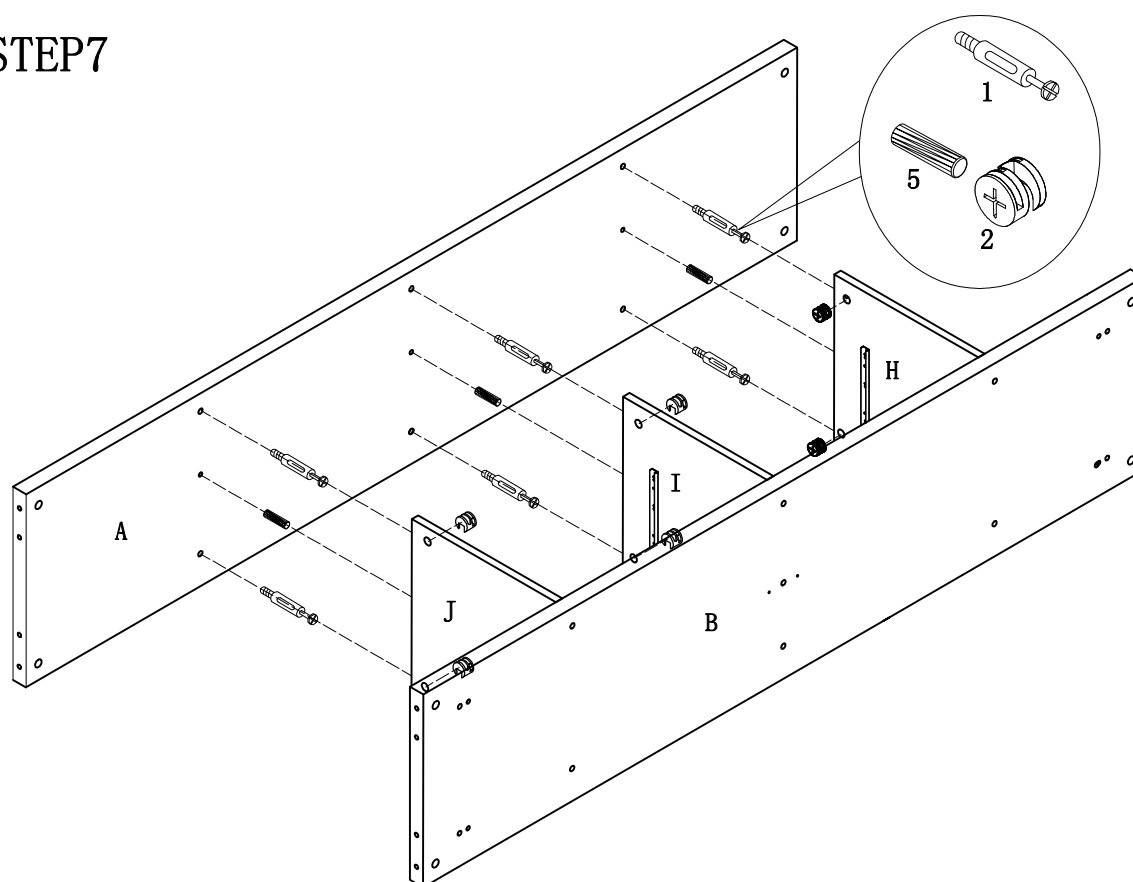


ASSEMBLY INSTRUCTION

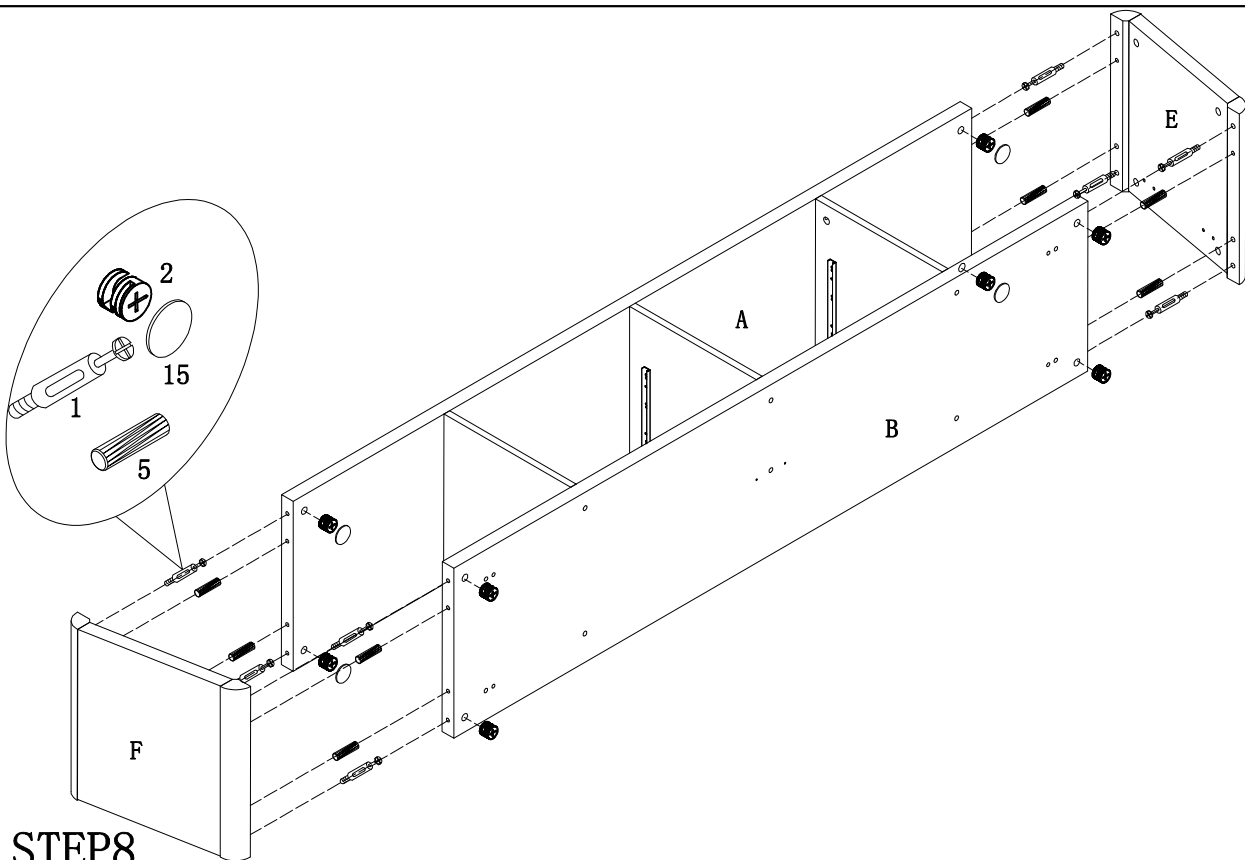 


STEP 8

 
STEP 9

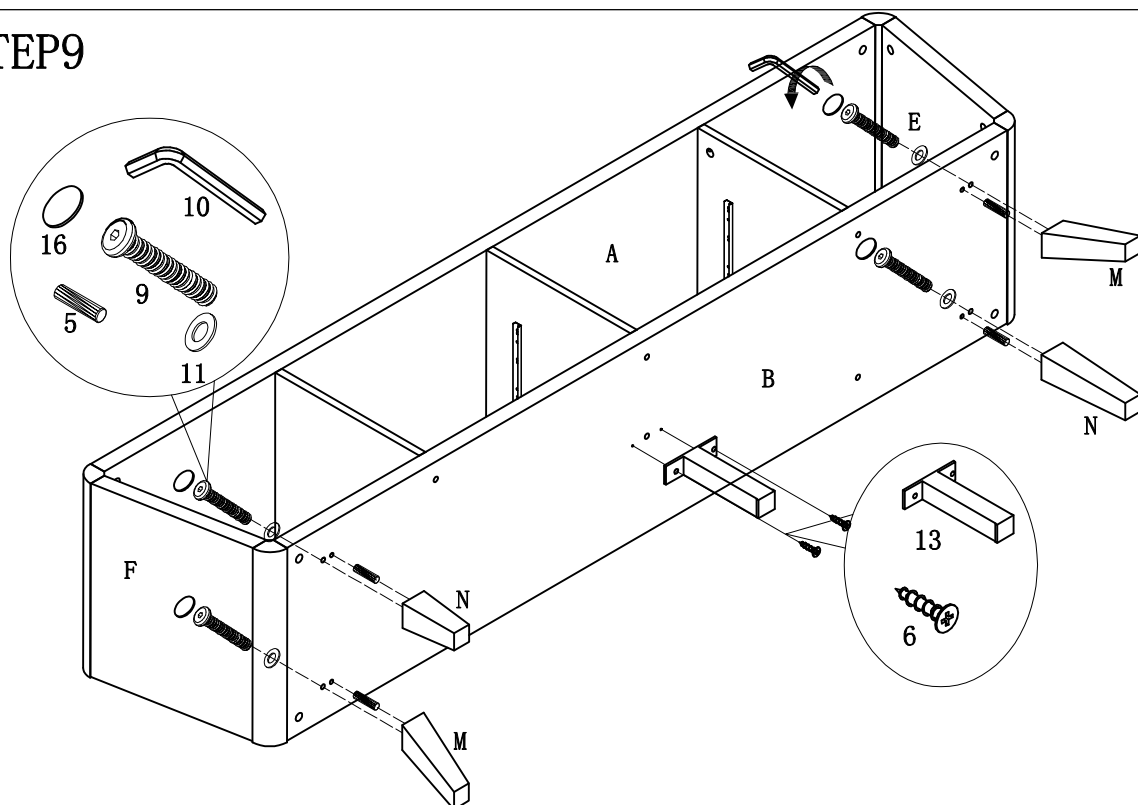

 
STEP10

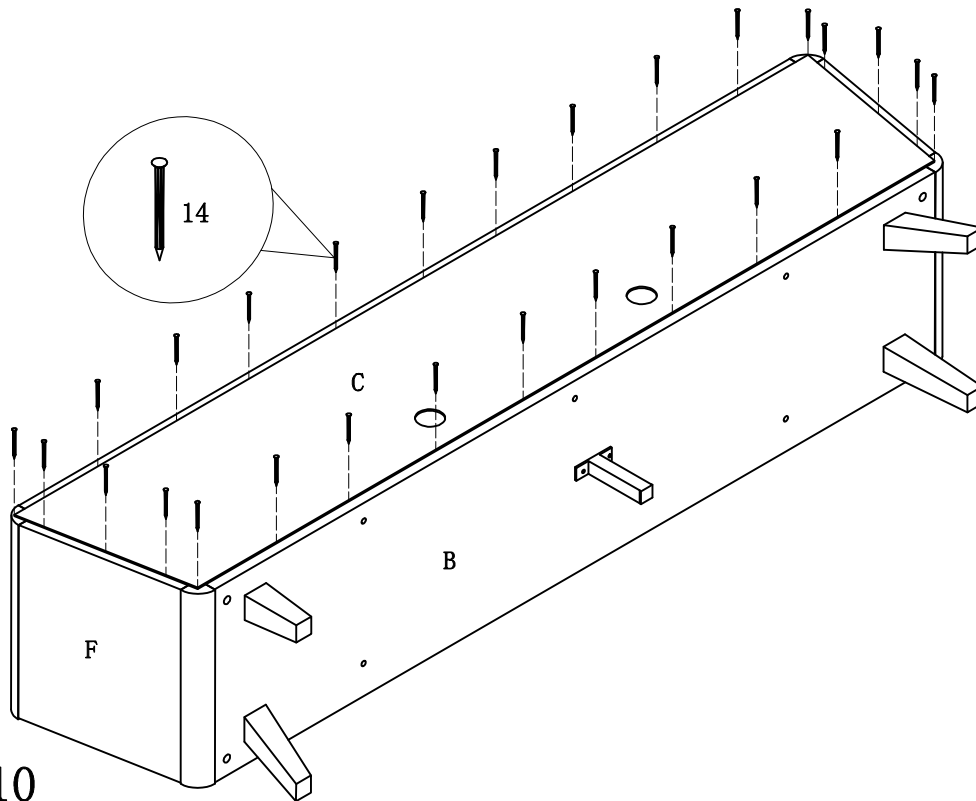

 
STEP11

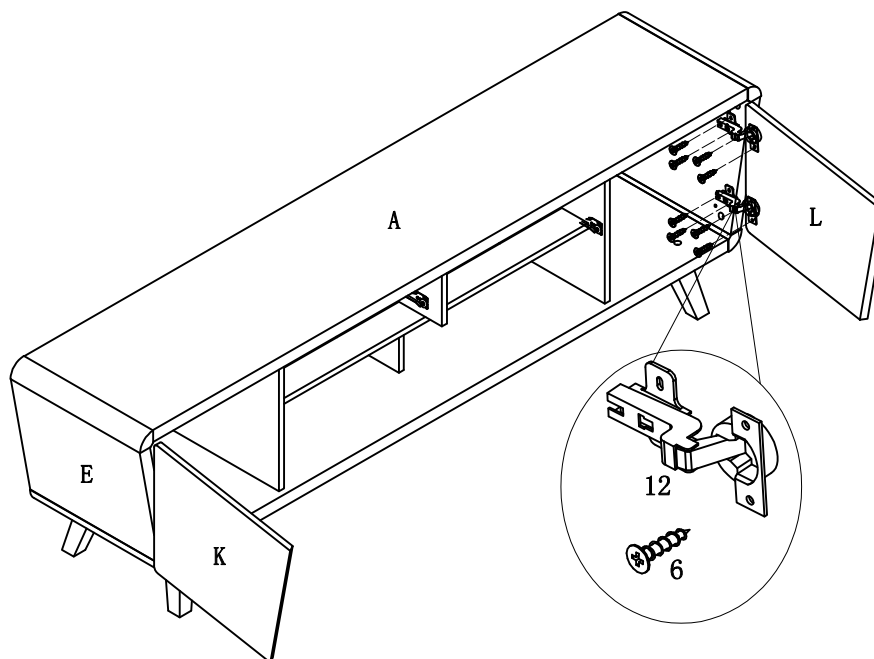

 
To adjust the door in or out, loosen this screw and push the door further in or push further out then retighten screws.

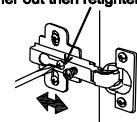

 To adjust the door vertically, loosen the top and bottom screws, push the door up or down as necessary, then retighten screws.



 To adjust the door left/right, turn this screw clockwise to move this corner of the door toward the frame, or counterclockwise to move door away from the frame.



STEP 12

