

Ewbank[®]

INSTRUCTION MANUAL

MULTISWEEP

EWPSM020 20L Manual Push Sweeper

Ewbank has a British heritage to be proud of. It's a household favourite and much loved brand that has been providing innovative cleaning solutions for over 140 years.



PO Number:

 
Important Safety Instructions3
Technical Specification4
Appliance Overview5
Installation6
Operating Instructions7
Cleaning and Maintenance8
Trouble Shooting Guide9
Ewbank Warranty Terms & Conditions 10

Safety precautions must be followed to prevent injury and damage. Please read and follow all the instructions even if you feel you are familiar with the product and find a safe place to keep this manual handy for future reference.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This product is designed for sweeping flat, dry surfaces, such as driveways, patios, concrete floors etc.
- Do not operate the product if damaged or defective in any way.
- This product should only be used for its intended use. Damage caused by improper use or repairs will invalidate the warranty.
- This product is not designed for commercial or industrial use.
- Use only accessories and genuine spare parts authorised by the manufacturer.
- Keep all packaging materials and small parts away from children as there is a risk of suffocation.
- Never clean the product with solvents.
- Store the product in a dry room.
- Do not leave the product unattended. Children should not play with the appliance and should be supervised.
- Do not use the product to pick up objects that are hot, harmful, flammable or explosive.
- Do not use the product to pick up liquids.
- Gloves should be worn to remove any sharp, metal or glass objects from the waste collection container.

TECHNICAL SPECIFICATION

Model:	EWPSM020
Sweeper Width:	650mm
Collection Container Capacity:	20 Litres
Product Size (mm):	H:975 x W:650 x D:120
Net Weight:	9.2kg

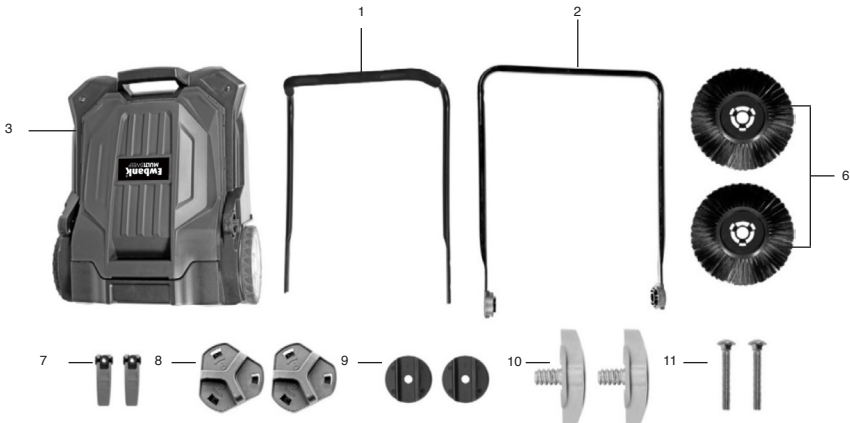


- | | | | |
|----|---------------------------------------|-----|--|
| 1. | Upper Push Bar | 7. | Upper Push Bar Release Handle (x2) |
| 2. | Lower Push Bar | 8. | Feeder Brush Caps (x2) |
| 3. | Sweeper Chassis | 9. | Upper Push Bar Support Discs (x2) |
| 4. | Wheel | 10. | Lower Push Bar Locking Mechanisms (x2) |
| 5. | Waste Collection Container | 11. | Push Bar Screws (x2) |
| 6. | Feeder Brushes (x2 Thin and x2 Thick) | | |

Open the package and remove all packaging materials. Check that all parts are present and inspect for any damage. Do not use the product if it is damaged or incomplete in any way. Contact our Customer Service Department.


Installing the Feeder Brushes

1. Position the feeder brush (6) onto the underneath of the sweeper chassis (3), as shown in figure 3.
2. To secure the feeder brush in place insert the feeder brush cap (8) into the grooves on the base (fig 4).
3. Turn the feeder brush cap as indicated to lock in place (fig 5).
4. Repeat on the other side (fig 6).
5. To remove the brushes, turn the brush caps in the opposite direction to unlock and remove, lift off the brushes.

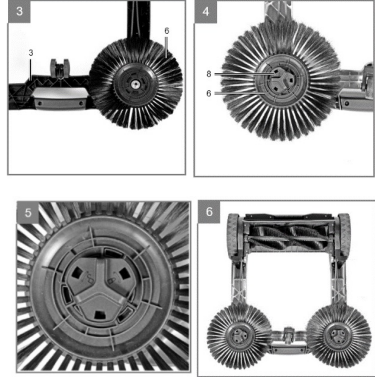

Installing the Push Bar

1. To secure the lower push bar (2), lift the bar to the desired angle and then turn the lower push bar locking mechanisms (10) until the teeth are fully interlocked (fig 7 and 8).
2. To attach the upper push bar (1) align the holes on each side with the holes in the lower push bar (2). To increase the height of the push bar, select the highest set of mounting holes on the lower push bar (2).
3. Thread the push bar screws (11) through the holes in the push bars and then screw on the upper push bar support discs (9), the ridged side should be facing towards the push bar (fig 9).
4. Screw the upper push bar release handles (7) onto the push bar screws (11), leaving enough space so that that handle can be pushed up to secure (fig 10).

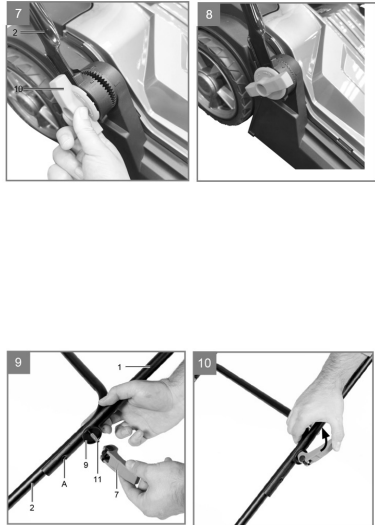

Using the Push Sweeper

Push the sweeper forward to propel the feeder brushes (6). The feeder brushes will rotate to sweep any debris/waste underneath the push sweeper. The roller brush underneath the sweeper will then push the debris into the waste collection container (5).

Depending on the type of debris to be cleared, install the most suitable set of feeder brushes.

- The thinner bristled set: best for finer debris such as dust and sand.
- The thicker bristled set: better for larger debris such as leaves and garden waste.

Emptying the Waste Collection Container

To empty the waste collection container, lift the container (5) upwards from the sweeper chassis (3) using the handle (fig 11). Tip slowly to empty into a waste container. Replace back into the sweeper chassis, making sure the container is properly in place.


WARNING: Dust can be hazardous to health, wear a dust mask when emptying the waste collection container.



Collapsing for Storage

The push sweeper handle can be folded in the below ways to suit your space available.

1. To fold the lower push bar, loosen the lower push bar locking mechanisms (10) unlocking the teeth, so that the push bar can be lowered (fig 12). Re tighten the lower push bar locking mechanisms to secure in the folded position.
2. The upper push bar can also be folded in this position. To do this lift the upper push bar release handles (7) and fold the upper push bar over the sweeper chassis.
3. Alternatively, leave the lower push bar (2) locked in the upright position and just fold down the upper push bar (1) by lifting the upper push bar release handles (7) and then folding down the upper push bar (fig 13).

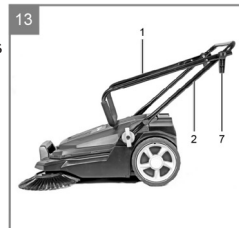

- Empty the waste collection container after each use.
- Keep the guards and air vents as clear from dust and dirt as possible.
- Clean the appliance regularly with a damp cloth and soap.
- It is recommended to clean the appliance after every use.

WARNING: Do not use detergents or solvents to clean the appliance as they could damage the plastic parts. Take care to make sure that no water gets inside the appliance.

Storage

It is recommended to store the sweeper in its original packaging. Store the sweeper in a dark, dry, frost-free place. The temperature should be between 5-30°C.

If you experience difficulties with the appliance, please check the suggestions below before contacting customer services on 01473 271272:

Problem	Possible Cause	Solution
Pushing the appliance is not easy and the rotation of the wheels is not smooth.	Lift the appliance to check the wheels and chassis for obstruction.	Remove any debris from around the wheel.
The feeder brush is not turning properly when pushed.	Lift the appliance to check for large debris.	Remove any large debris that cannot be swept up.
When the appliance is pushed the wheels do not rotate they slide.	The ground is flat or smooth or there is water on the ground. The wheels need friction to turn.	The appliance cannot work on surfaces that are too smooth or damp.

Ewbank[®]

Ewbank Warranty Terms & Conditions

This product is guaranteed for a period of 24 months as standard from the date of purchase against defects.

To qualify for the warranty, the product must be used for domestic household use only and in accordance with the instructions in the user manual. Any misuse of the product will result in the warranty being void.

The warranty does not cover accidental damage, misuse, neglect, tampering or incorrect adjustment or installation.

The warranty will be rendered invalid if the product is resold, has had its serial number removed (or has an invalid serial number), or if an unauthorised person has carried out any repairs or alterations.

The warranty does not cover accessories or consumable parts that require replacement under normal use. This includes shelving, dials, filters, belts and trays etc.

In the unlikely event of a breakdown please refer to the Troubleshooting guide in your user manual.

If you still require assistance please contact our Customer Service department on **01473 271 272** or write to us at the following address:

**Customer Service Department
Ewbank, 38 Bluestem Road,
Ipswich, Suffolk, IP3 9RR**

Please quote the Product Code and the PO Number on the front of this instruction manual and give details of the exact fault. We will then decide whether to repair or replace the item.

Before we arrange the repair or replacement you will be required to return a copy of your proof of purchase. Please retain your original.

If an item is replaced within the agreed warranty period, the warranty for the replacement item will be calculated from the purchase date of the original.

In the event that the product is inspected and no fault is found or the product is not within the warranty period you will be charged for the repair and any carriage costs.



Your Guarantee

This product is covered by a 2 year guarantee.

This does not cover normal wear and tear or abuse.

For guarantee purposes, please retain your original receipt as proof of purchase.

This guarantee does not affect your statutory rights.

For spares, service and further information please contact;

UK Address: Ewbank, 38 Bluestem Road, Ipswich, Suffolk, IP3 9RR

EU Address: Castle Electrical Factors Ltd., Dundalk, A91 KA9R, IR

Tel: 01473 271 272

Disclaimer: Ewbank operate a policy of continual improvement and development.

We therefore reserve the right to change/alter the specification and appearance of our appliances without prior notice.

All diagrams and images shown in this manual are for illustration purposes only.