 
 


INSTRUCTION

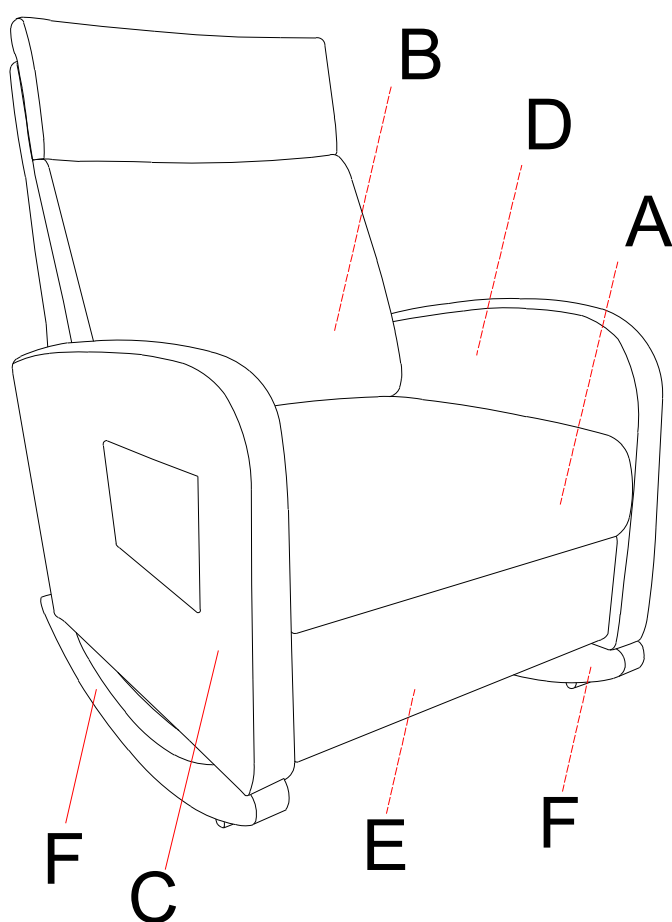

 
sofa

PARTS LIST

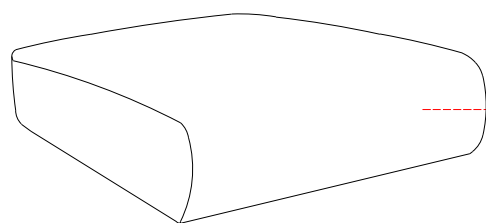


A X 1pc

Seat

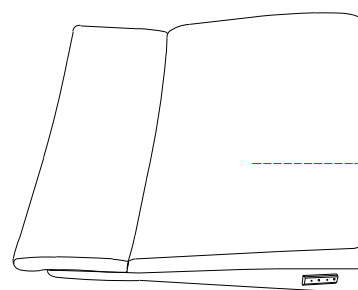


B X 1pc

 Backrest

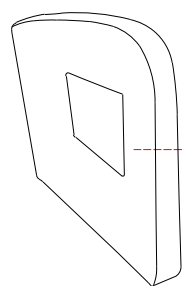


C X 1pc

 Left arm

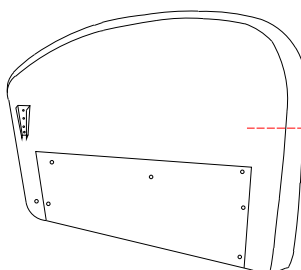


D X 1pc

 Right arm

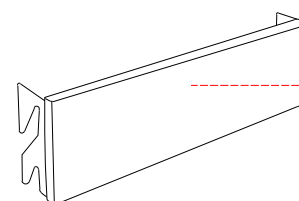


E X 1pc

 Bar

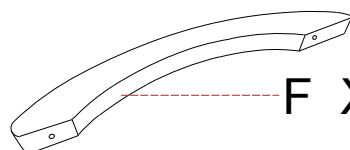


F X 2pc

 Legs

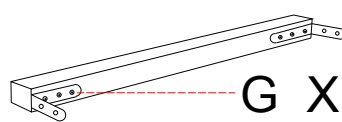


G X 1pc

 Support

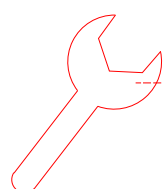


H X 1pc

 Wrench

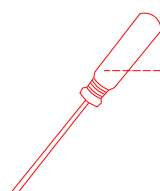


I X 1pc

 
Screwdriver

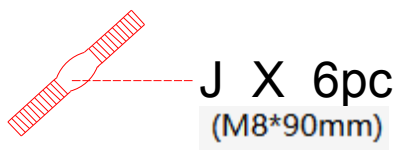


J X 6pc
(M8*90mm)
Long screw

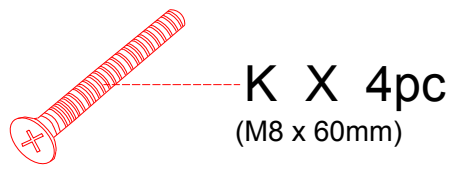 


K X 4pc
(M8 x 60mm)
Screws

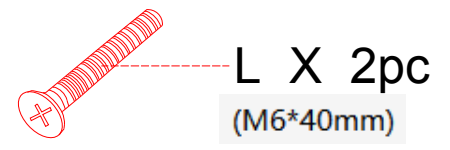 


L X 2pc
(M6*40mm)
Screws

 


M X 4pc
(M8 x 25mm)
screws

 


N X 4pc
(M6 x 20mm)
Screws

 


O X 6pc
Nuts

 


P X 10pc
(M8 x 17mm)
Washers

 

Q X 10pc
Spring washer

 



R X 2pc
(M6x18mm)
Washers

 


S X 2pc
Spring washer

STEP 1

  Ship by 1 box

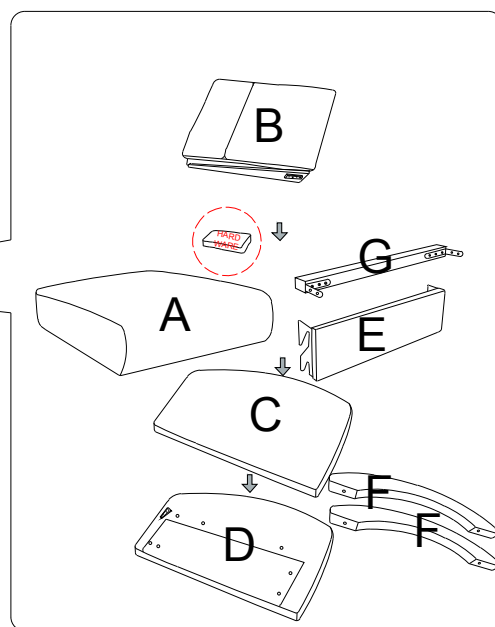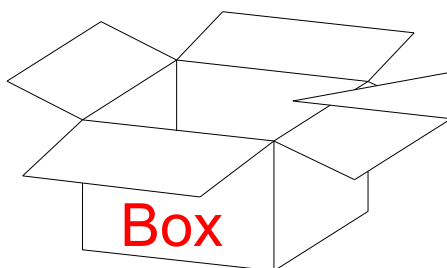


HARDWARE

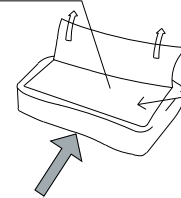 


- J x 6PC
- O x 6PC
- P x 10PC
- Q x 10PC
- K x 4PC
- N x 4PC
- M x 4PC
- L x 2PC
- R x 2PC
- S x 2PC
- H x 1PC
- I x 1PC

 STEP 2

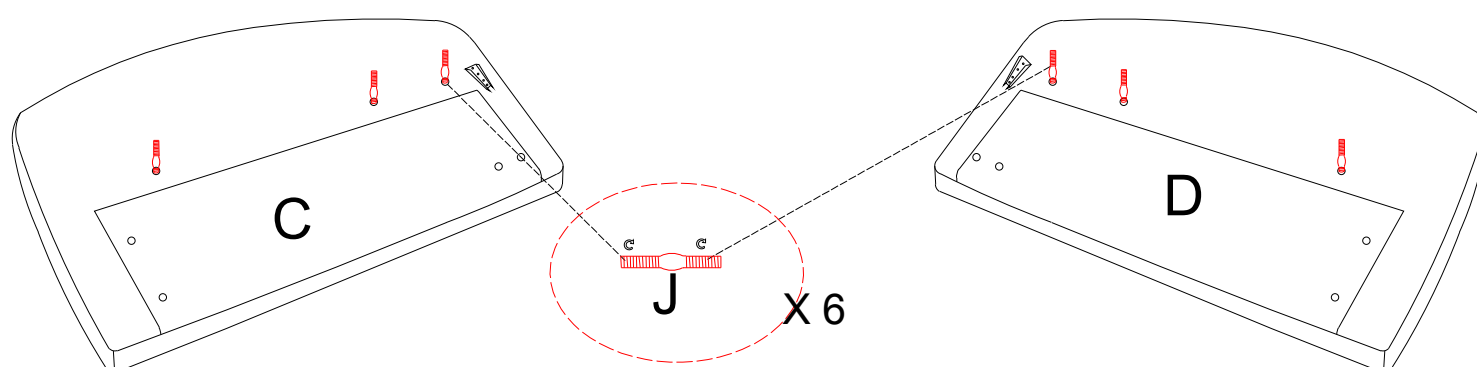


DO not over-tighten the screws DURING assembly

 STEP 3

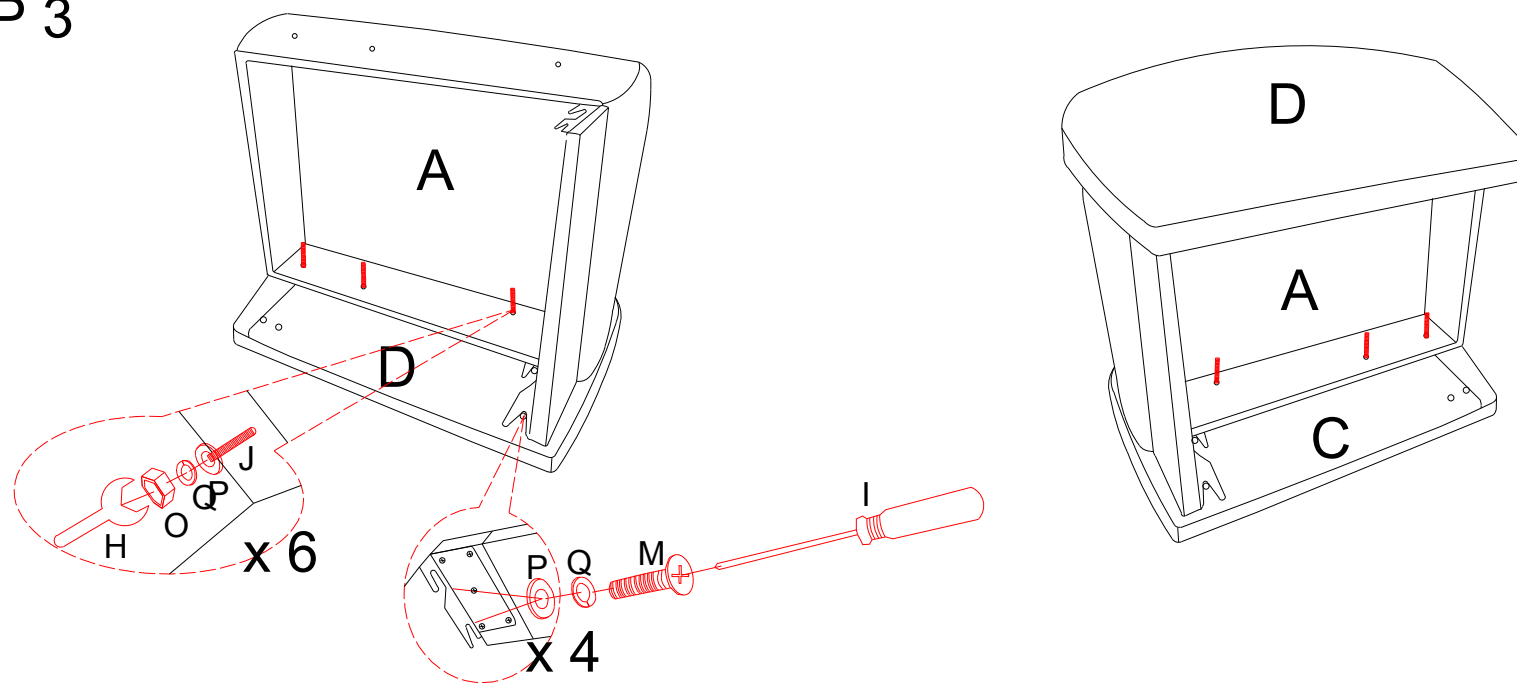

 STEP 4

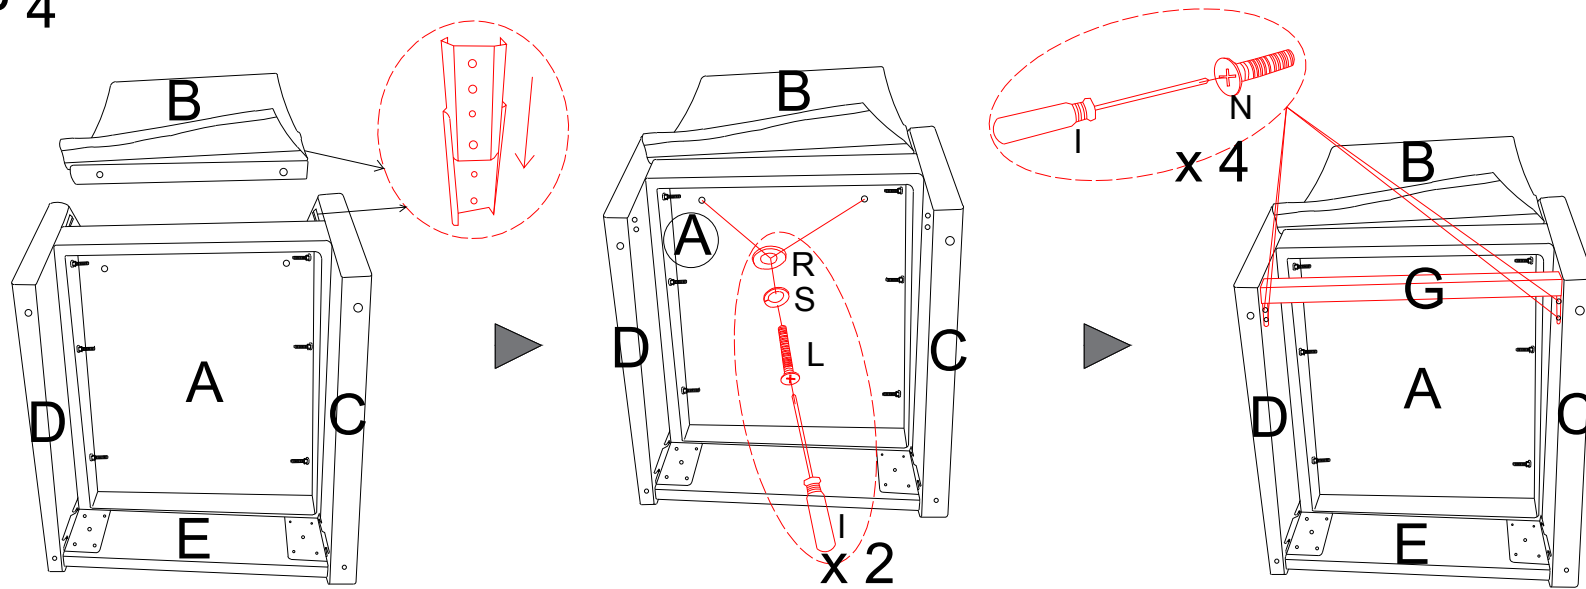

STEP 5

