


Barber Chair

 



 

OWNER'S MANUAL



CAUTION! Please read through this manual before assembling, installing or using the product to ensure safe and correct use.

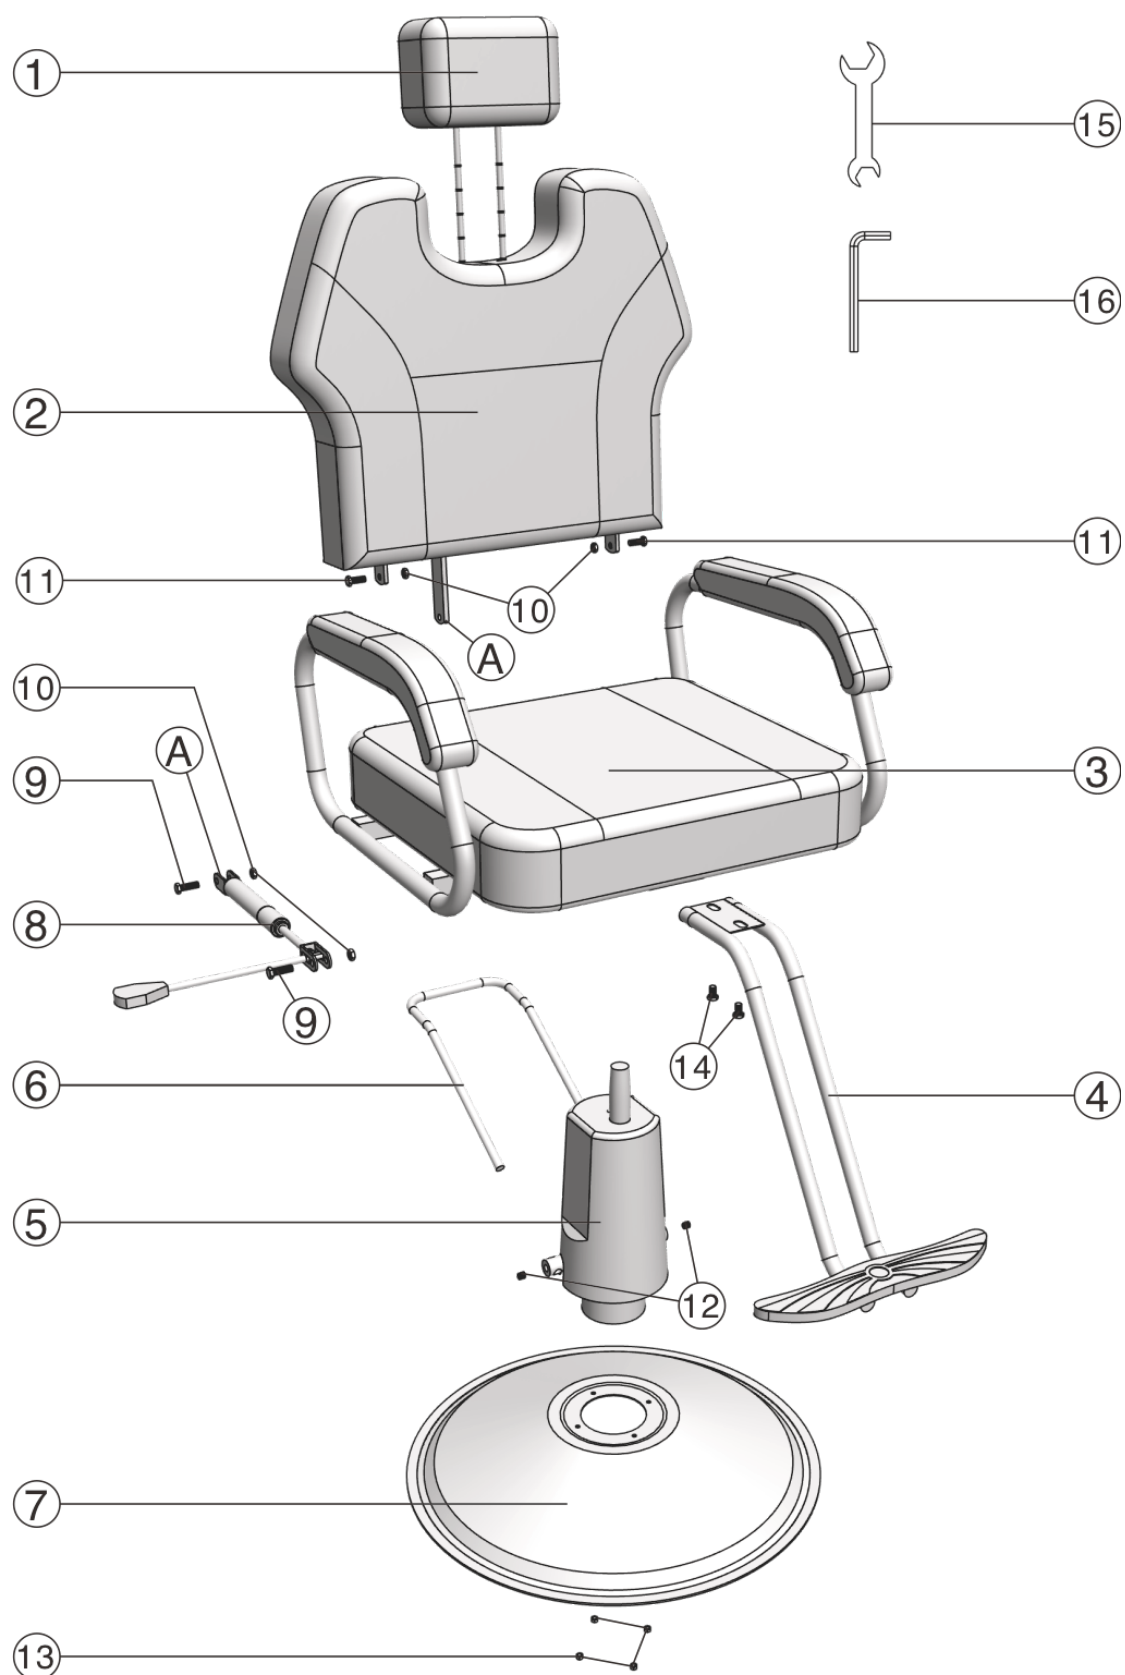

Parts

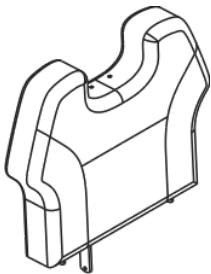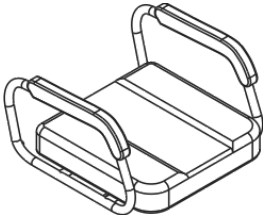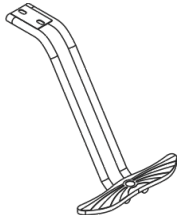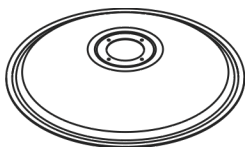Code	Image	Parts Name	Qty(Pcs)	Code	Image	Parts Name	Qty(Pcs)
1		Headrest	1	2		Backrest	1
3		Seat	1	4		Footrest	1
5		Oil Pump	1	6		Foot Pump Rod	1
7		Base	1	8		Reclining Aero bar	1
9		Hex Screw M8*30	2	10		Hex Nut M8	4
11		Hex Screw M8*25	2	12		Lock Nut M8	2
13		Hex Nut M6	4	14		Hex Screw M8*16	2


Tools

Code	Image	Tools Name	Qty(Pcs)
15		Wrench	1
16		Allen Key	1

Installation Diagram

Step One:


Open the wooden box and take out the Oil Pump ⑤, unscrew the four Hex Nuts M6 ⑬ from the bottom of the Oil Pump ⑤ for later use.

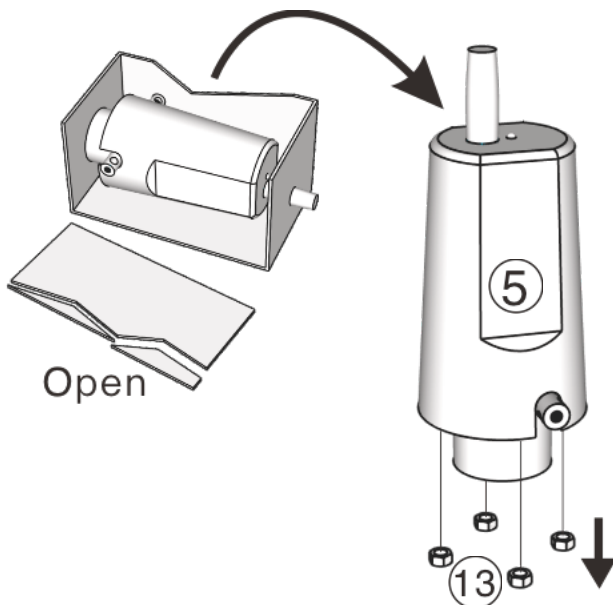

Four Hex Nuts M6 ⑬ were pre-installed on the bottom of the Oil Pump ⑤


Step Two:

Install the Base ⑦ to the bottom of the Oil Pump ⑤ and tighten the four Hex Nuts M6 ⑬.

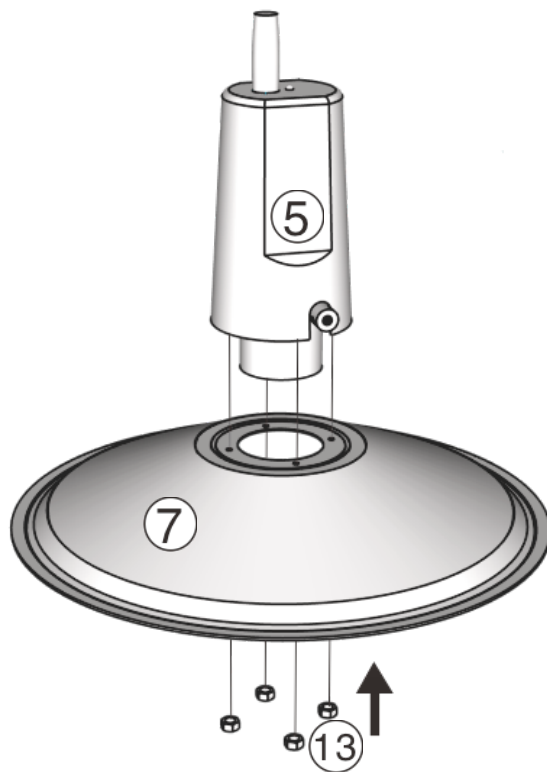

Step Three:


Loosen the two Lock Nuts M8 ⑫, install the Foot Pump Rod ⑥ to the Oil Pump ⑤, and tighten the two Lock Nuts M8 ⑫ to fix the Foot Pump Rod ⑥.

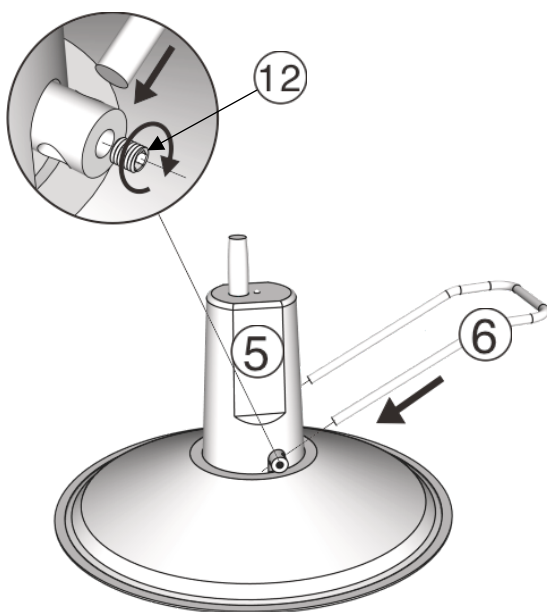

Two Lock Nuts M8 ⑫ were pre-installed on Oil Pump ⑤

Step Four:


The Base ⑦ and Oil Pump ⑤ are installed and set aside for later use.

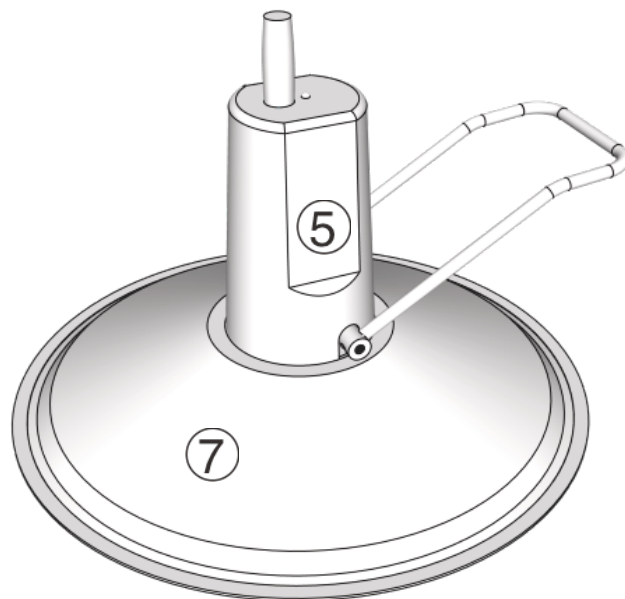

Step Five:

Connect the Backrest ② to the Seat ③ with two Hex Screws M8*25 ⑪ and Hex Nuts M8 ⑩, secure the Reclining Aerobar ⑧ to the Backrest ② and bottom of Seat ③ with 2 Hex Screws M8*30 ⑨ and Hex Nuts M8 ⑩

Caution: the A end of Reclining Aerobar ⑨ is connected to the A end of Backrest ②

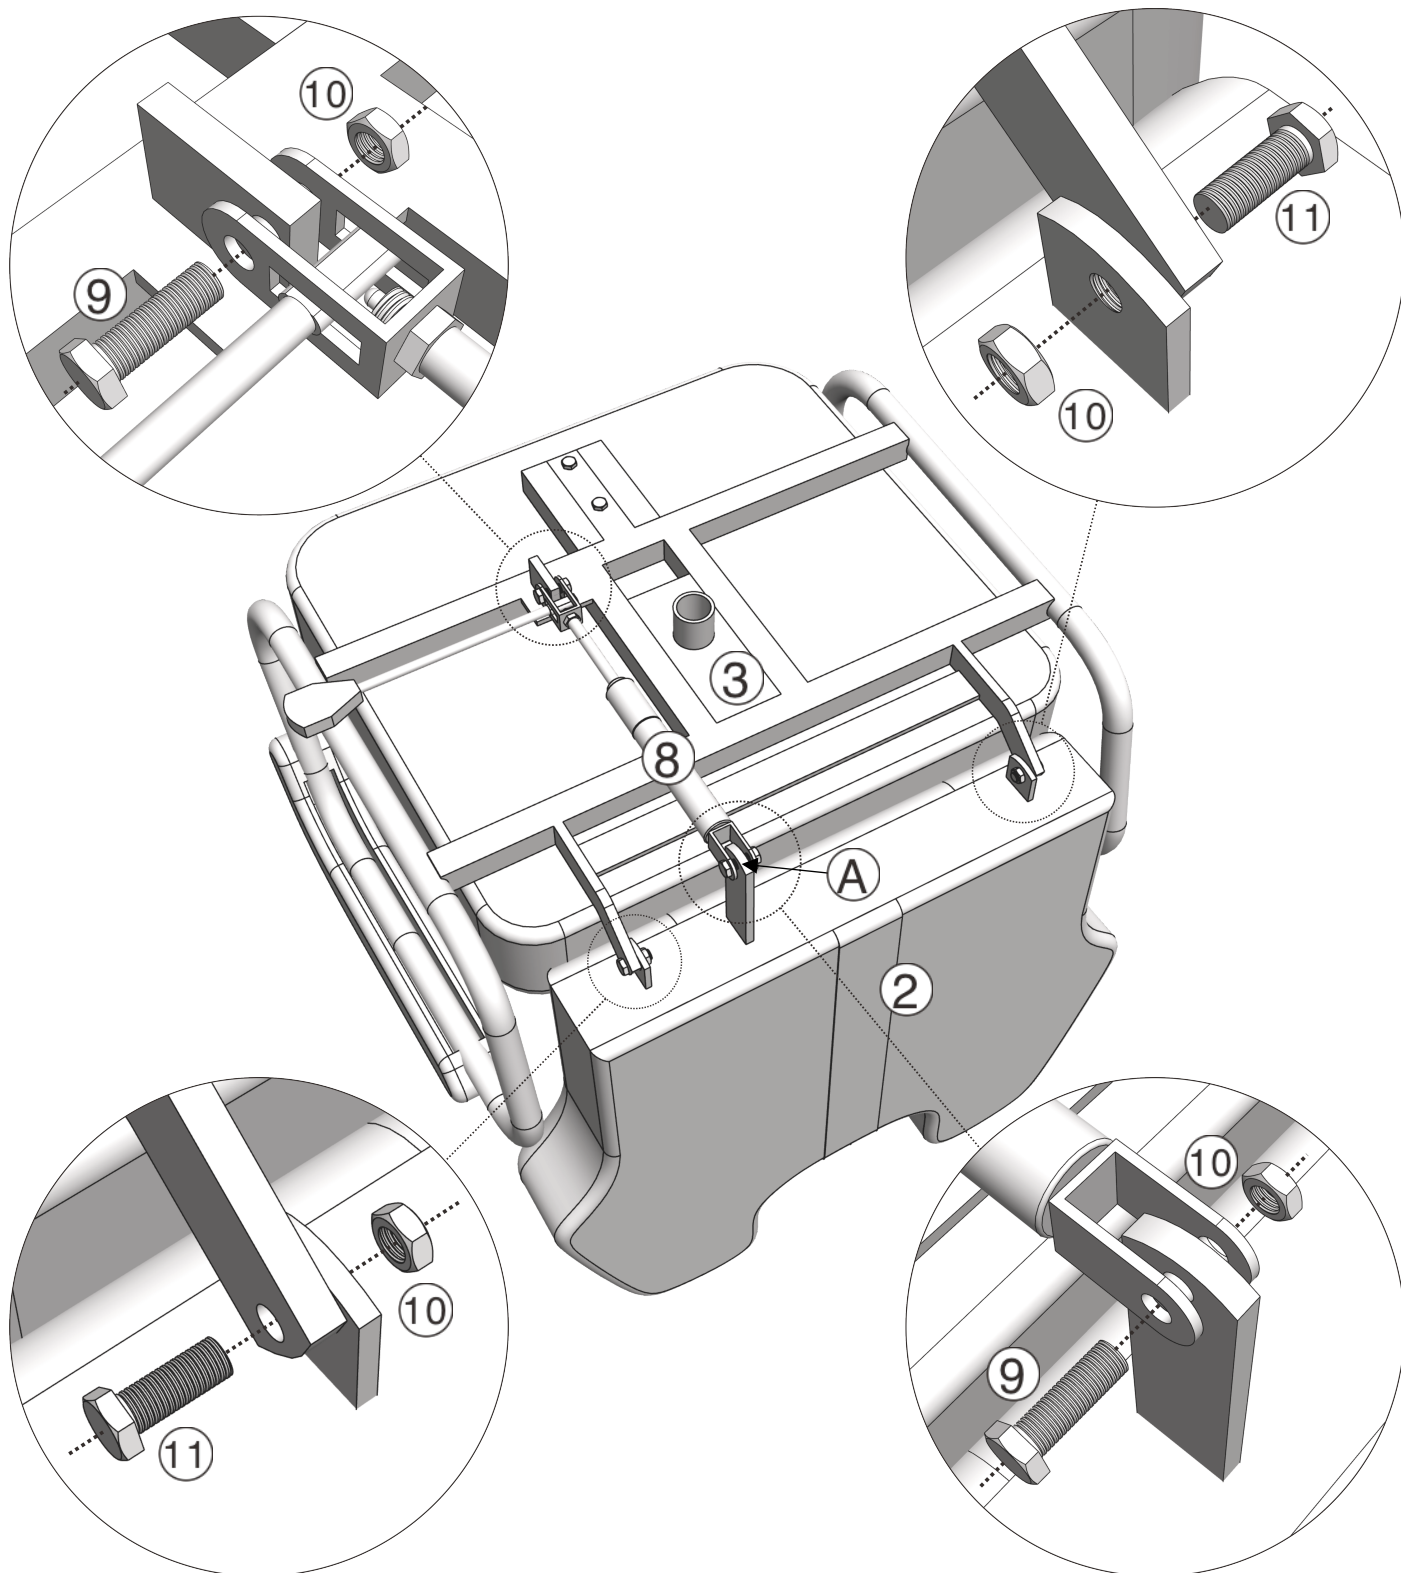


Two Hex Screws M8*30 ⑨ and two Hex Nuts M8 ⑩ were pre-installed on the Reclining Aerobar ⑧

Two Hex Screws M8*25 ⑪ and two Hex Nuts M8 ⑩ were pre-installed on the Backrest ②

Step Six:


Secure the Footrest ④ with two Hex Screws M8*16 ⑭ to the bottom of the Seat ③.

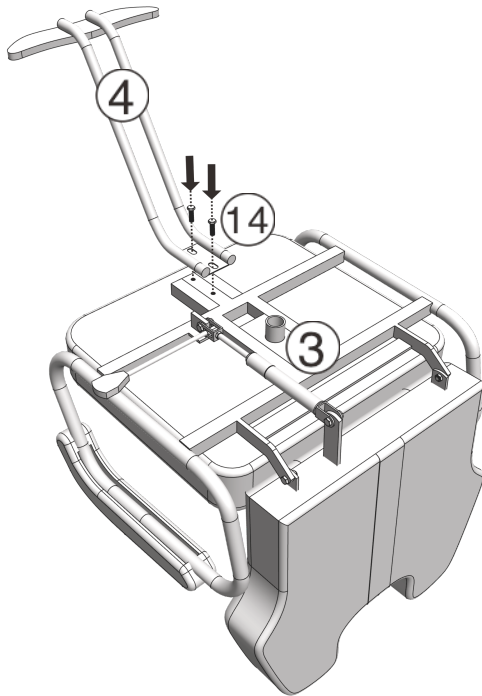


Two Hex Screws M8*16 ⑭ were pre-installed on the bottom of the Seat ③.

Step Seven:


Combine the Seat: Attach the assembled seat to the pump, sit on it, insert the Headrest ① and there you go.

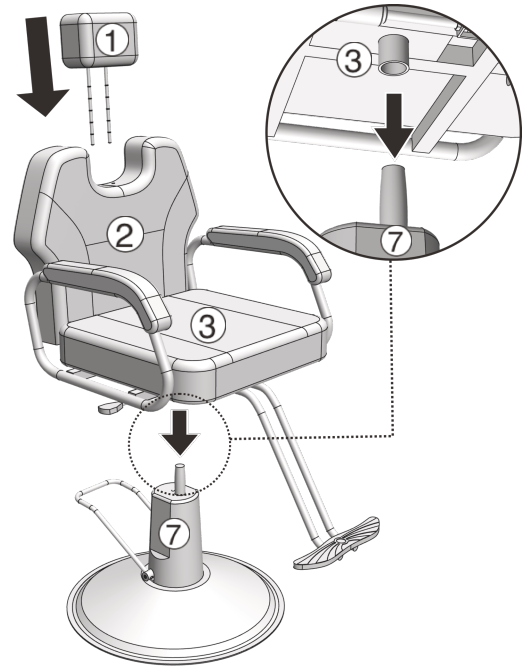

Note: No screws are needed to connect the seat and the base. The longer you seat, the tighter it gets.

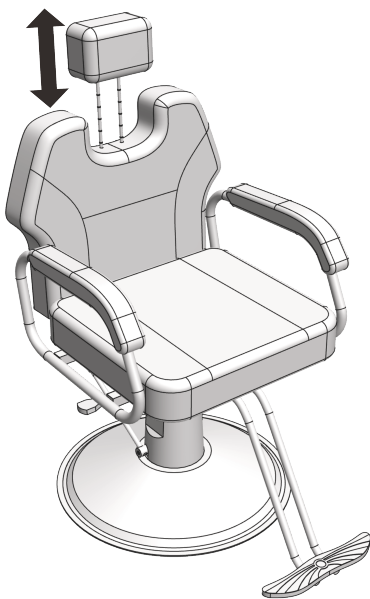
Instruction for use

The height of the headrest: The height of the headrest can be adjusted by pulling and pushing up and down the headrest.

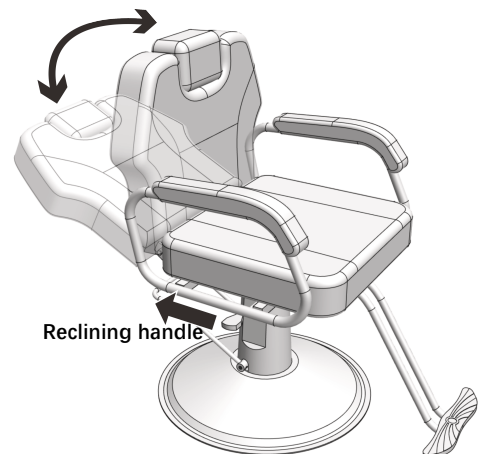


Reclining the backrest: Sit on the chair and pull the handle on the right side of the seat back without letting go, while leaning back hard while the backrest is down. Release the handle at the desired angle and fix the backrest angle.

Backrest rebound upright: Return to the body upright, pull the handle on the right side of the seat back again, and the seat back rebounds and stands upright.

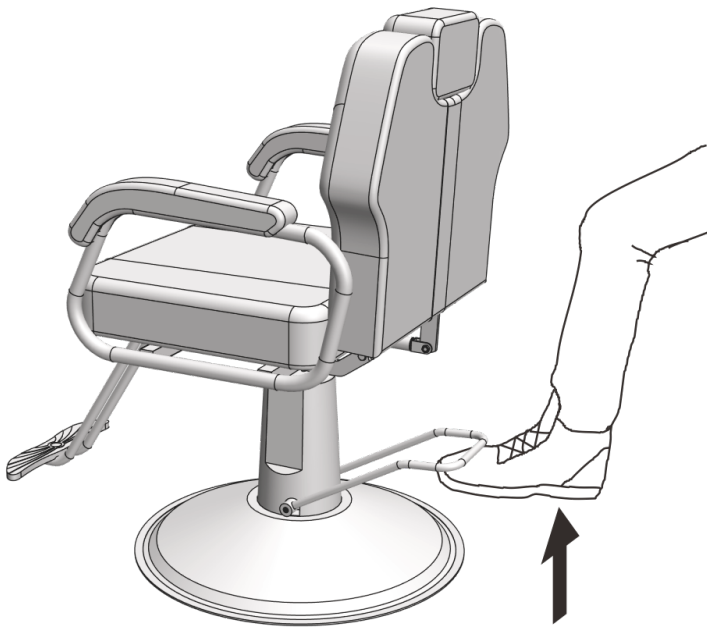


Lock: Lift the foot pump rod upward, and the rotation and lifting functions are locked.

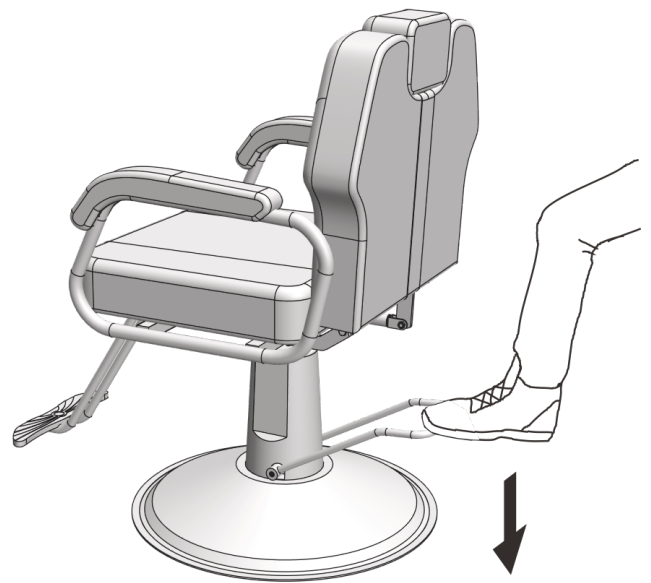

Unlock: Press the foot pump rod down, and the rotation and lift functions resume.

Seat up: Foot down on the foot pump rod 5-10 cm, and repeat. Don't step too deep!

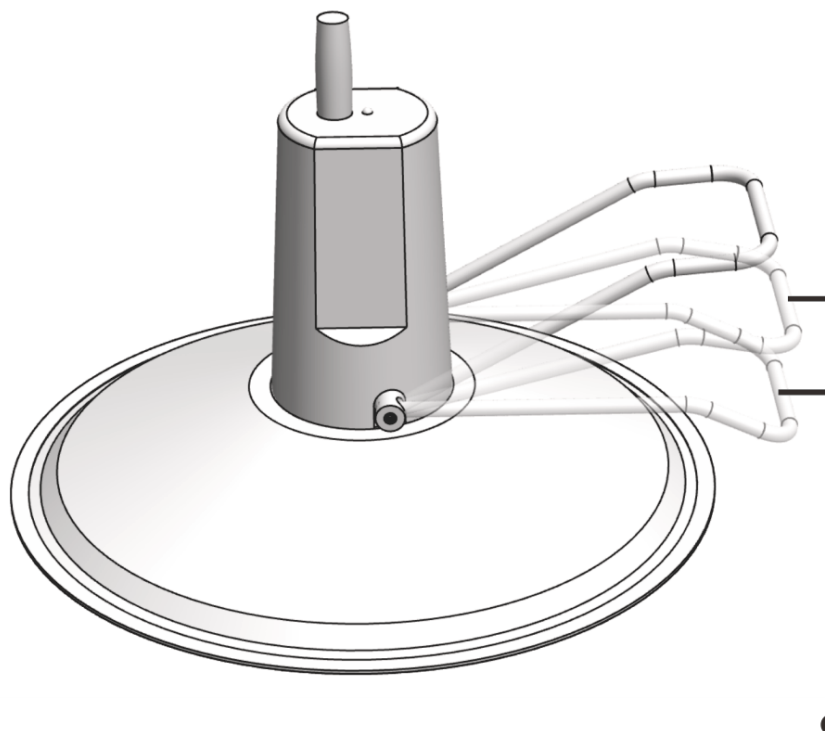

Seat down: Downhill the foot pump rod and hold still to lower the seat.

