 


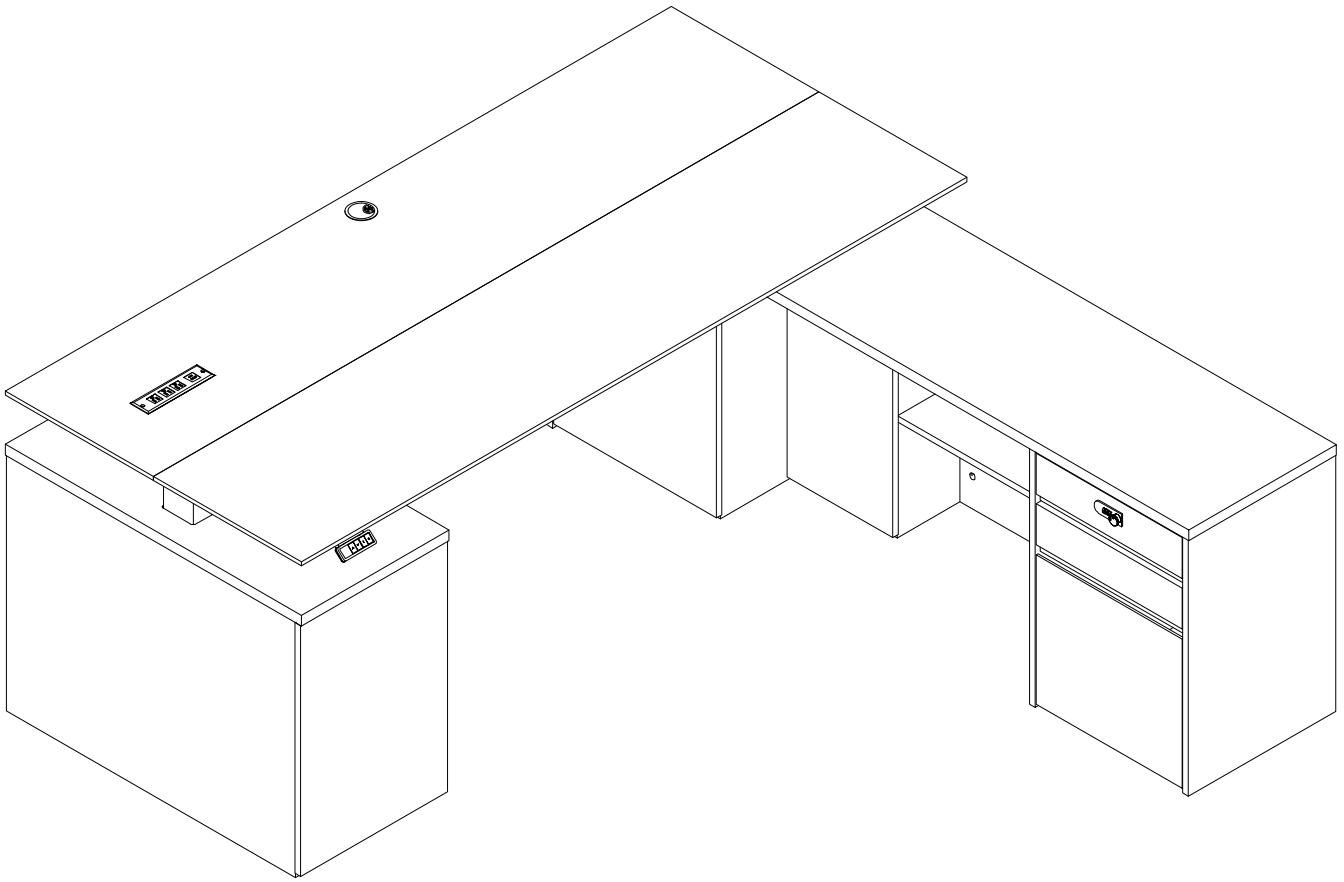

Suggestion

- It is recommended to install it near a power source, as later steps will require the power to be turned on.
- This product requires installation by at least two people.

Conseil

- Il est recommandé de l'installer à proximité d'une source d'alimentation, car les étapes suivantes nécessitent la mise sous tension.
- L'installation de ce produit doit être réalisée par au moins deux personnes.

Hinweis

- Es wird empfohlen, das Gerät in der Nähe einer Stromquelle zu installieren, da für die nachfolgenden Schritte die Stromversorgung eingeschaltet werden muss.
- Für die Montage dieses Produkts werden mindestens zwei Personen benötigt.

Keep small hardware parts away from children during assembly.
Do not use the product if any parts are damaged or missing.

Usage Warnings

Do not place excessive weight on the desktop or shelves.
Do not stand or sit on the product.
Use the product only for its intended purpose.
Avoid dragging heavy objects across the surface to prevent damage.

Child Safety Warning

This product is not a toy.
Keep children away from packaging materials and small components.
Children should not climb or play on the product.

Care Instructions

Clean with a soft, dry cloth.
Do not use abrasive cleaners or harsh chemicals.
Keep the product away from prolonged exposure to moisture.

Electrical Safety Warning

Use only the supplied power adapter.
Keep electrical components away from water.
Do not operate the product with wet hands.
Disconnect power before cleaning or maintenance.
Stop using the product if the power cord is damaged.

Stellen Sie sicher, dass alle Teile vor der Verwendung ordnungsgemäß installiert und fest angezogen sind.

Montieren Sie das Produkt auf einer ebenen und stabilen Oberfläche.

Halten Sie Kleinteile und Befestigungsmaterial während der Montage von Kindern fern.

Verwenden Sie das Produkt nicht, wenn Teile beschädigt sind oder fehlen.

Warnhinweise zur Verwendung

Platzieren Sie keine übermäßig schweren Gegenstände auf der Tischplatte oder den Ablageflächen.

Stellen Sie sich nicht auf das Produkt und setzen Sie sich nicht darauf.

Verwenden Sie das Produkt nur für den vorgesehenen Zweck.

Ziehen Sie keine schweren Gegenstände über die Oberfläche, um Beschädigungen zu vermeiden.

Sicherheitshinweis für Kinder

Dieses Produkt ist kein Spielzeug.

Halten Sie Kinder von Verpackungsmaterialien und Kleinteilen fern.

Kinder dürfen nicht auf das Produkt klettern oder damit spielen.

Pflegehinweise

Reinigen Sie das Produkt mit einem weichen, trockenen Tuch.

Verwenden Sie keine scheuernden Reinigungsmittel oder aggressiven Chemikalien.

Halten Sie das Produkt von längerer Feuchtigkeitseinwirkung fern.

Elektrische Sicherheitshinweise

Verwenden Sie ausschließlich das mitgelieferte Netzteil.

Halten Sie elektrische Komponenten von Wasser fern.

Bedienen Sie das Produkt nicht mit nassen Händen.

Trennen Sie die Stromversorgung vor der Reinigung oder Wartung.

Verwenden Sie das Produkt nicht weiter, wenn das Netzkabel beschädigt ist.

instructions avant l'assemblage.

Assurez-vous que toutes les pièces sont correctement installées et bien serrées avant utilisation.

Assemblez le produit sur une surface plane et stable.

Gardez les petites pièces et les éléments de fixation hors de portée des enfants pendant l'assemblage.

N'utilisez pas le produit si des pièces sont endommagées ou manquantes.

Avertissements d'utilisation

Ne placez pas de poids excessif sur le plateau du bureau ou les étagères.

Ne montez pas et ne vous asseyez pas sur le produit.

Utilisez le produit uniquement pour l'usage auquel il est destiné.

Évitez de faire glisser des objets lourds sur la surface afin d'éviter tout dommage.

Avertissement de sécurité pour les enfants

Ce produit n'est pas un jouet.

Gardez les enfants éloignés des matériaux d'emballage et des petites pièces.

Les enfants ne doivent pas grimper sur le produit ni jouer avec celui-ci.

Instructions d'entretien

Nettoyez le produit avec un chiffon doux et sec.

N'utilisez pas de produits de nettoyage abrasifs ni de produits chimiques agressifs.

Évitez une exposition prolongée du produit à l'humidité.

Avertissement de sécurité électrique

 
Utilisez uniquement l'adaptateur secteur fourni.

Gardez les composants électriques à l'écart de l'eau.

N'utilisez pas le produit avec les mains mouillées.


Débranchez l'alimentation avant tout nettoyage ou entretien.

Cessez d'utiliser le produit si le cordon d'alimentation est endommagé.

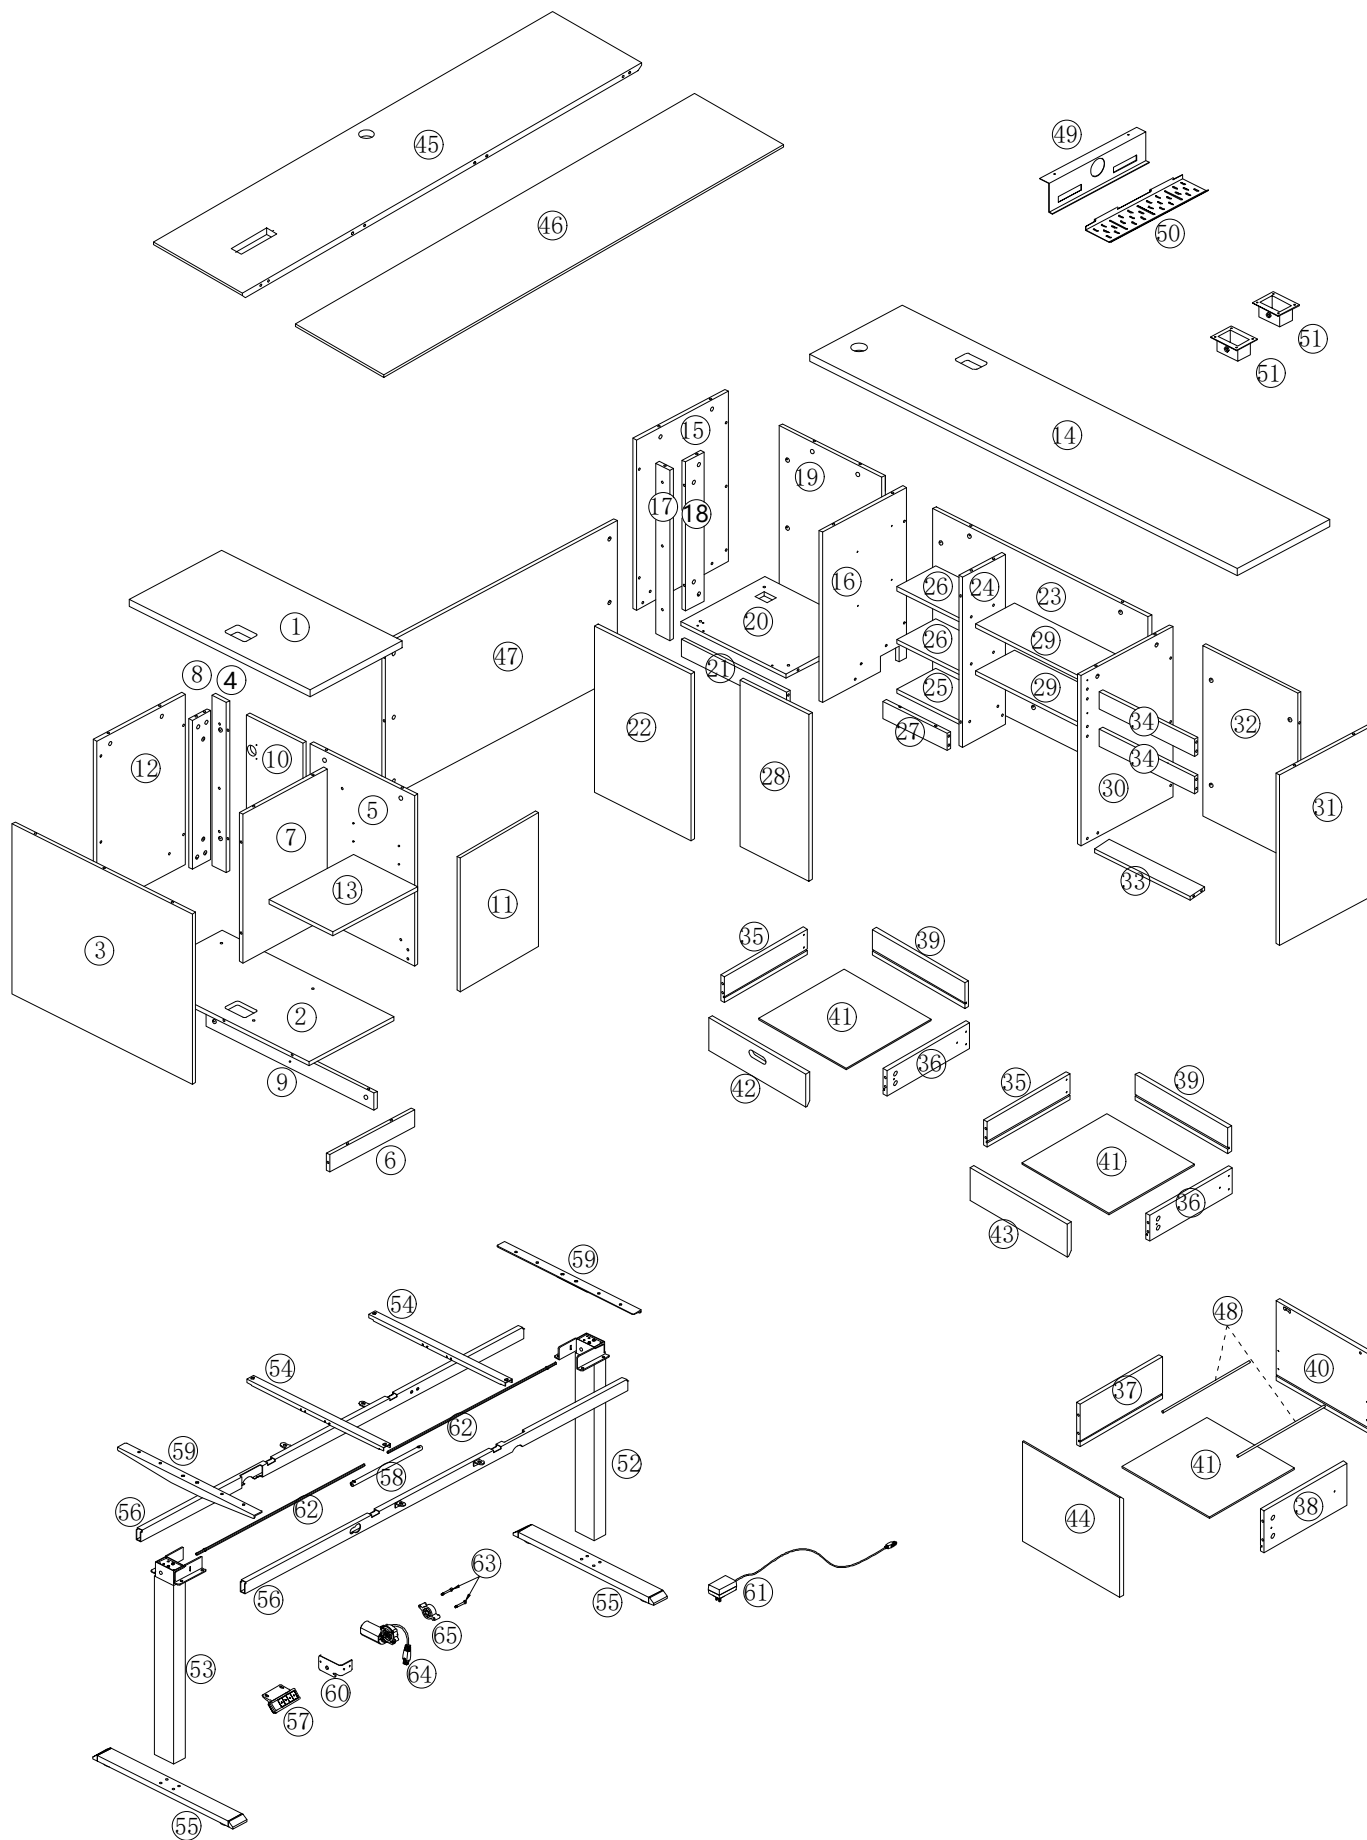


ASSEMBLY INSTRUCTION

 ①

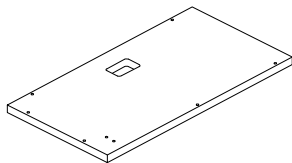


②

 1PC

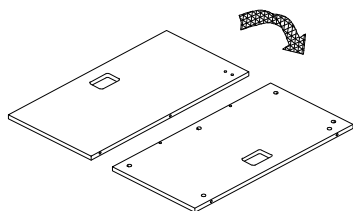


③

 1PC

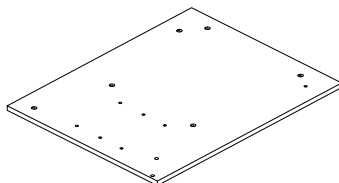


④

 1PC

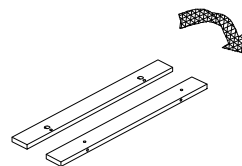


⑤

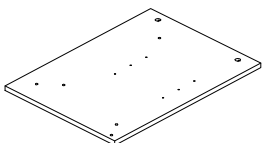 


⑥

 1PC




⑦

 1PC

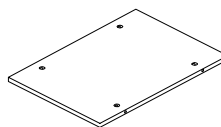


⑧

 1PC




⑨

 1PC




⑩

 1PC




⑪

 1PC

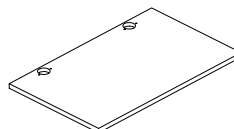


⑫

 1PC

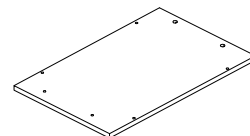


⑬

 1PC




⑭

 1PC

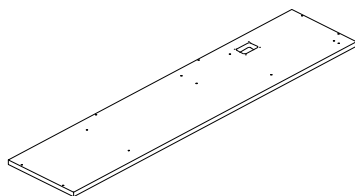


⑮

 1PC

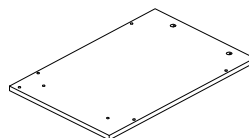


⑯

 1PC

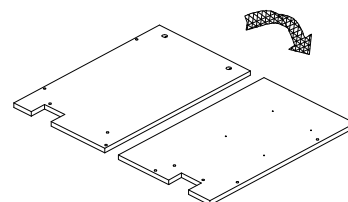


⑰

 1PC

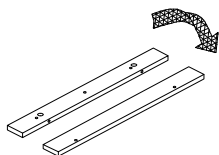


⑱

 1PC




⑲

 1PC

















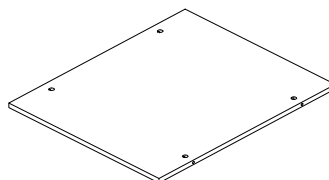


⑳

 1PC




ASSEMBLY INSTRUCTION

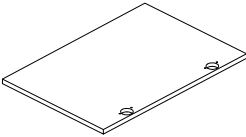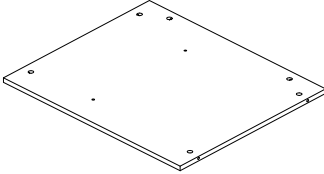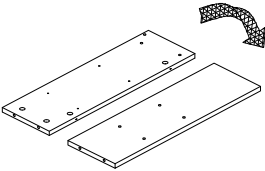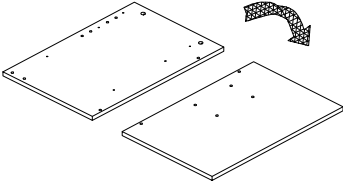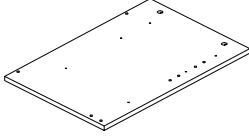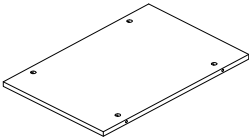                 21 1PC 	22 1PC 	23 1PC 	24 1PC 
25 1PC 	26 2PC 	27 1PC 	28 1PC 
29 2PC 	30 1PC 	31 1PC 	32 1PC 
33 1PC 	34 2PC 	35 2PCS 	36 2PCS 
37 1PC 	38 1PC 	39 1PC 	40 1PC 


④1

 3PCS




④2

 2PCS

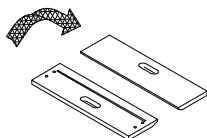


④3

 1PC

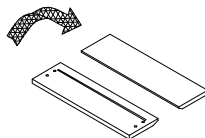


④4

 1PC




④5

 1PC

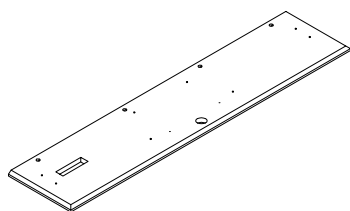


④6

 1PC

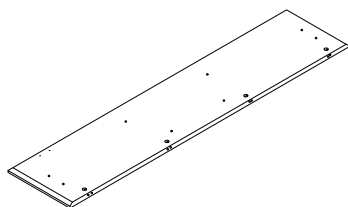


④7

 1PC

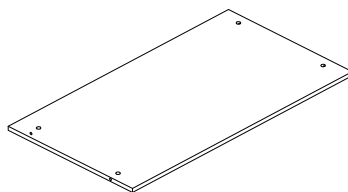


④8

 2PCS




④9

 1PC

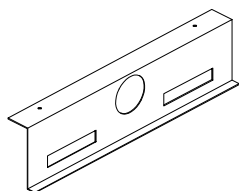


⑤0

 1PC

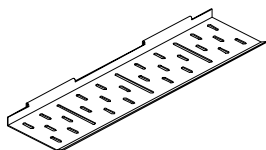

⑤1

 2PCS




⑤2

1PC




⑤3

 1PC




⑤4

 2PCS




⑤5

 2PCS



⑤6

 2PCS

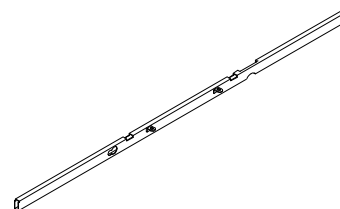

⑤7

1PC



 
⑤8

1PC



⑤9

2PCS





⑥0

1PC




  ASSEMBLY INSTRUCTION

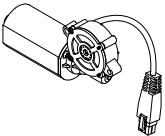⑥1 1PC 	⑥2 2PCS 	⑥3 2PCS 	⑥4 1PC 
⑥5 1PC 			


"A" Hardware installation example

 I

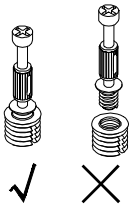


This part cannot be separated ,
please install in strict
accordance with the assembly
requirements

 
II

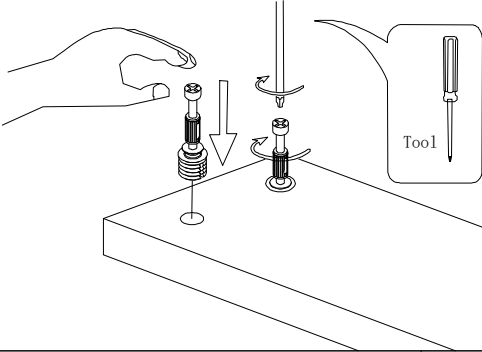











III

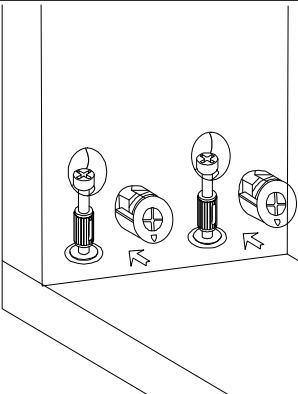 

IV

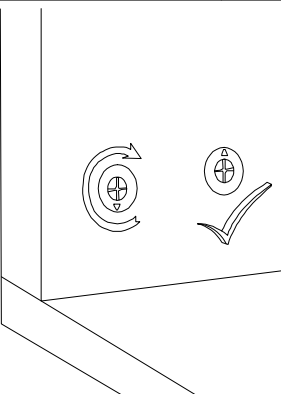 


ASSEMBLY INSTRUCTION

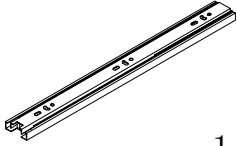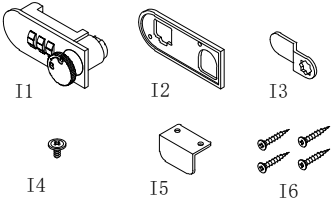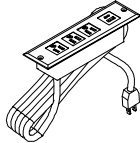          A 102PCS  M6*40	B 8PCS  Ø7*60	C 110PCS  Ø15*9.5	D 20PCS  Ø8*40
E 6PCS  14"	F 6PCS 	G 2PCS 	H 1PC 
I 1set  I1 I2 I3 I4 I5 I6	J 12PCS  Ø5*15	K 16PCS  M6*16	L 2PCS  M8*16
M 94PCS  Ø3.5*14	N 1PCS  Ø3.5*25	O 12PCS  Ø3.5*40	P 18PCS 
Q 1PC 	R 110PCS 	S 1PCS  Ø50	T 4PCS 
U 12PCS  M6*30	V 10PCS  M6*10	W 4PCS  M6*10	X 2PCS  M8
Y 1PC 	Z 1PC  M4	 M5	


Step 1

 A 100PCS




M6*40

 
Ax6

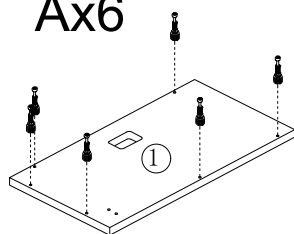


Ax4

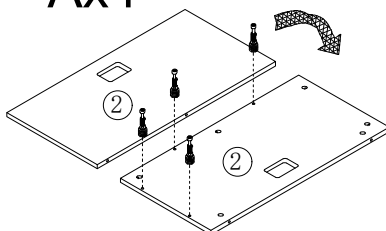 


Ax5

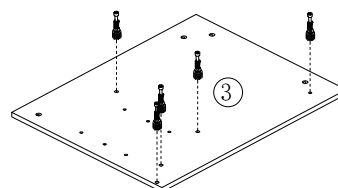 


Ax4

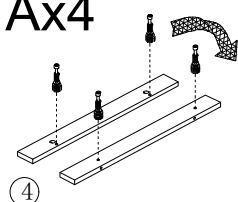 


Ax5

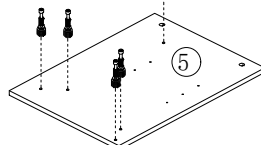 


Ax6

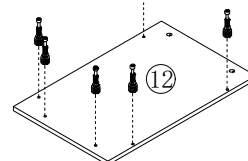 


Ax12

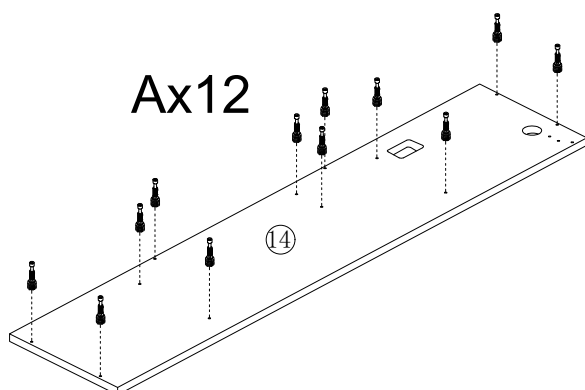 


Ax7

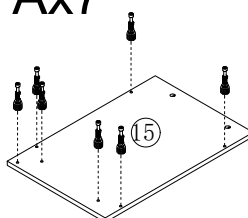 


Ax10

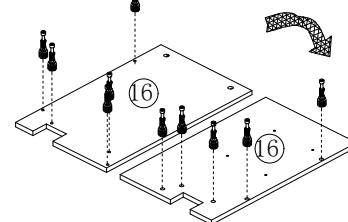 


Ax4

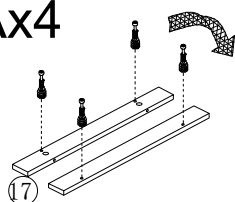 


Ax2

 


Ax7

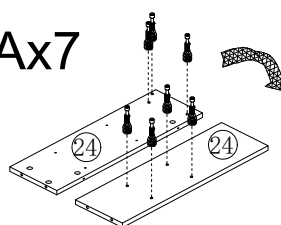 


Ax4

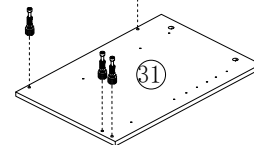 


Ax10

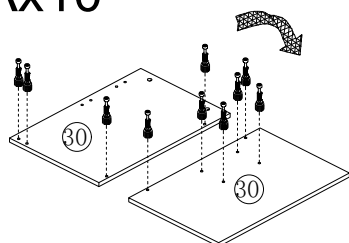 


Ax4

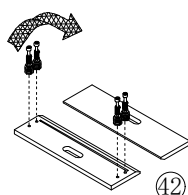 

Ax4

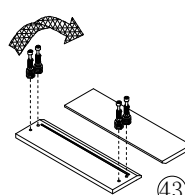 


Ax4

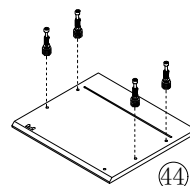 

Step 2

C 4PC

 
 Ø15*9.5

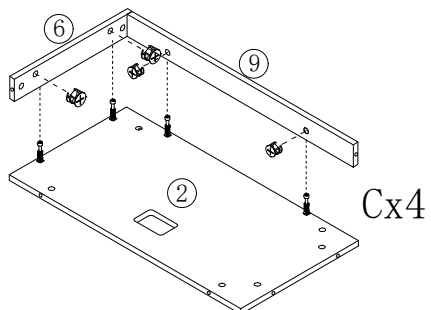

Step 3

C 2PCS

 
 Ø15*9.5

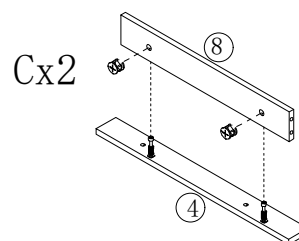

Step 4

D 2PC

  Ø8*40

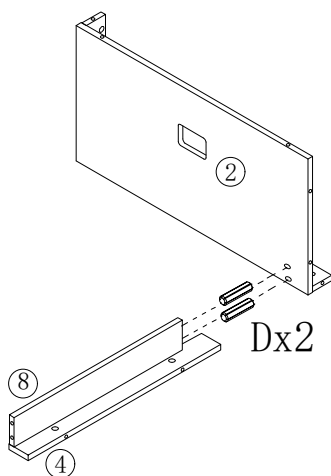


Step 5

C 5PCS

 Ø15*9.5
 N 1PC

  Ø3.5*25

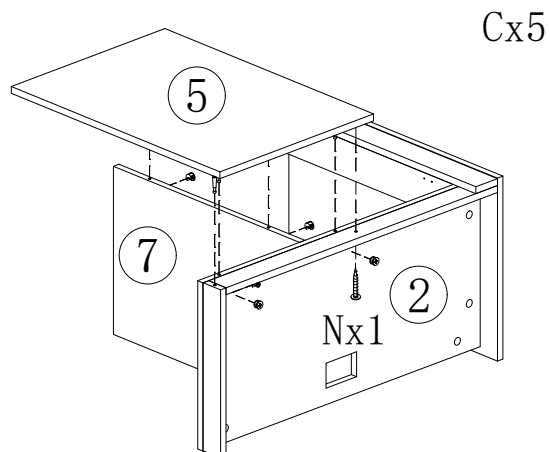


Step 6

C 5PCS

Ø15*9.5

 Cx5

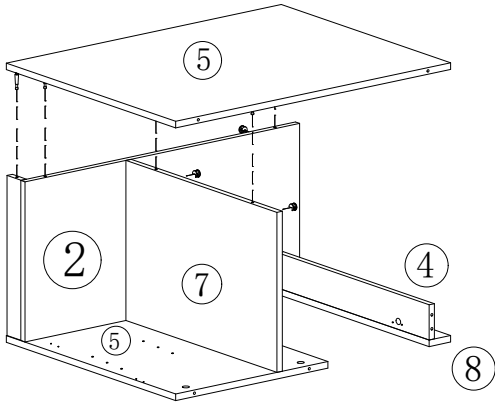


Step 7

C 6PCS

Ø15*9.5

 Cx6

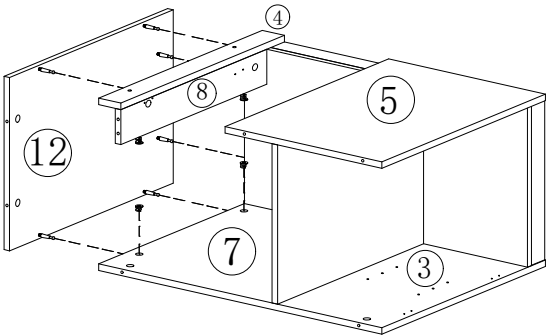


Step 8

H 1PC

M 2PCS

 Ø3.5*14

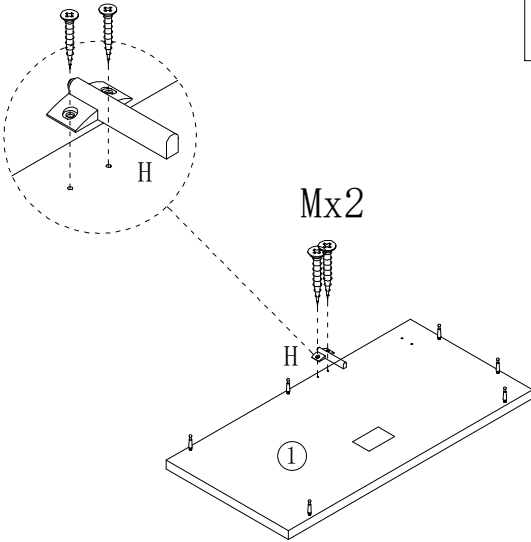


Step 9

C 6PCS

Ø15*9.5
D 2PC

 
Ø8*40

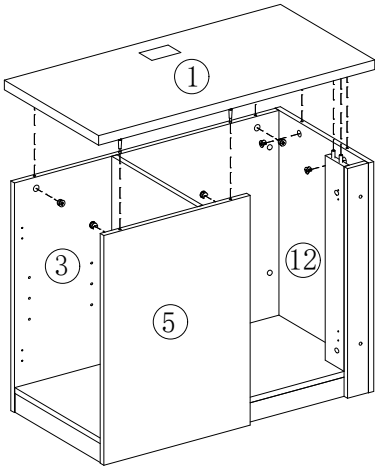


DX2
CX6

Step 10

 M 4PCS
Ø3.5*14

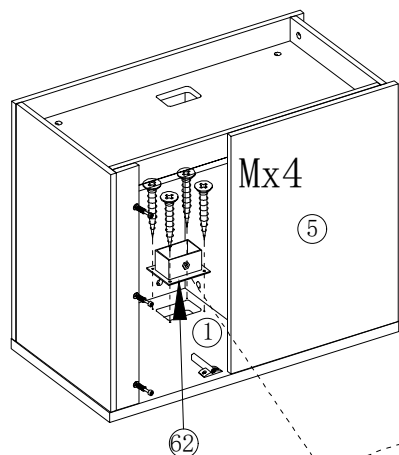


 Make sure the accessory nuts face outward during installation.

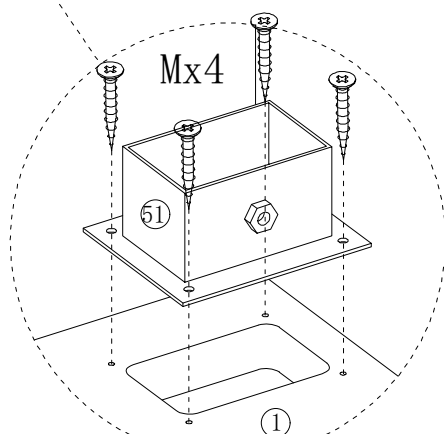


Step 11

 U 4PCS
M6*30

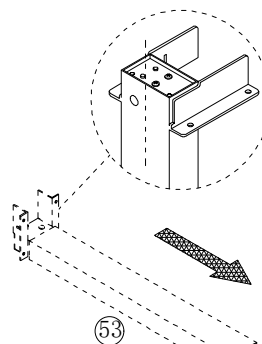


 ⚠ This product has two different types of table legs. This is the left leg. The difference is that in this perspective view, the hole is located behind the dotted line.

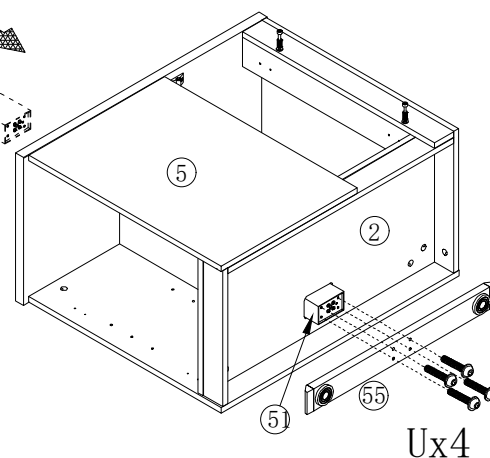


Step 12

 R 6PCS

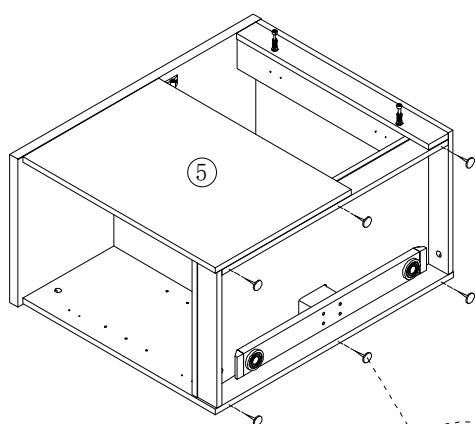

Px6


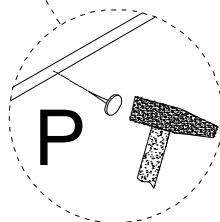 


Step 13


M 8PCS
Ø3.5*14

G 2PCS

  
F 2PCS

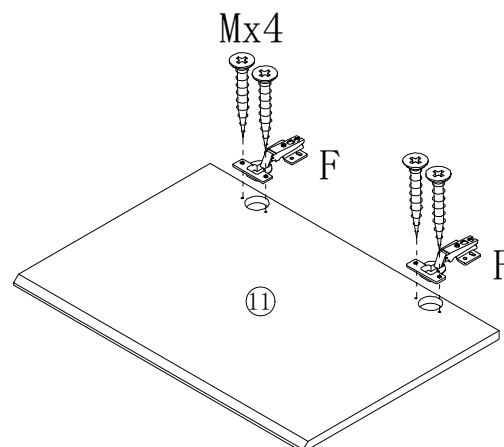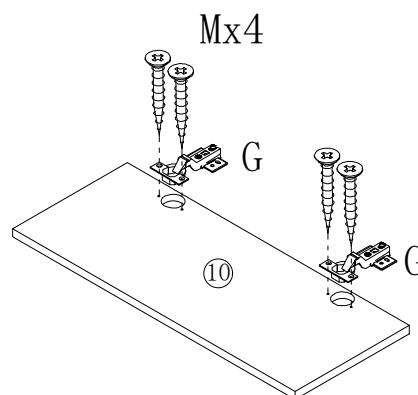

 
Step 14

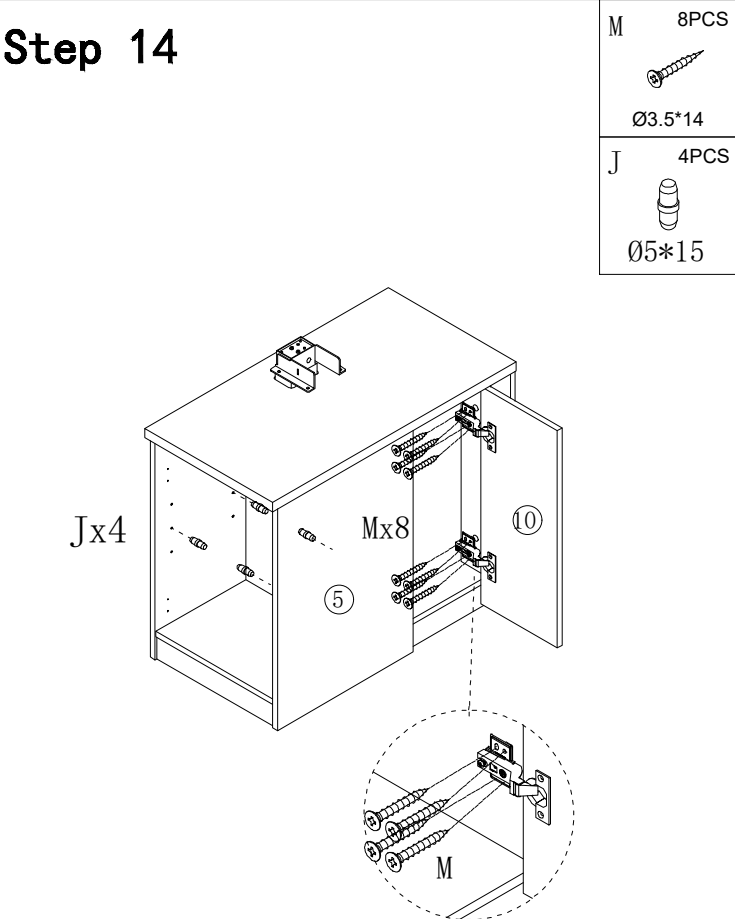

 
Step 15

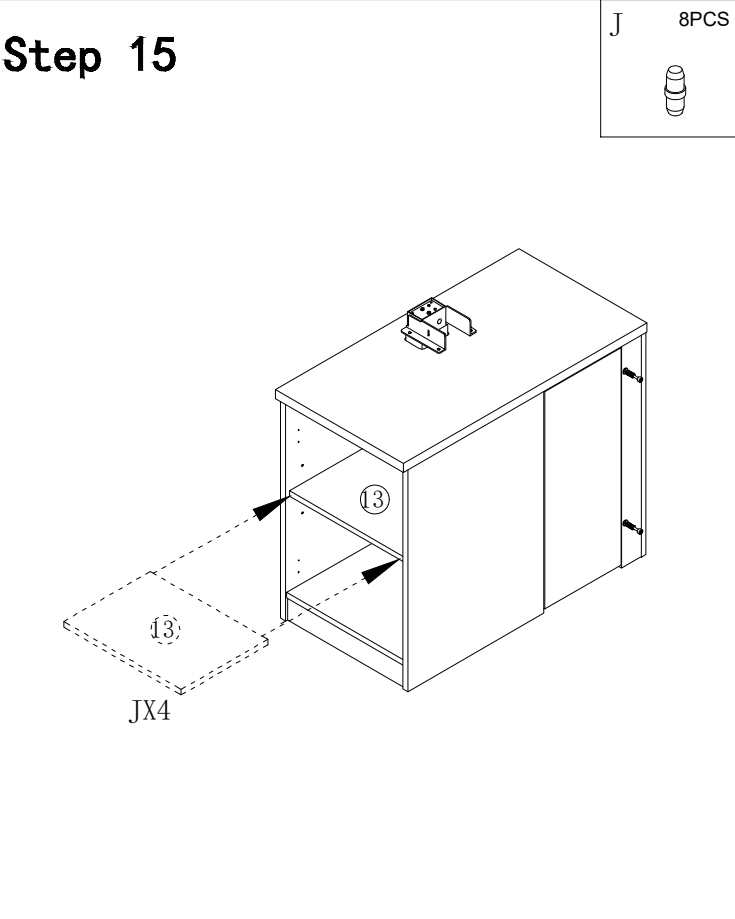

tep 16

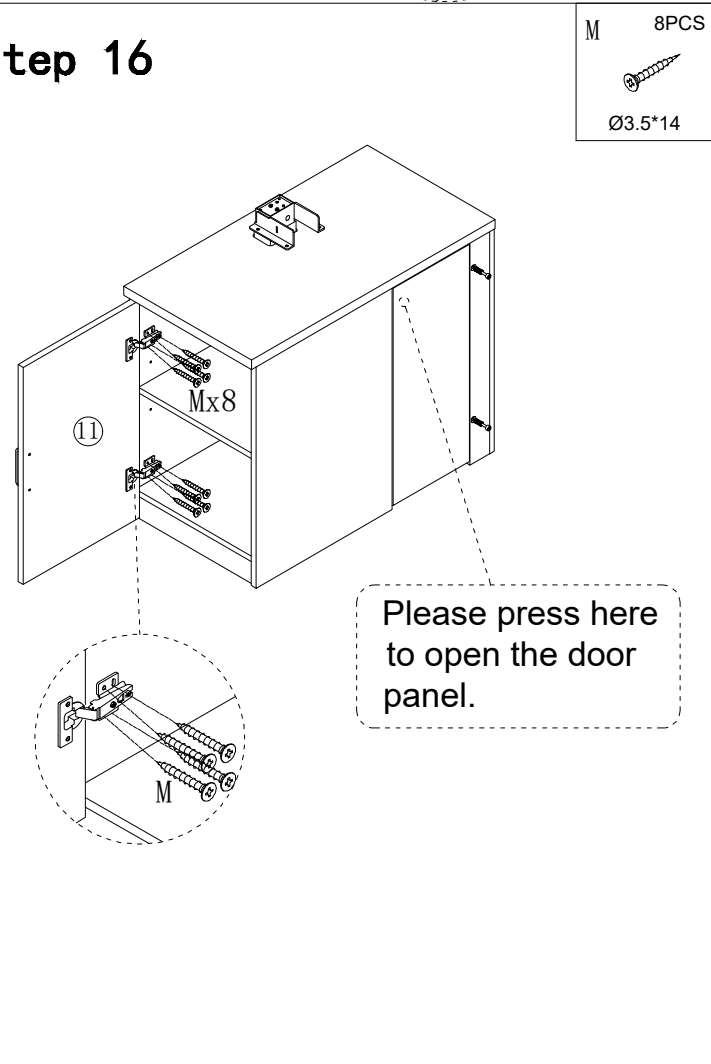 

 
Step 17

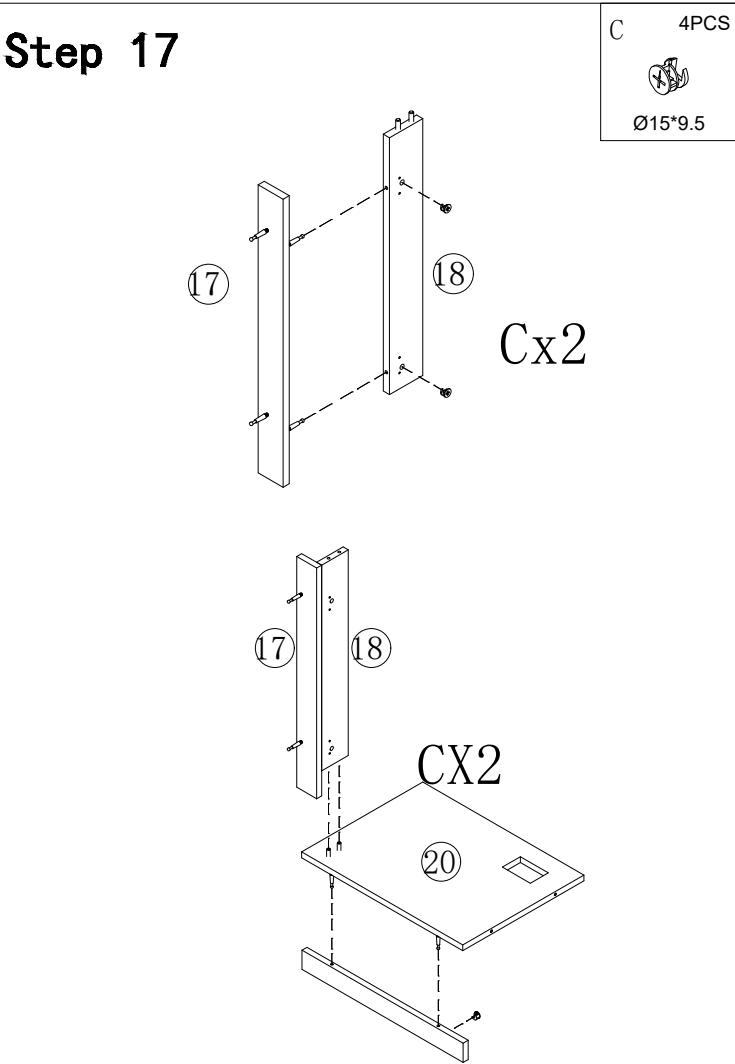

ASSEMBLY INSTRUCTION


Step 18

 C 5PCS
Ø15*9.5

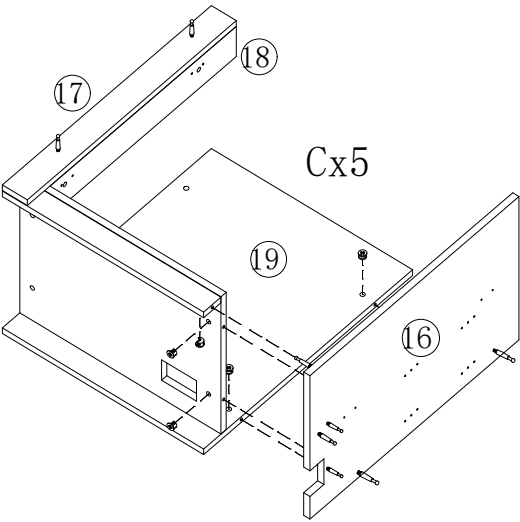


Step 19

 C 7PCS
Ø15*9.5

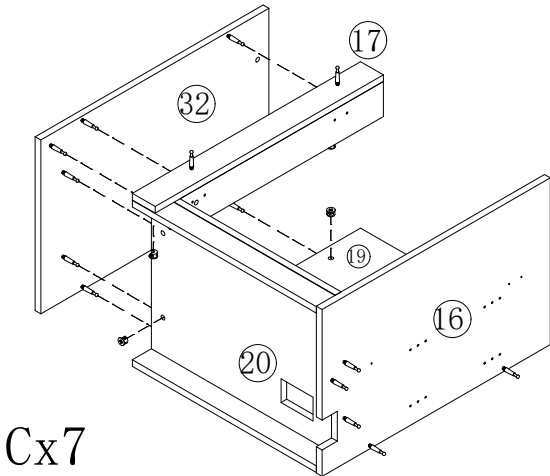


Step 20

 C 2PCS
Ø15*9.5

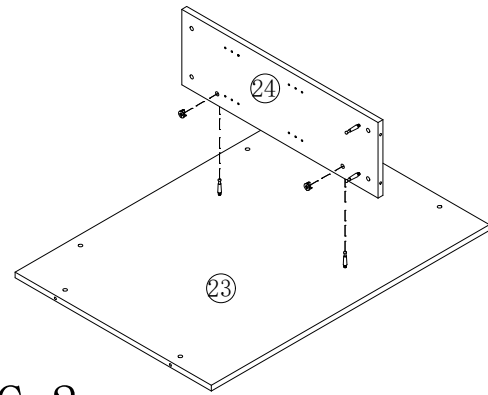


Step 21

 C 8PCS
Ø15*9.5

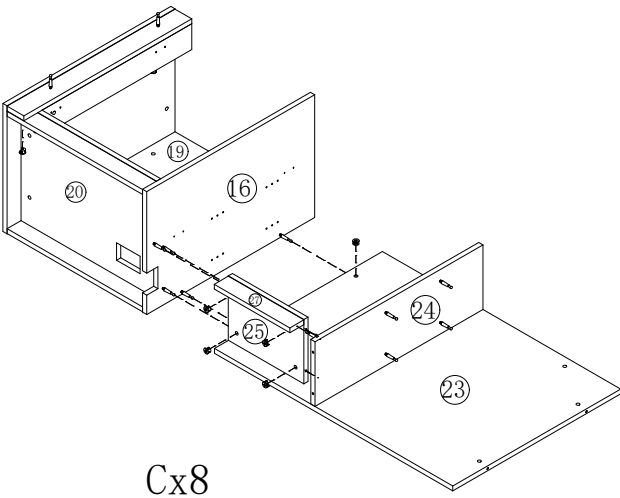


Step 22

 C 4PCS
Ø15*9.5

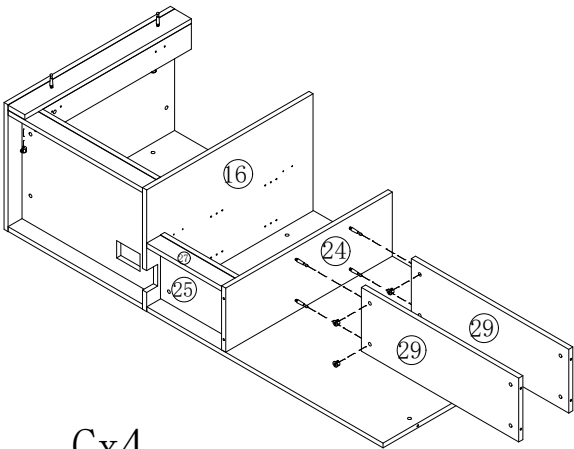


Step 23

 E 6PCS
14"

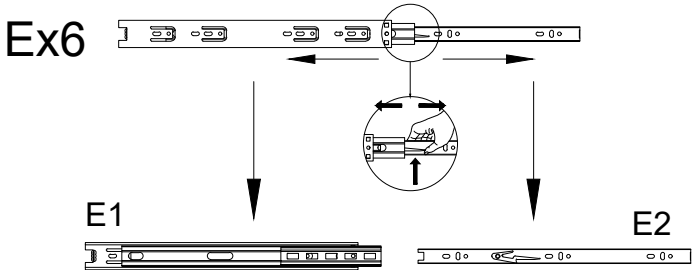


Step 24

 M 12PCS
Ø3.5*14
E1 6PCS
14"



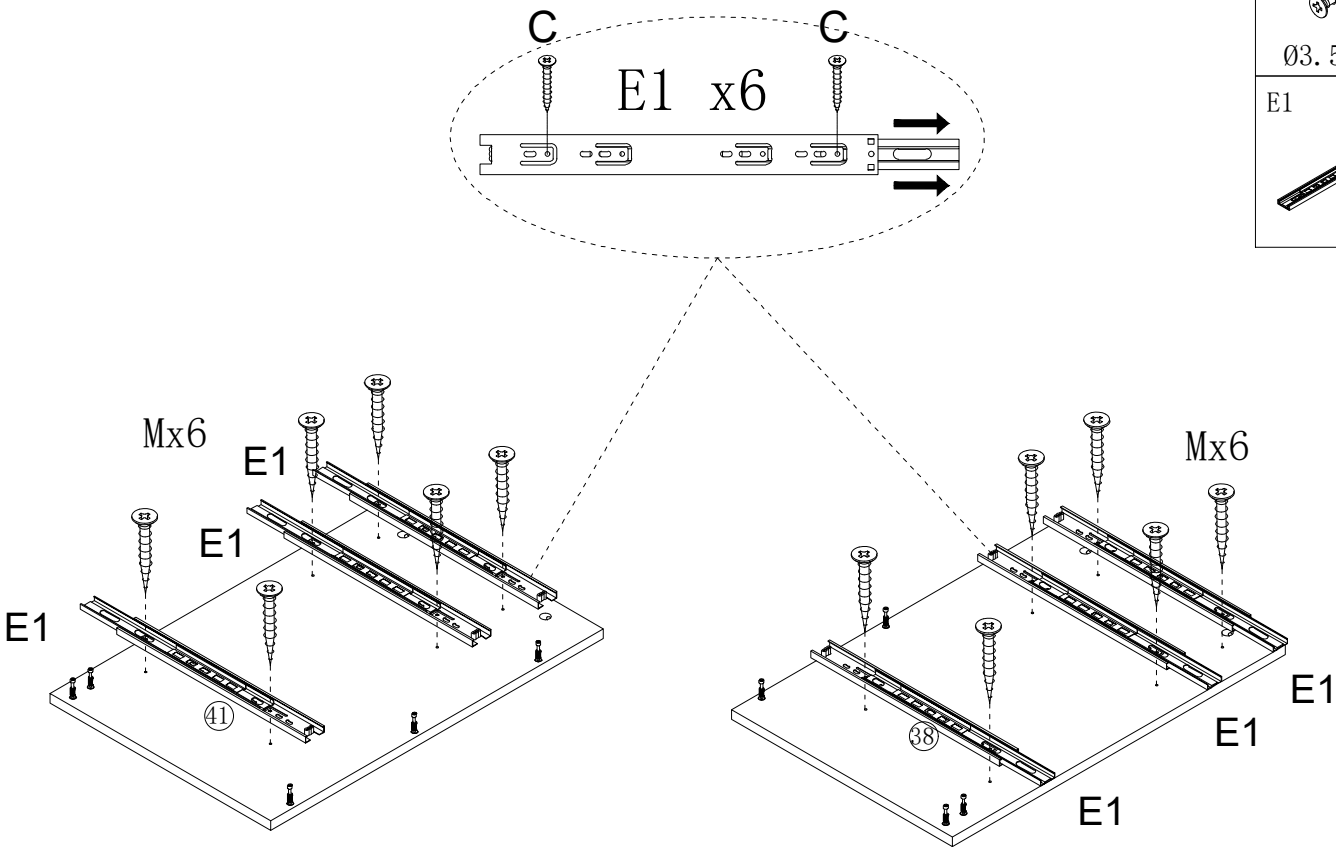


ASSEMBLY INSTRUCTION

 
Step 25

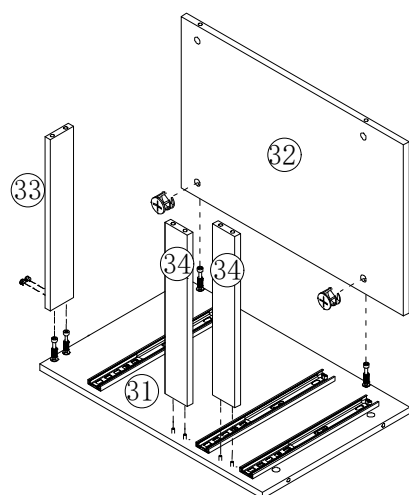

Cx4
Dx4

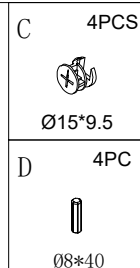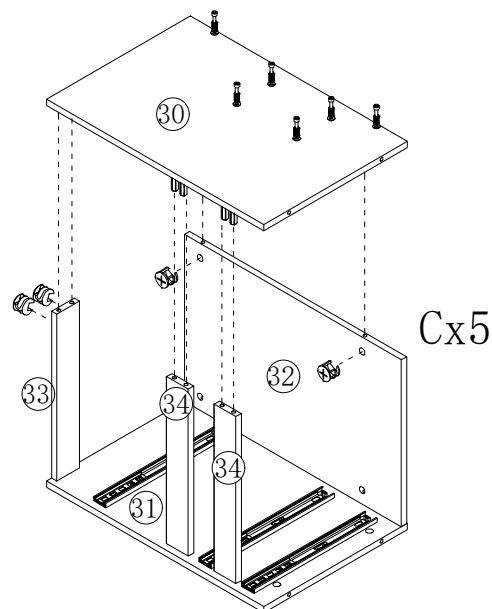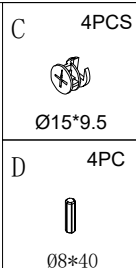   


 Step 26

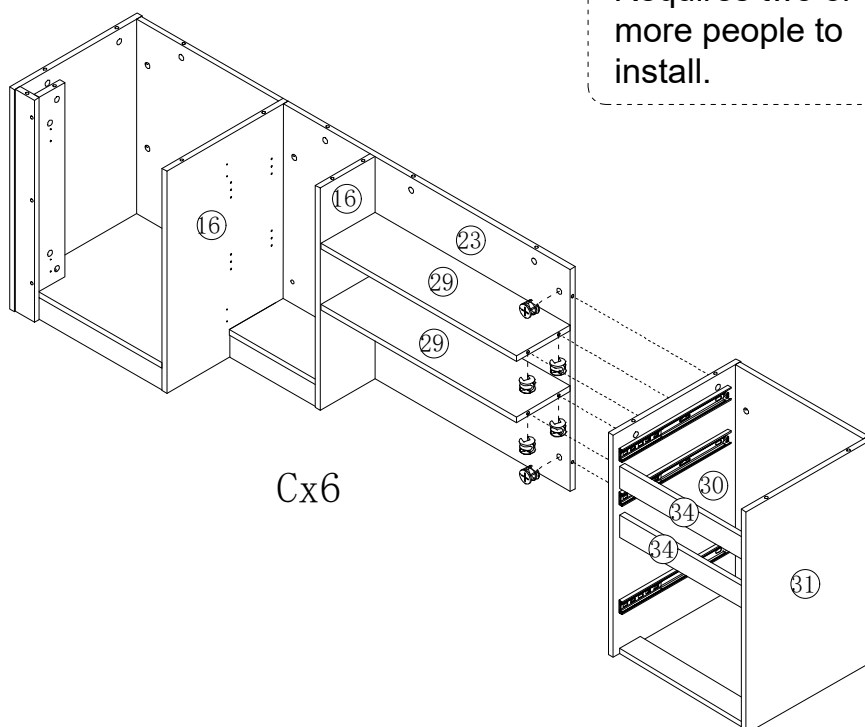

Cx6

 
Requires two or more people to install.

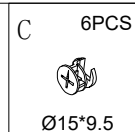

tep 27

C 12PCS


 
 Ø15*9.5

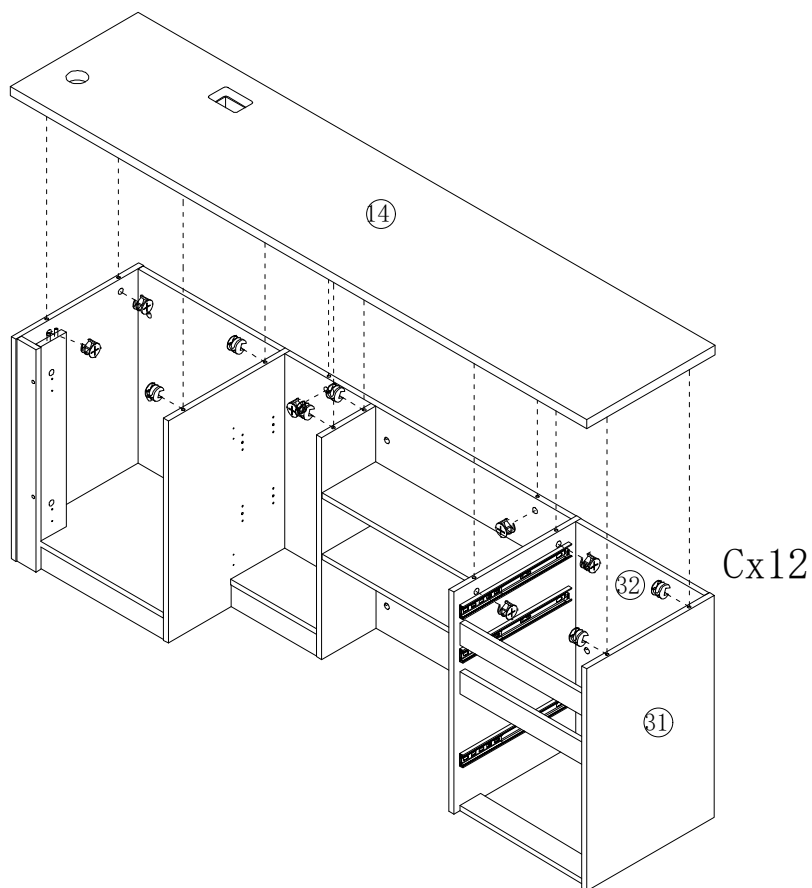

Step 28


M 4PCS

   Ø3.5*14

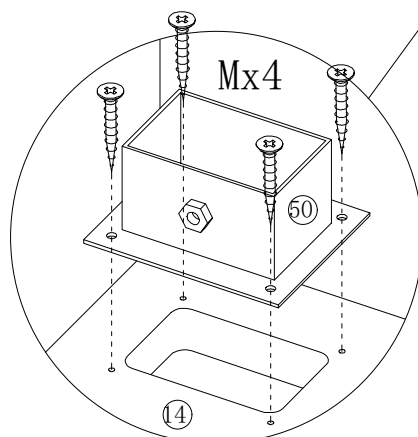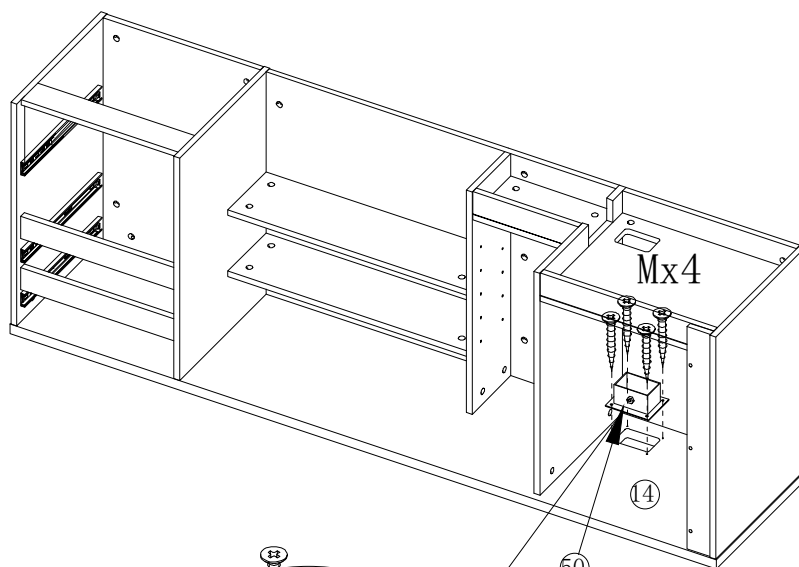


Make sure the accessory
nuts face outward during
installation.

 Step 29

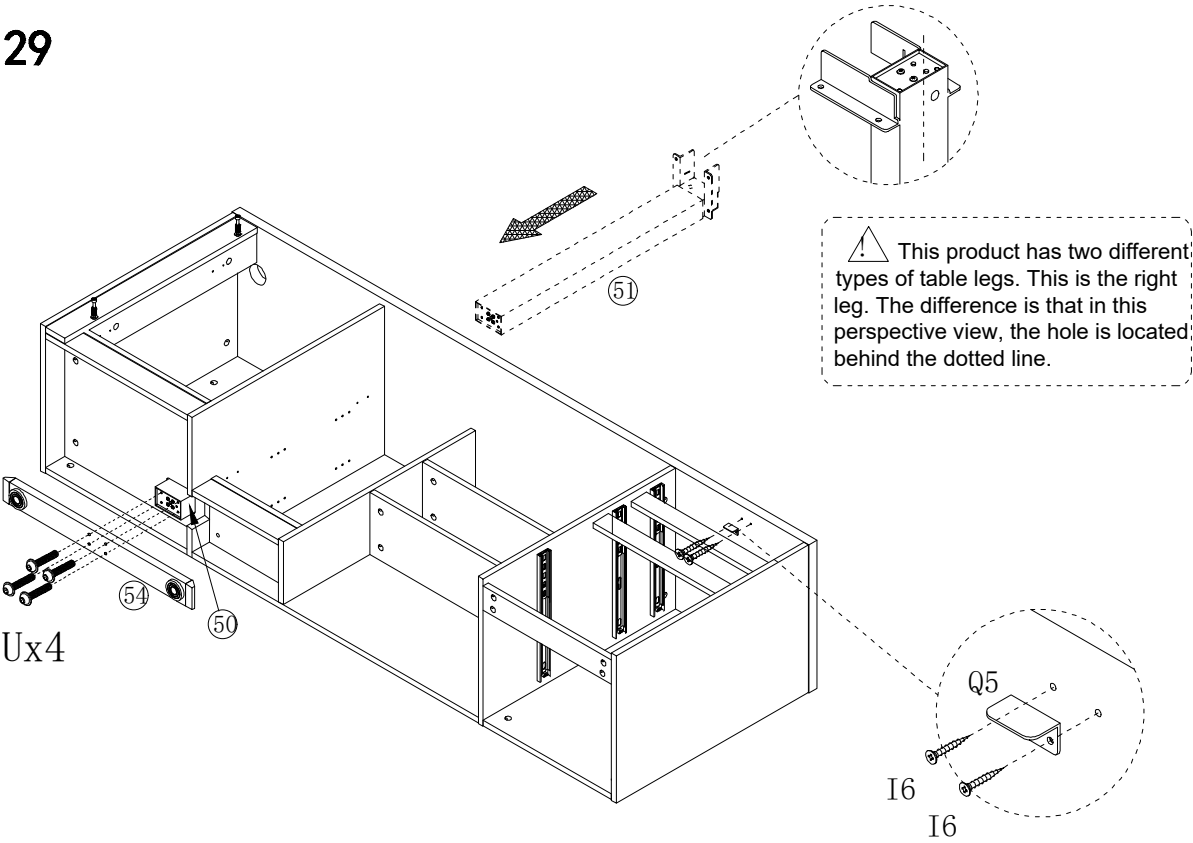

U	4PCS
	
	M6*30
I5	1PC
	
I6	2PCS
	
	Ø3.0*15

 
Step 30

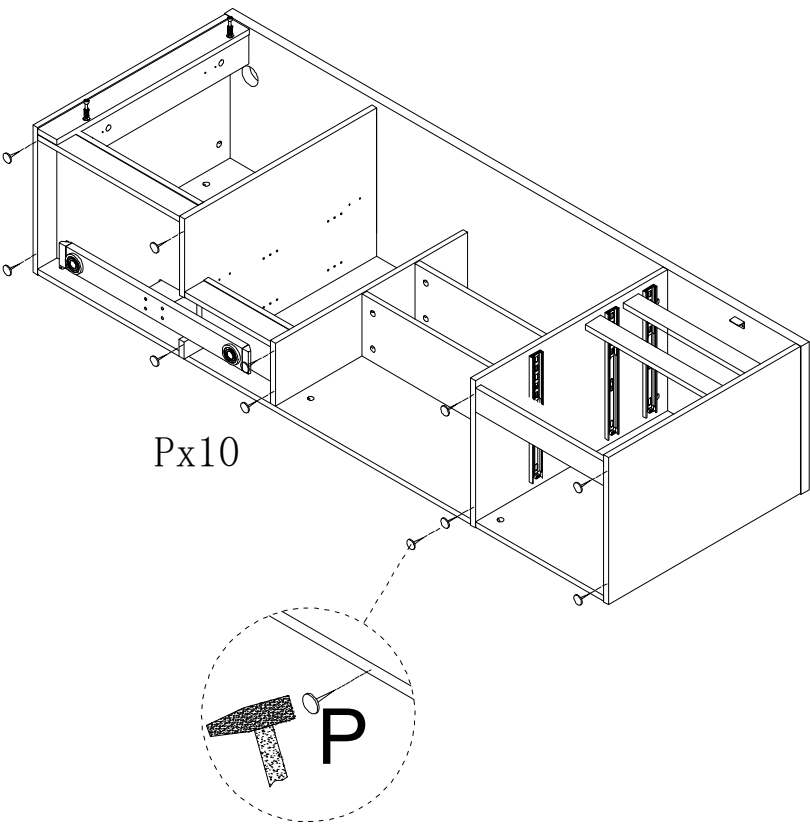

P	10PCS
	


ASSEMBLY INSTRUCTION

 Step 31


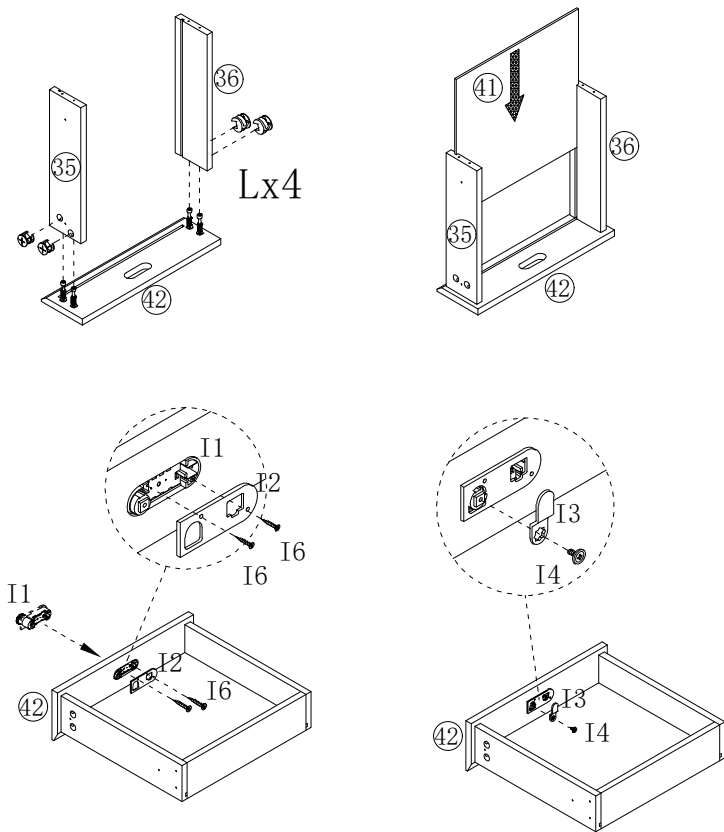


0x4



E2	2PCS	C	4PCS
	14"		Ø15*9.5
M	4PCS	O	4PCS
	Ø3.5*14		Ø3.5*40
I	1set		
	I1		I2
	I3		I4
	I5		I6

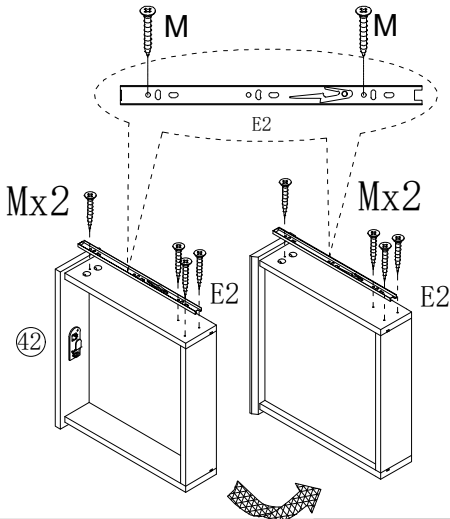 

  Step 32

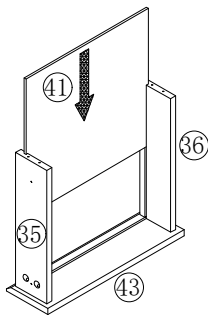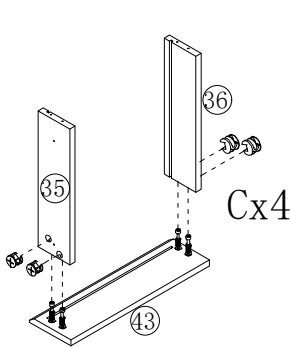


Nx4

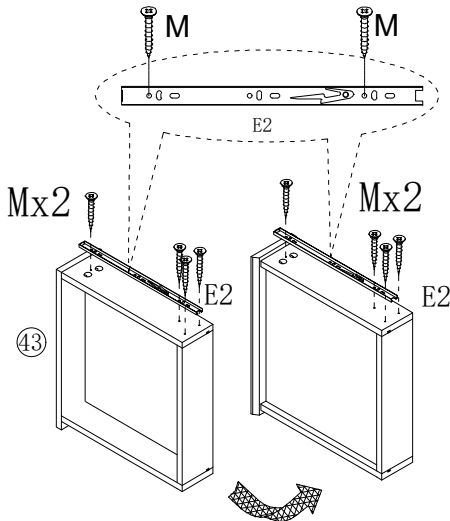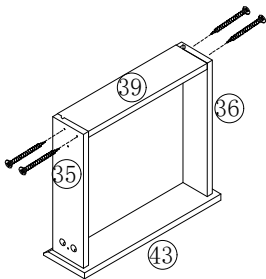  

E2	2PCS	C	4PCS
	14"		Ø15*9.5
M	4PCS	N	4PCS
	Ø3.5*14		Ø3.5*40


Step 33

C	4PCS
	
Ø15*9.5	
O	4PCS
	
Ø3.5*40	

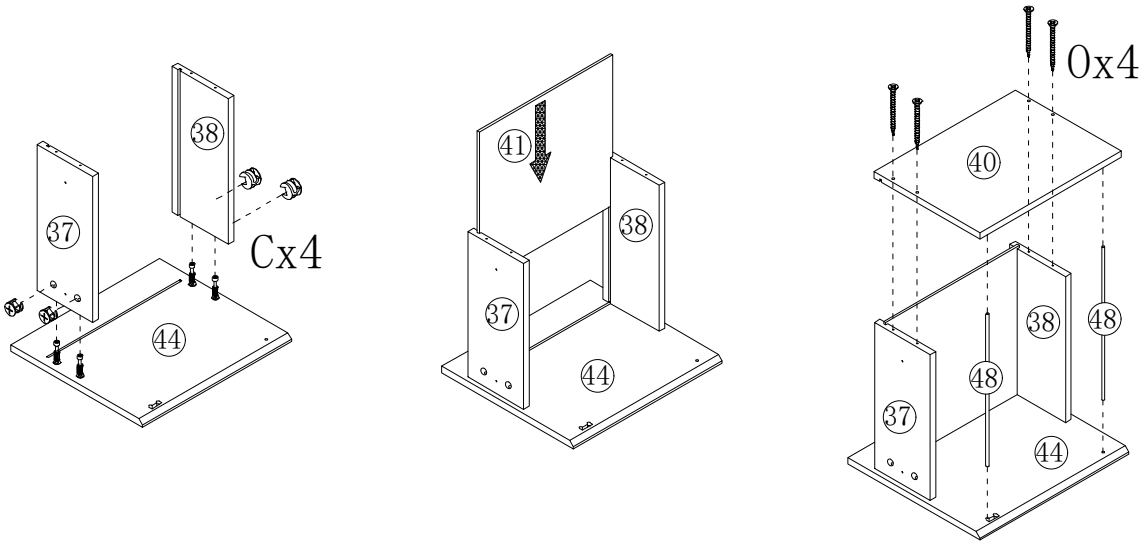 


Step 34

E2	2PCS
	
14"	
M	4PCS
	
Ø3.5*14	

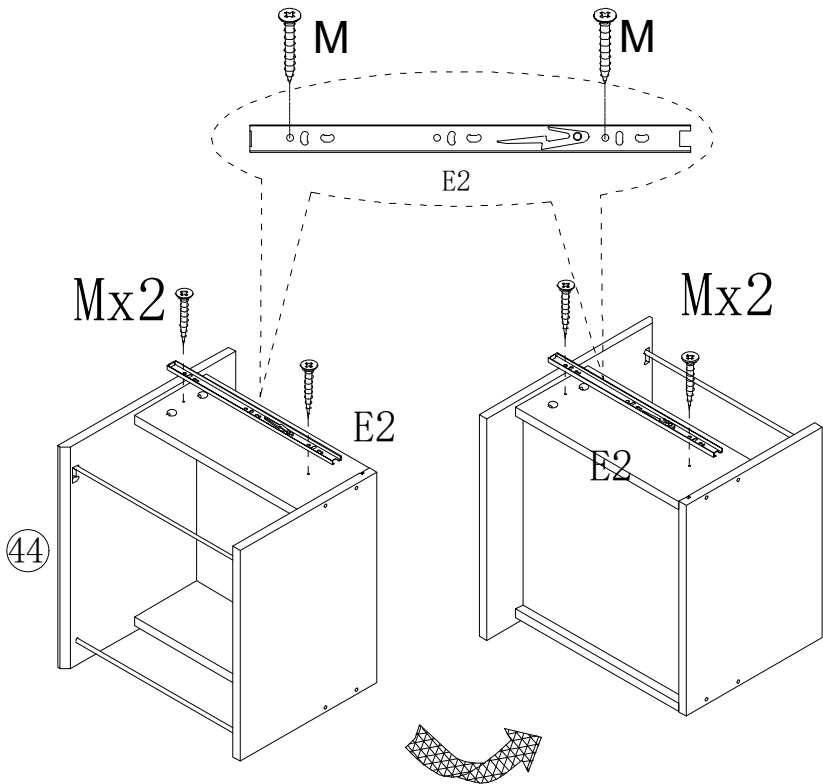 

 
Step 35

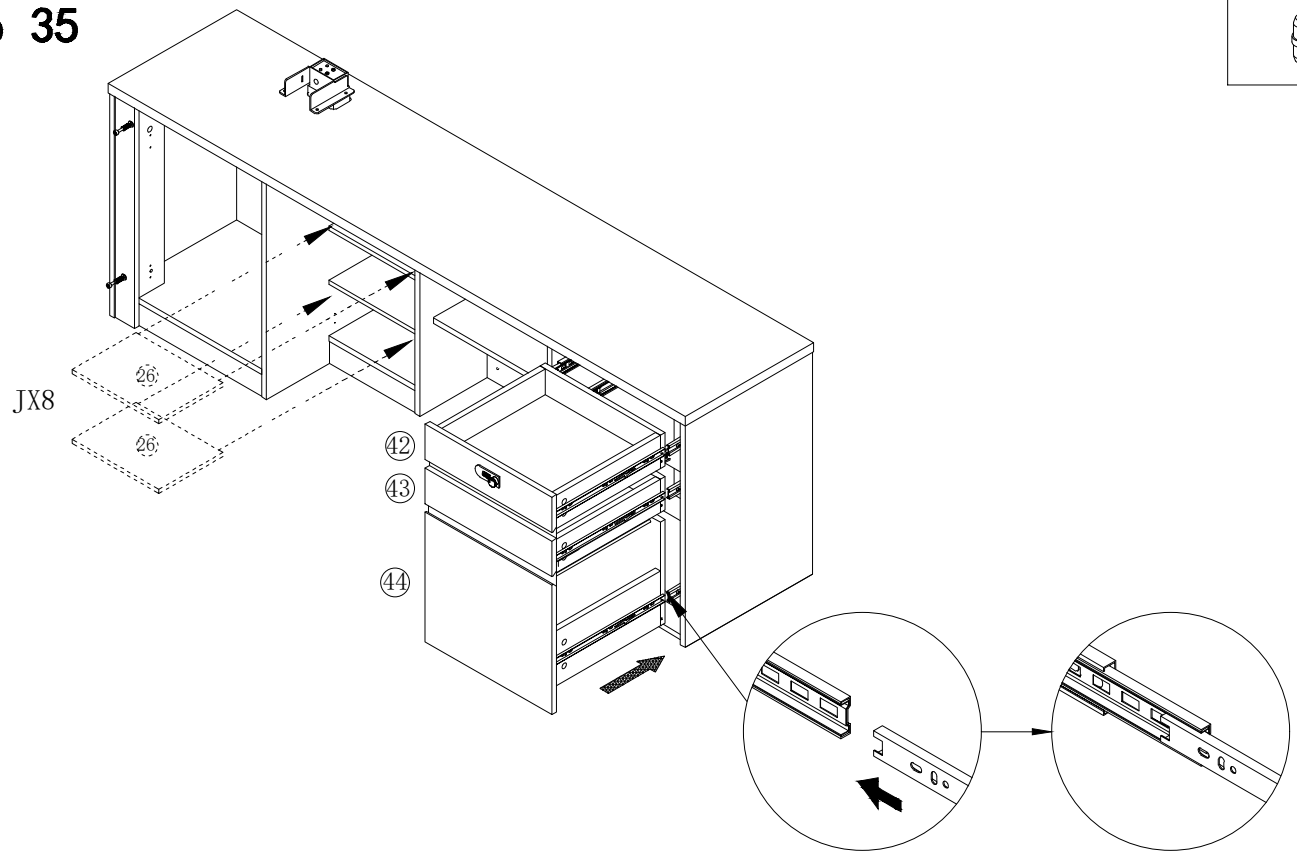

J 8PCS



 Step 36

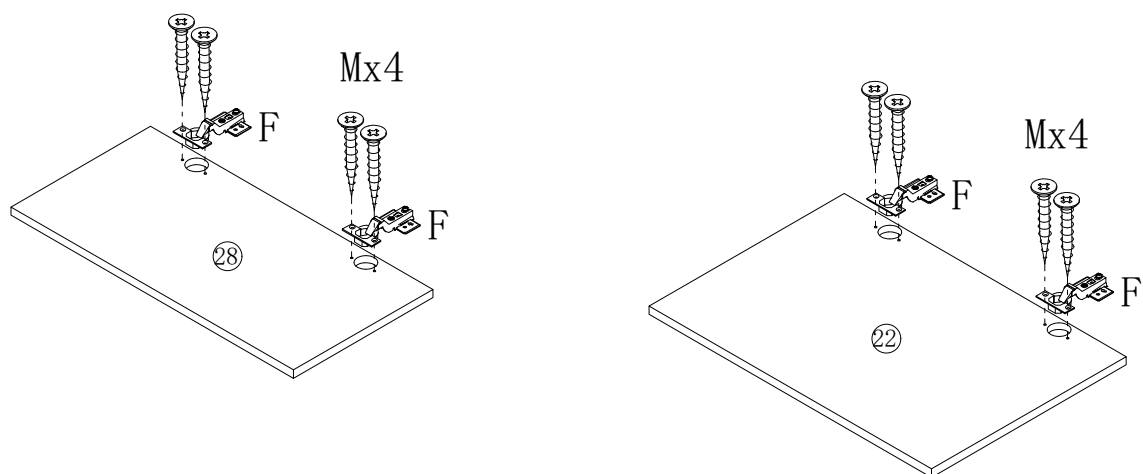

M 8PCS



Ø3.5*14

F 4PCS

 


Step 37

M16PCS



Ø3.5*14

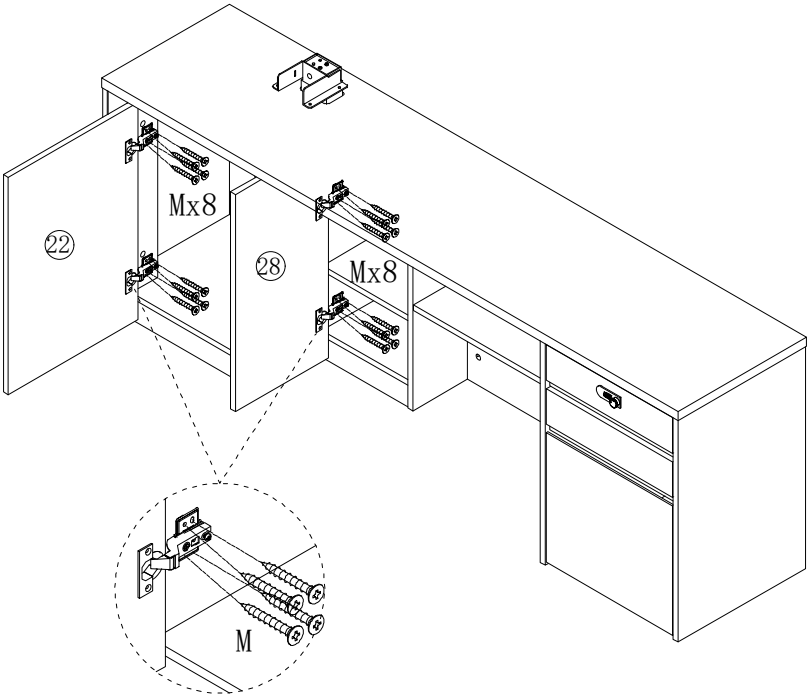


Step 38

C6PCS




 Ø15*9.5

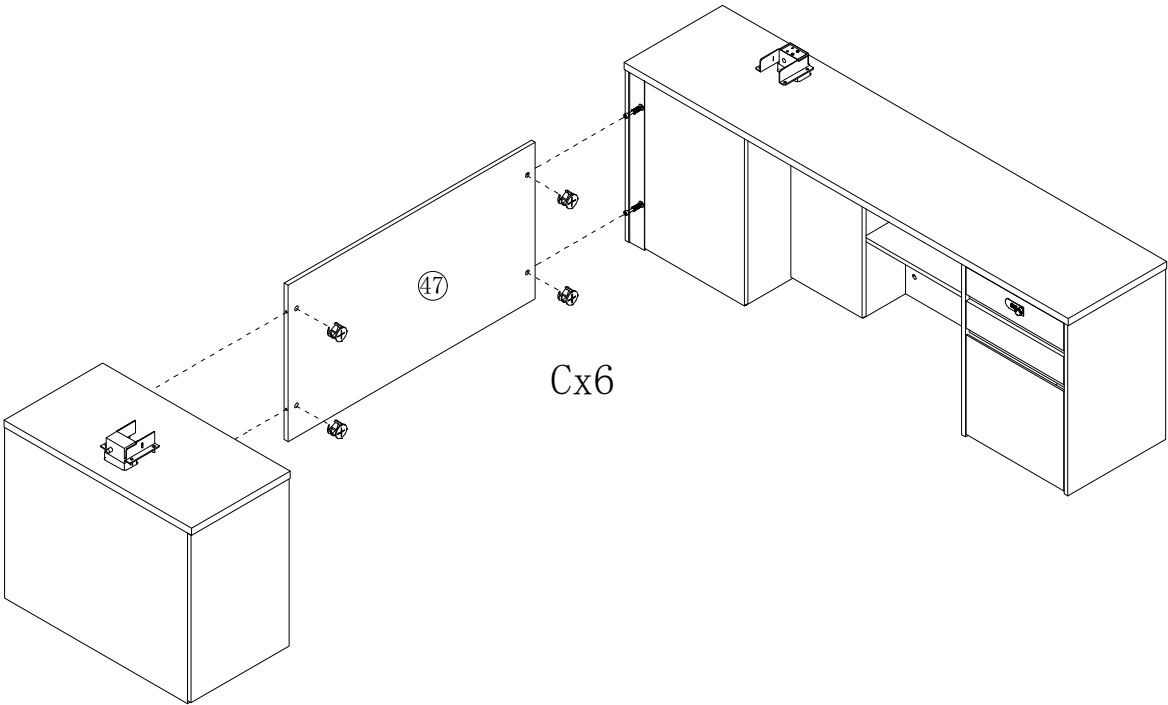


Step 39

 
Attention, please! Lift accessory 1 and accessory 2 up by hand to the same level to facilitate the installation of accessory 5 in step 43.

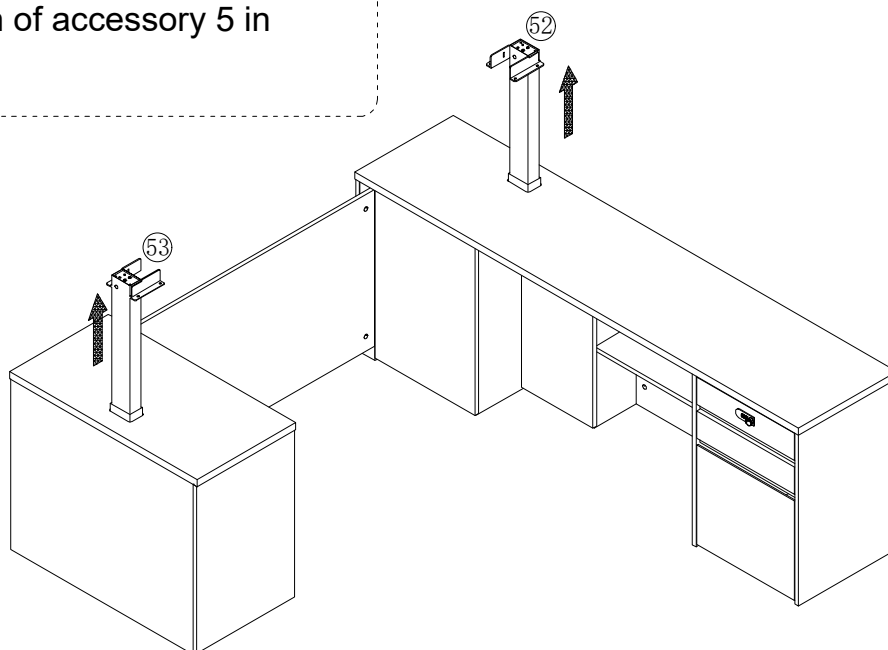

 Step 40

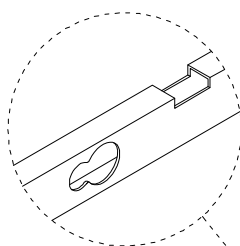

 Note that the "gourd-shaped hole" here on the front crossbeam is close to the left cabinet

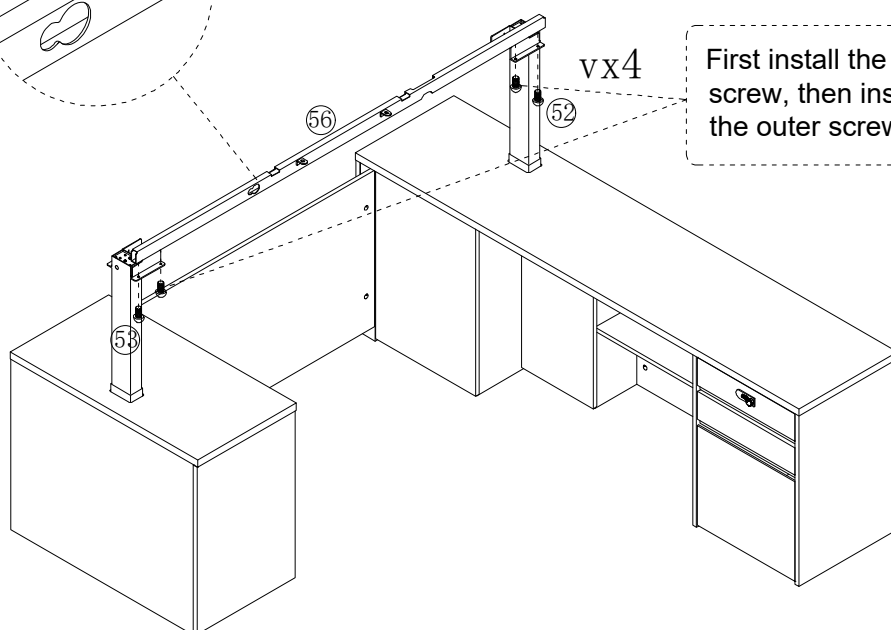



First install the inner screw, then install the outer screw.

v	4PCS
	
	M6*10
z	1PC
	
	M4

Step 41


Attention, please! Install accessory 5, which is the crossbeam, and press the legs on both sides to the lowest position.

  If it is not pushed all the way to the bottom, it may cause the product to have uneven legs, which can result in an uneven tabletop.

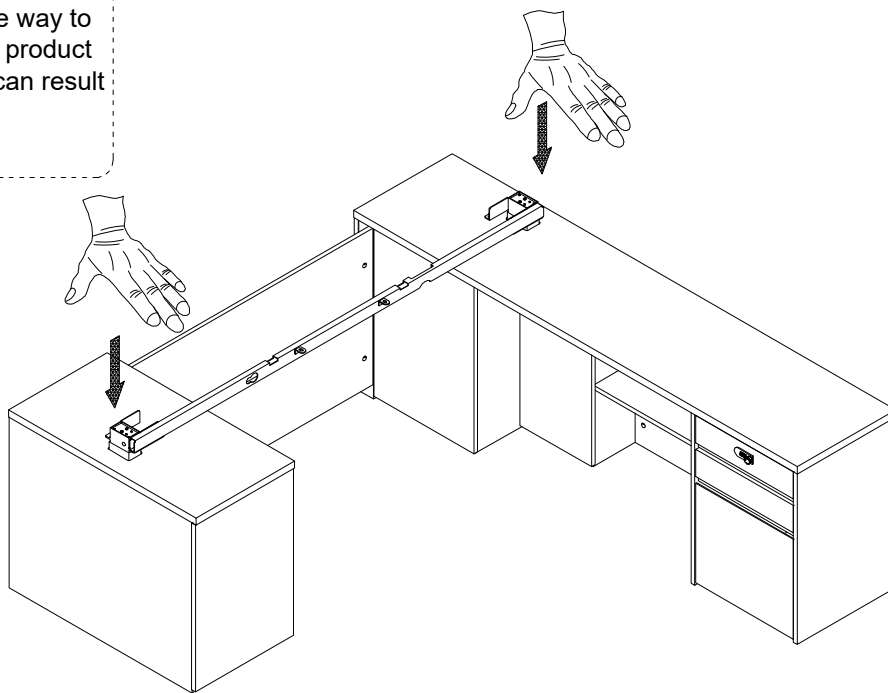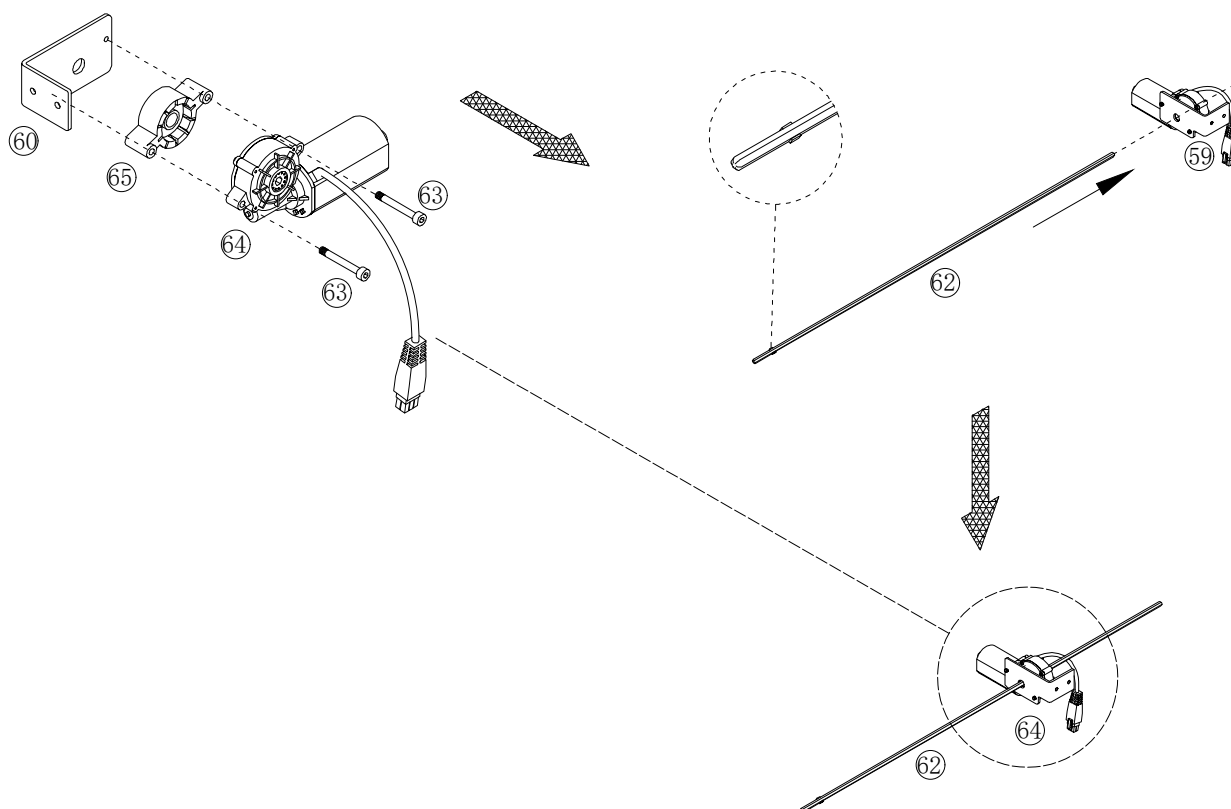
**Step 42**

Step 43

 
v 2PCS
M6*10

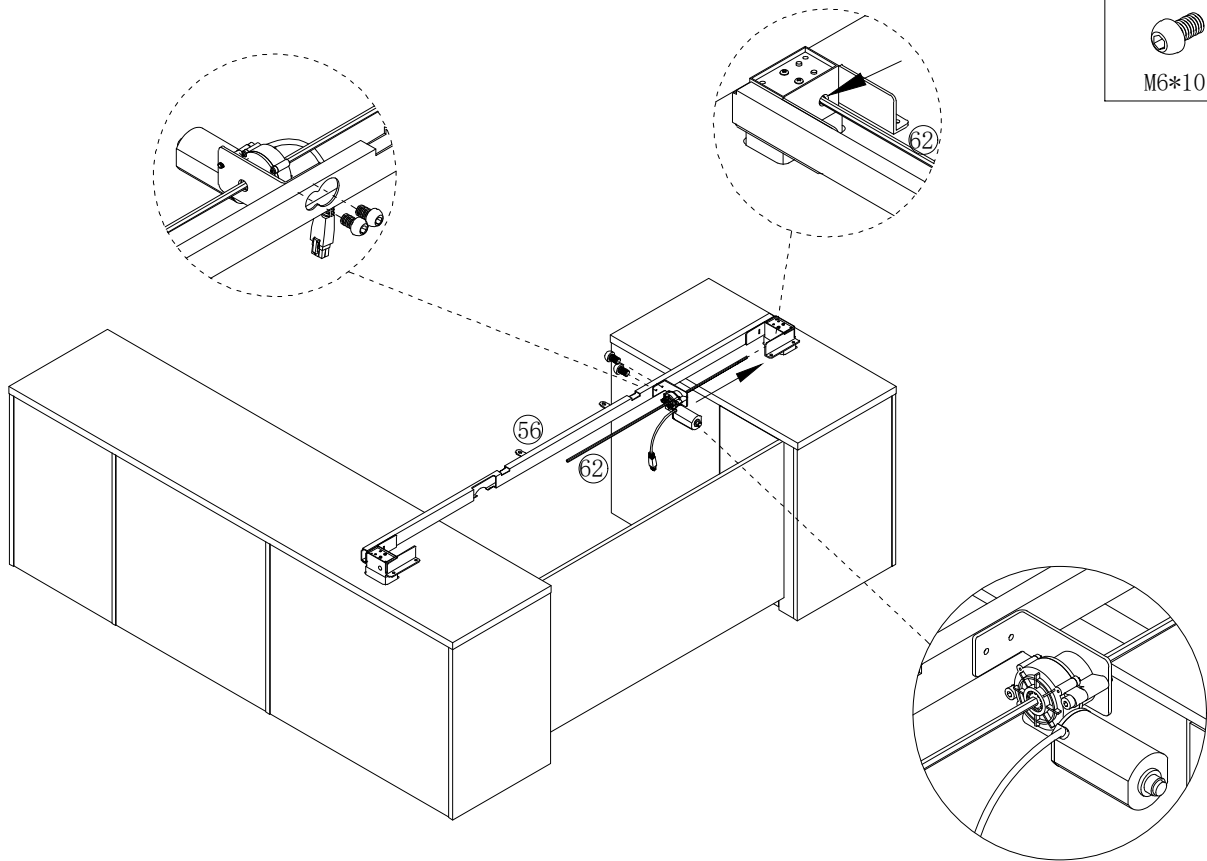

 Step 44

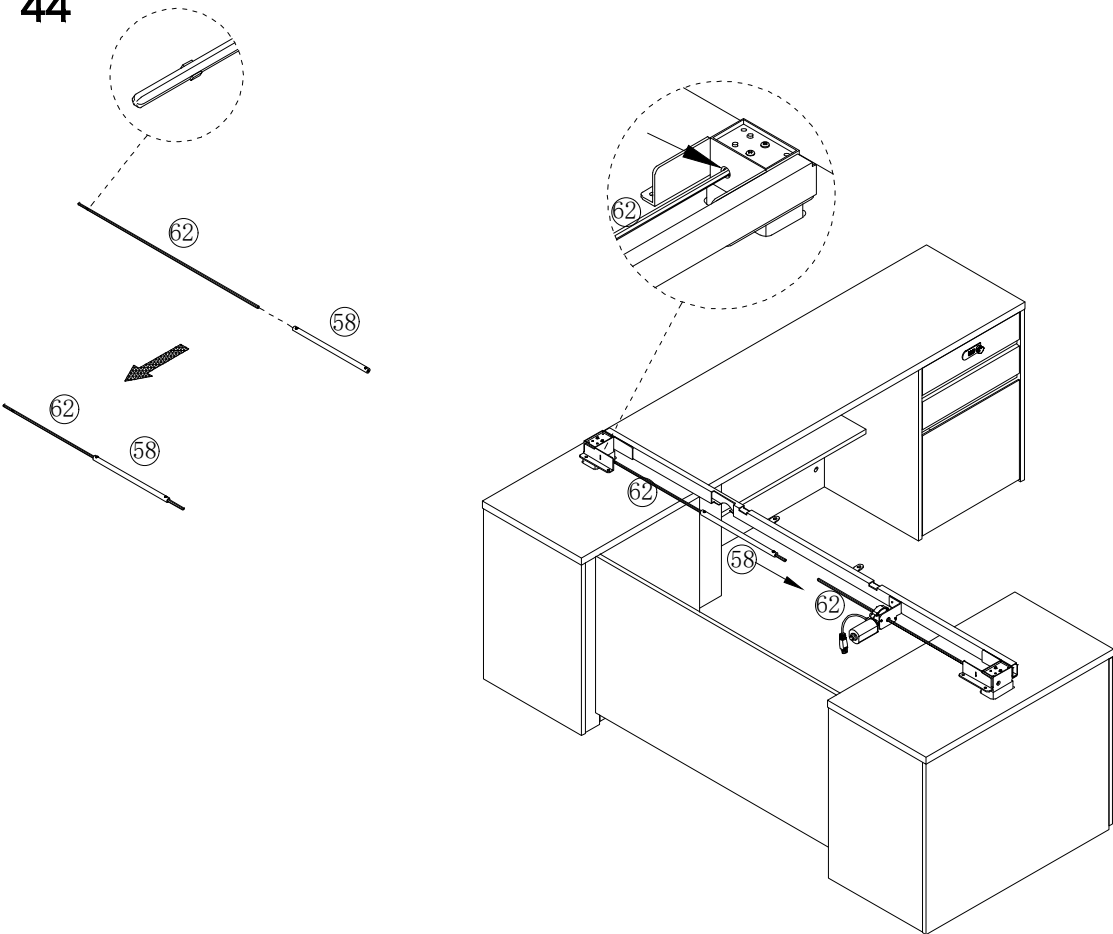

 
Step 45

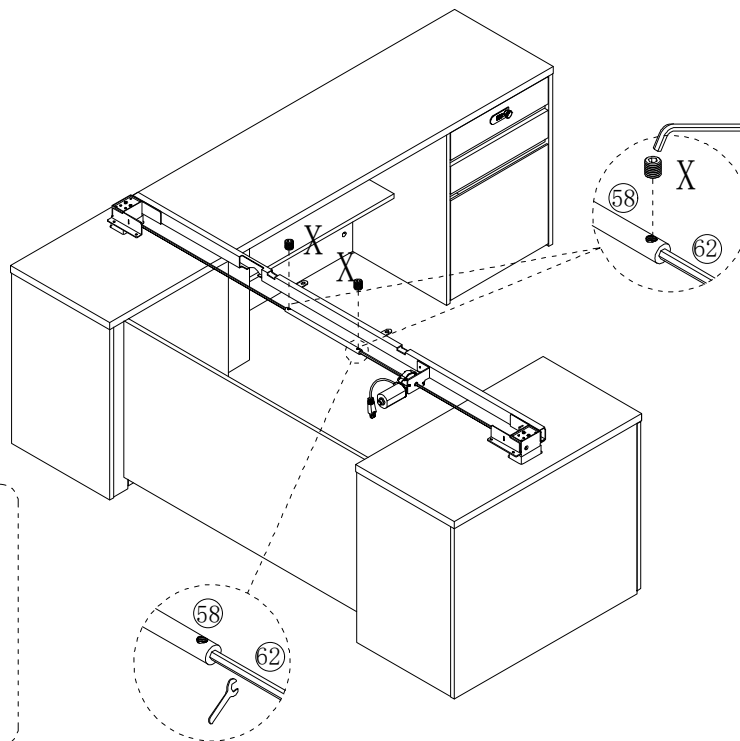

Z	1PC
	M4
X	2PCS
	M8
Y	1PC

Note: If the transmission rod doesn't fit smoothly into the hole of rod coupler, fine-tune it with the wrench.

 Step 46

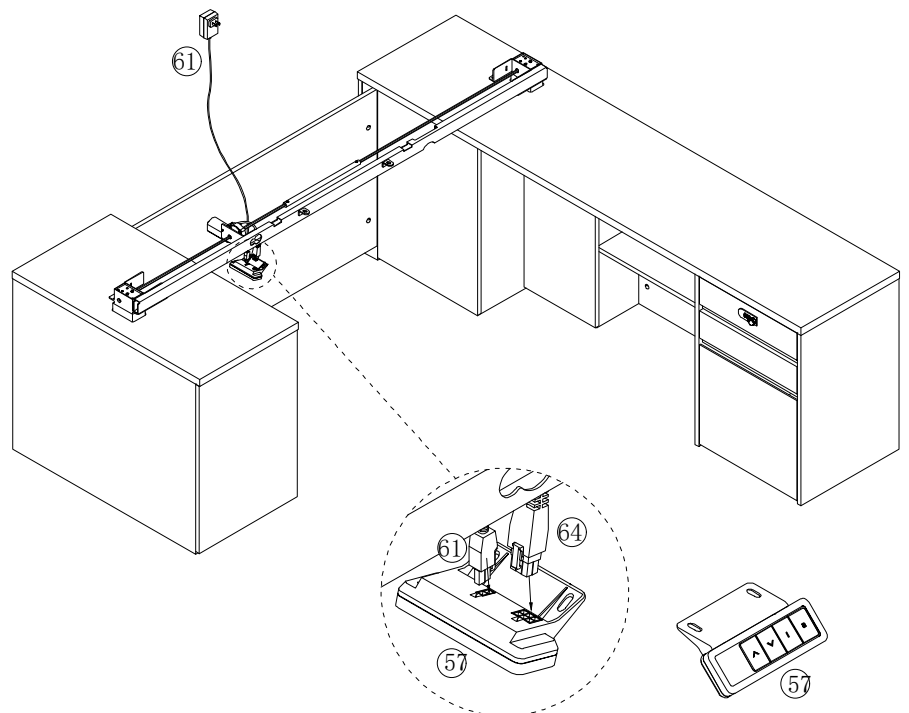


Step1: Connect the controller of the lifting frame, namely accessory 6, to the plugs of the other two accessories 10 and 13, and then turn on the power.

Step2: Press the downward button on the controller for 5 seconds- the hand controller will display "RST". Release the button, then hold down the downward button again until the digital tube shows a number.

Step3: Press and hold the "Rise" button, raise the lifting frame to a certain height, then turn off the power and proceed to the next installation step.

 
Step 47

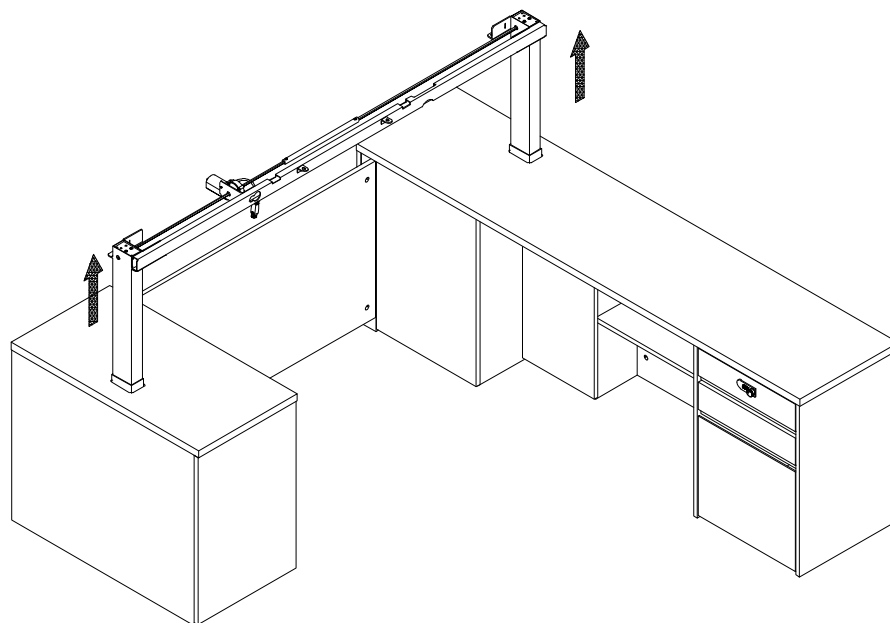

Step 48

V 4PCS

  M6*10

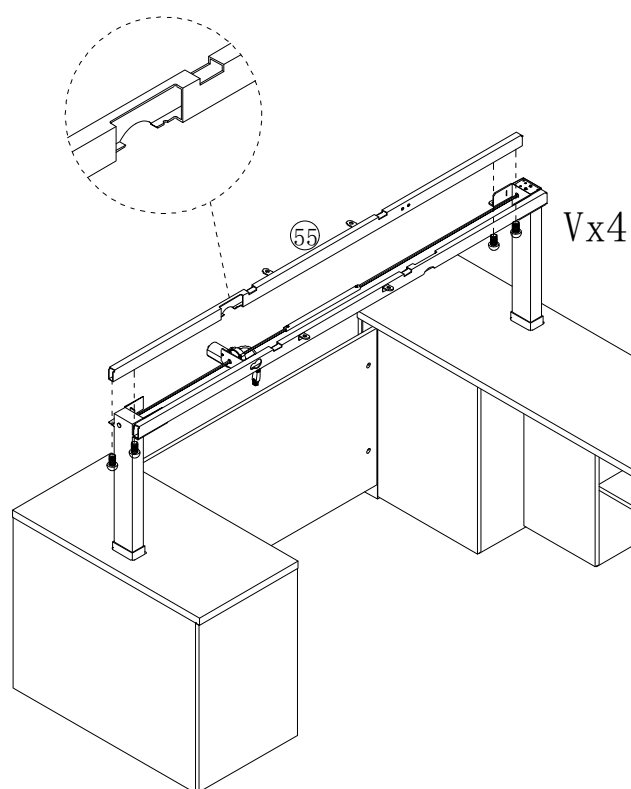


Step 49

U4PCS



 M6*30

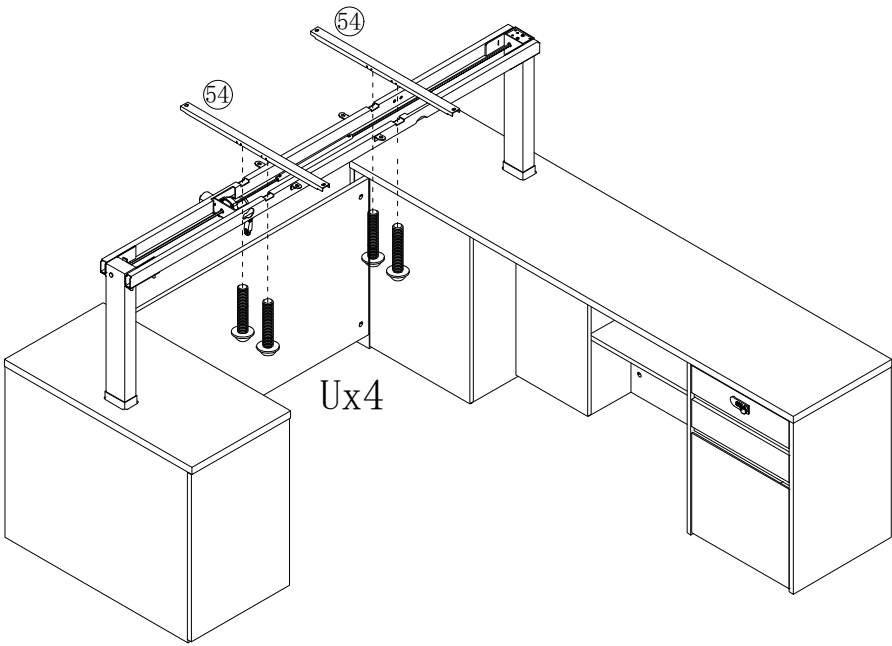


Step 50

V4PCS



 
M6*10

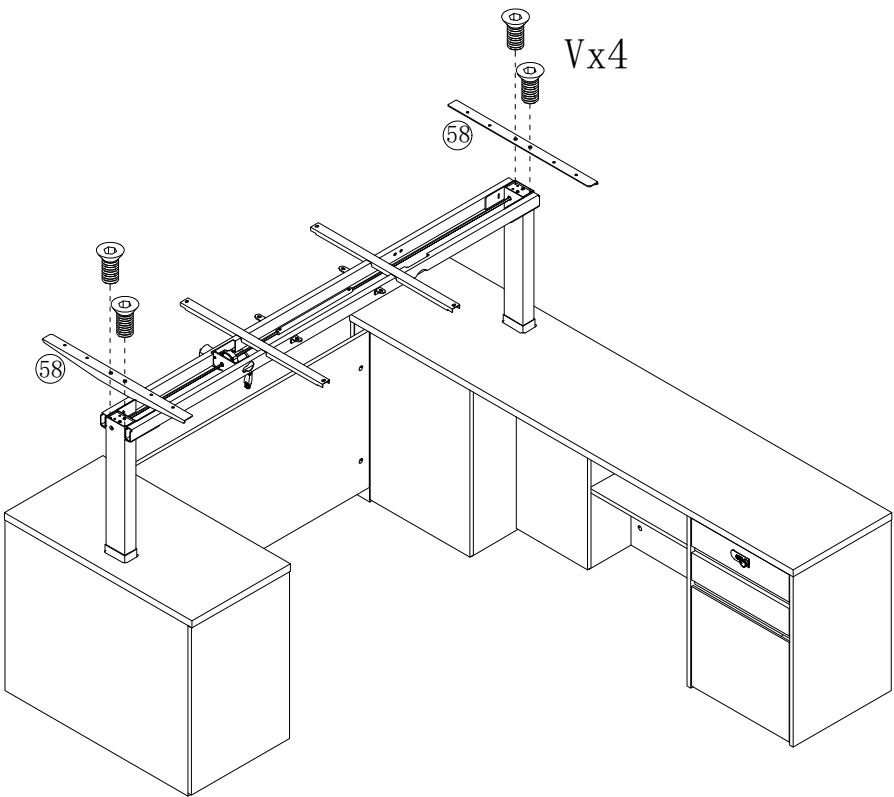

Step 51


The tabletop is too heavy. It is recommended to move the two boards here to the tabletop and then join them together.

B	4PCS	C	4PCS	D	4PCS
					
Ø7*60		Ø15*9.5		Ø8*40	

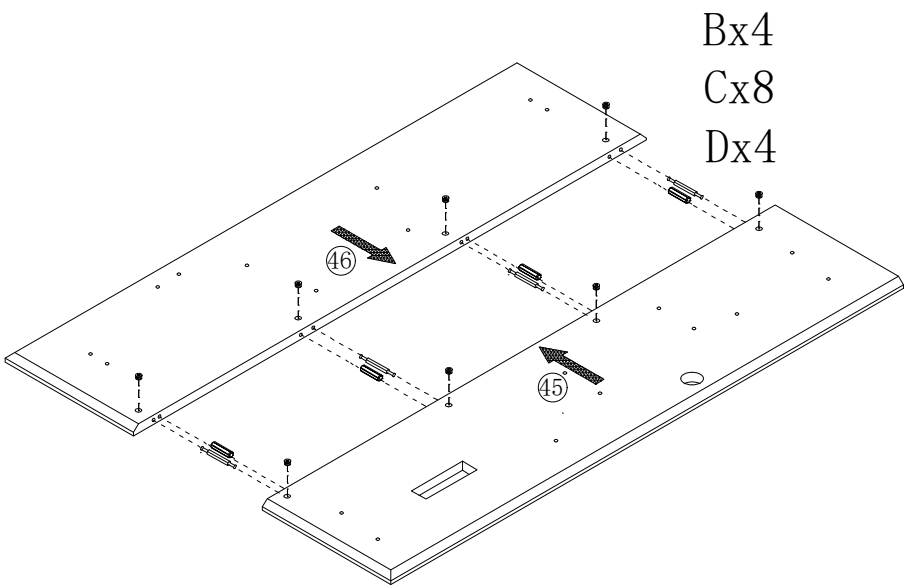 



Step 52

K	16PCS
	
M6*16	

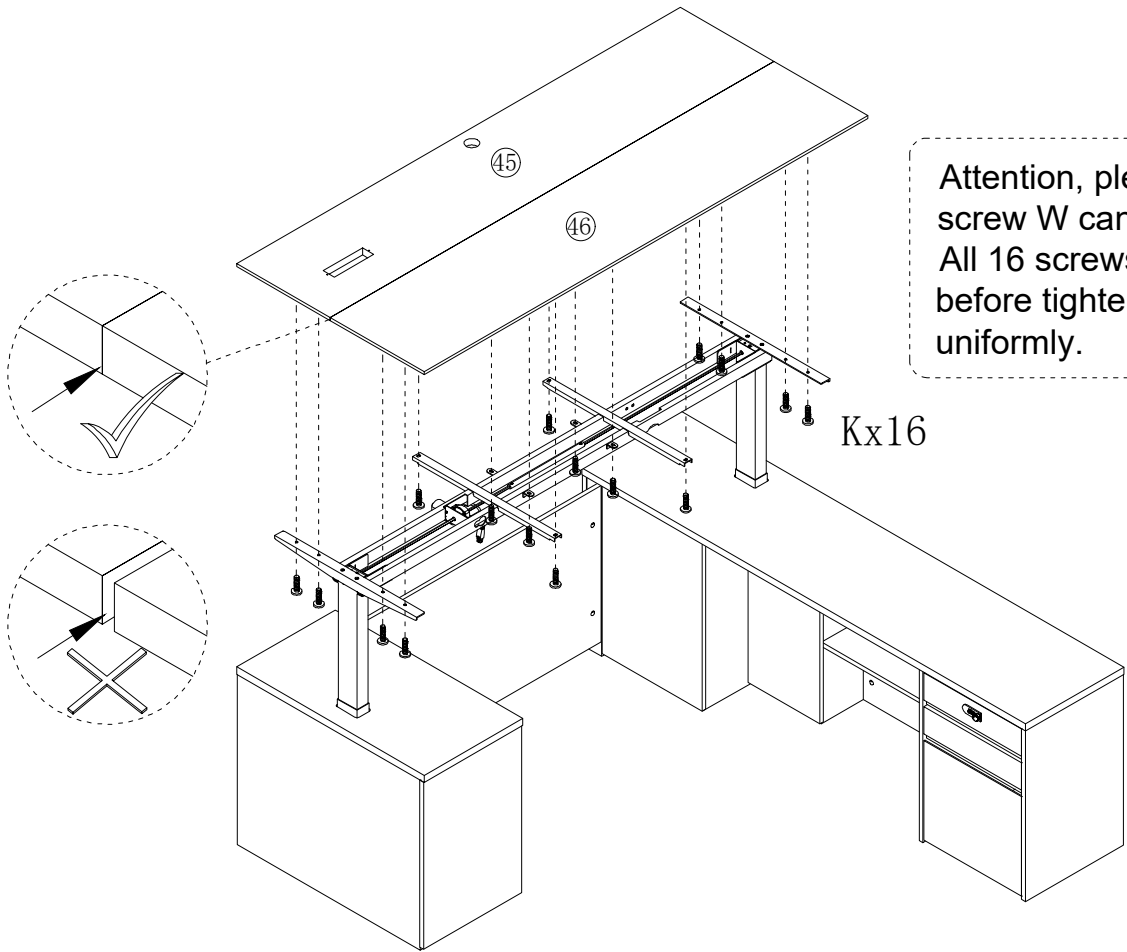 


Step 53

S	2PCS	M	2PCS
			
Ø50		Ø3.5*14	

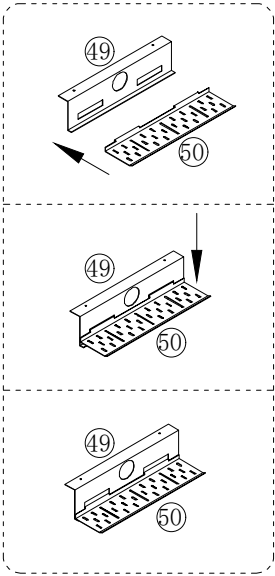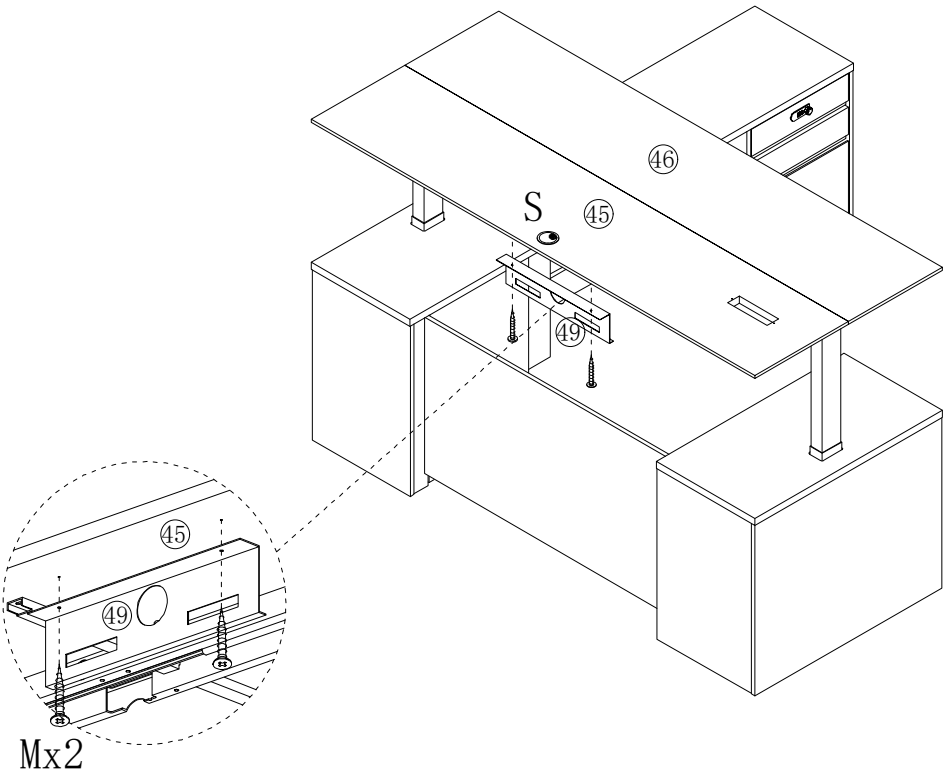  

Step 54

Q	1PC
	
M	4PCS
	
	Ø3.5*14
T	4PCS
	

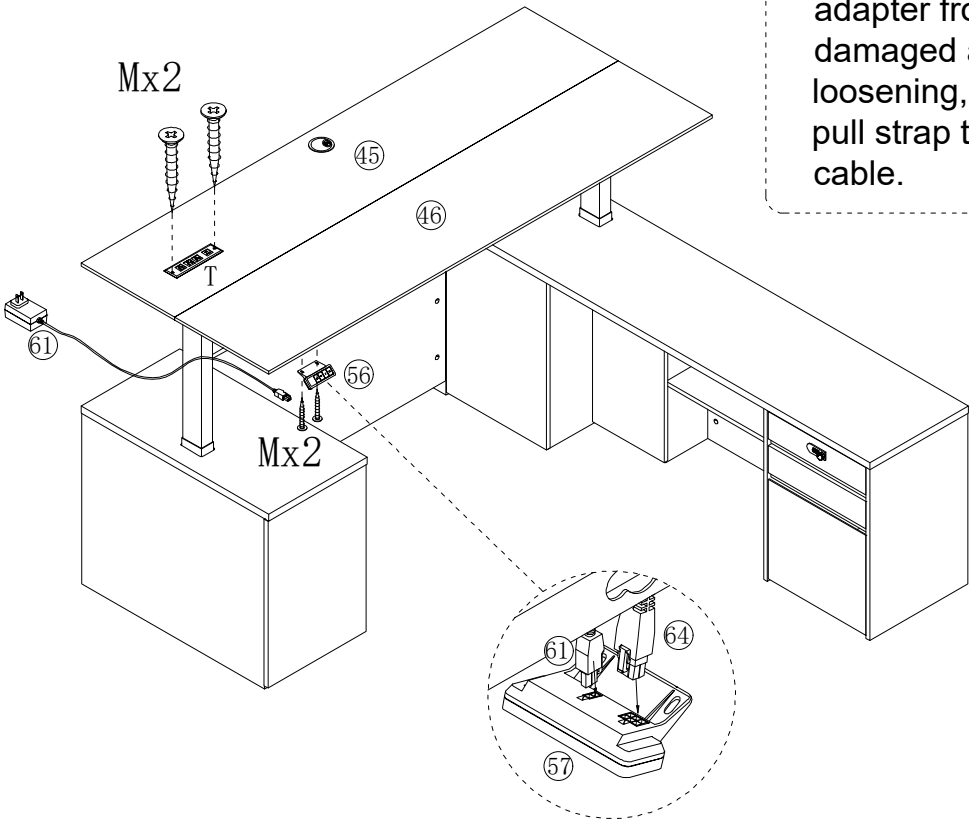 


To prevent the power adapter from being damaged and from loosening, please use a pull strap to secure the cable.


Step 55

L 2PCS

 M8*16

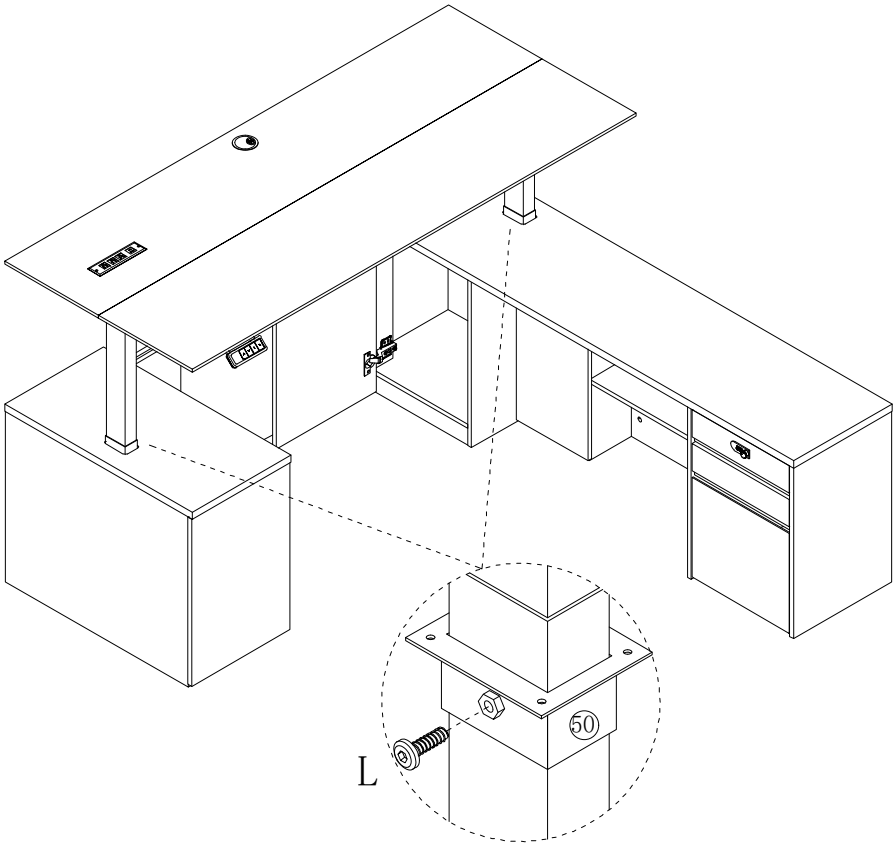

 Step 56

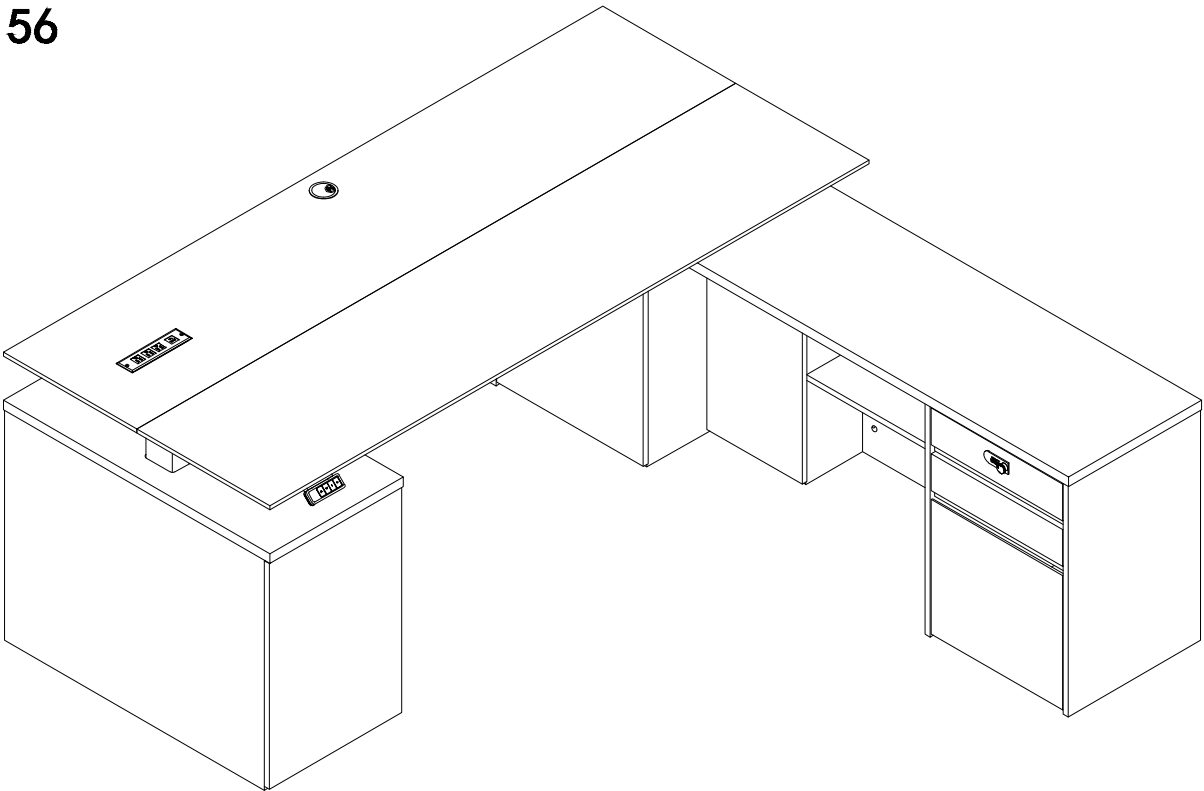

OK

Instruction Manual for JCB35M51C Controller (Version 1.0-English)

 
System Function Description:

1. Lifting and Lowering Function of the Height-Adjustable Desk:

Hold down the upward button, and the column will rise; hold down the downward button, and the column will lower. Release the button, and the movement will stop.

2. Memory Position Function:

Long press the "①/②" button for 3 seconds until the digital tube display flashes. After the number flashes 3 times and stops, the current height will be successfully stored in the corresponding memory position. Short press the "①/②" button and release it, and the tabletop will automatically move to the height of the memory position. During operation, pressing any button can stop the movement.

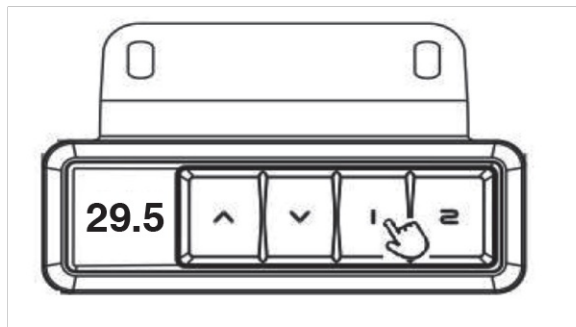

3. Reset Function:

(1) Function Description:

The system needs to be reset under specific circumstances.

These circumstances include:

- ① When used for the first time, the system will enter the reset state after being powered on.
- ② Active reset will put the system into the reset state.
- ③ A system abnormality will cause the system to enter the reset state.

(2) Operation Method:

Bottom Reset: Hold down the downward button until it reaches the bottom. Then release the button, and press the downward button again for 5 seconds—the hand controller will display "RST". Release the button, then hold down the downward button again until the digital tube shows a number.

