 
 


Installation & Assembly

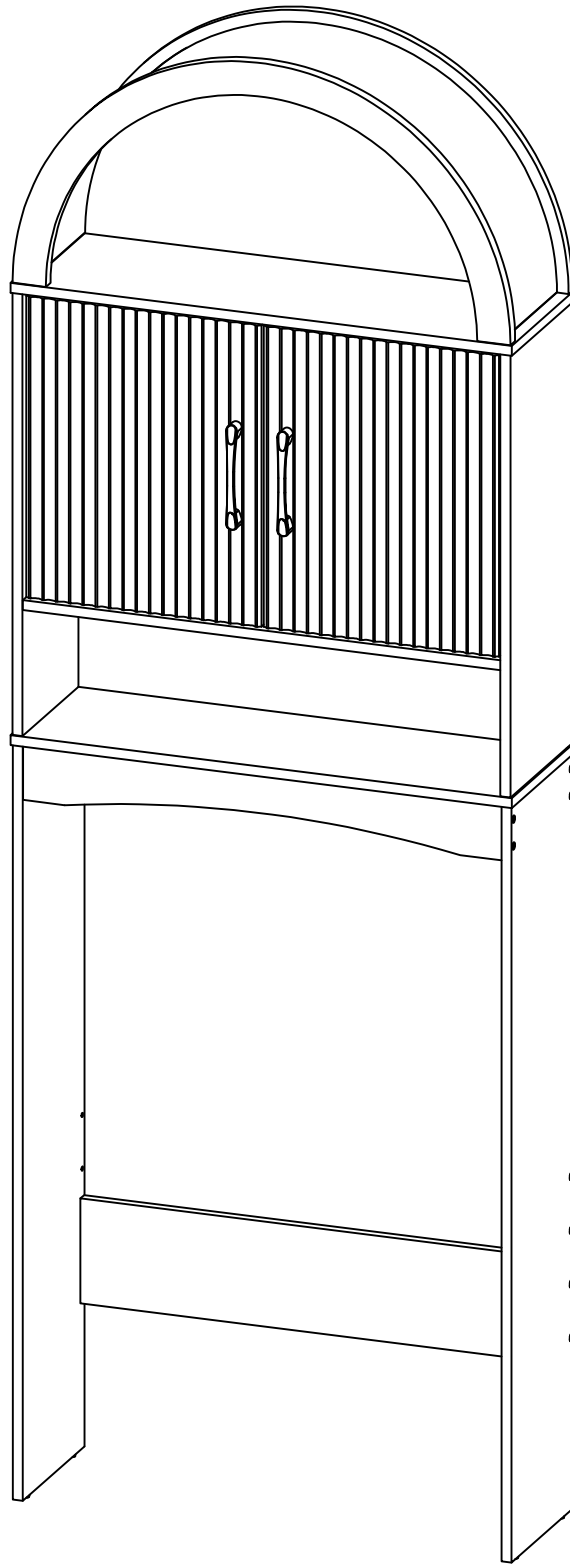

As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully.

Before You Start

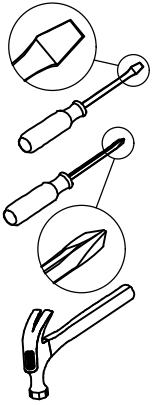

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification


Not actual size

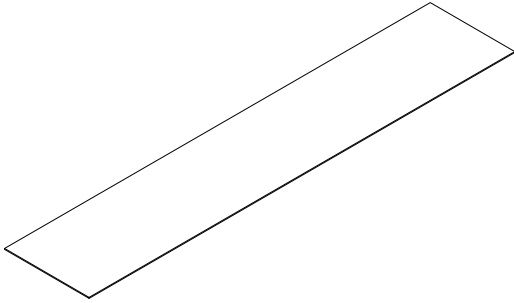


A
TOP
Qty:1

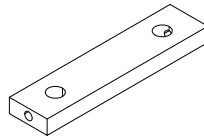


B
RAIL
Qty:3

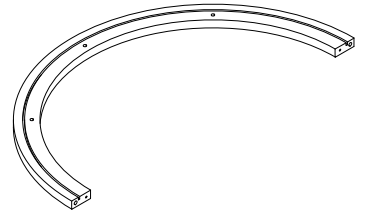


C
TOP MOLDING ,FRONT
Qty:1

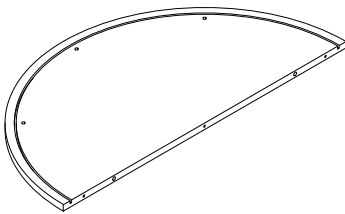


D
UPPER BACK PANEL
Qty:1

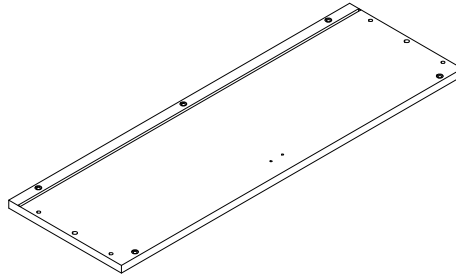


E
FIXED SHELF
Qty:1

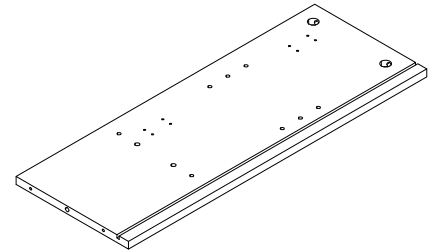


F
UPPER LEFT SIDE PANEL
Qty:1

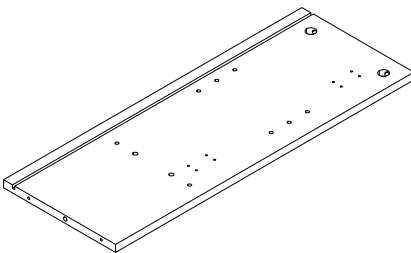


G
UPPER RIGHT SIDE PANEL
Qty:1

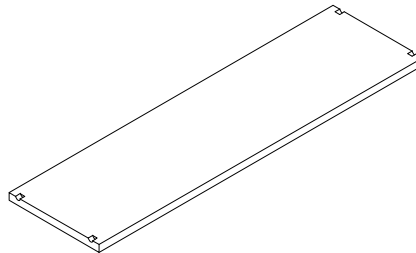


H
ADJUSTABLE SHELF
Qty:1

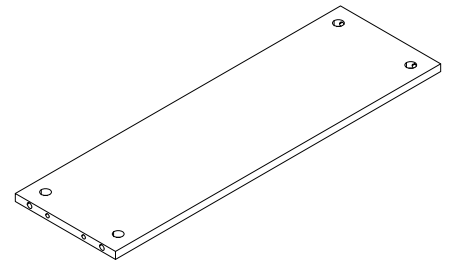


I
FIXED SHELF
Qty:1

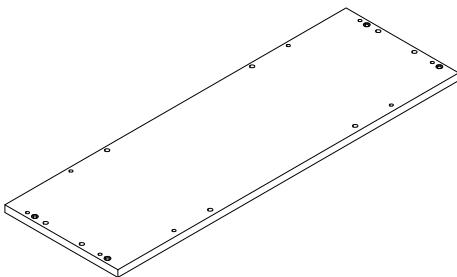 

J
MIDDLE PANEL
Qty:1

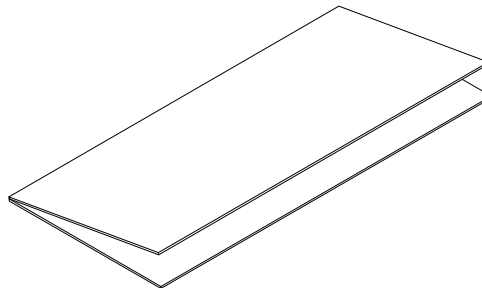 


K
UPPER BACK PANEL
Qty:1

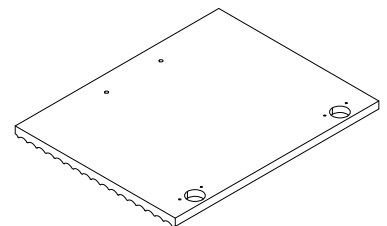 

L
DOOR
Qty:2


Board Identification

 Not actual size

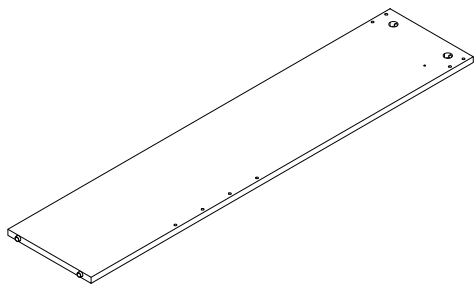


M

 LOWER LEFT SIDE PANEL
Qty:1

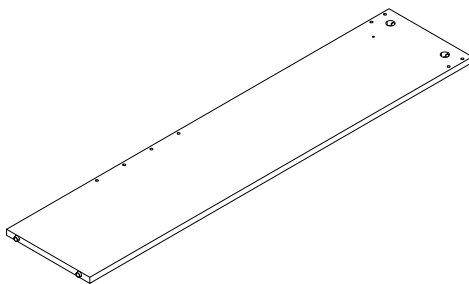


N

 LOWER RIGHT SIDE PANEL
Qty:1

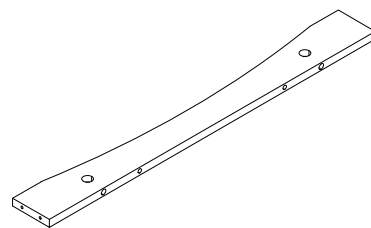


O

 FRONT APRON
Qty:1

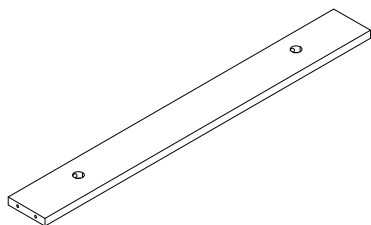

P

 BACK RAIL
Qty:1

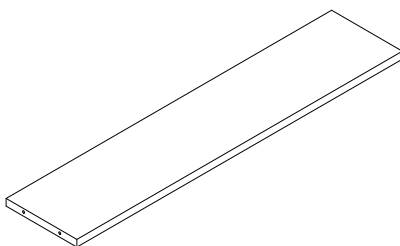


Q


BOTTOM STRETCHER
Qty:1

Part List

 
Not actual size

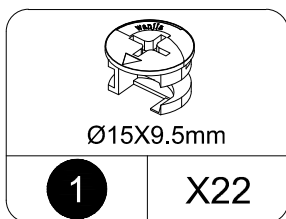


CAM LOCK
spare:1

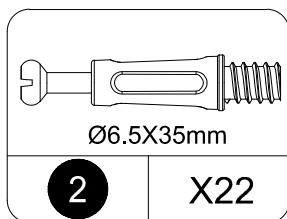 

CAM BOLT
spare:1

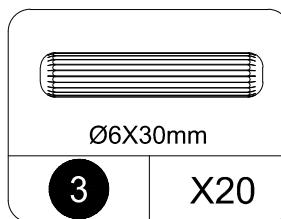 


WOODEN DOWEL
spare:2

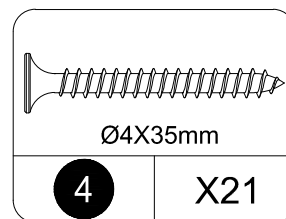 


SCREW
spare:1

Part List


Not actual size

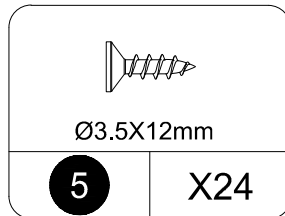


SCREW
spare:2

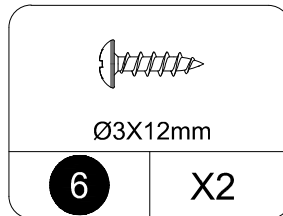


SCREW
spare:1

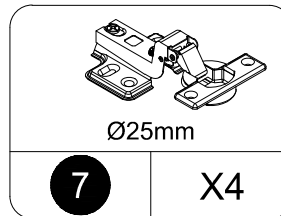


HINGE

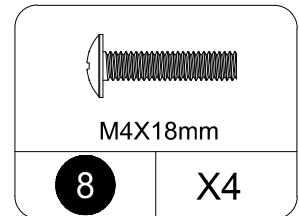


SCREW
spare:1

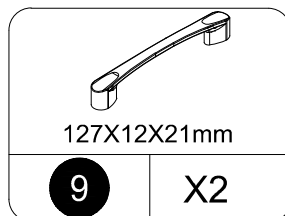


HANDLE

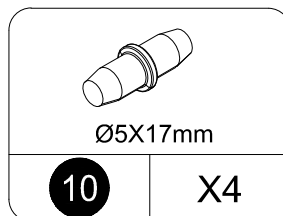


SHELF SUPPORT
spare:1

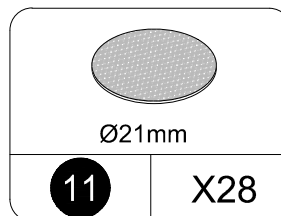


HOLE STICKERS
spare:2

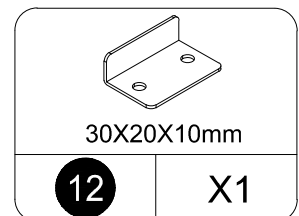

STOPPER

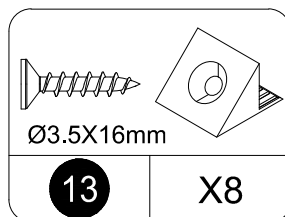





BACKBOARD BUCKLE

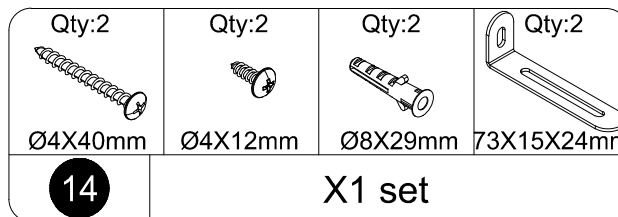

ANTI-TIPPING HARDWARE

Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

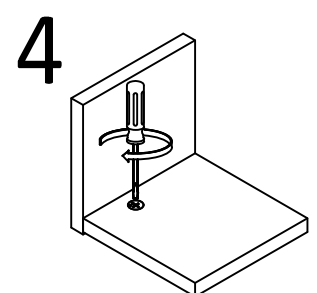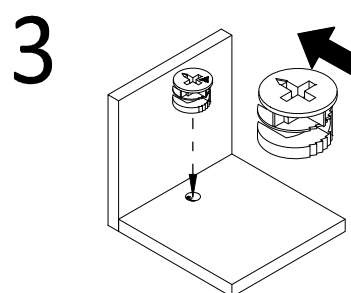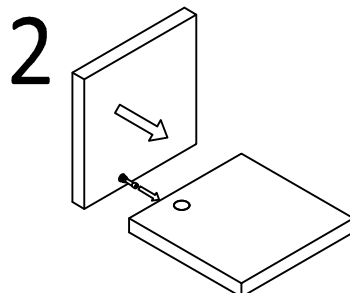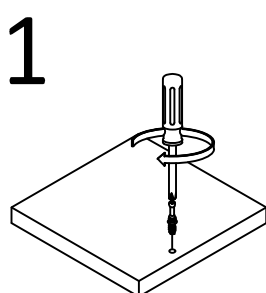










The opening must point toward the edge of the board

Board Identification




Not actual size

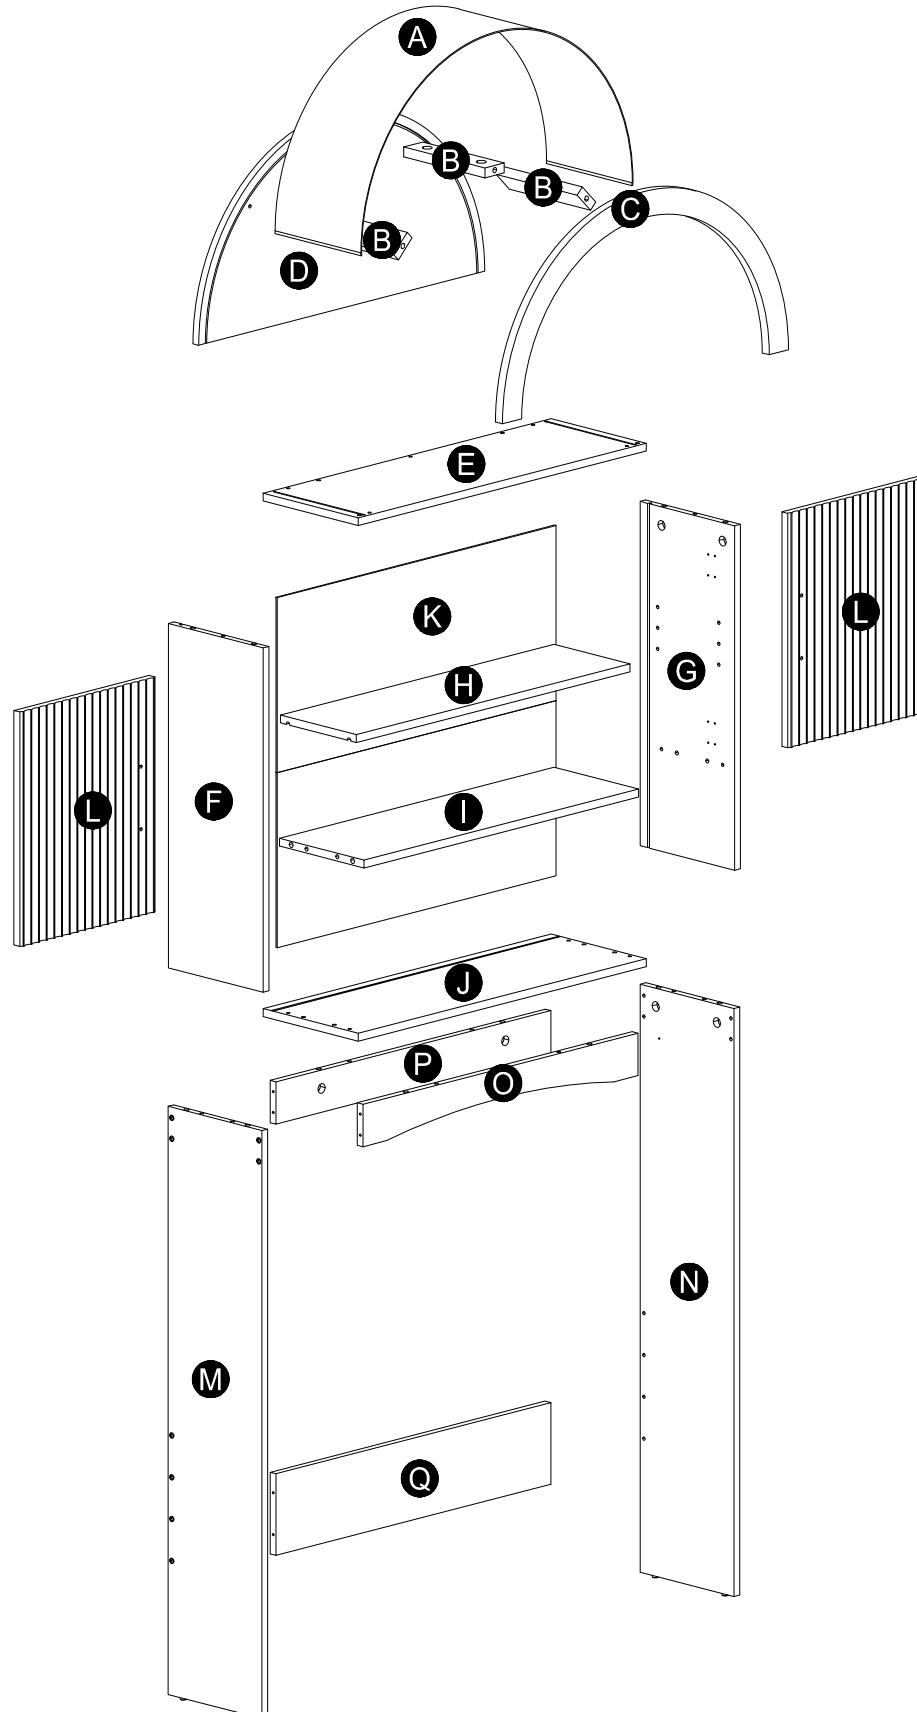


STEP1

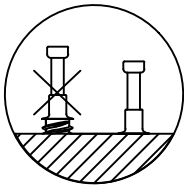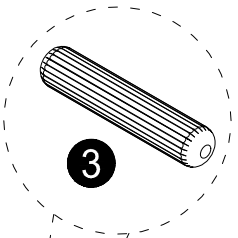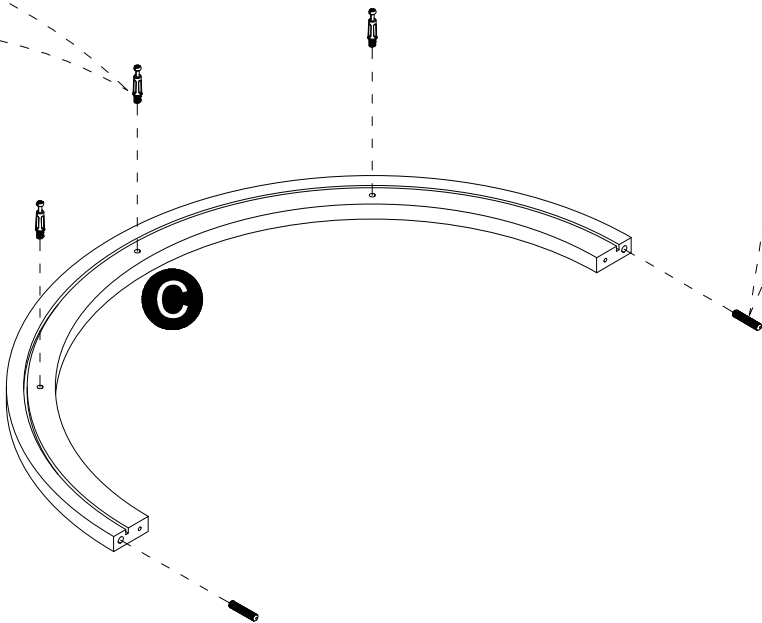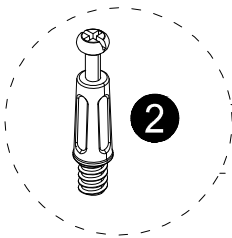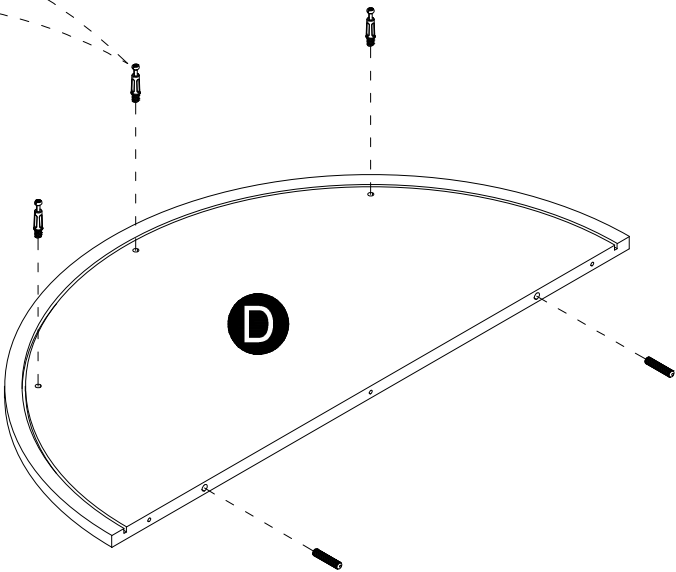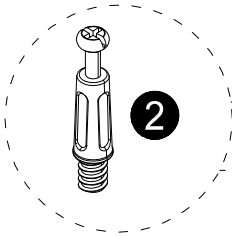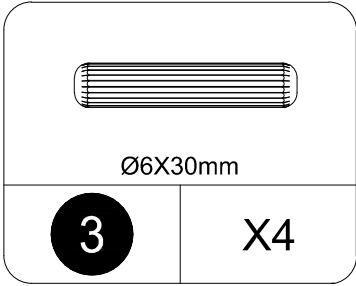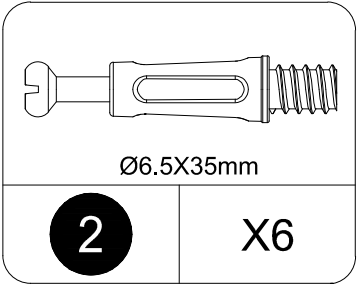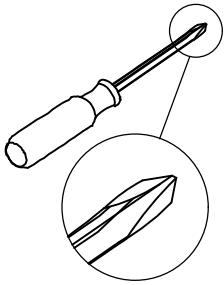

STEP2

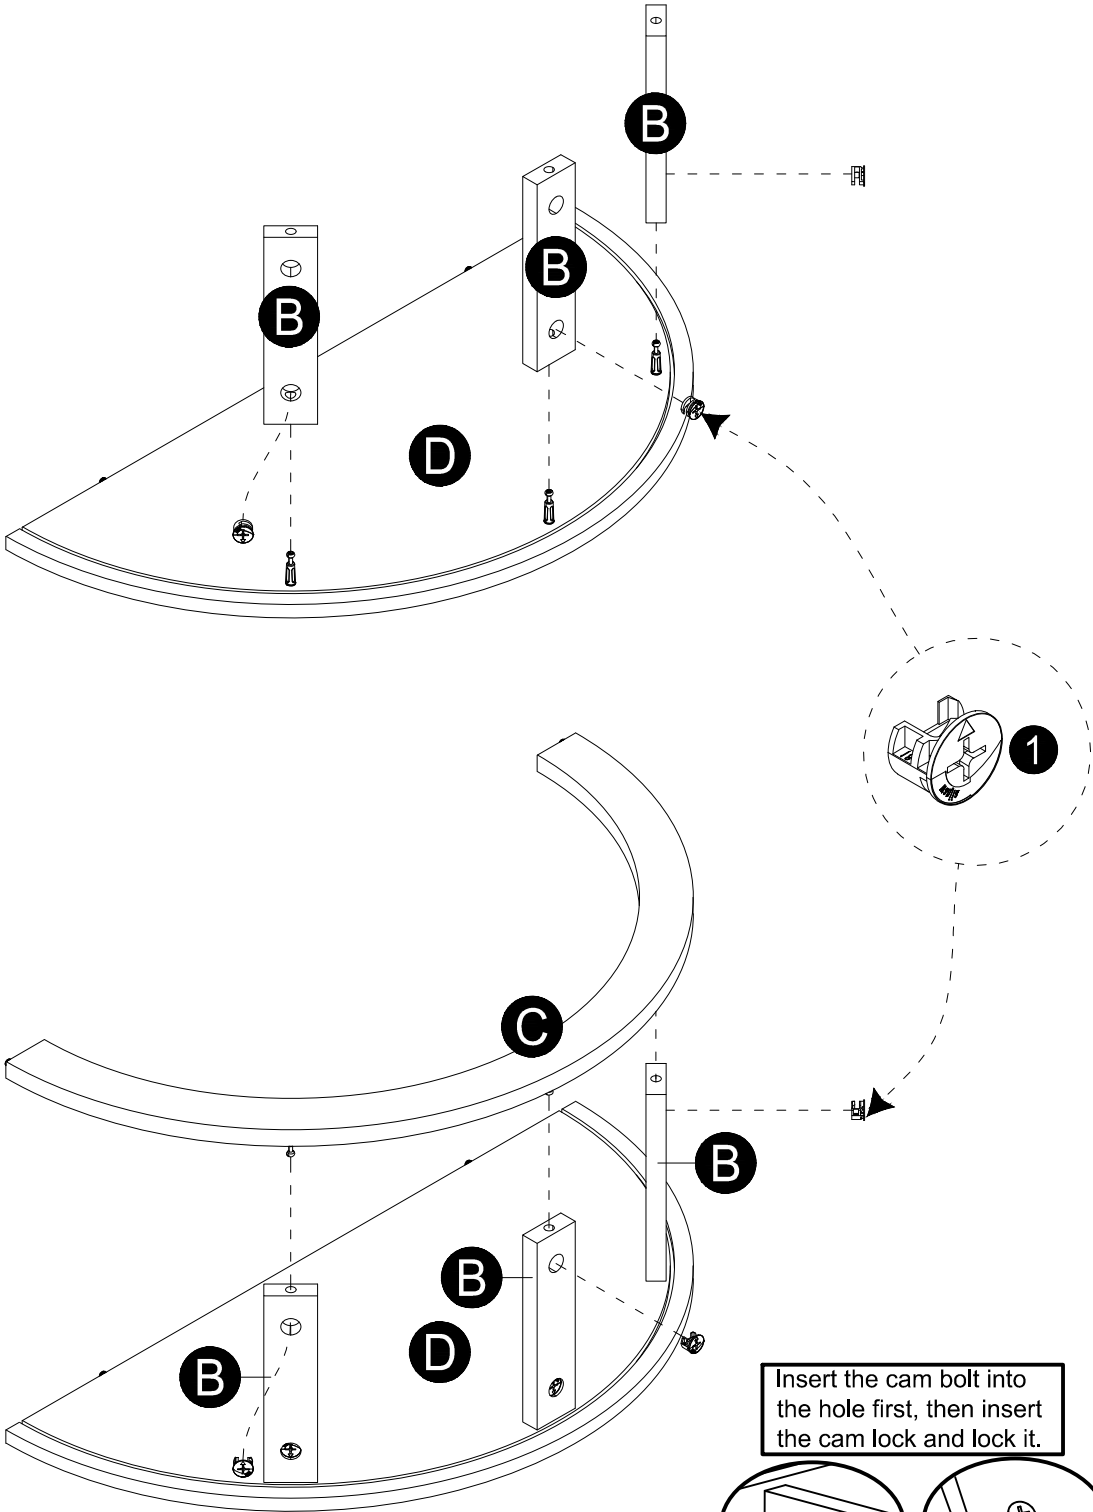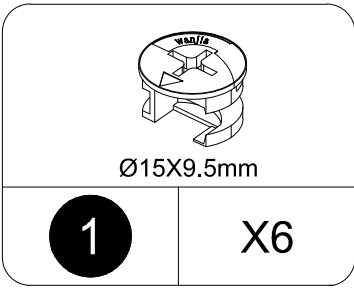
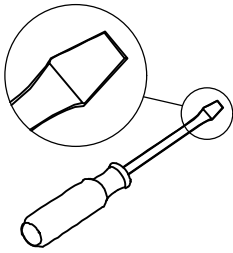


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

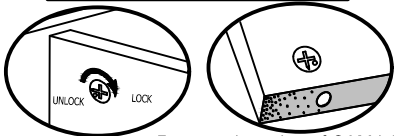



Proper orientation of CAM LOCK


STEP3

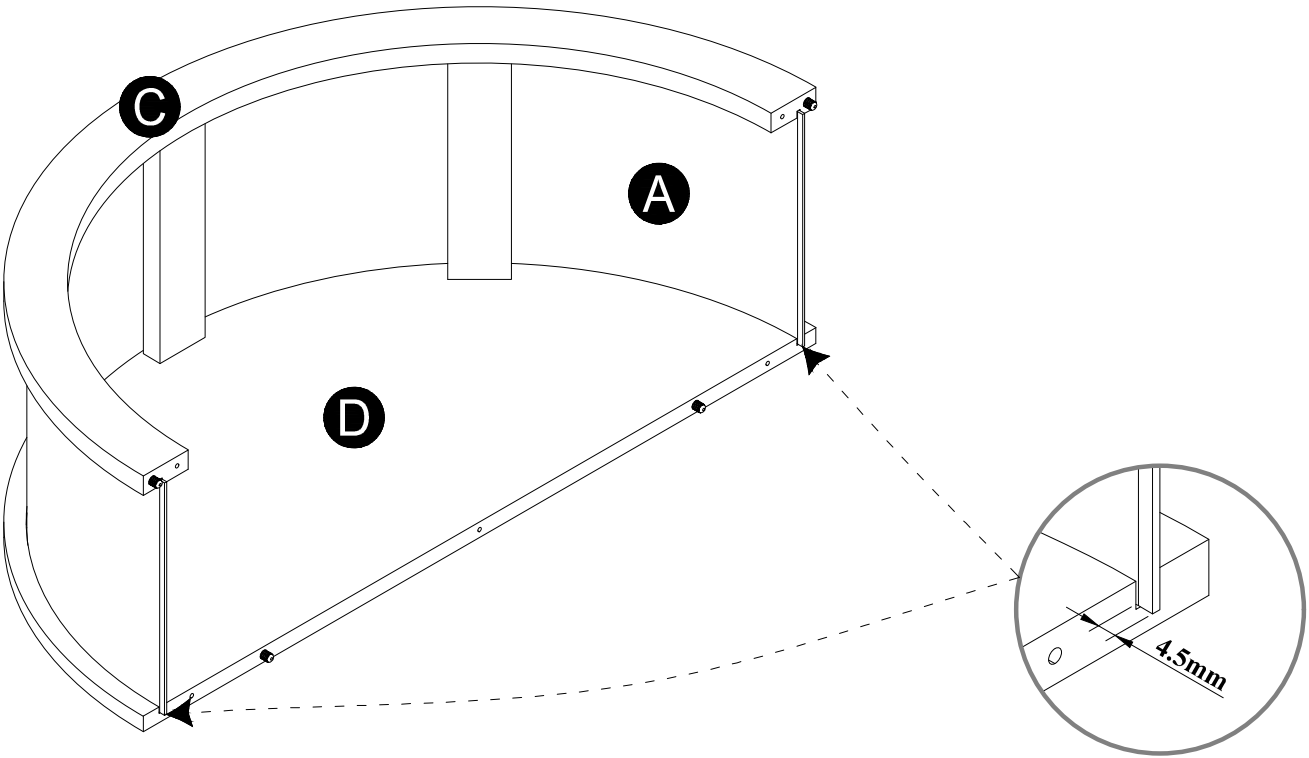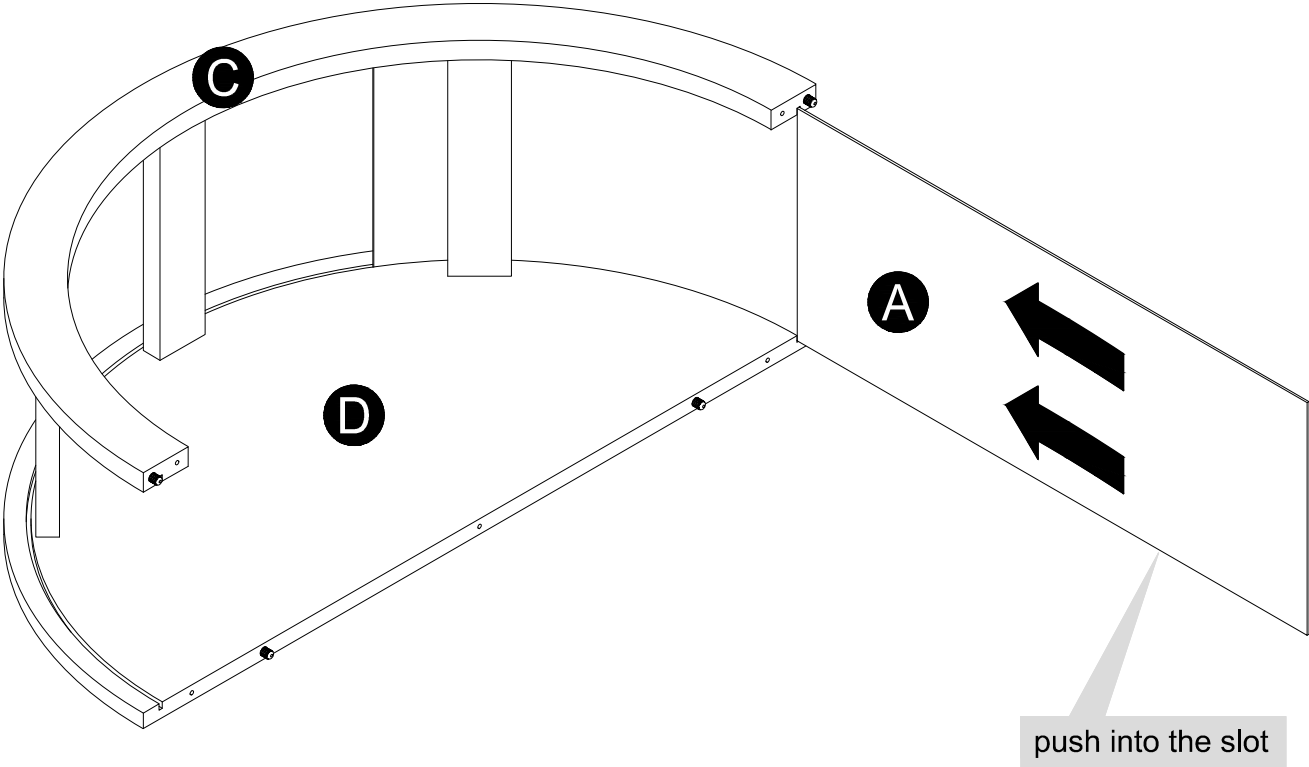



STEP4

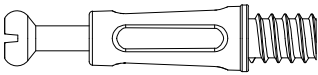	
Ø6.5X35mm	
2	X4







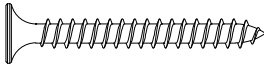
	
Ø4X35mm	
4	X5

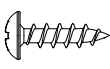	
Ø3X12mm	
6	X2






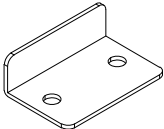
	
30X20X10mm	
12	X1

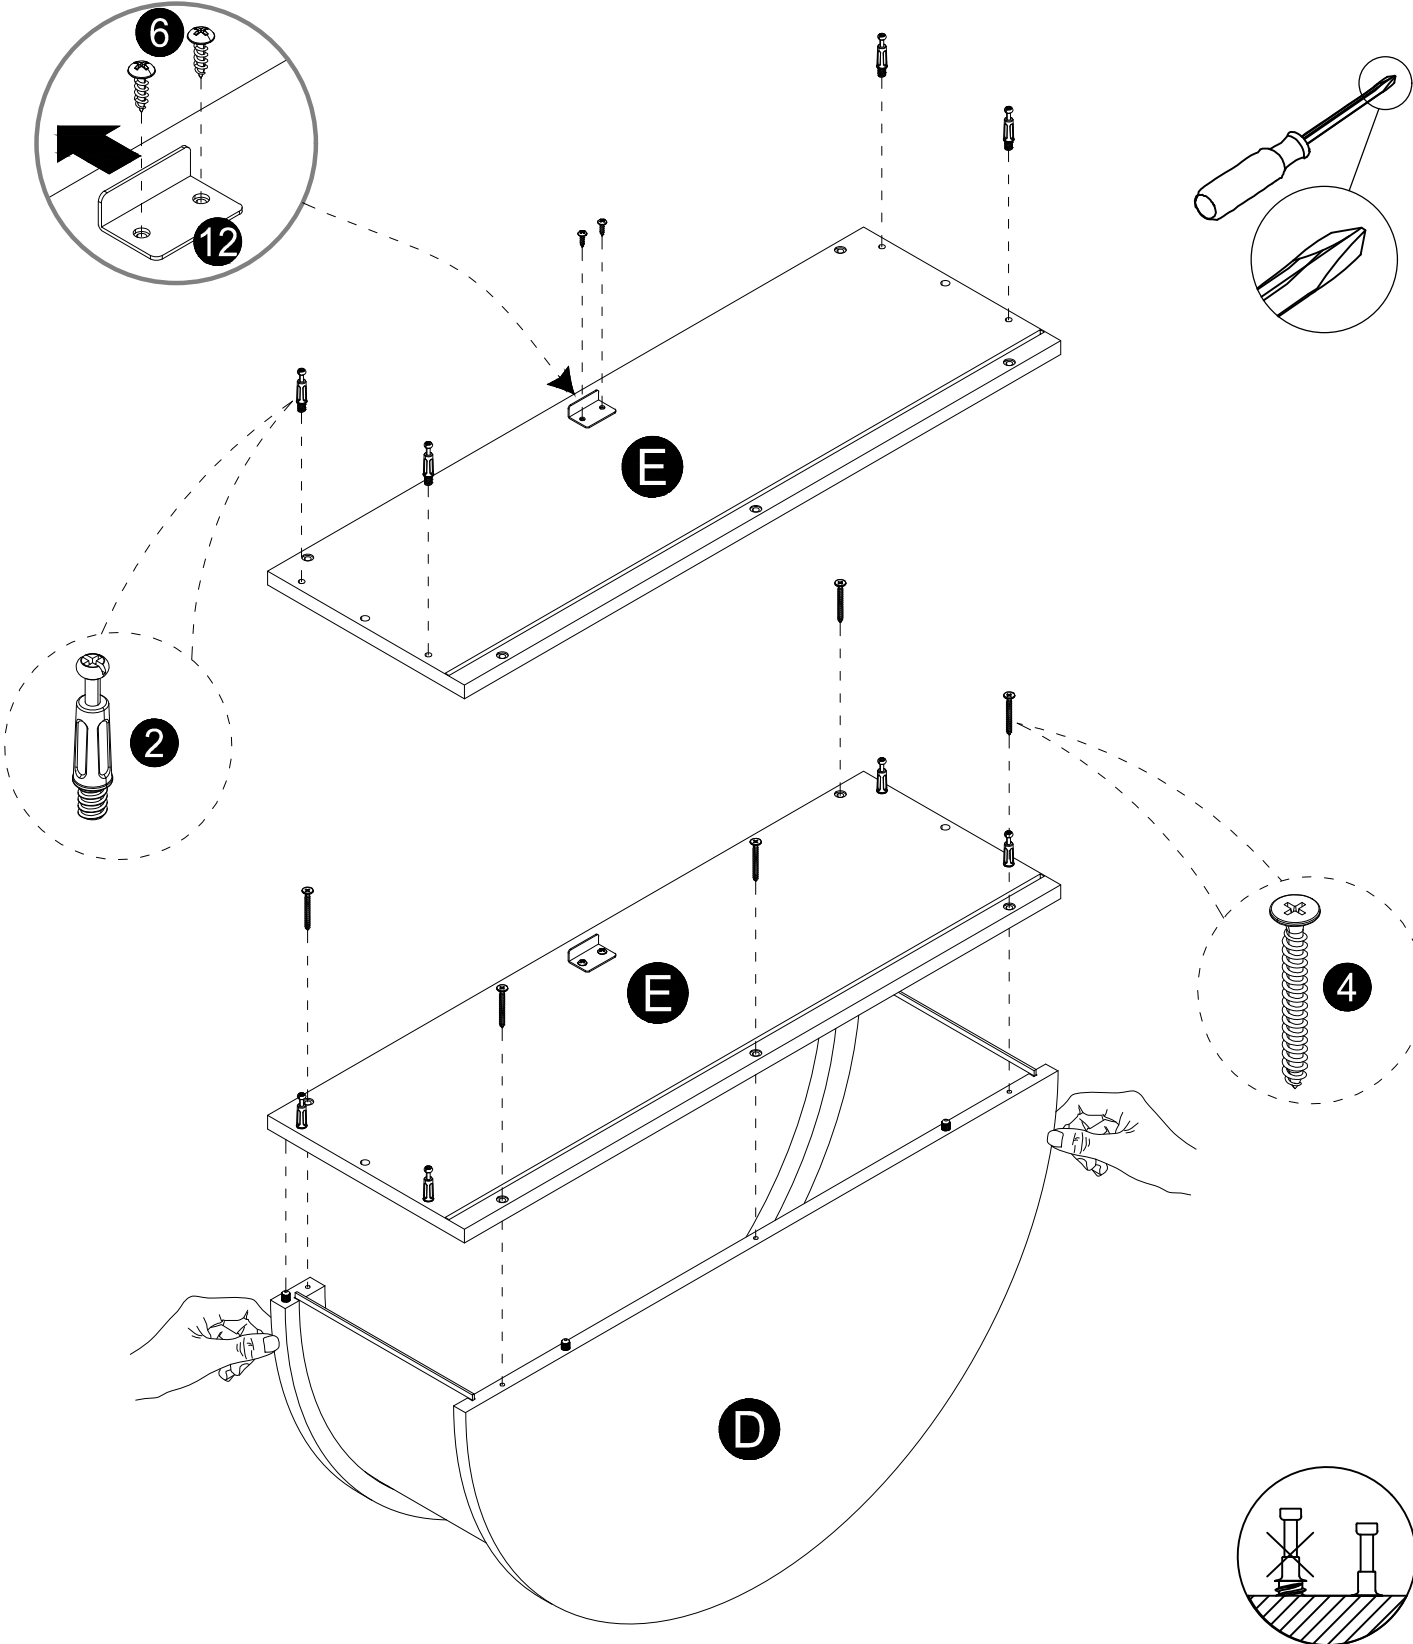


STEP5

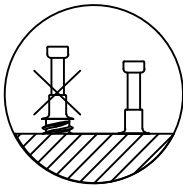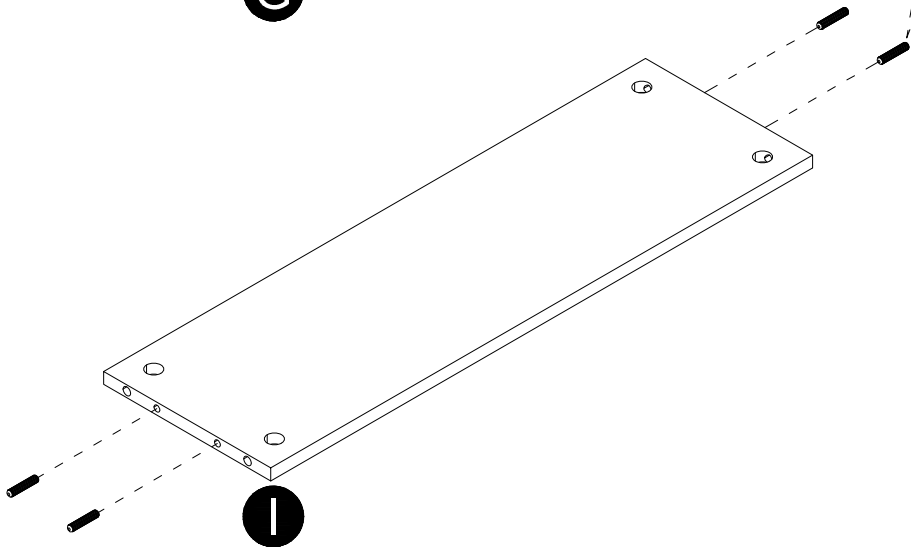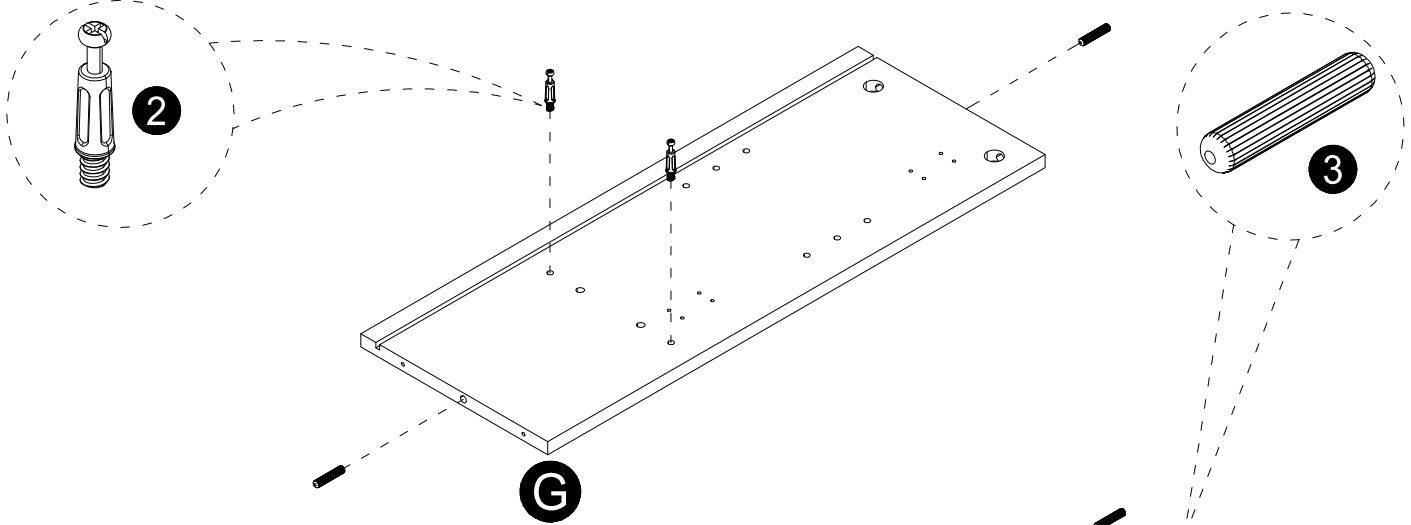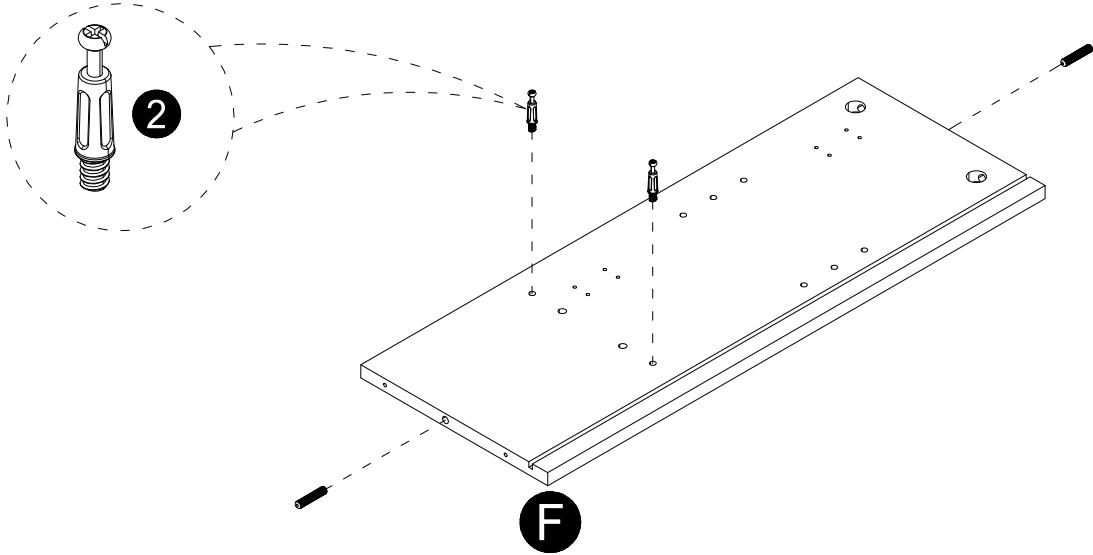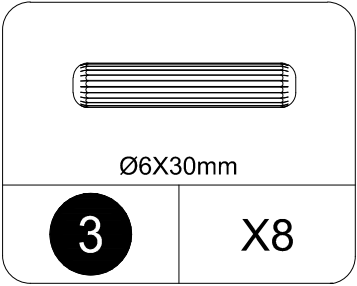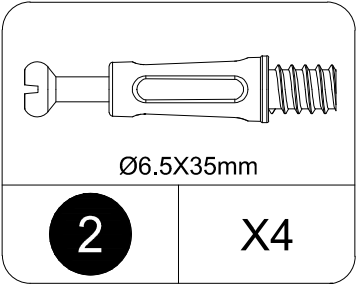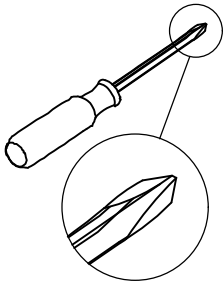

STEP6

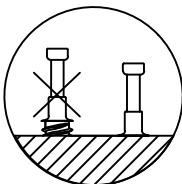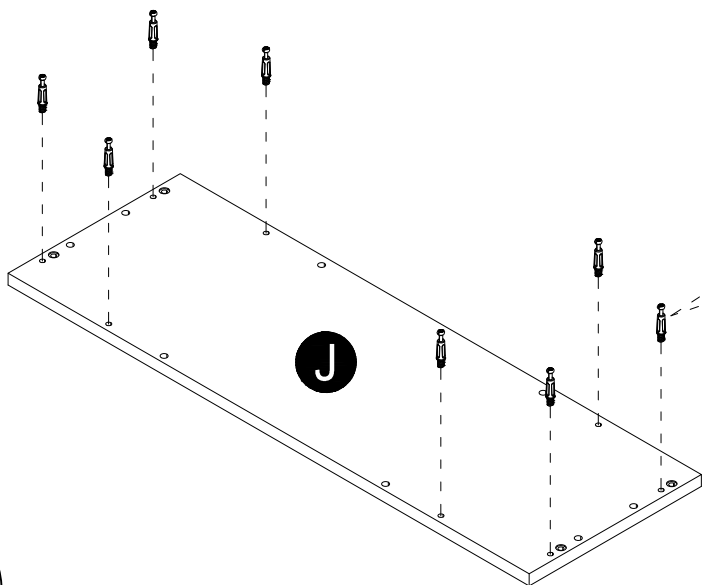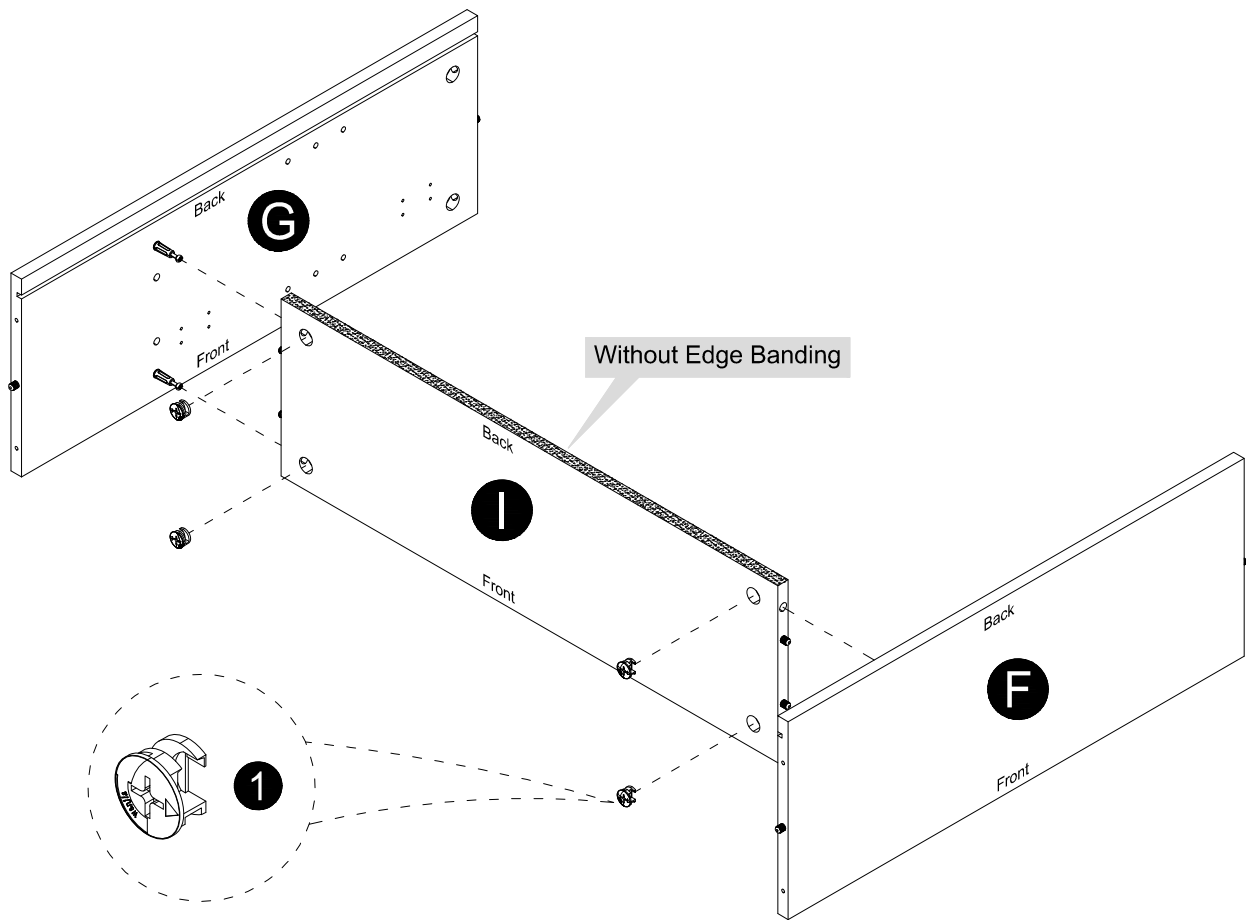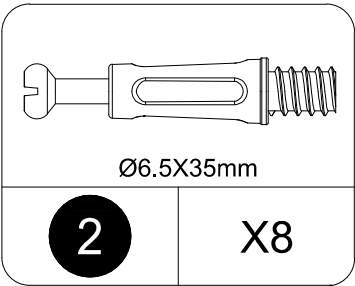
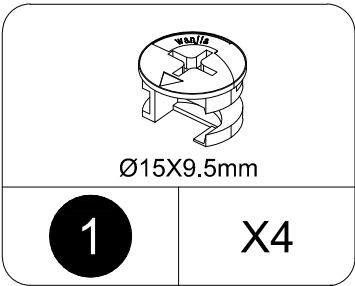
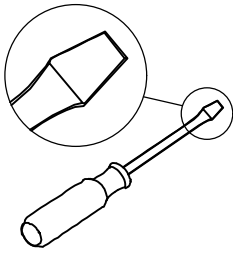


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

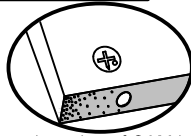


Proper orientation of CAM LOCK



STEP7

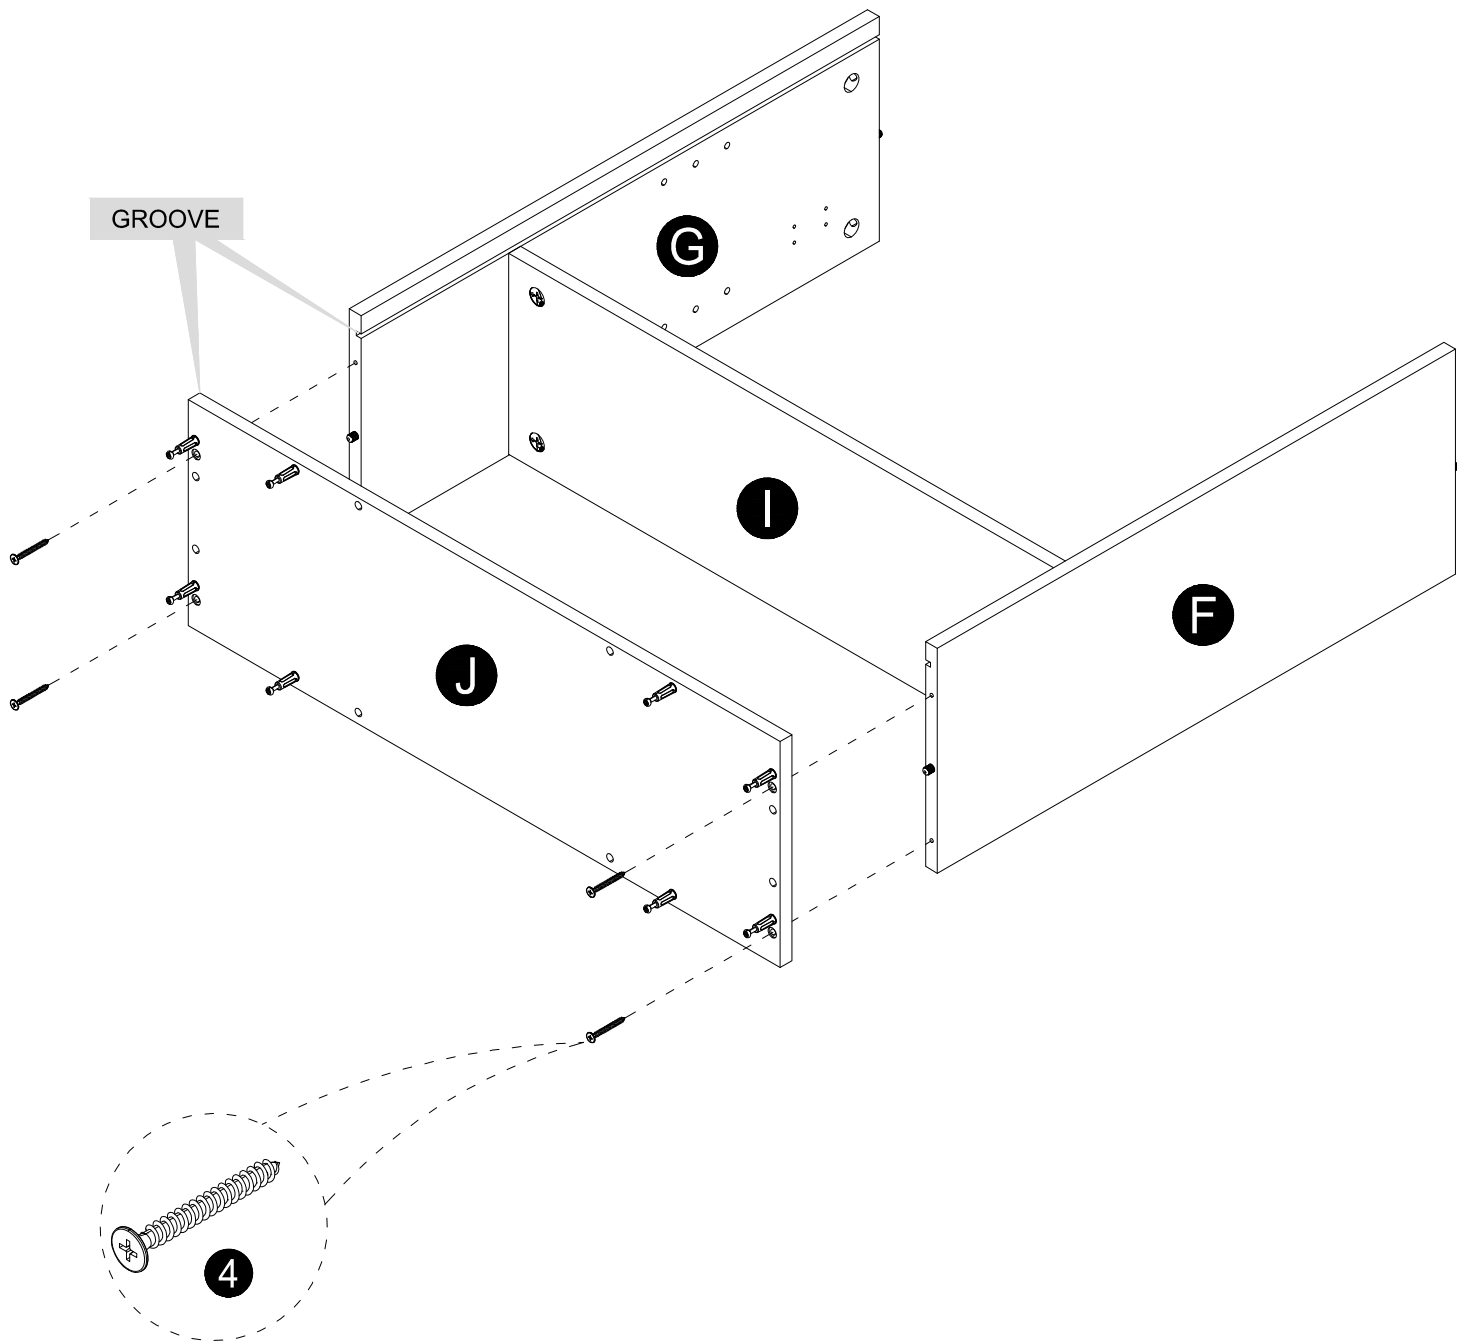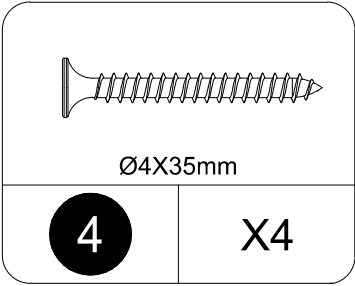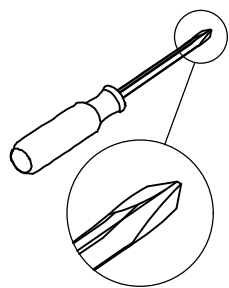

STEP8

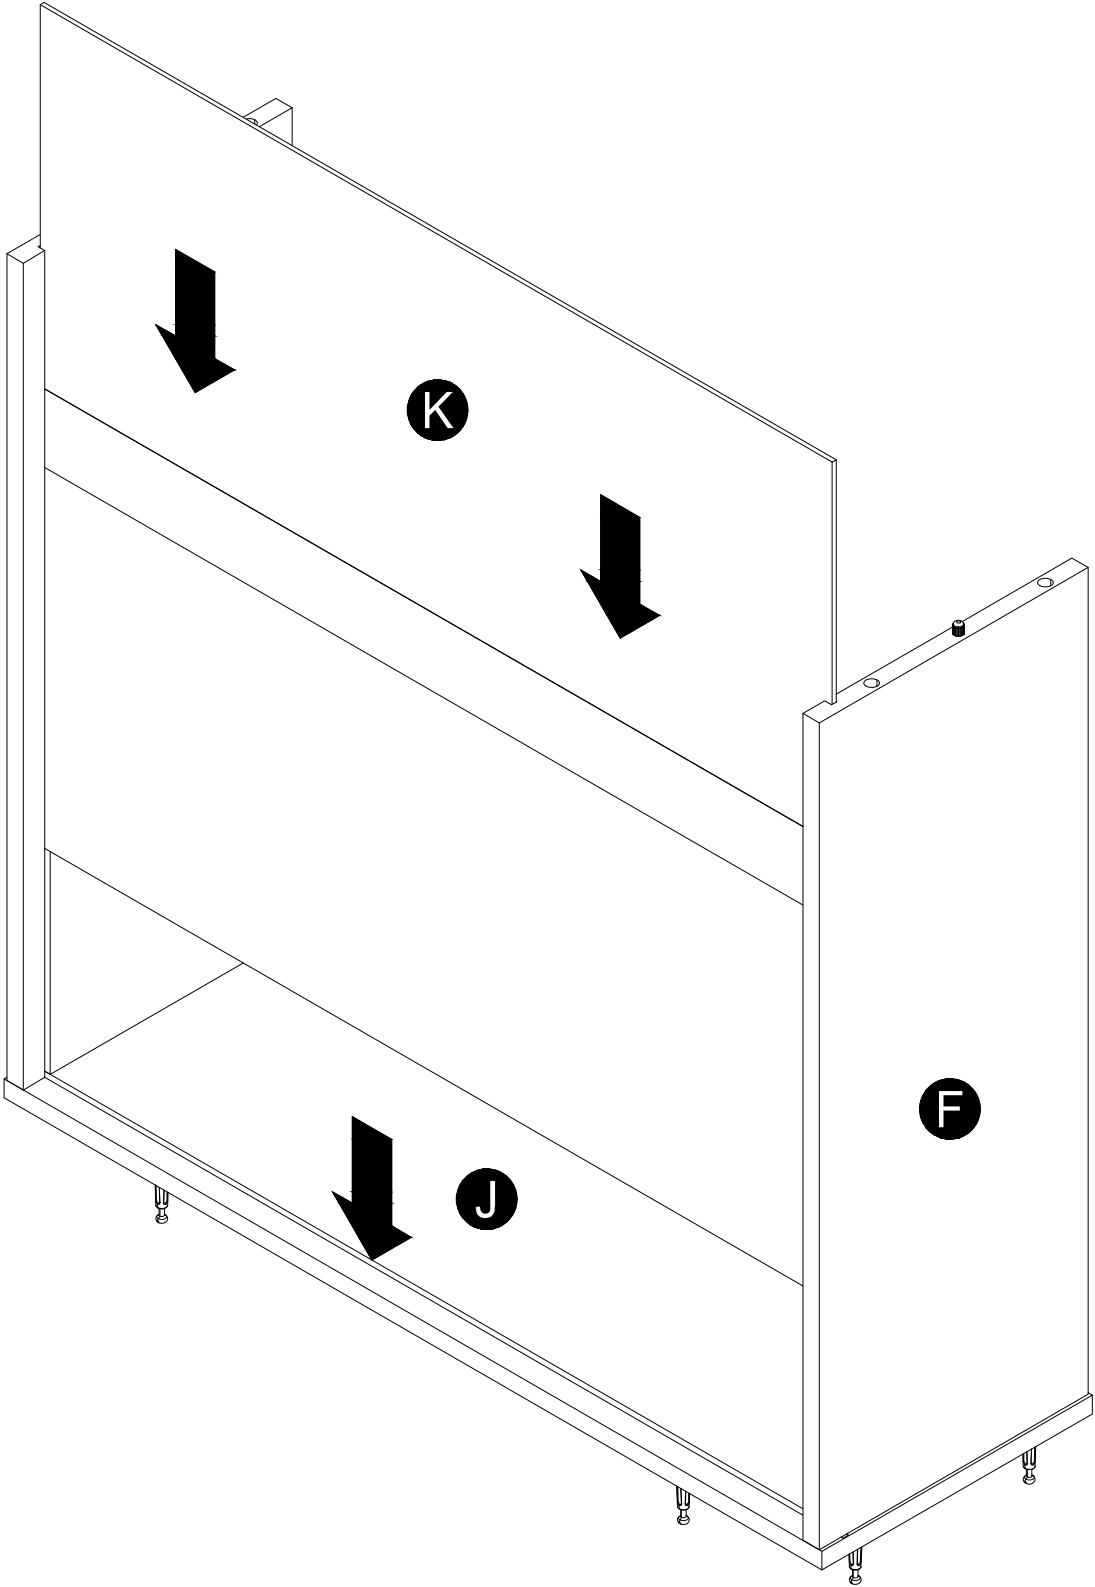


STEP9

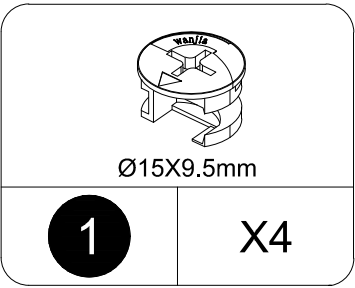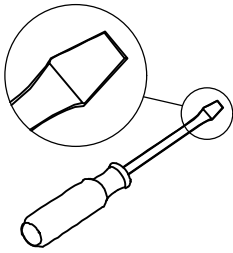


Ø15X9.5mm

1

X4


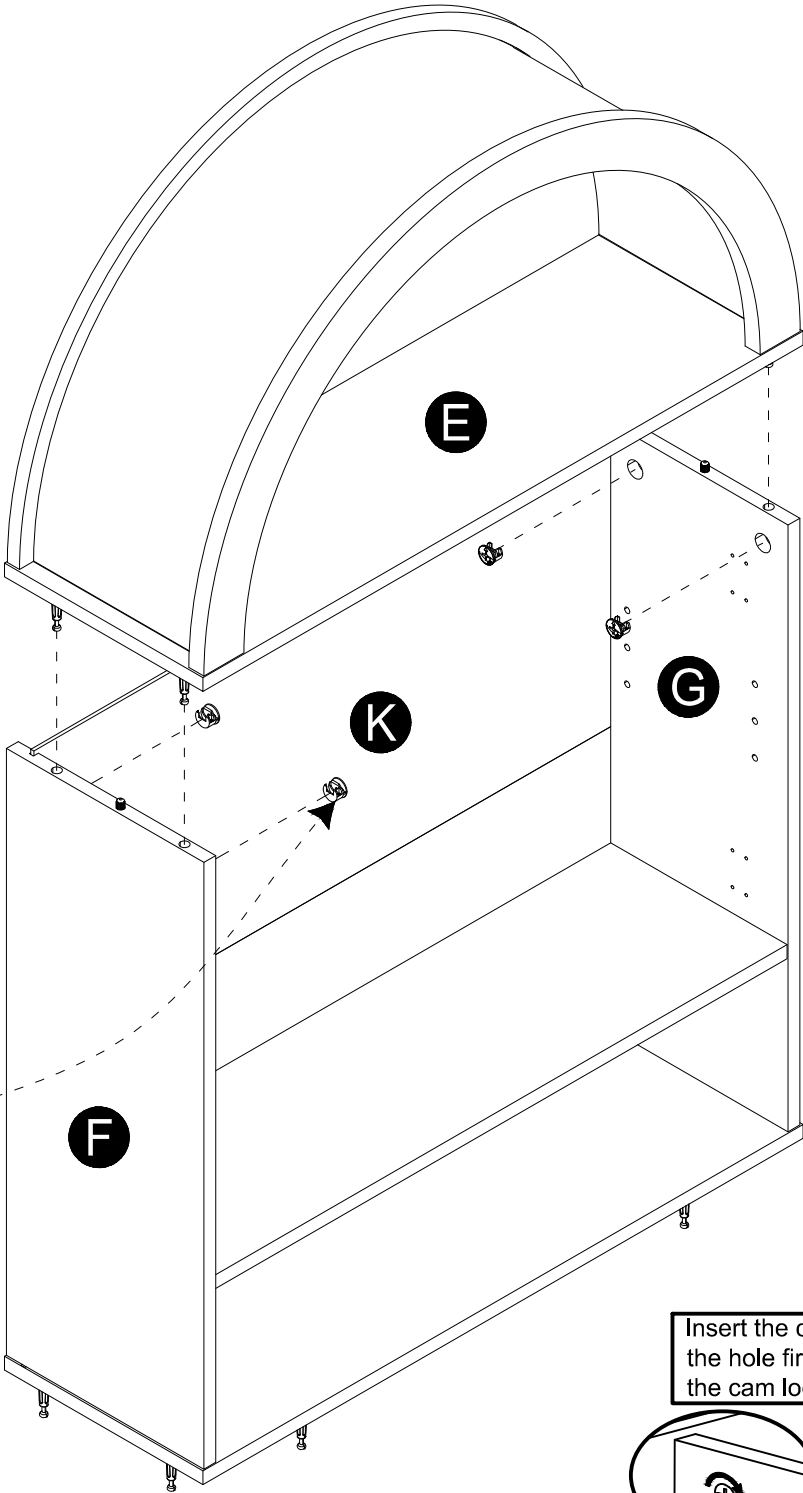


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

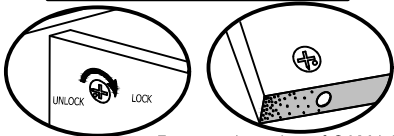


Proper orientation of CAM LOCK



STEP10

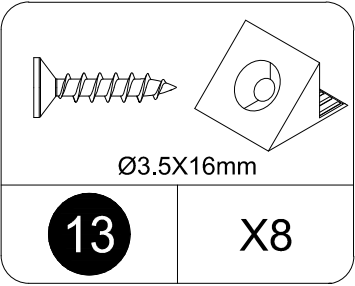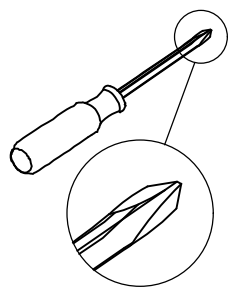





Step 2

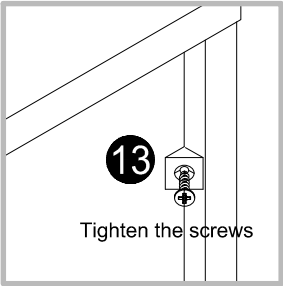


Step 1

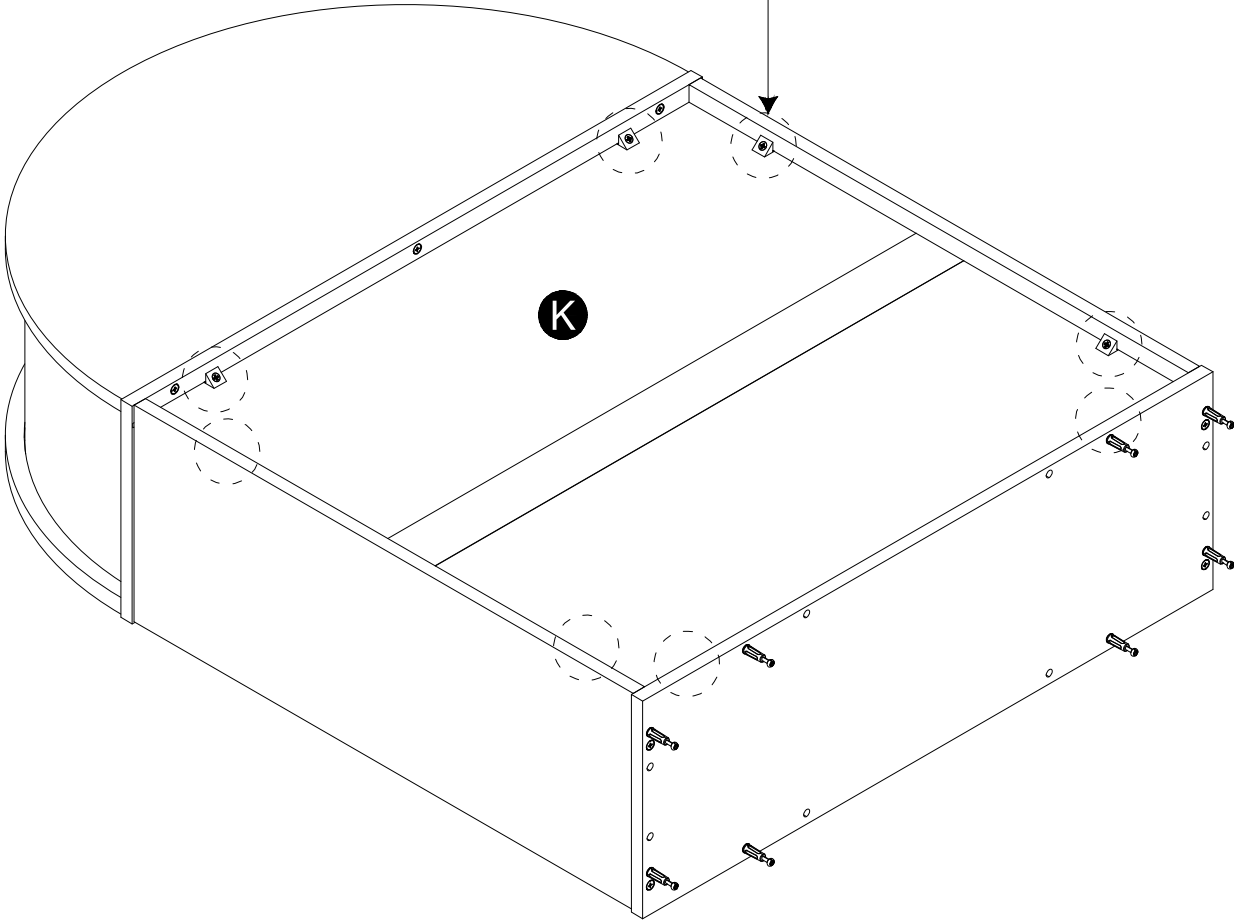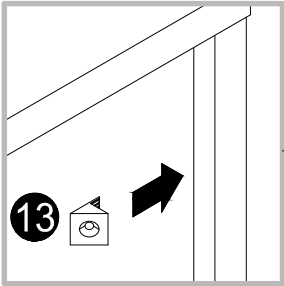



STEP11

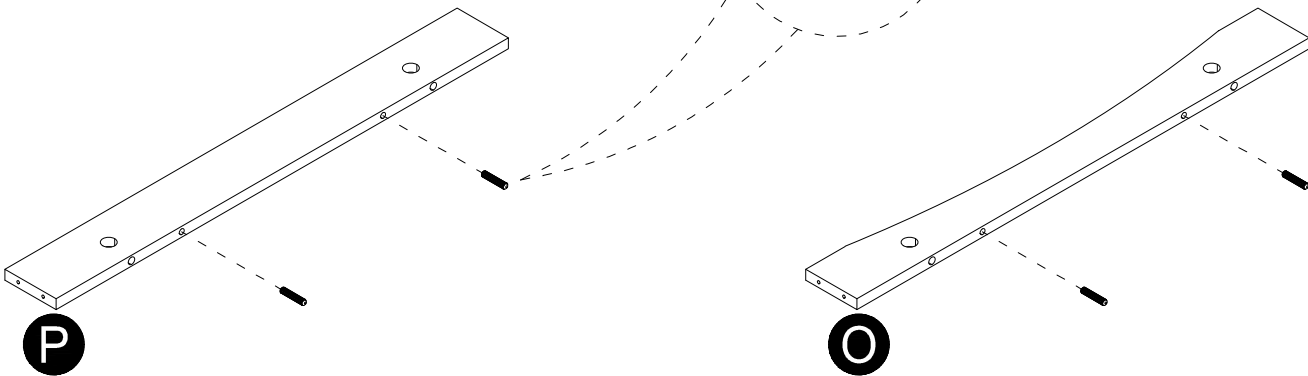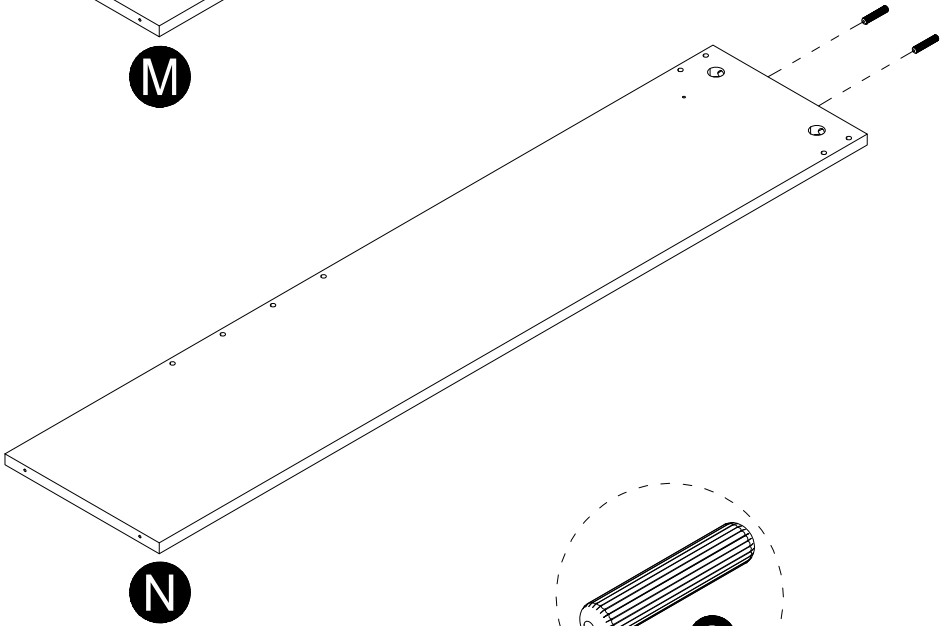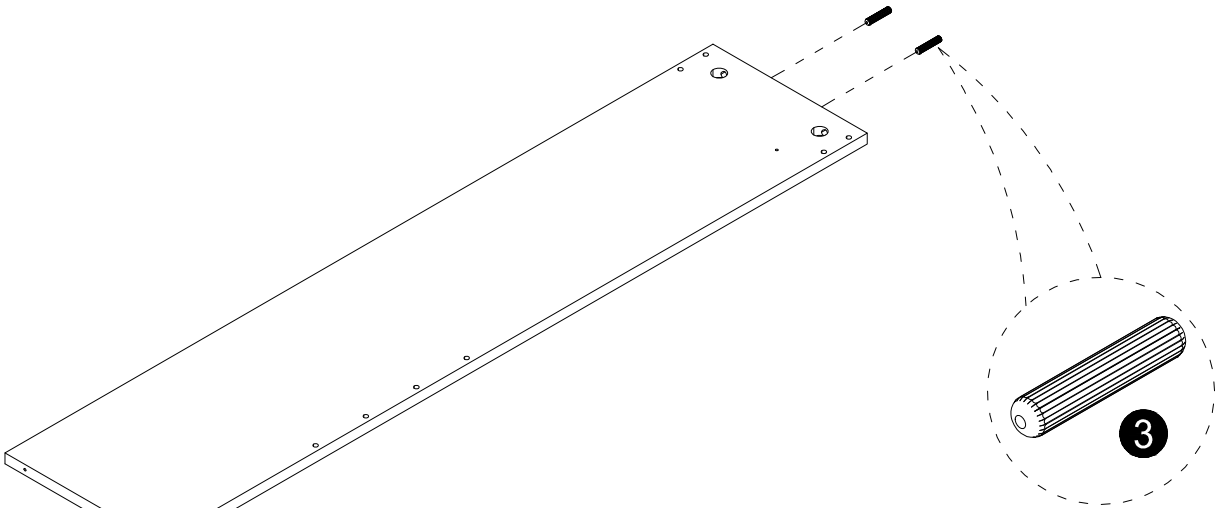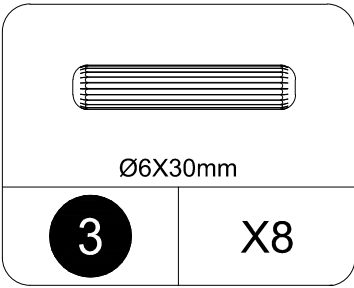



STEP12

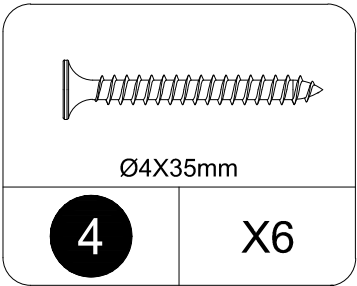



THIS STEP REQUIRES 2 PEOPLE

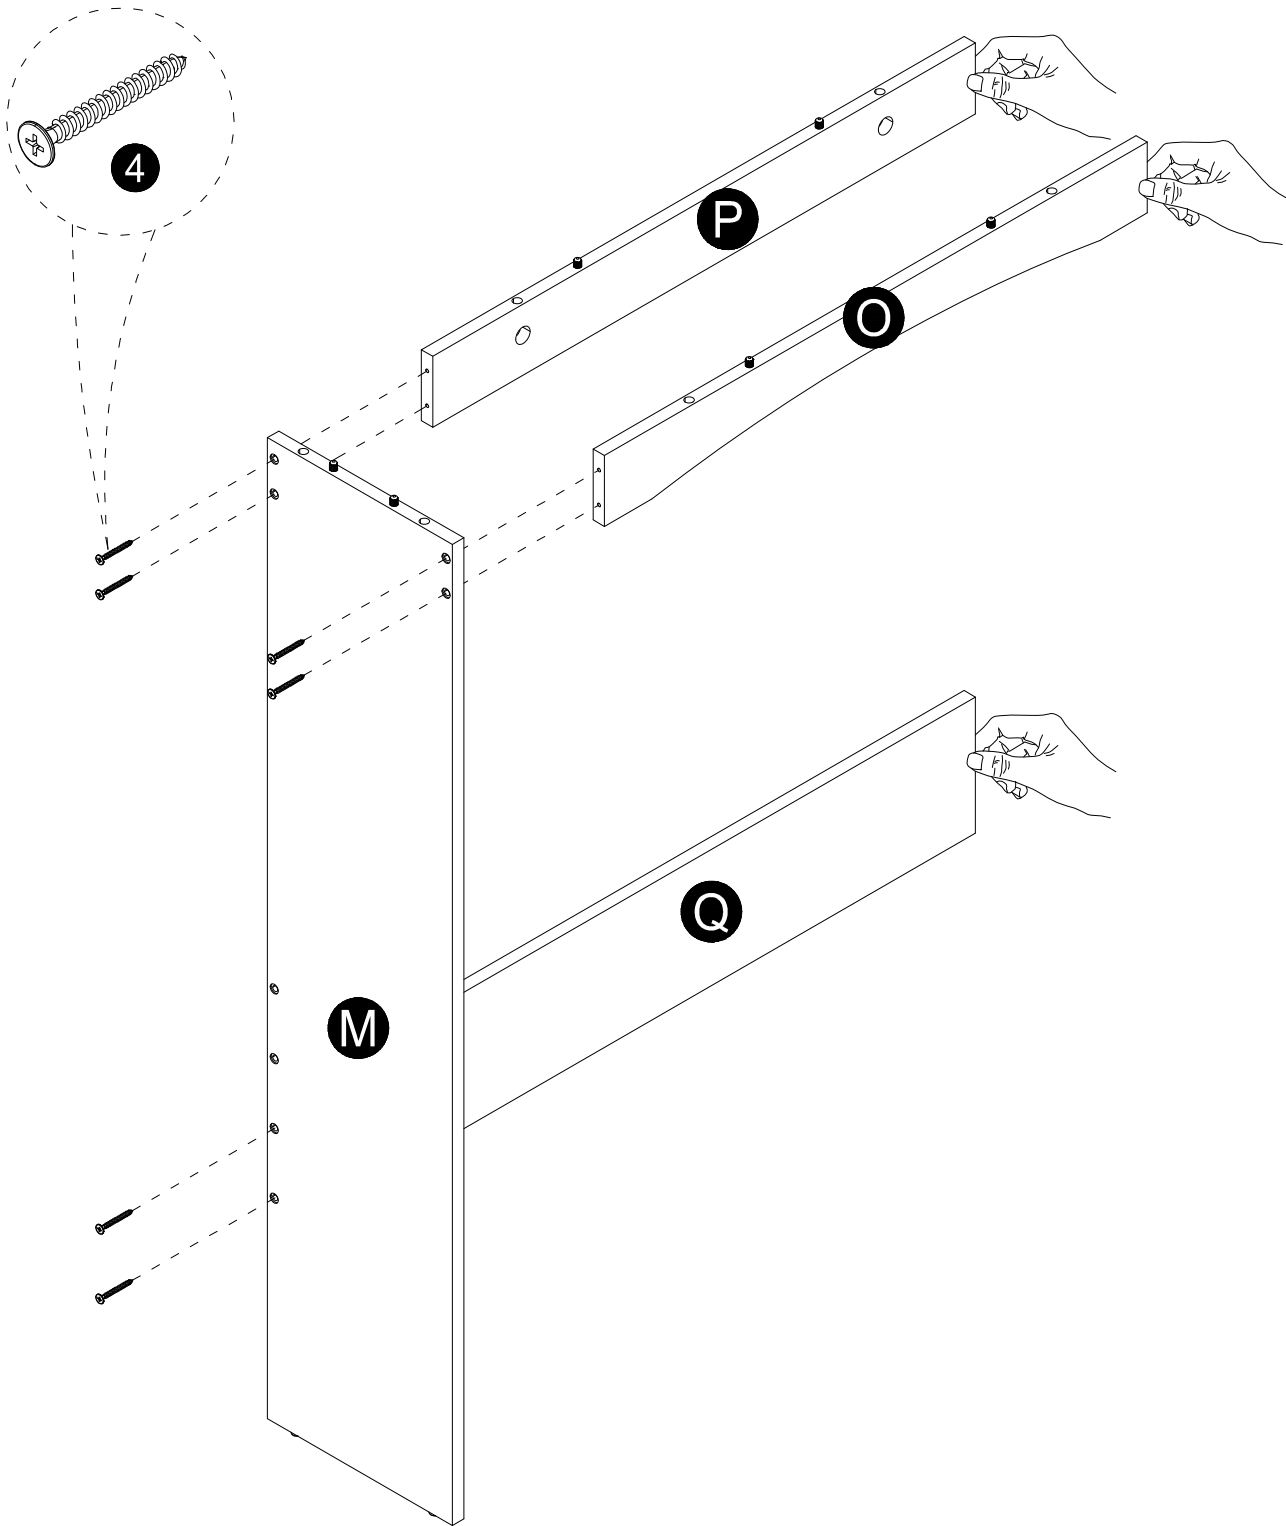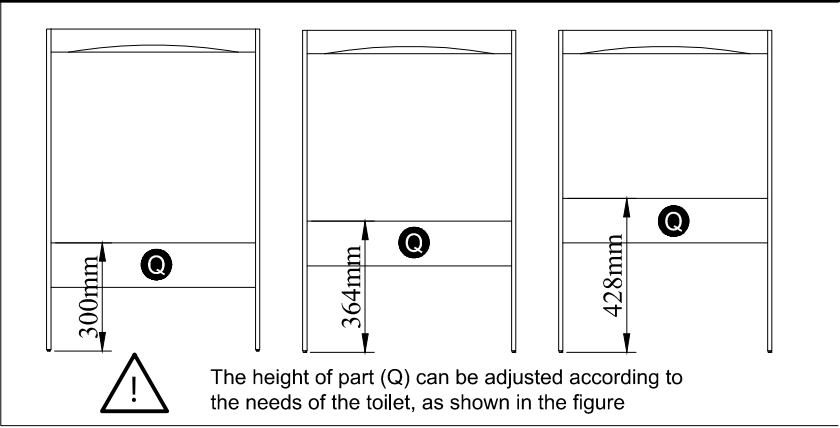

STEP13

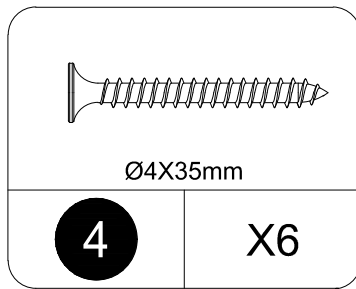
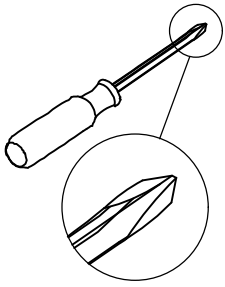


THIS STEP REQUIRES 2 PEOPLE

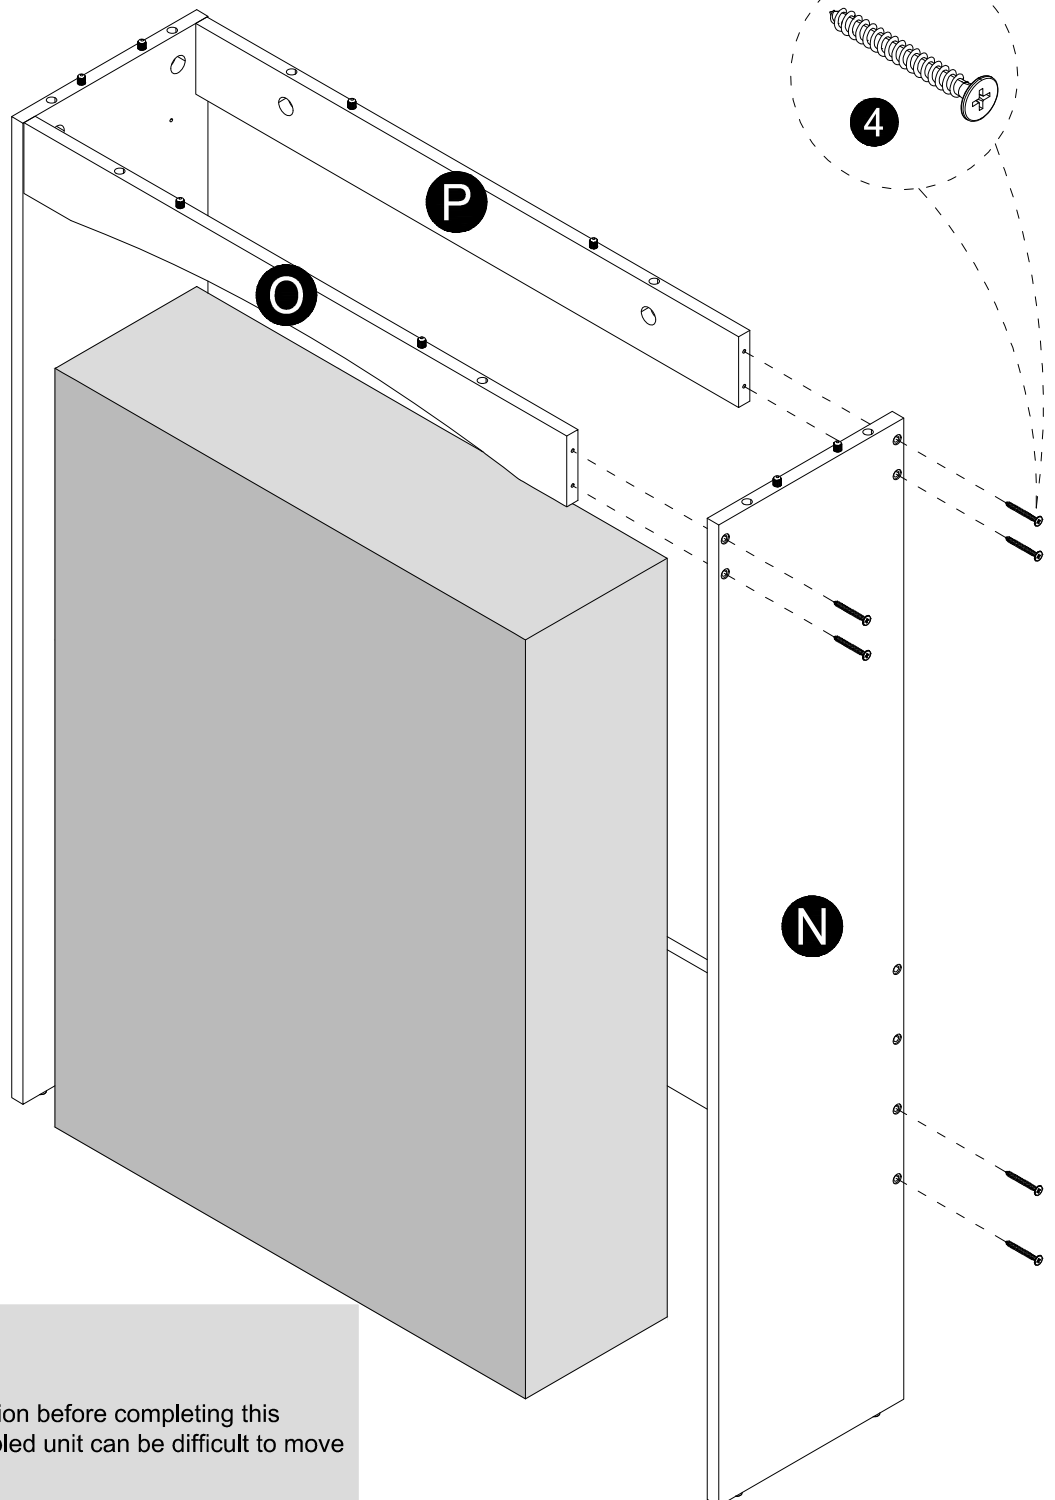
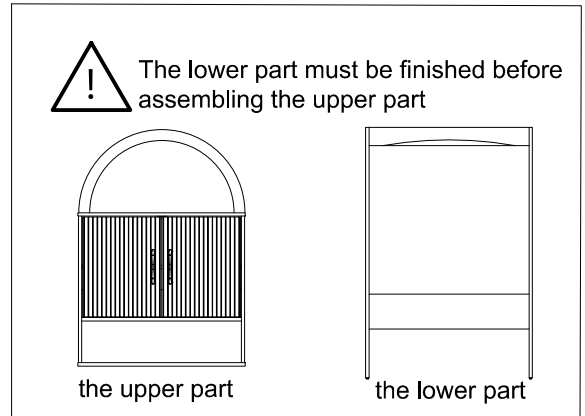


Installation Instructions:
Move the product to its final location before completing this assembly step. (The fully assembled unit can be difficult to move later.)


STEP14

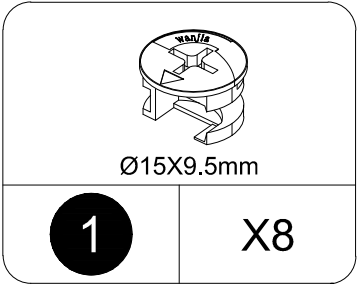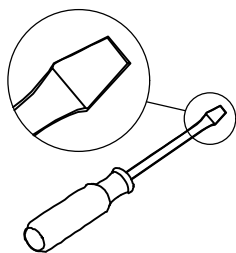





THIS STEP REQUIRES 2 PEOPLE

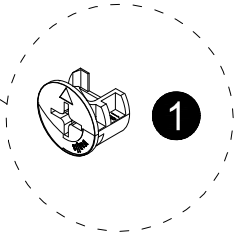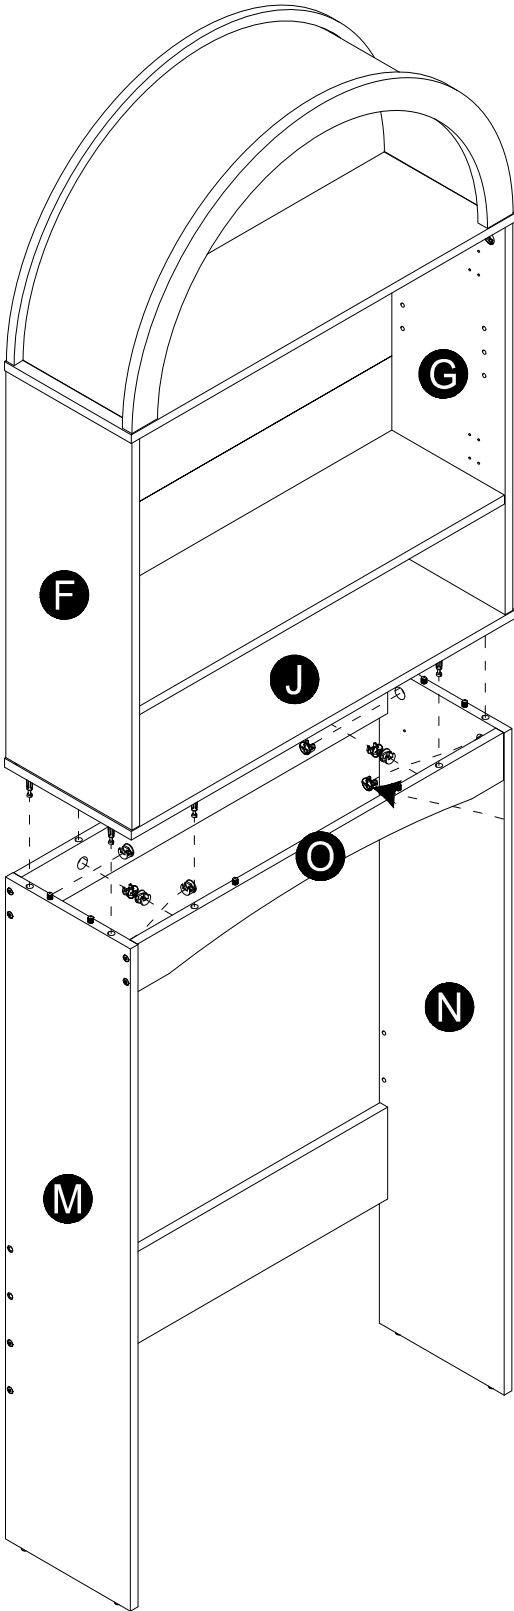

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

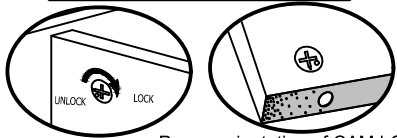

STEP15

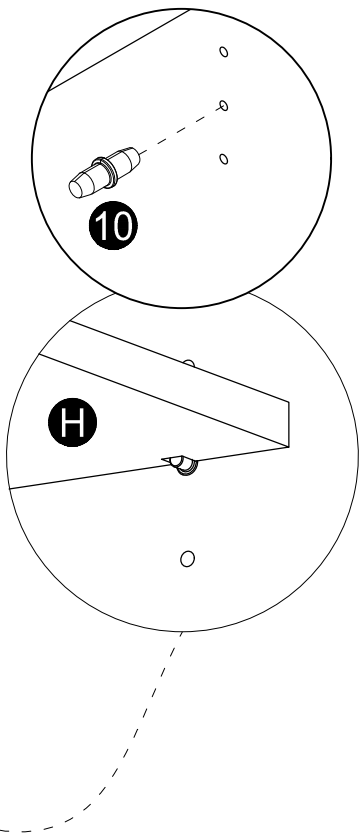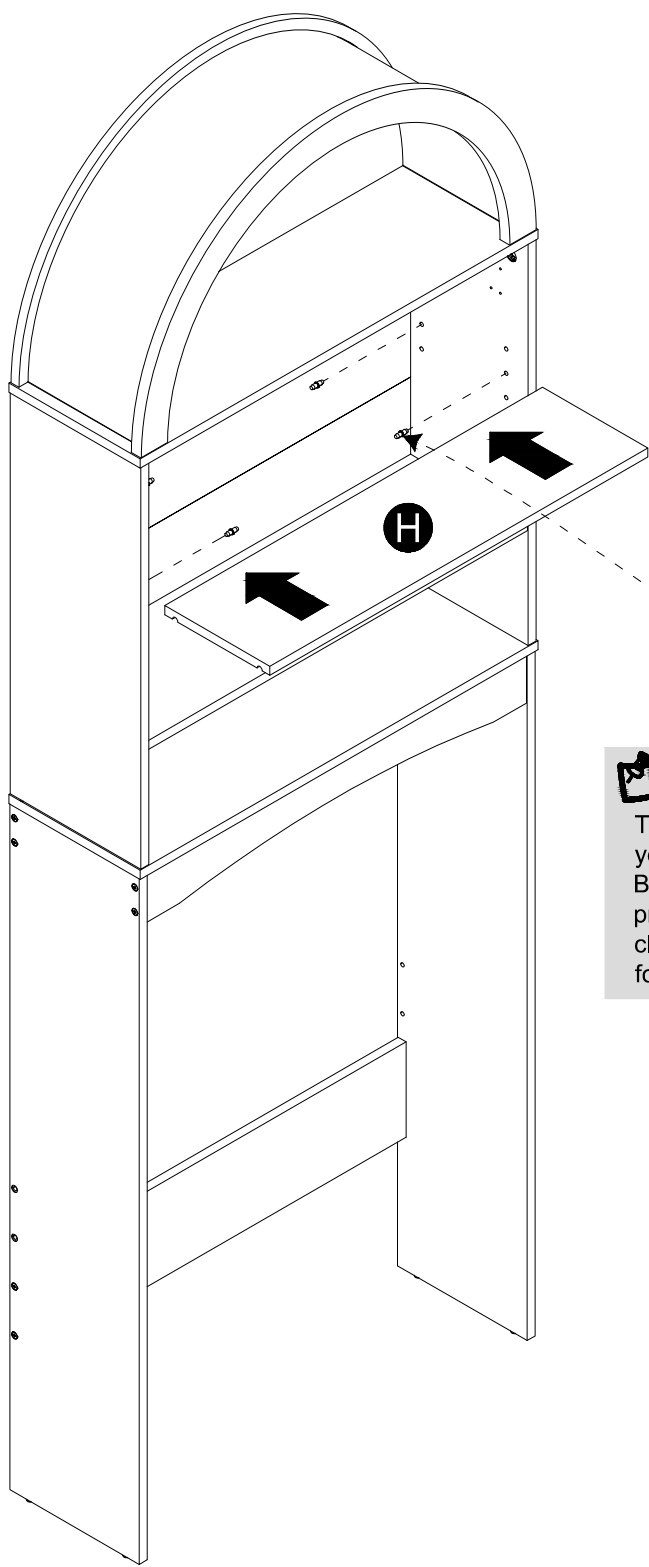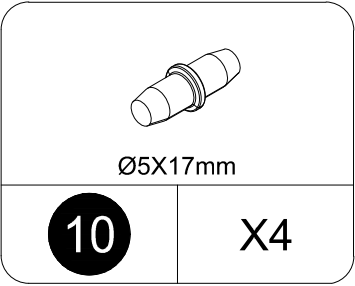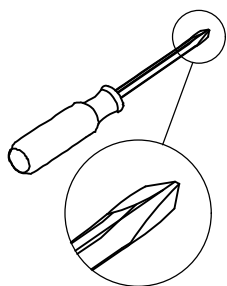

This shelf features freely adjustable height, allowing you to move it vertically according to storage needs. Both side panels are equipped with evenly spaced pre-drilled adjustment holes. Simply align the shelf clips with the desired holes at your preferred height for tool-free adjustment.


STEP16



Ø3.5X12mm

5

X8

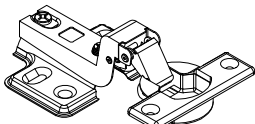

Ø25mm

7


X4



M4X18mm

8


X4

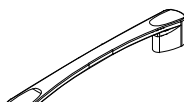

127X12X21mm



9

X2


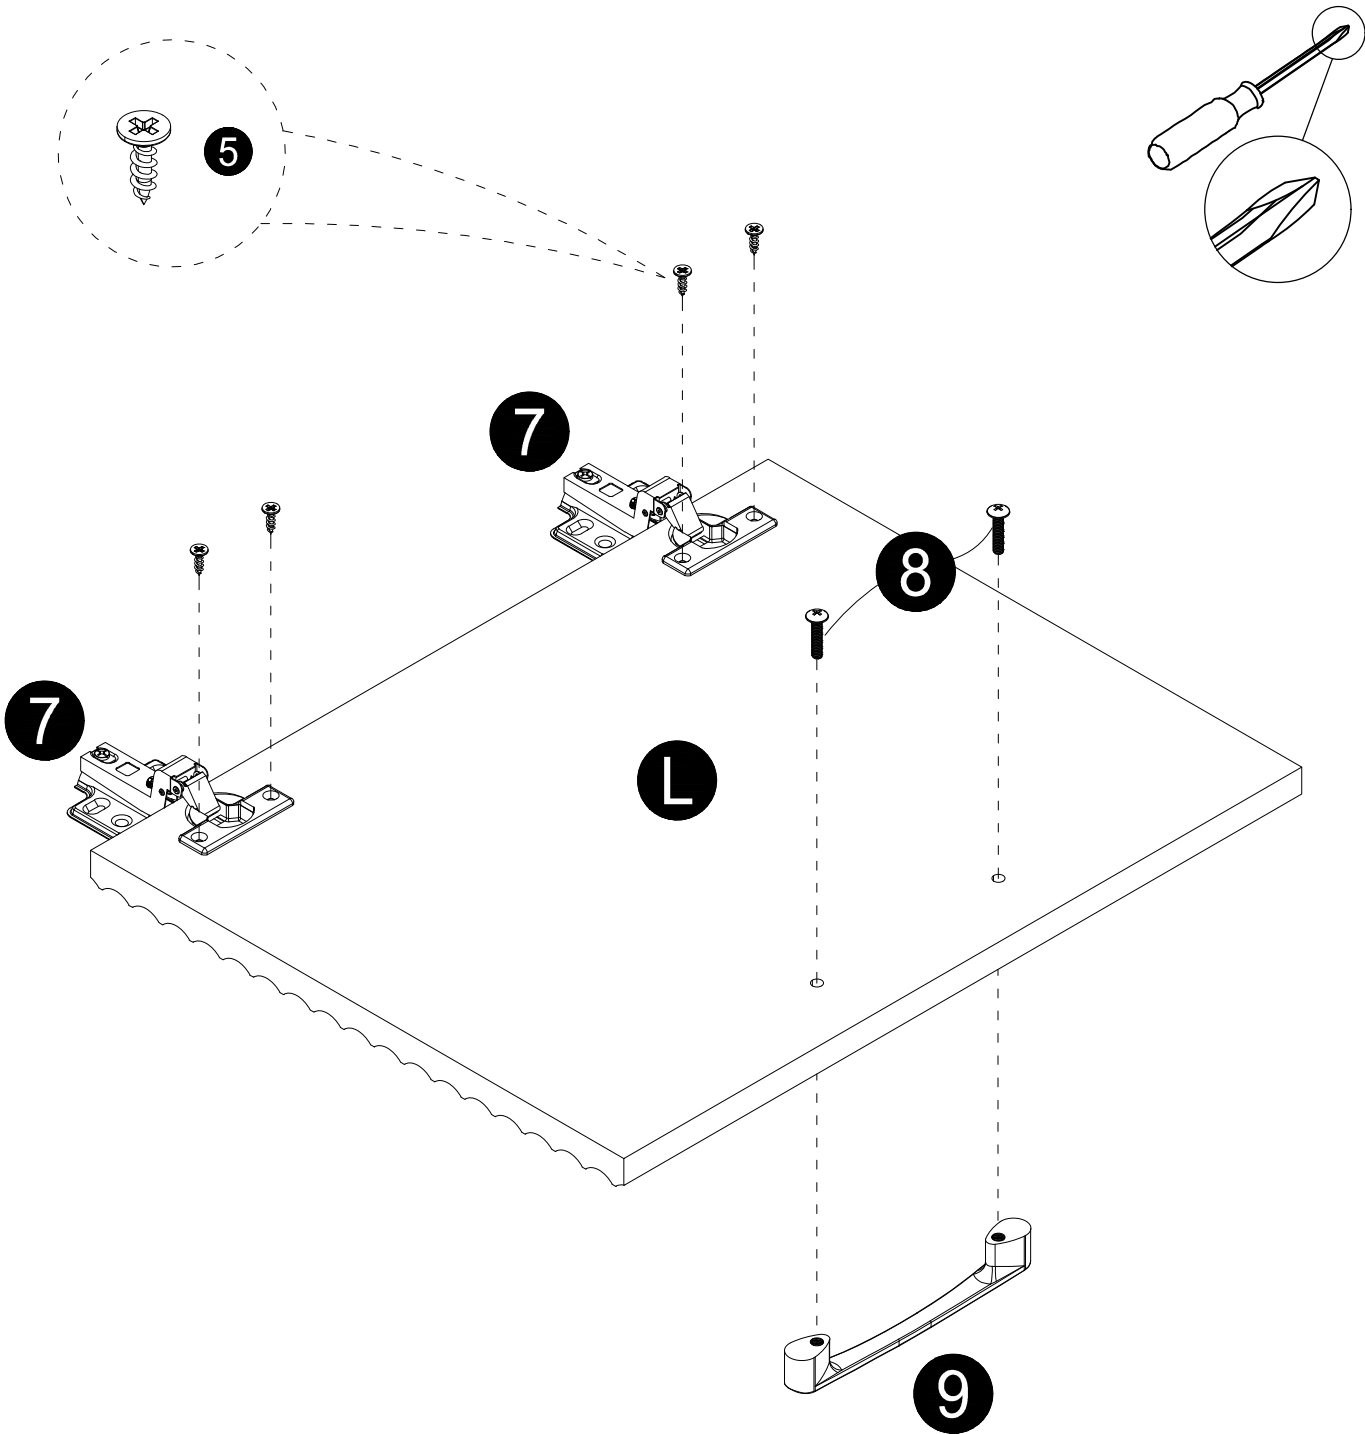


x 2

STEP17

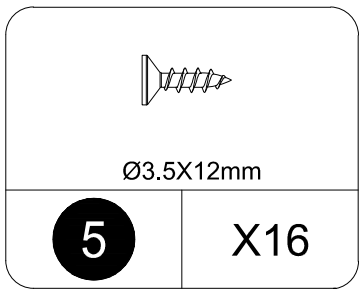
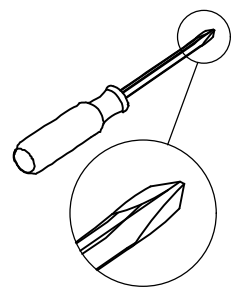


THIS STEP REQUIRES 2 PEOPLE

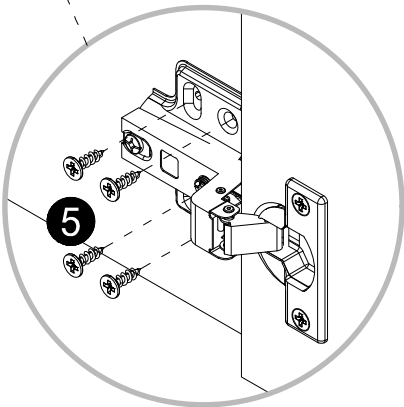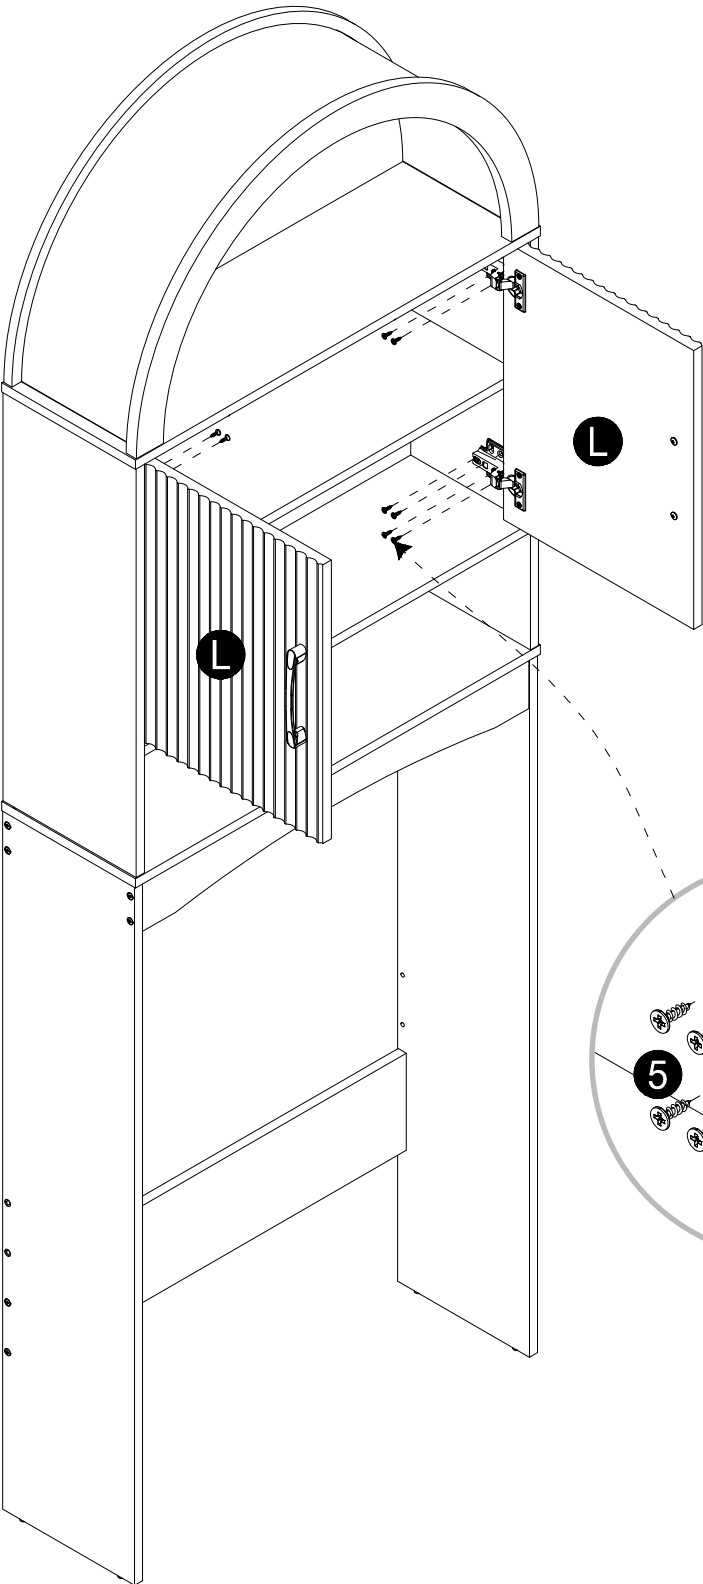


STEP18

SCHEMATIC DIAGRAM OF HINGE ADJUSTMENT DOOR PANEL GAP

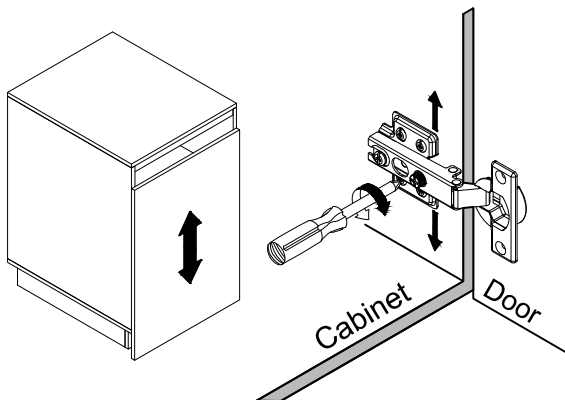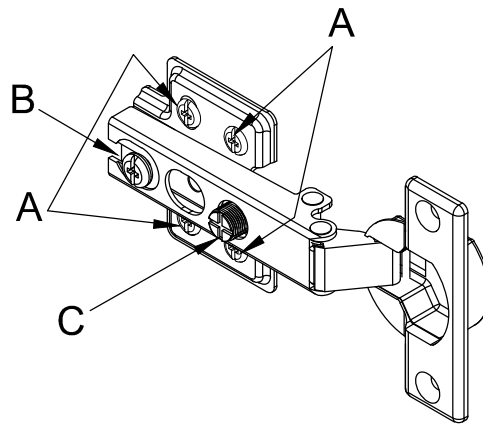


To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

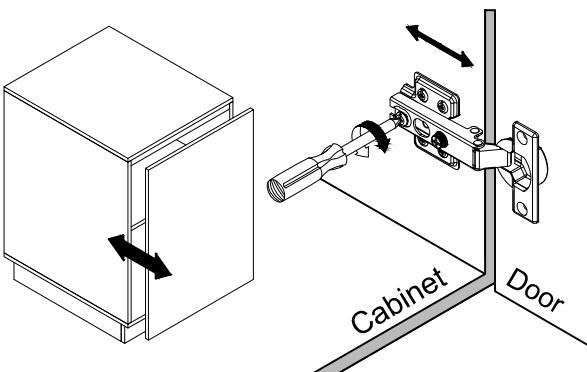

To adjust depth.





Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

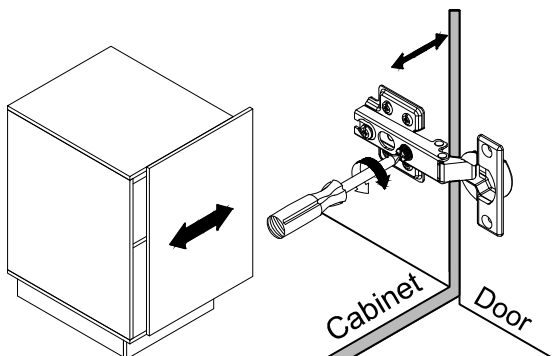

To adjust side ways.


Turning the screw "C" on BOTH hinges on each door.

STEP19

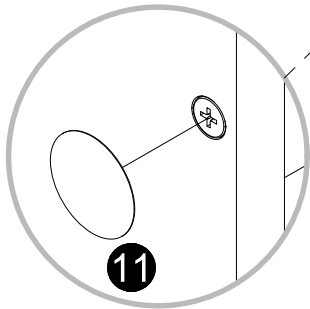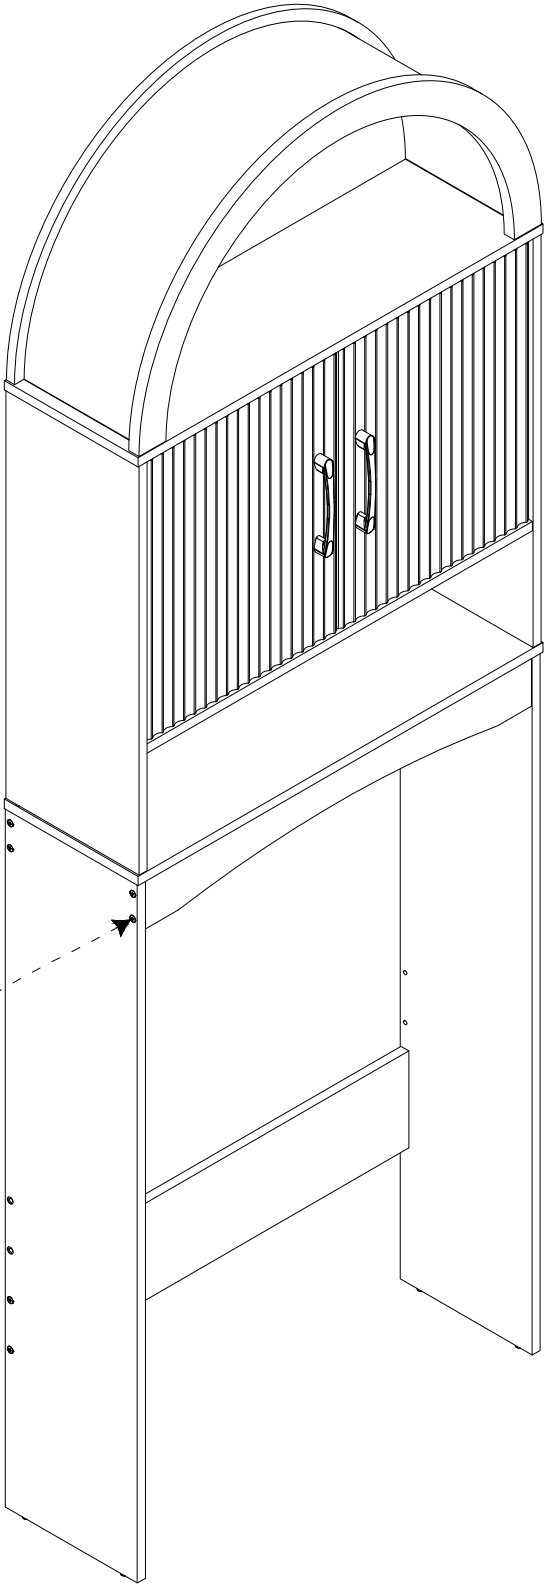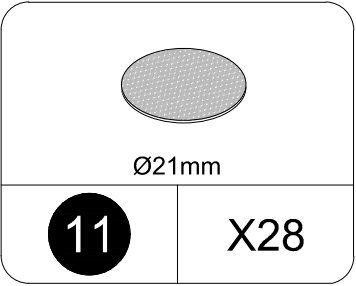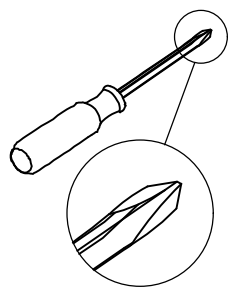



Stick the exposed holes of the cabinet body with hole stickers (11)

STEP20

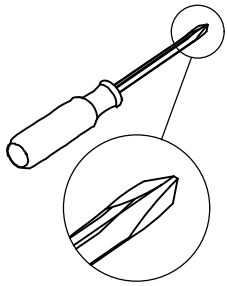


2pcs Ø4X40mm	2pcs Ø4X12mm	2pcs Ø8X29mm	2pcs 73X15X24mm
14	X1 set		


1. Put the cabinet against the wall and mark the hole locked against the wall with a marker.

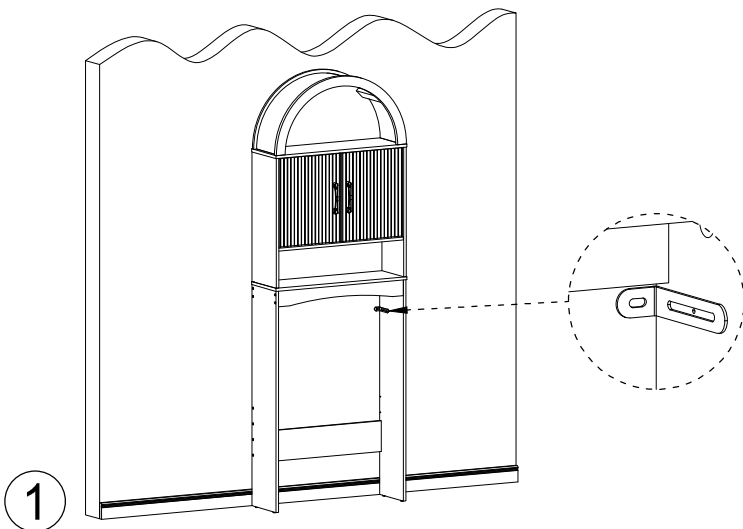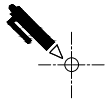

2. Use an electric drill to drill 2 holes with a diameter of Ø 6 and a depth of 45mm at the marked location.

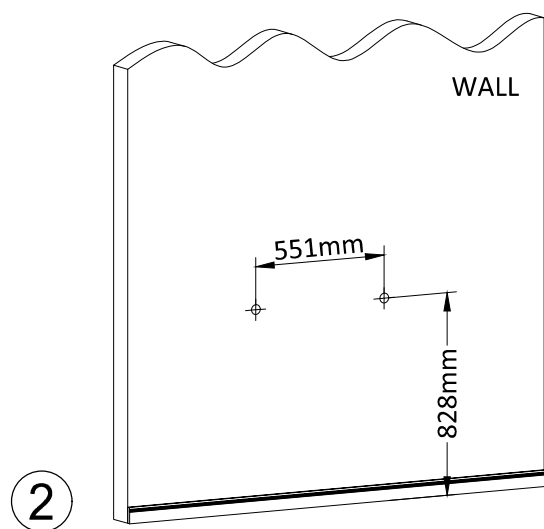

3. Place anchors (14) into the hole.

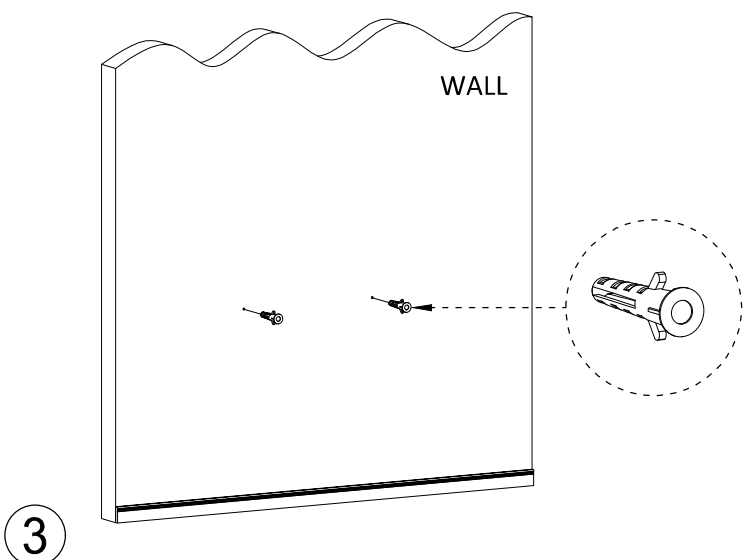

4. Push the shelf close to the wall, align it with the holes, and then tighten it with screws(14).

