



Instruction Manual

 Wicker Dining Chair

 
 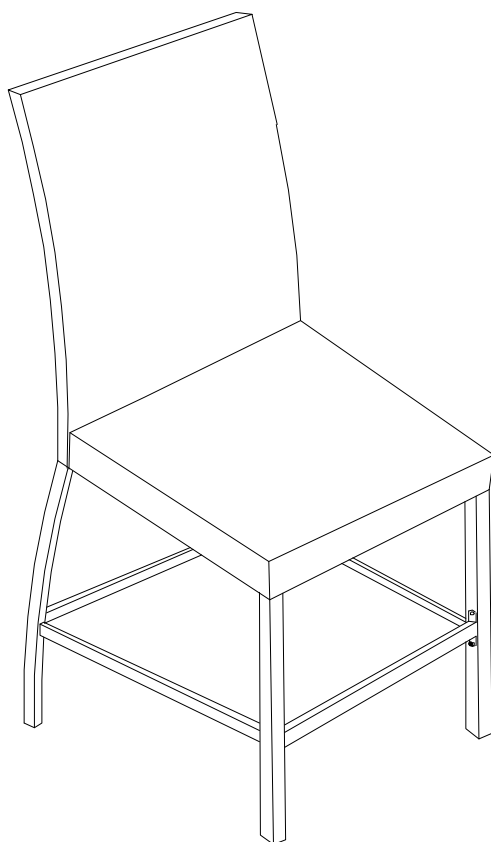



 
 





Read the instructions before use of this product.

Please keep this instruction manual for future reference.






PARTS & HARDWARE LIST

PART	FIGURE	DESCRIPTION	QTY
A		Back Panel	1
B		Seat Panel	1
C		Right Leg	1
D		Left Leg	1
E		Rail	2
F	 M6*45	Bolt M6*45	4
G	 M6*15	Bolt M6*15	14
H		Washer	18
I		Allen Key	1

 

EXTRA

  
PART	FIGURE	DESCRIPTION	QTY
F	 M6*45	Bolt M6*45	1
H	 M6*15	Bolt M6*15	1
G		Washer	2

ATTENTION:


Keep children away during assembly. This item contains small parts that can be dangerous for children. Children should always be under direct adult supervision while using this product. Do not discard any of the packaging until you have checked that you have all of the parts and fittings required.

Carefully remove the contents from the package. If any parts are missing, do not attempt to use the product until they have been obtained.

 
Make sure that each bolt needed for all steps matches the corresponding figure ensure proper assembly.




Step 1: Attach seat panel (B) to back panel (A) using bolts (F) and washers (H).
Please do not fully tighten bolts until unit is fully assembled.

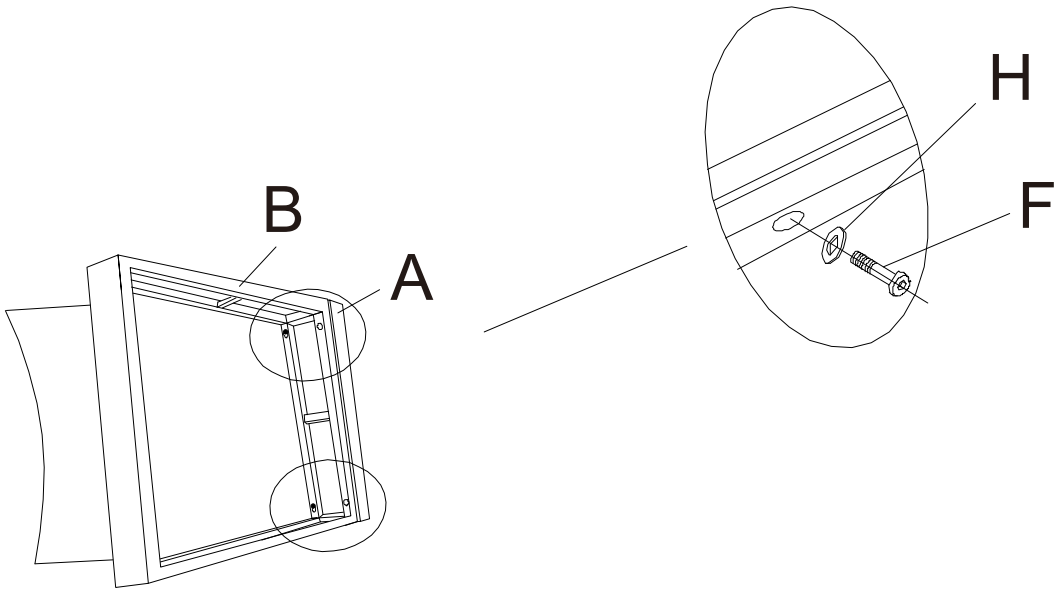

 
Step 2: Attach legs (C,D) to seat panel and back panel using bolts (G) and washers (H). Please do not fully tighten bolts until unit is fully assembled.

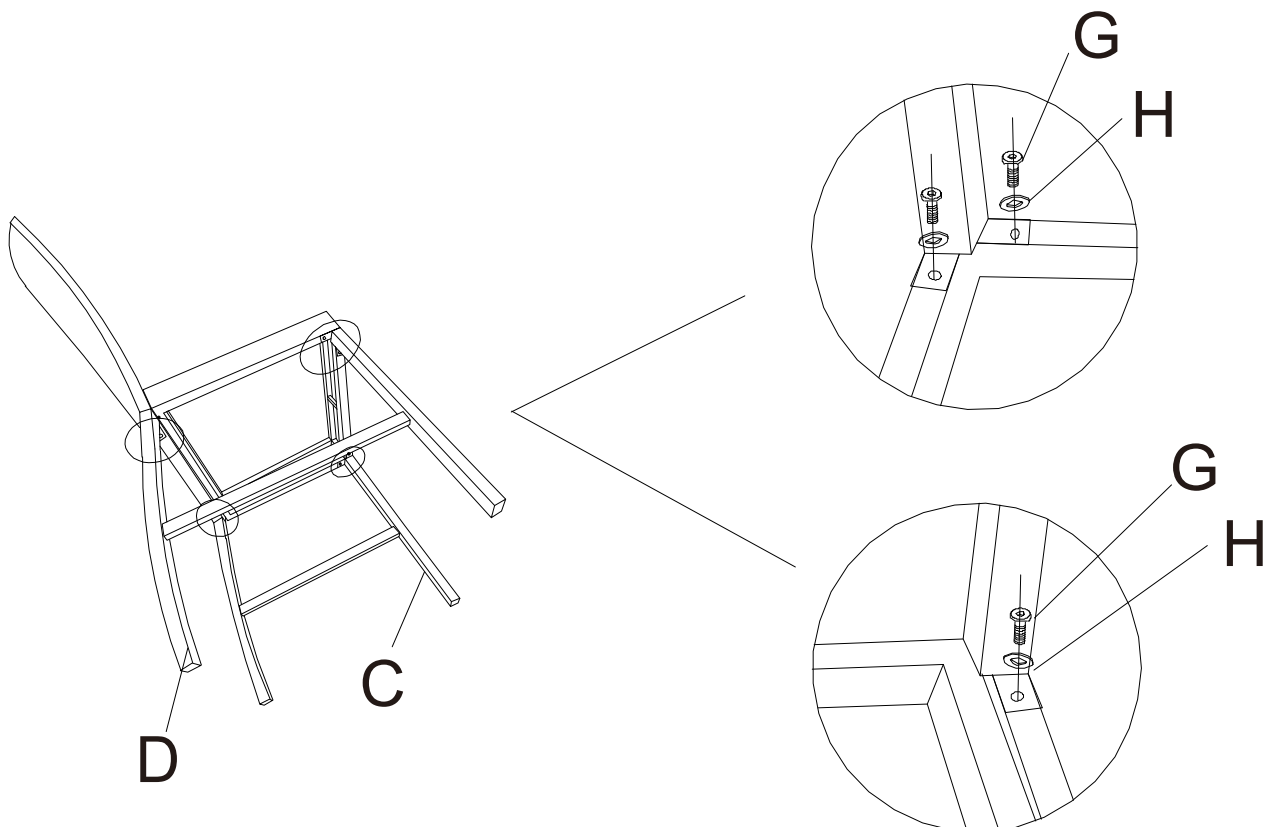




Step 3: Attach rails (E) to legs using bolts (G) and washers (H).

Please fully tighten all bolts using Allen Key (I) at this time.

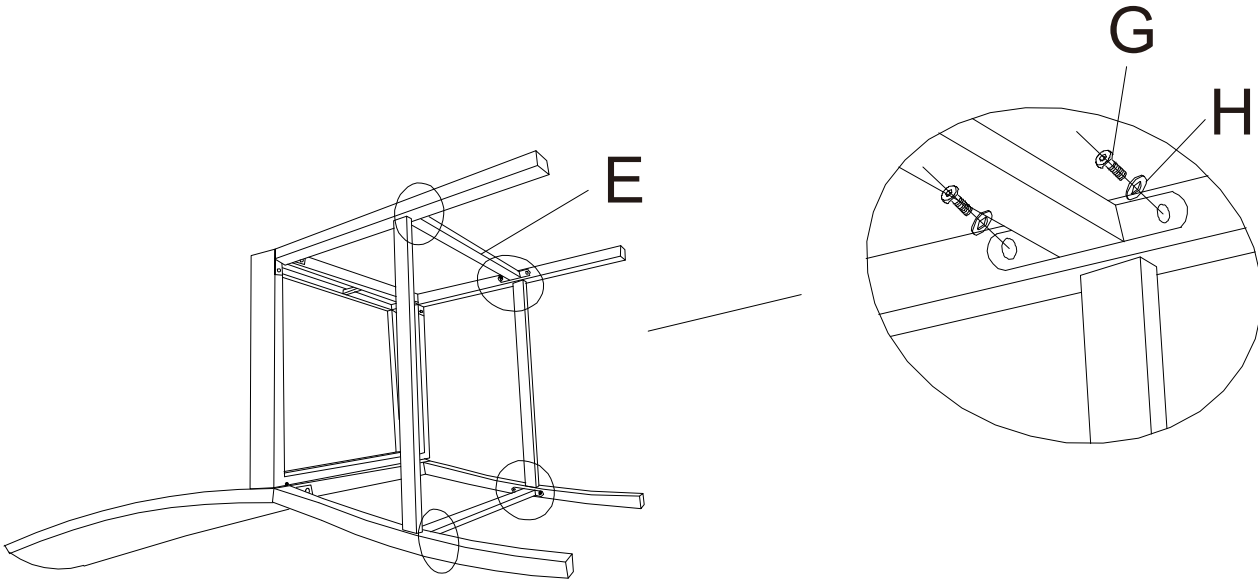

Step 4: Please carefully turn the chair to the upright position.

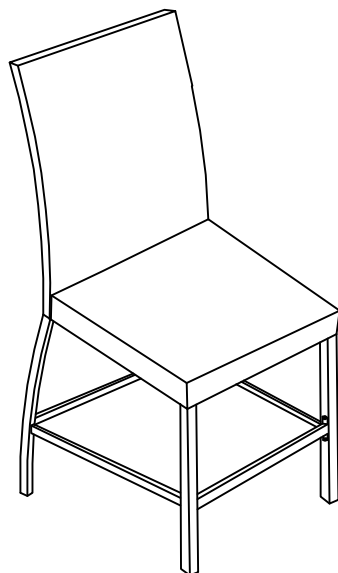

Cleaning and Maintenance

Do not use bleach, acid, or other solvents on the metal parts.

We recommend the use of furniture covers to protect the dining chair when not in use.

Inspect and tighten all bolts on a regular basis to ensure proper performance and safety.

In order to prolong the life and beauty of your dining chair, we recommend storing it in a dry and protective area during off season periods.