

## First-time setup

### 1. Assembling the laundry hamper

- a. Start by connecting the frame pieces together.

**Note:** Note: Refer to the user manual for information on the exact location of the connection points.

- b. Align the laundry bag with the frame and secure it in place.

**Note:** Note: Refer to the user manual for instructions on how to perform that action.

### 2. Setting up a collapsible laundry hamper

- a. Pull the sides of the hamper outward until it is fully expanded.

- b. Lock any clips or buttons in place to maintain the hamper's shape.

**Note:** Note: Refer to the user manual for information on the exact location of the clips or buttons.

### 3. Preparing a laundry hamper with lid

- a. Align the lid with the top of the hamper and snap or slide it into place.

### 4. Note: Typically, the lid will have a hinge or a clip mechanism.

- a. Open and close the lid to Confirm it is functioning properly.

### 5. Setting up a wheeled laundry hamper

- a. Insert each wheel into the designated slots at the base of the hamper.

**Note:** Note: Refer to the user manual for information on the exact location of the wheel slots.

- b. Confirm the wheels are locked in place and test by gently moving the hamper.

### 6. Activating a laundry hamper with electronic features

- a. Find the Power button on the hamper.

**Note:** Note: Refer to the user manual for information on the exact location of the Power button

- b. Press the Power button to turn the hamper ON

**Note:** Note: If the hamper requires batteries, insert them before powering ON.

### 7. Finalizing the setup

- a. Ensure the hamper is placed on a flat, stable surface.

- b. Push the hamper to confirm it is stable.

- c. Begin using the hamper for storing laundry.