

Universal Walk-In Pen Assembly Instructions




Important Notes:



Lay out all components prior to start of assembly. A flat, level surface is recommended for assembly.

If any components are missing or damaged, do not return to retailer.

Visit our website to see our complete line of products.

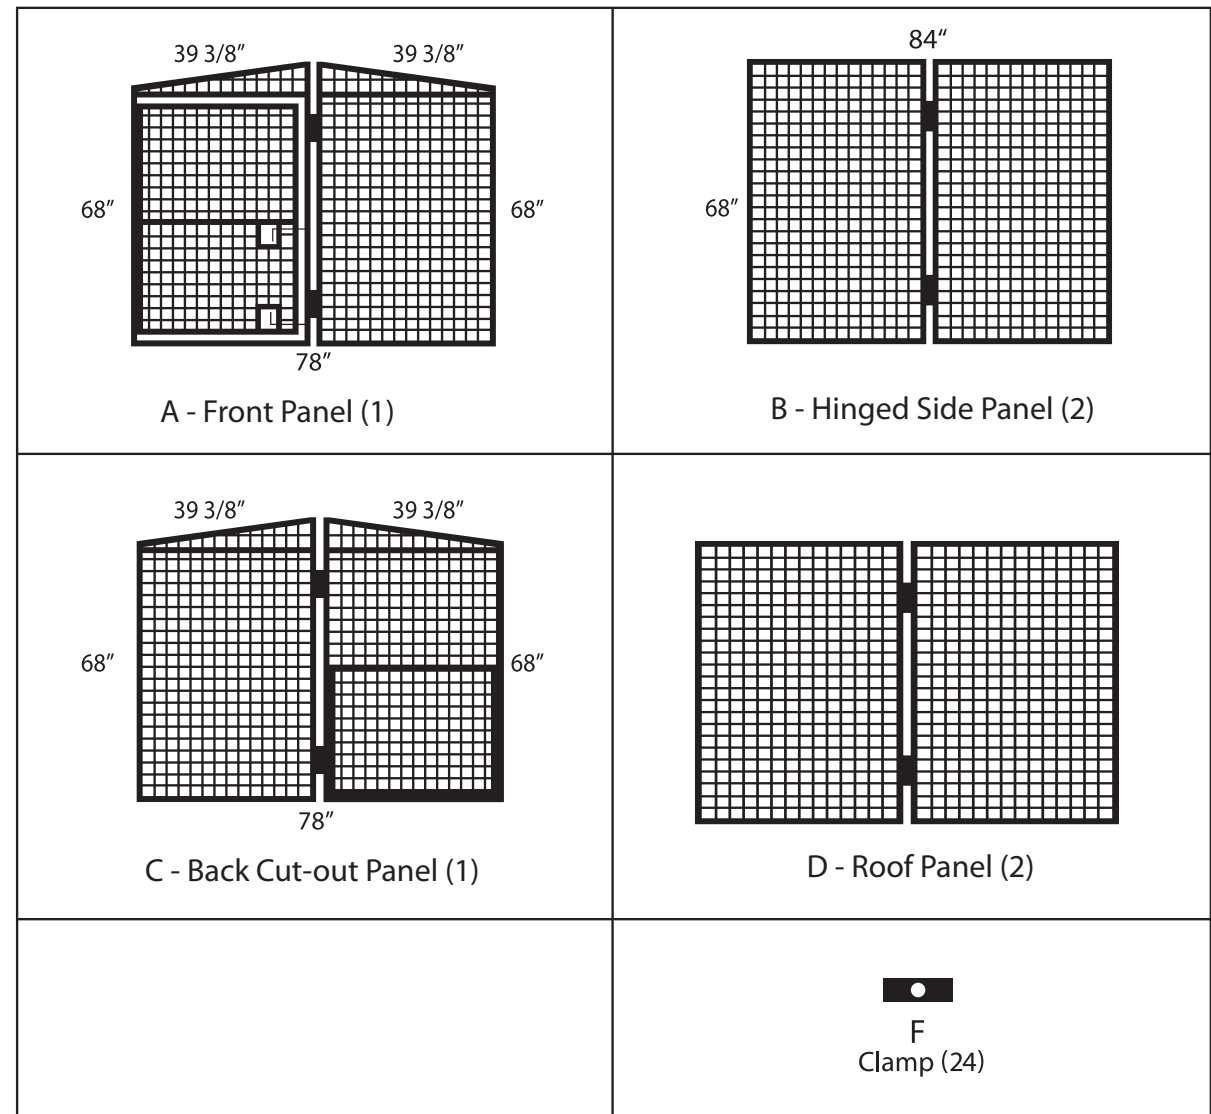

Don't forget to complete your Universal Walk-In Pen by adding the optional Wooden Chicken Hutch or Dog House. Both accessories attach outside the pen via knock-out, back panel to save room inside the pen.

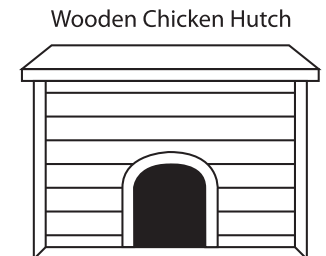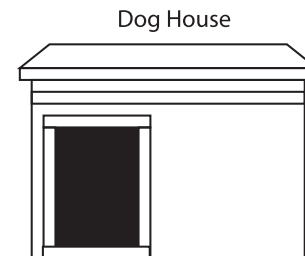

Step 1

Lay out Front (A), Back (C) and Side Panels (B) as shown.



Step 2

Starting with the Back (C) and Side Panel (B), attach the two panels together with the Back Panel on the **outside** using two Clamps (F) in the cut out spaces provided.

*Note: If you are removing the Pop-Out Panel, take it out before step 3.



Step 3

Attach opposite Side Panel (B) and then Front Panel (A) (with two Clamps (F) per corner) making sure that the Front and Back Panels are on the **outside** of the Side Panels.



Step 4

Clamp Roof Panels to top of cage using two Clamps per panel. Keeping the cage and roof corners square is very important.



Step 5

Repeat Step 4 for the 2nd roof panel.



Available Options

- Dog House
- Wood Hutch
- Canvas Top
- 10' x 10' Shade Top
- Extension Kit

