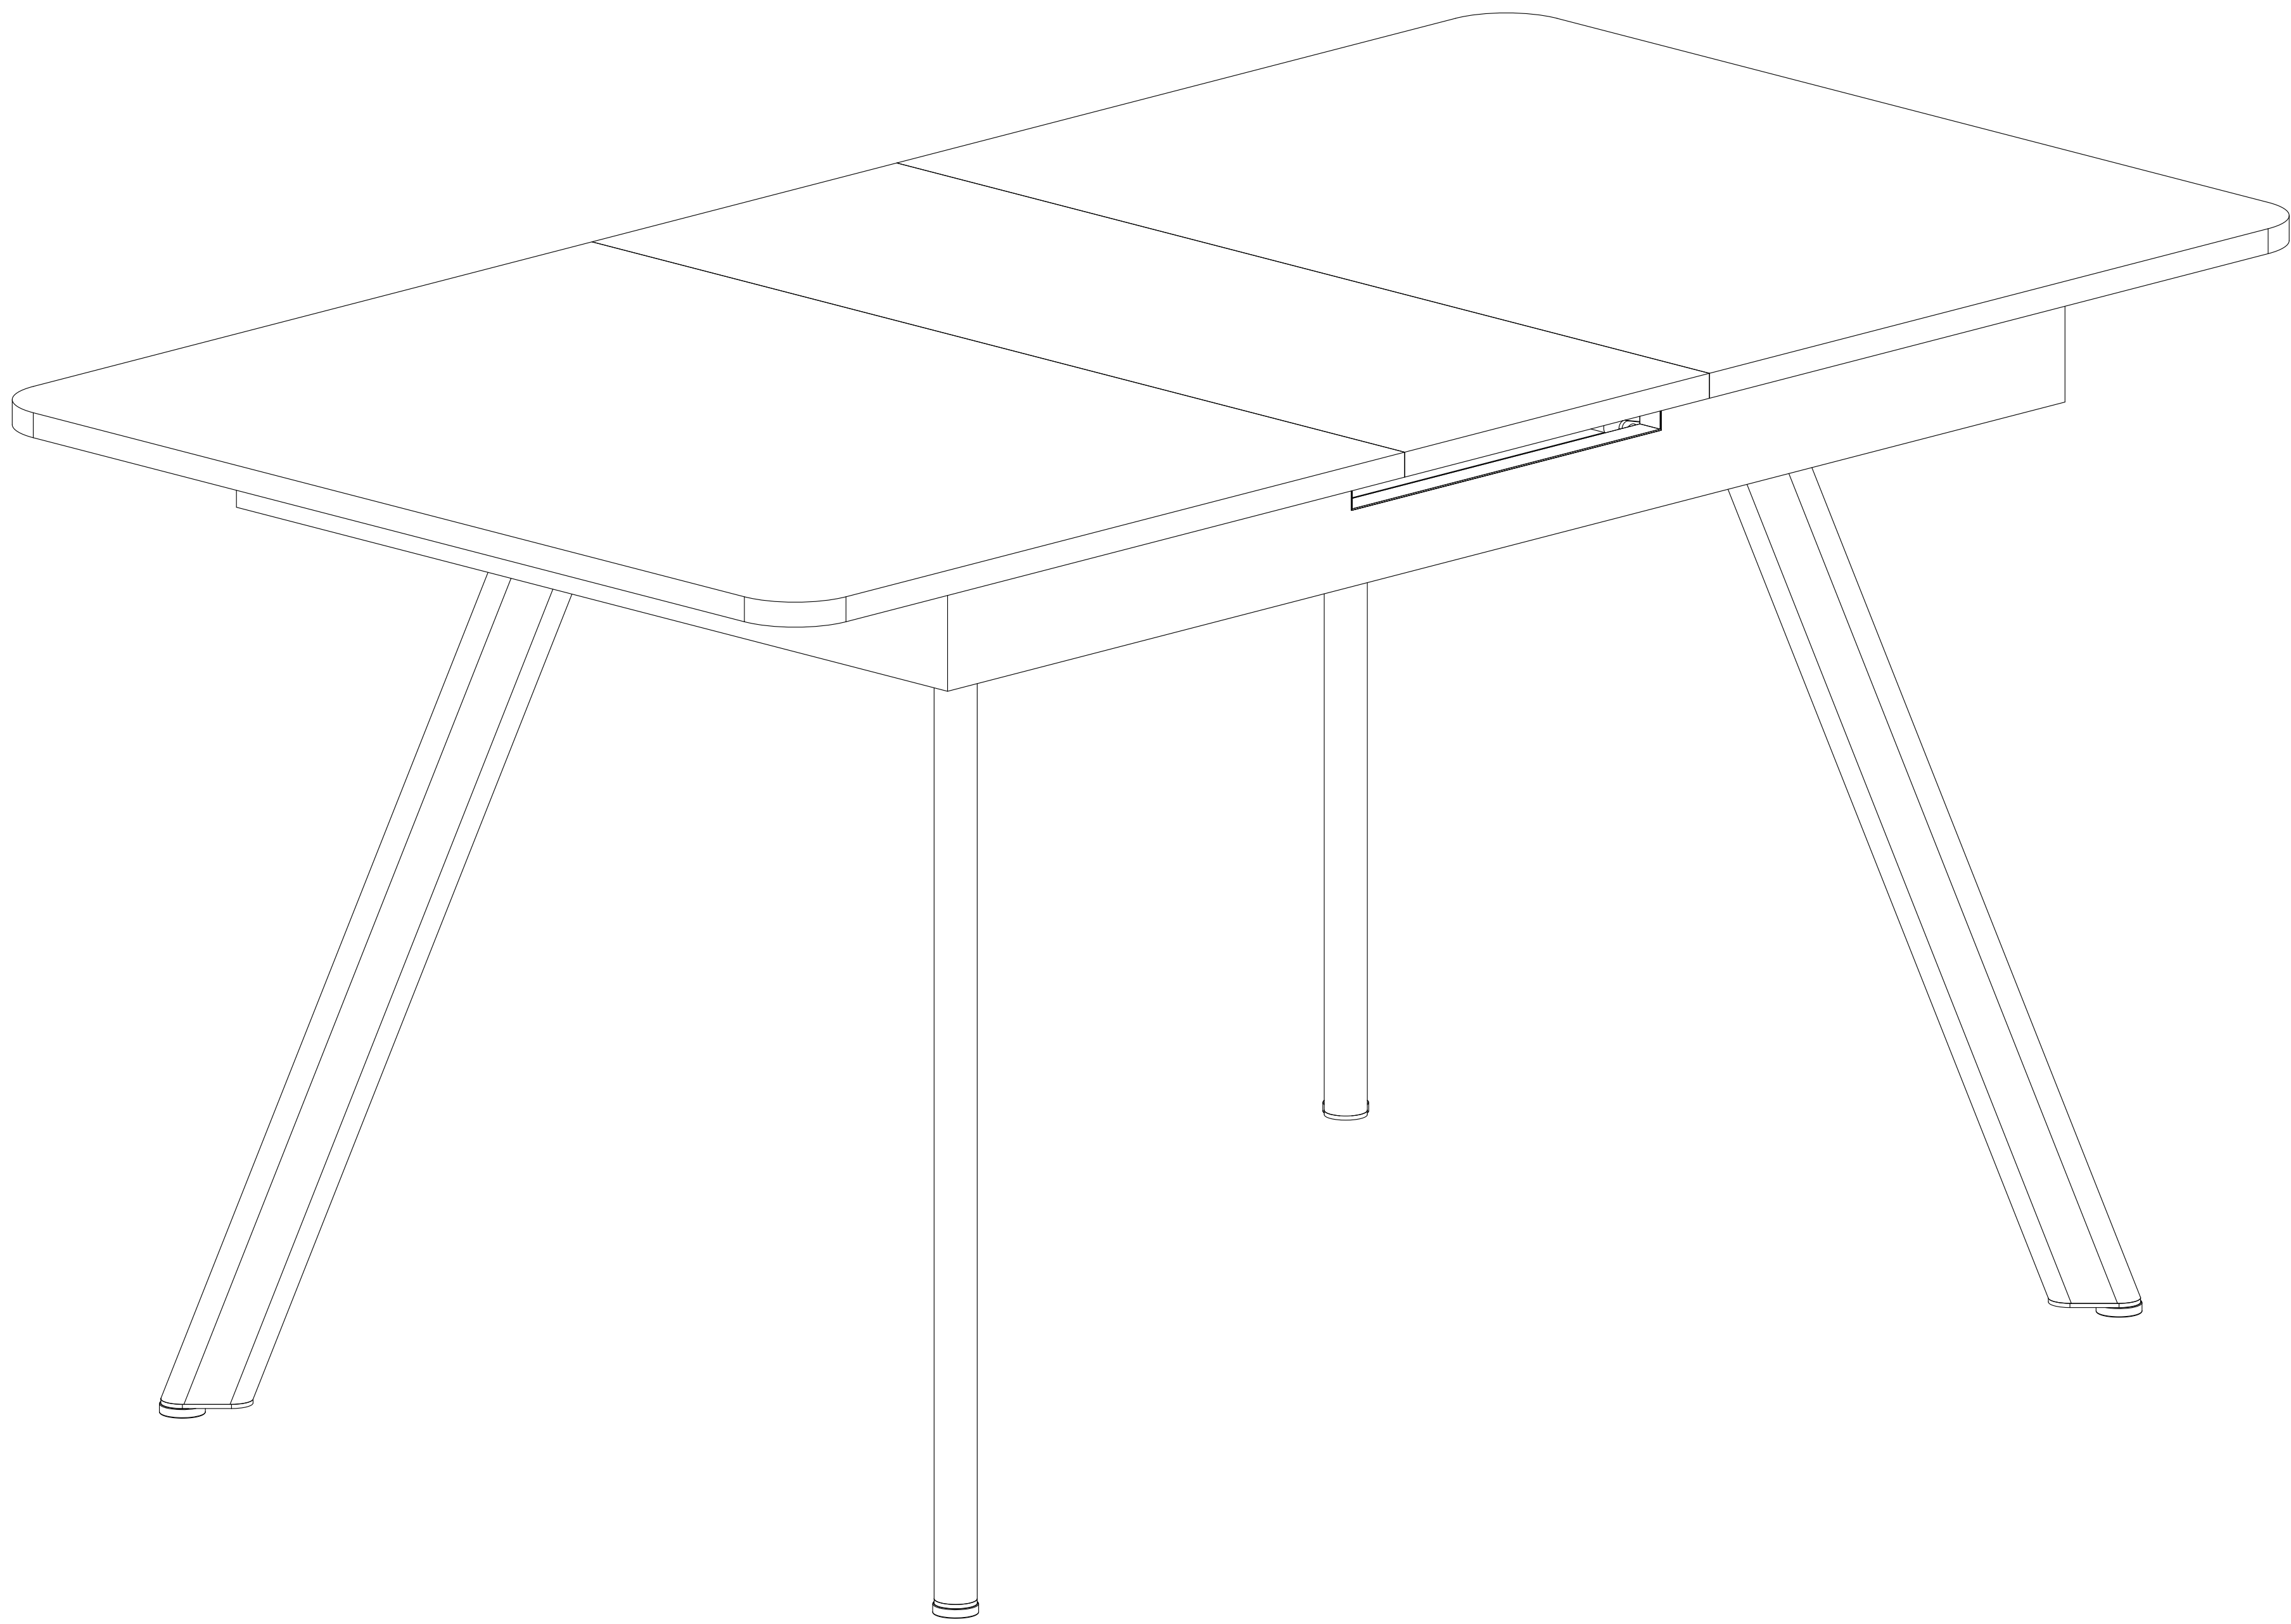


Assembly instruction

Dining Table



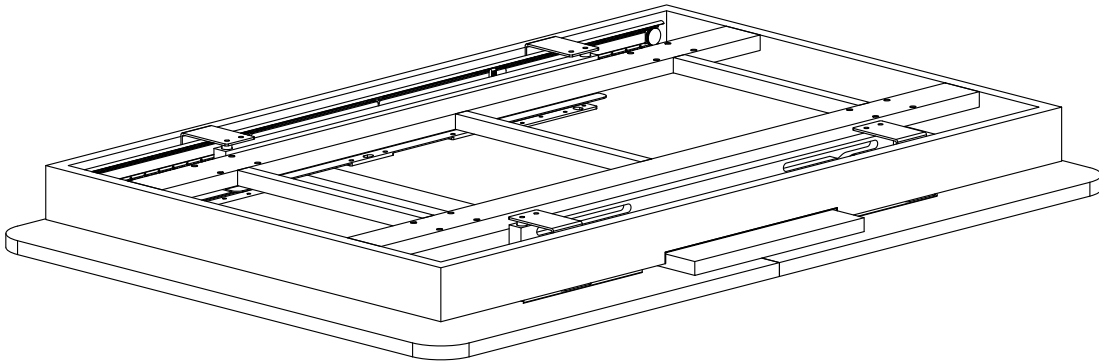
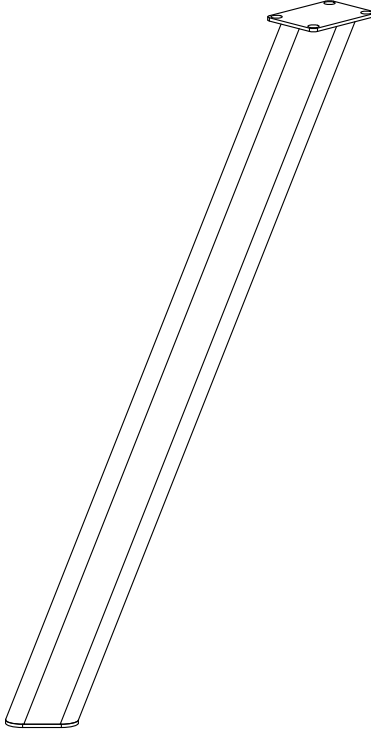
Customer Service Before Return:






If part is missing or damaged, or you need help with assembly,
Please do not hesitate to contact us.

Before Assembly

IMPORTANT NOTE:


- Make sure parts hardware are included and free or obvious Defect before disposing of any packaging
- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- DO NOT tighten all screws and bolts until completely assembled.
- Assembly will require two people.

PART LIST	
1  1PC	2  4PCS

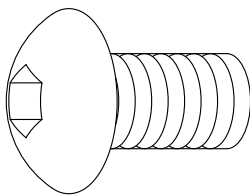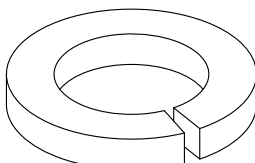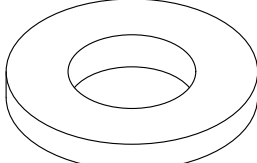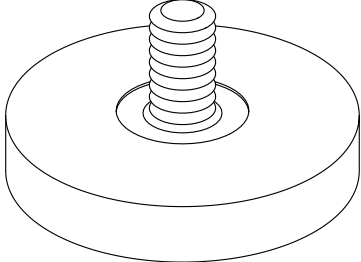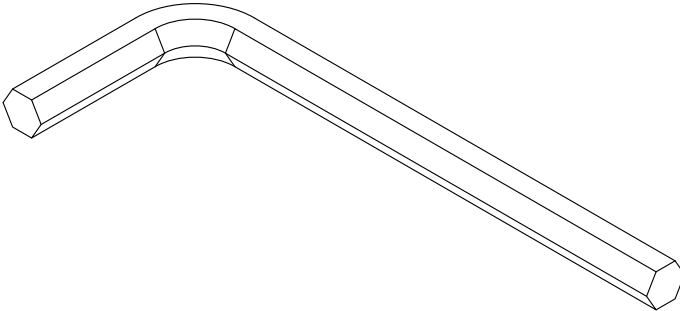HARDWARE LIST			
A  M8 x 20mm 16PCS	B  Spring washer 16PCS	C  Plain washer 16PCS	D  Ø30 4PCS
E  5mm 2PCS			

IMPORTANT NOTE:

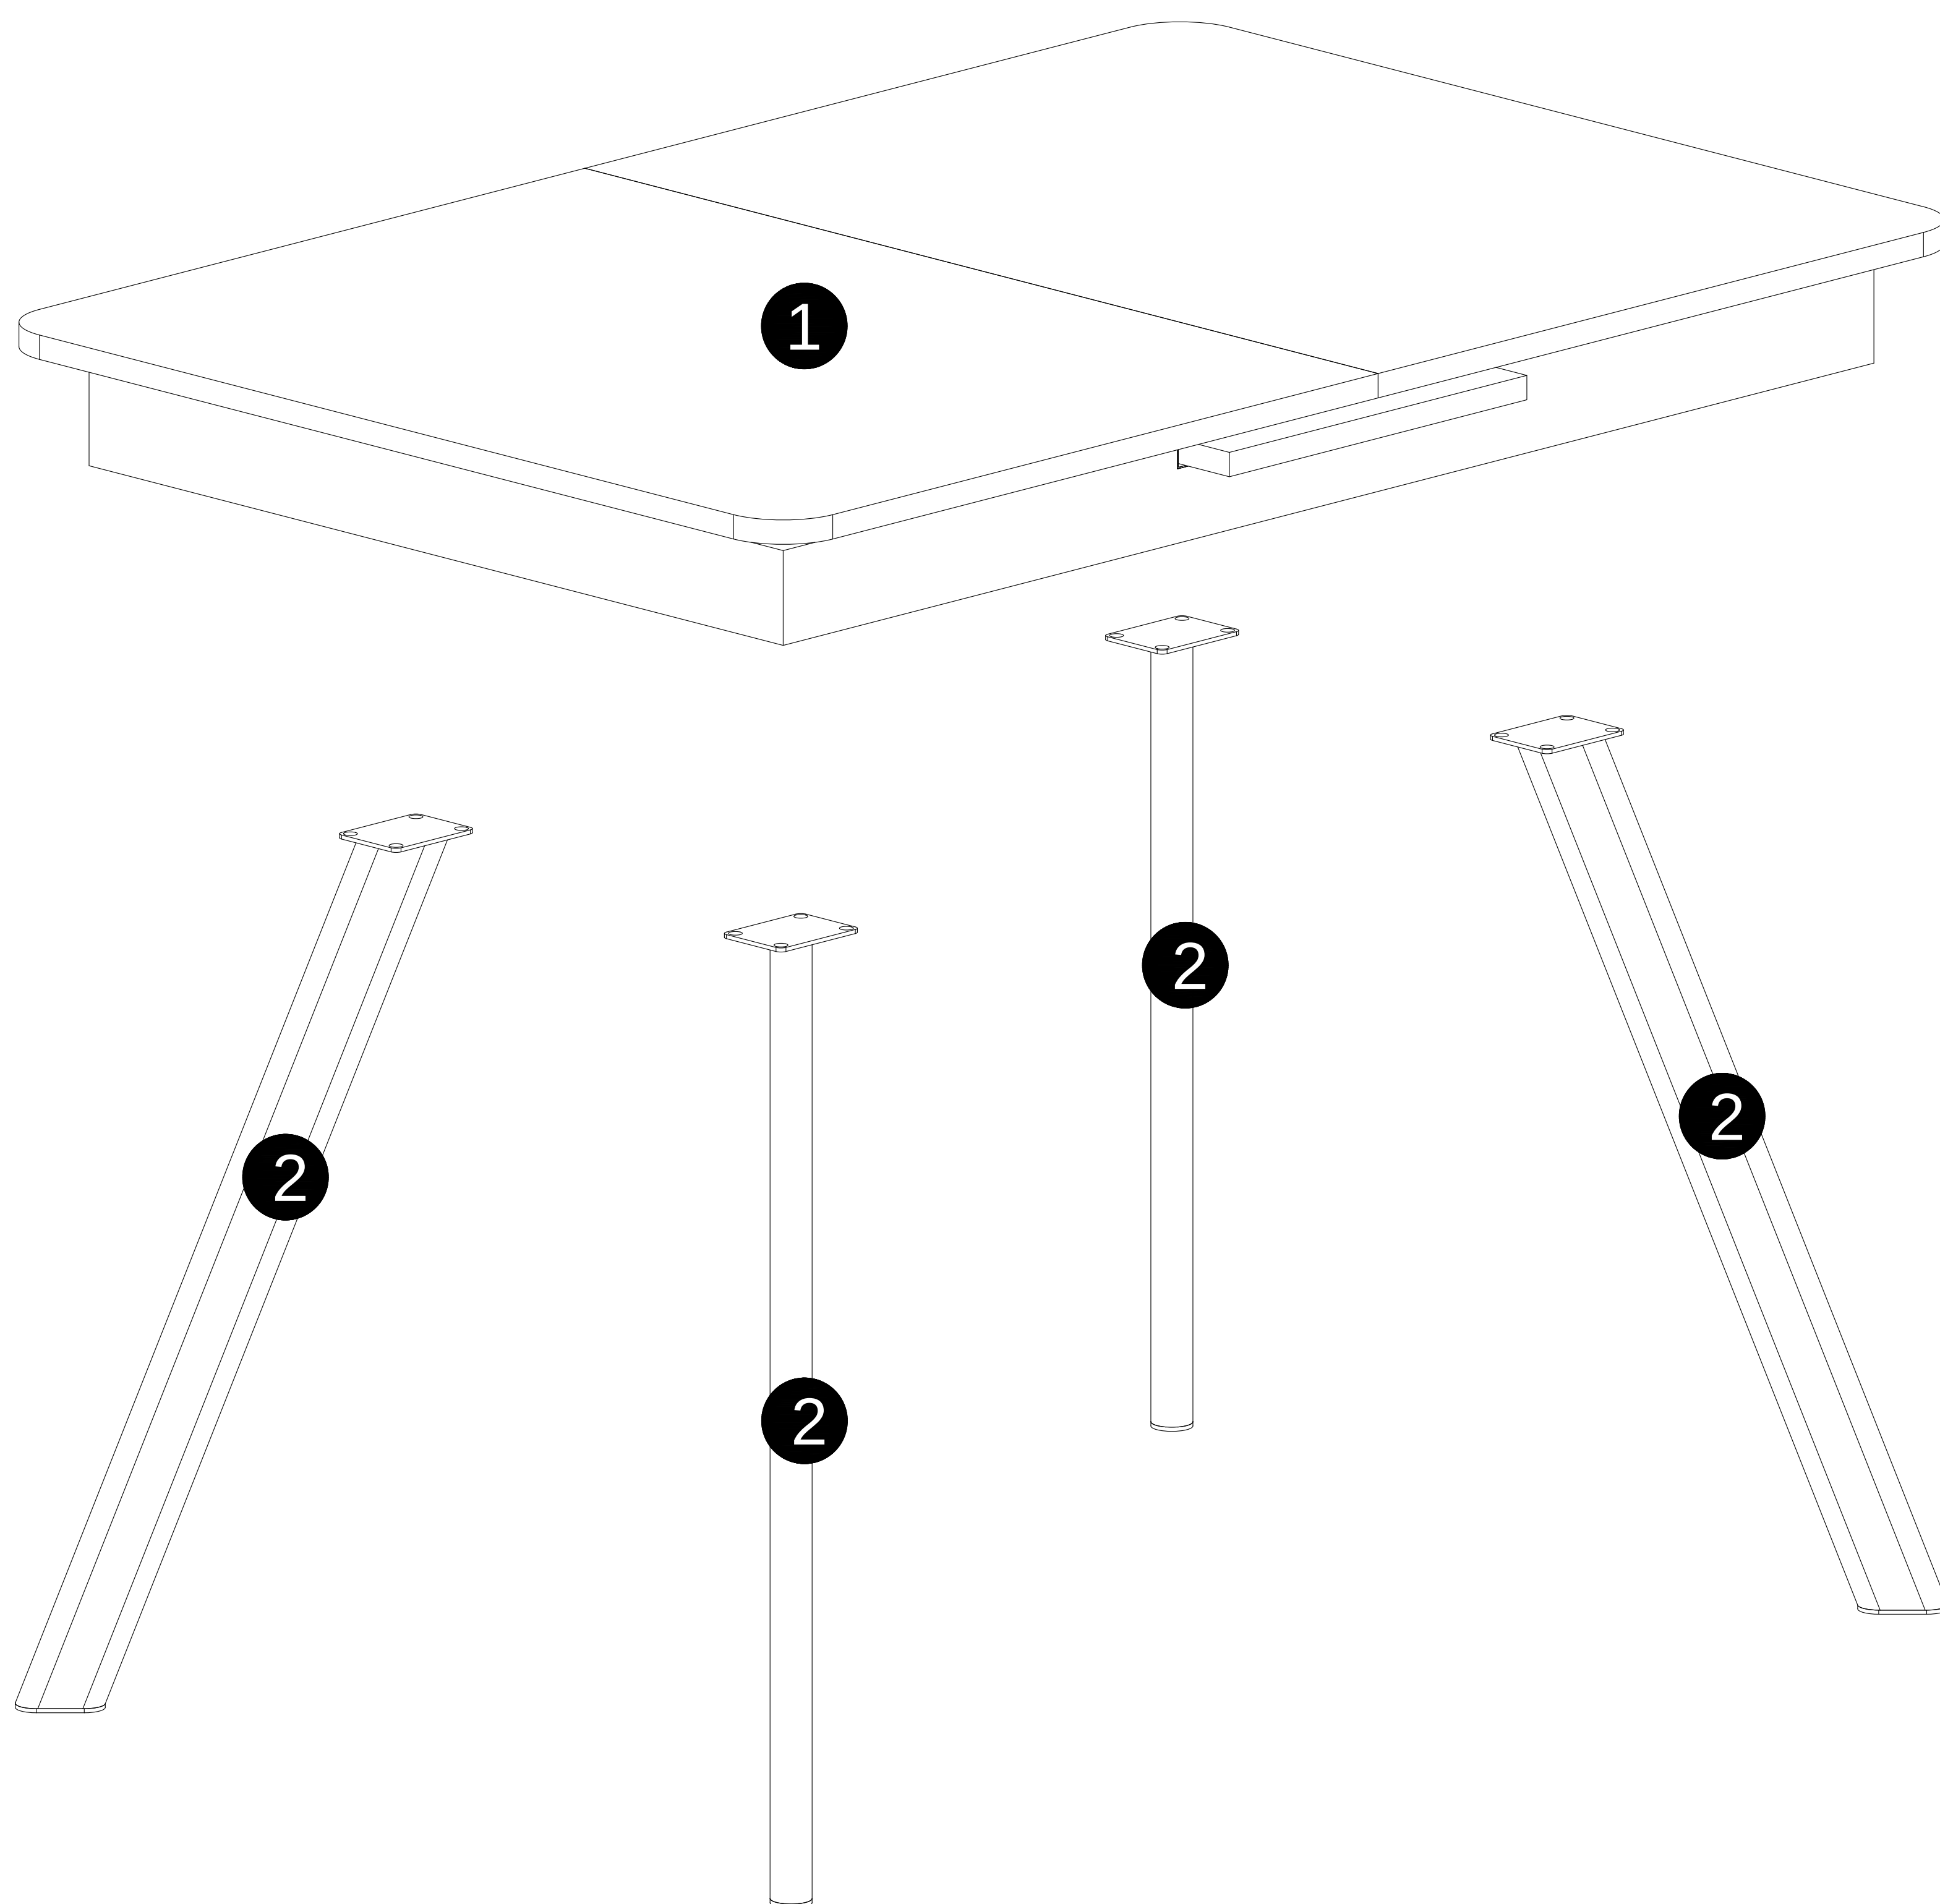- Make sure parts hardware are included and free of obvious defect before disposing of any packaging
- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- DO NOT tighten all screws and bolts until completely assembled.
- Assembly will require two people.



NOTED:

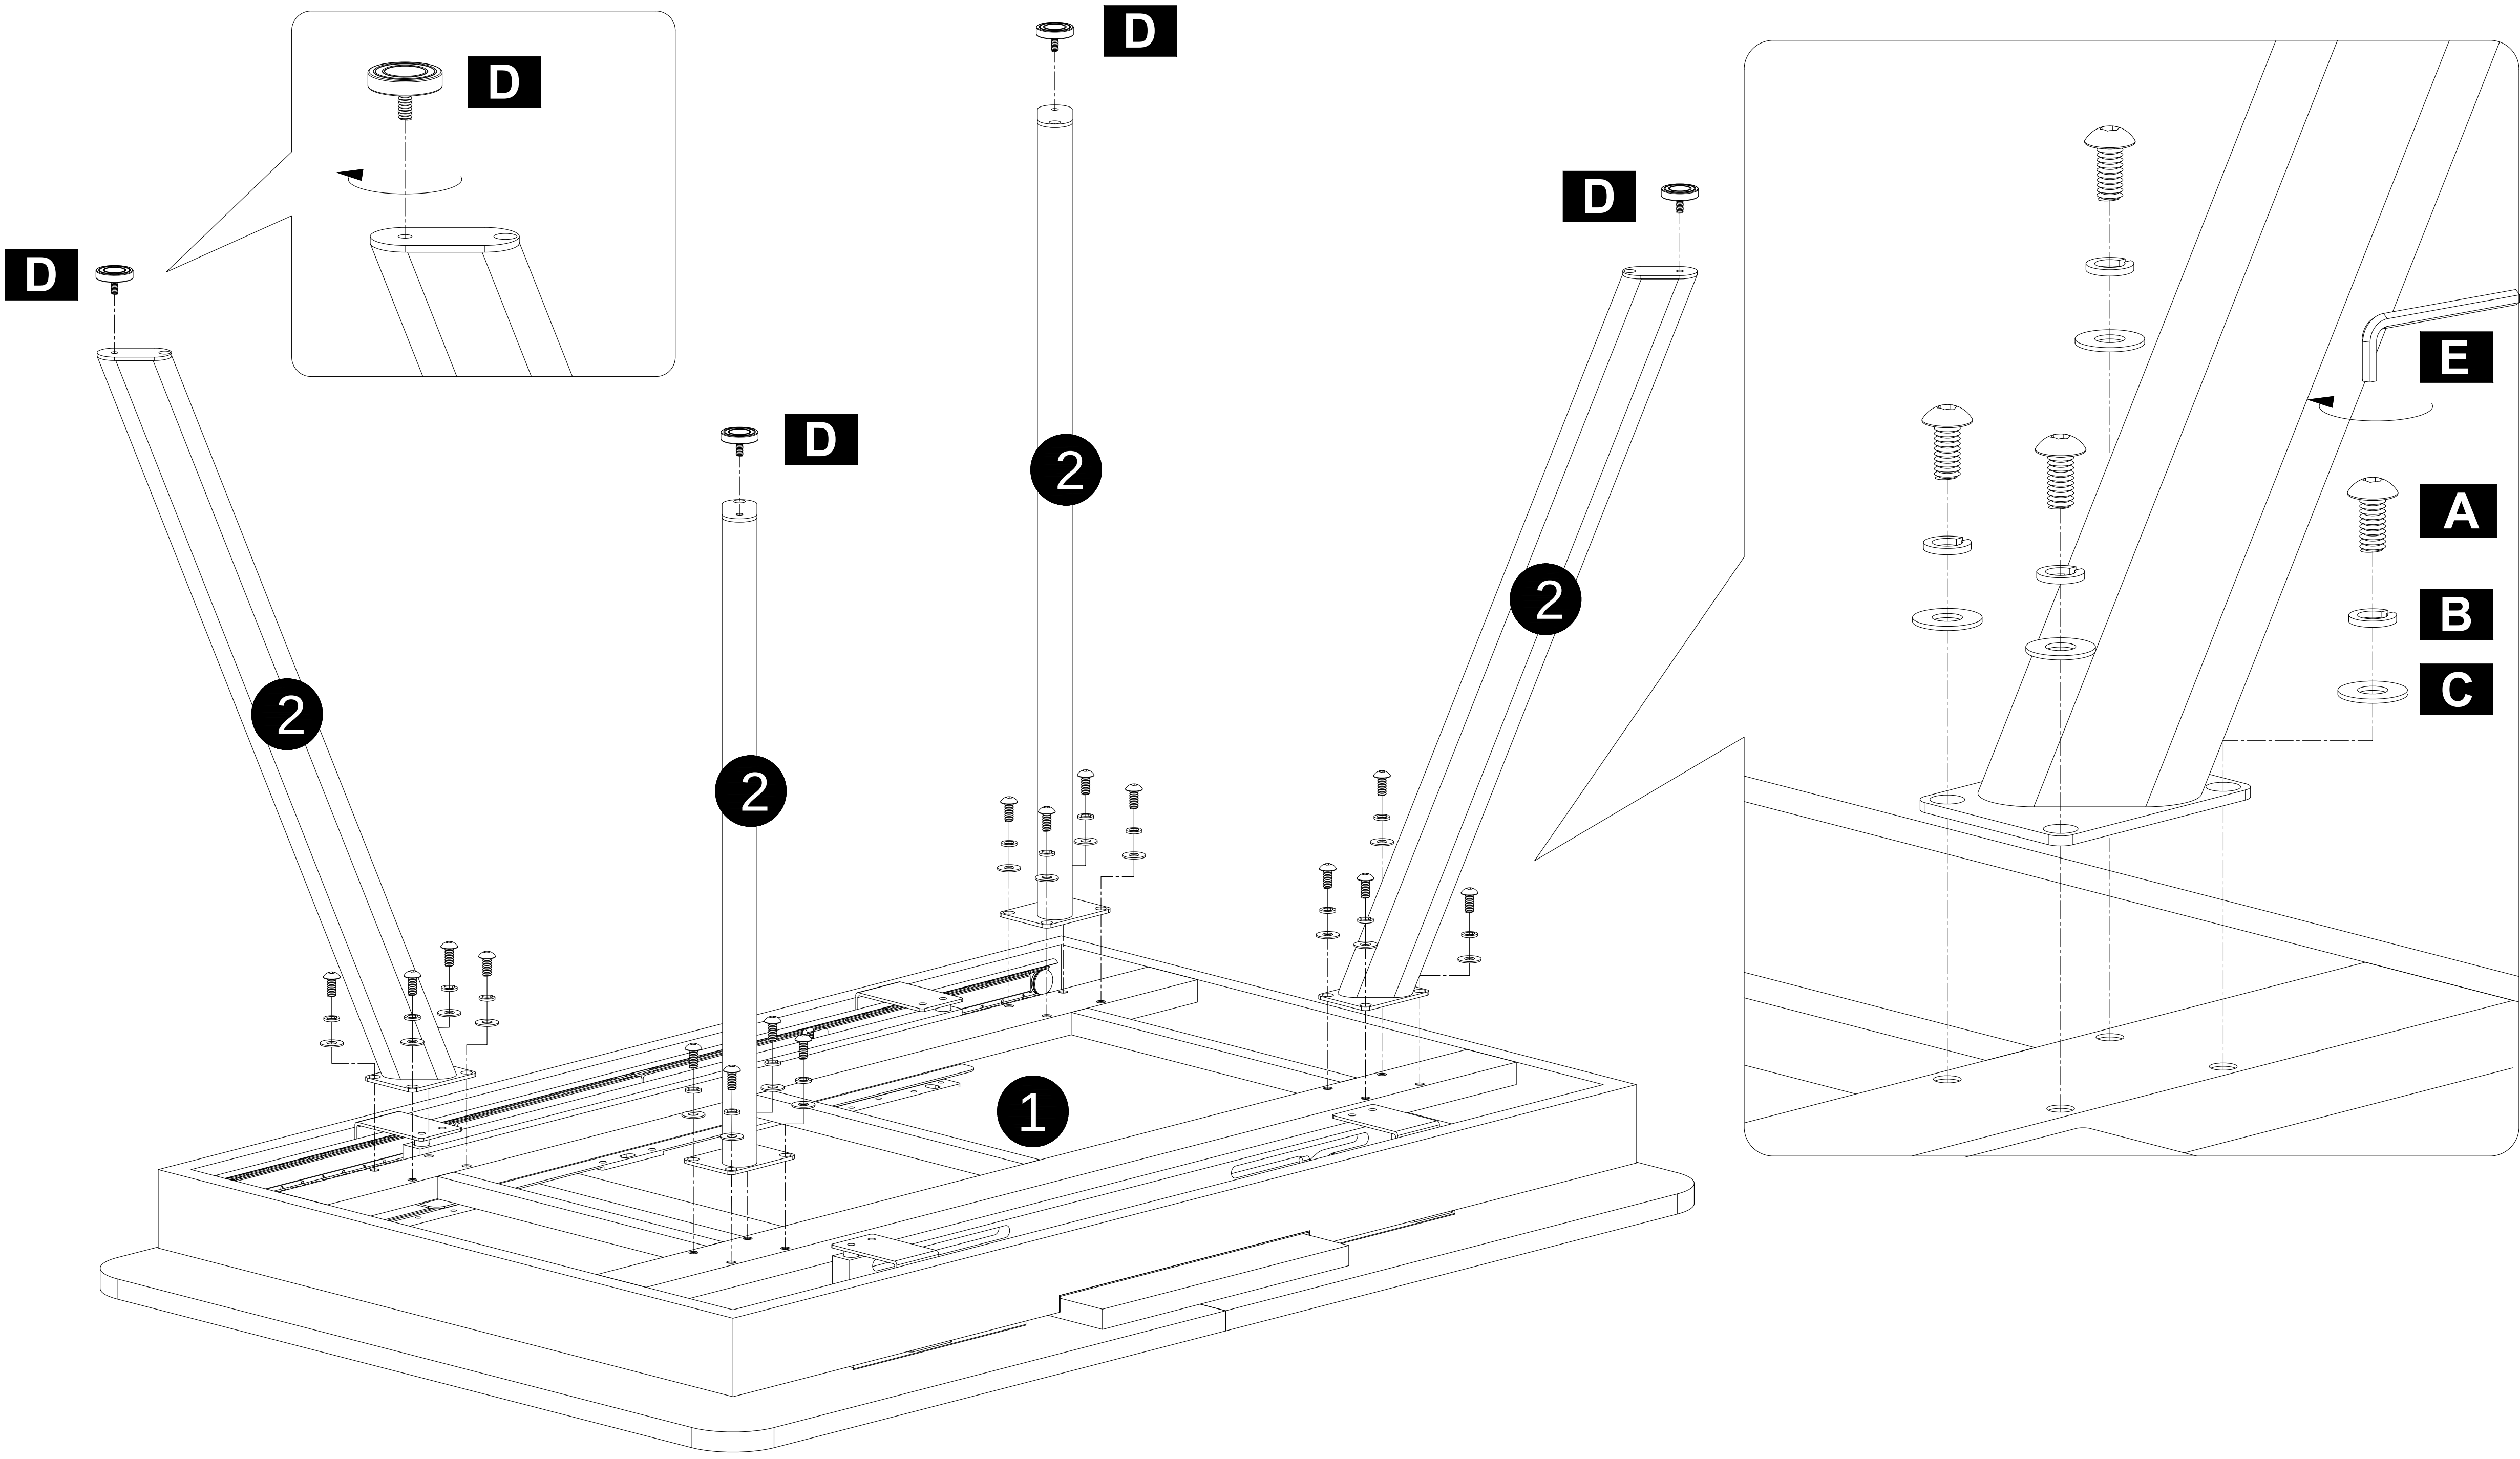
- 1.Do not fully tighten all bolts unti al parts are in place.Failure to folow theseinstructions may cause the bolt to misalign during assembly.
- 2.To prevent injury and property damaged from unexpected tipping of furniture,we highlyrecommend installation of the anti-tip kit included with this product.

Step 1


YOU WILL NEED

Ax16/Bx16

Cx16/Dx4



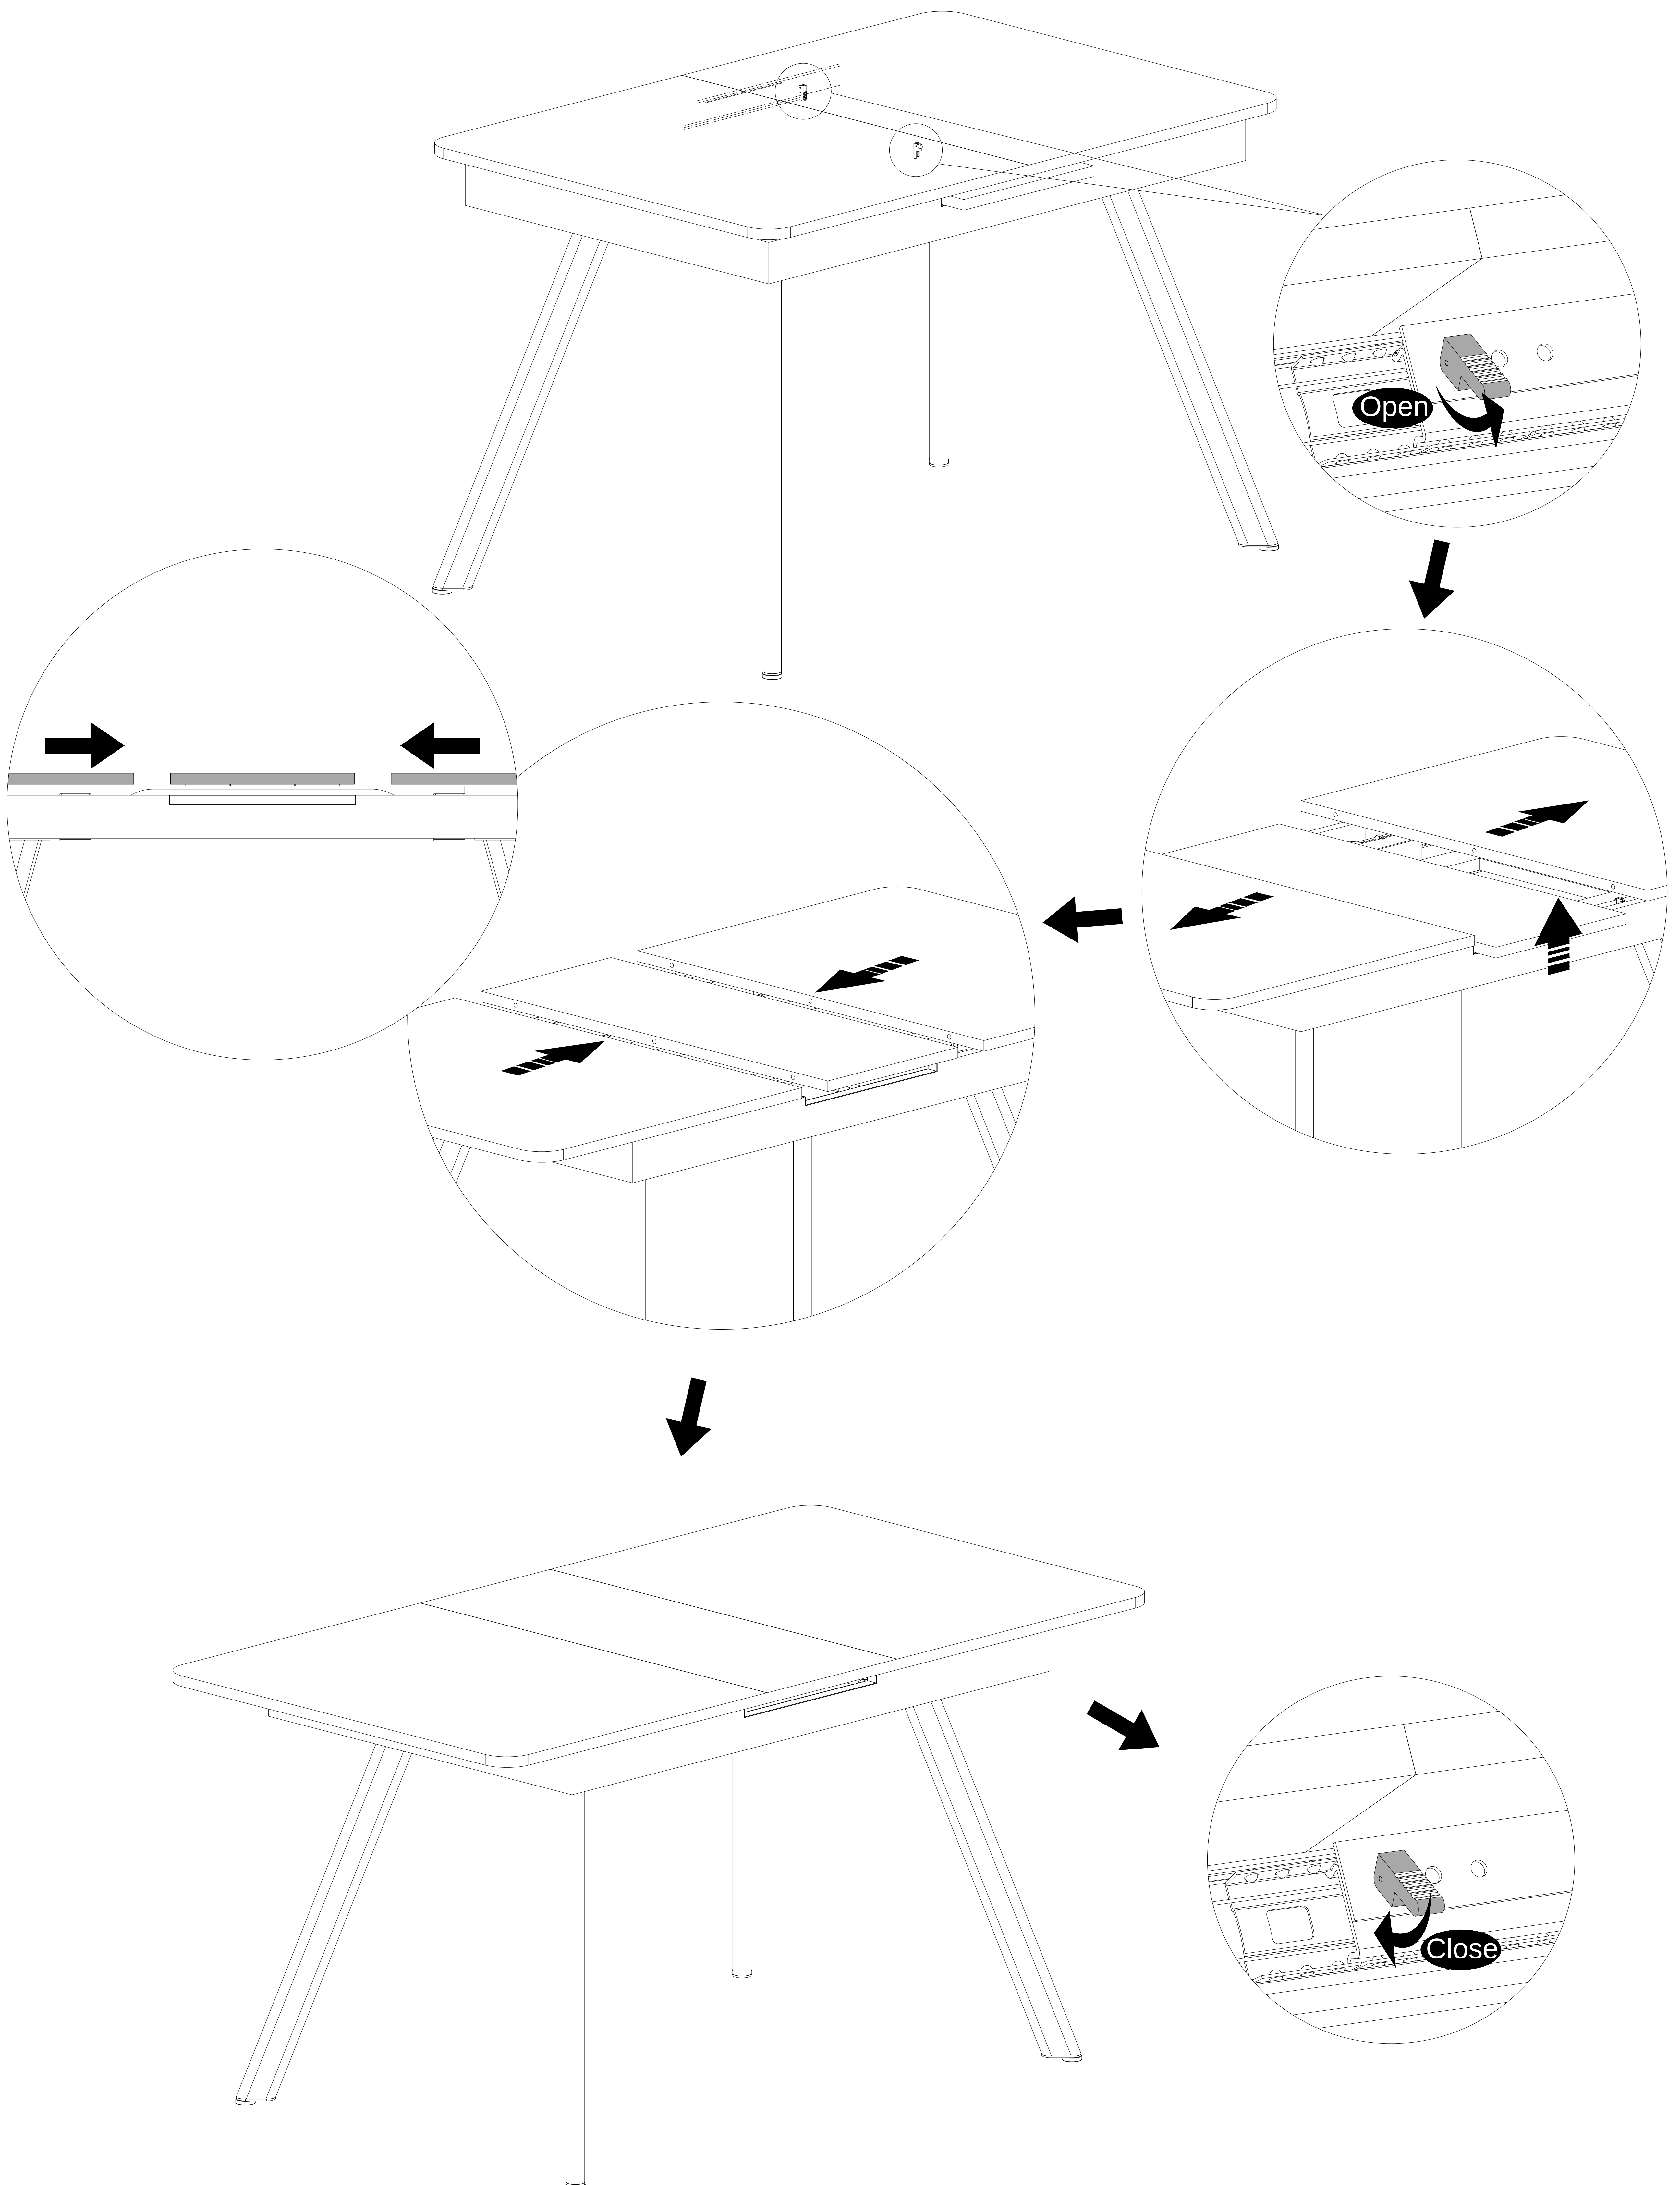Step 2



Step 3

