
ASSEMBLY INSTRUCTION

ITEM: WF309739

DINING CHAIR

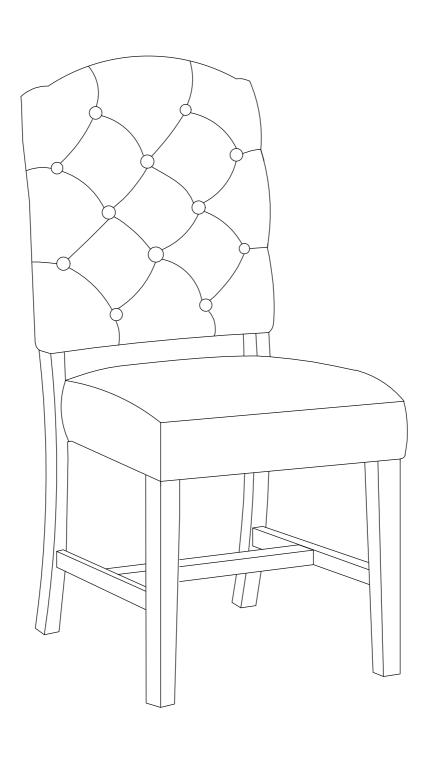

ASSEMBLY INSTRUCTION

ITEM: WF309739


DINING CHAIR


IMPORTANT NOTE:

Please read these instructions fully before starting assembly:


- 1. Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid scratching the parts.
- 2. Kindly follow the assembly instructions step by step.
- 3. Do not tighten all screws and bolts until the table is fully assembled.
- 4. Unscrew the protective plastique supports from the metal insert of the table legs before assembly.
- 5. Parts of the assembly will be easier with 2 people.
 - Care and maintenance:

Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

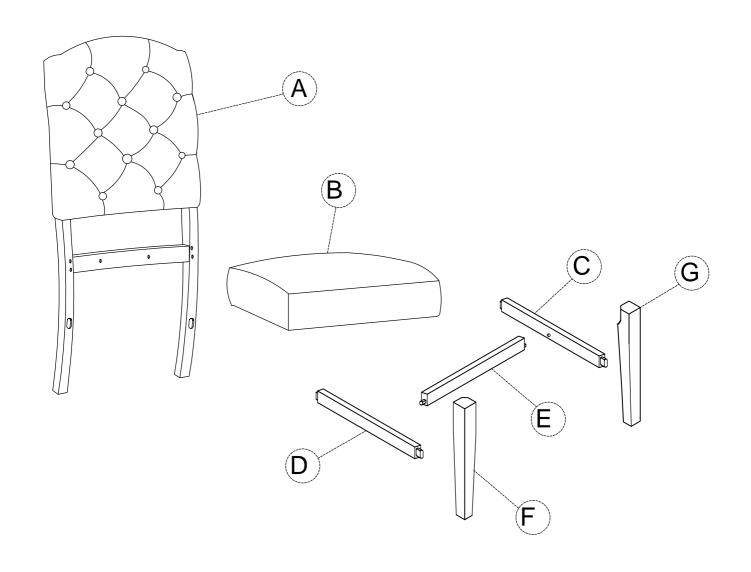

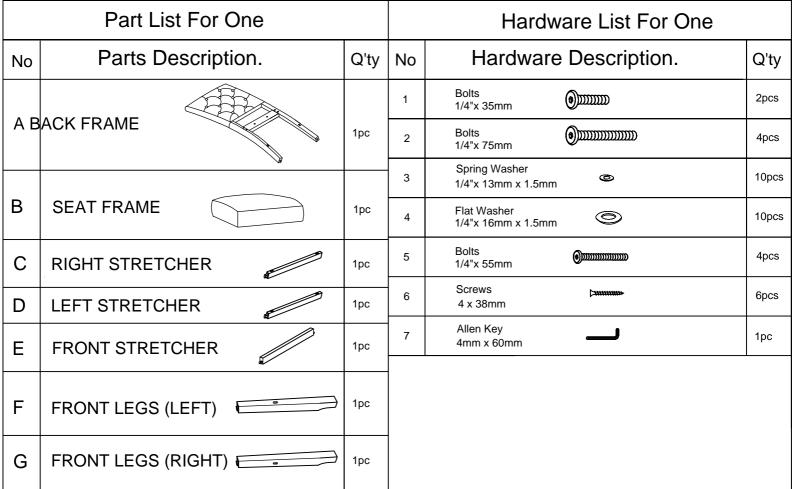



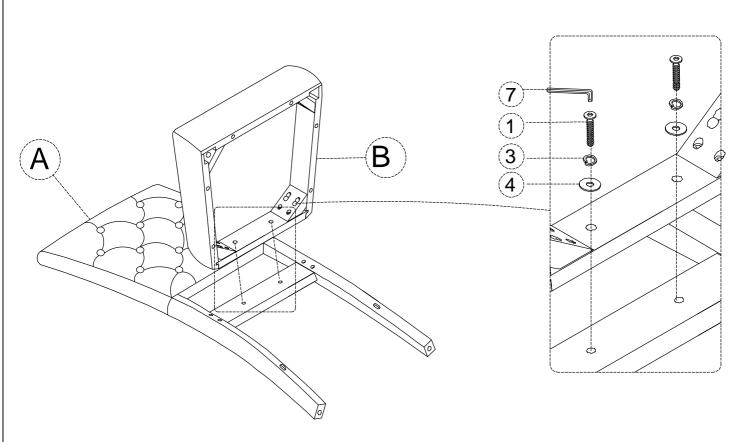

Bolts | Spring Washer | 1/4"x 13mm x 1.5mm | Flat Washer | 1/4"x 16mm x 1.5mm | Allen Key | 4mm x 60mm | 4mm

Bolts 1/4"* 75mm

(2)x 4

Spring Washer 1/4"x 13mm x 1.5mm

③x 4


Flat Washer 1/4"x 16mm x 1.5mm



Allen Key 4mm x 60mm

⑦x 1

STEP 3

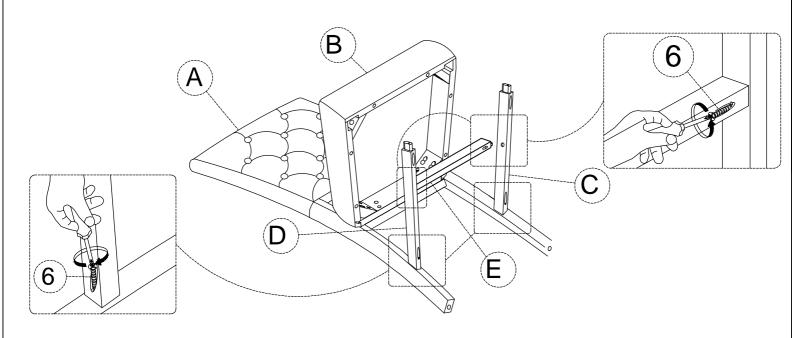

Screws
4 x 38mm
Communication
6x 4

