

Electric Kettle Spare Parts List

No.	Spare Part Name		Quantity
1	Stainless decoration of cover	S.S.	1
2	Cover	PP	1
3	Cover movement		1
4	Cover spring	РР	1
5	Cover starter spring	PP	1
6	Cover inner		1
7	Screw	3*8SS	
8	Mouth loop	РР	1
9	Handle fixation	РР	1
10	Filter		1
11	Cover composite/complex		1
12	Waterwindow silicon seal	Silicon	1
13	Waterwindow	РС	1
14	Indicator light cover silicon	Silicon	1
15	Indicator light cover	РС	1
16	Indicator light		2
17	Controlller Up part		1
18	Screw		2
19	Screw Nut		3
20	Inner gasket		2
21	Body base	РР	1
22	Screw		5
23	Rating label		2
24	Cover starter spring	РР	1
25	Base of steam switch	Silicon	1
26	Handle seat		1
27	Cover starter spring	РР	1
28	Cover starter handspike	РР	1
29	Cover starter connector	РР	1
30	Cover starter	РР	2
31	Screw		1
32	Steam switch		1
33	Screw	РР	1

34	Switch pusher	РР	1
35	Handle cover	PP	1
36	Base decoration	Stainless steel	1
37	Base	PP	1
38	Rubber feet		1
39	Controller Down part		1
40	Wire and Plug		1
41	Base gasket	PP	1
42	Screw		3