 




IN230200421V03_US

820-249V80

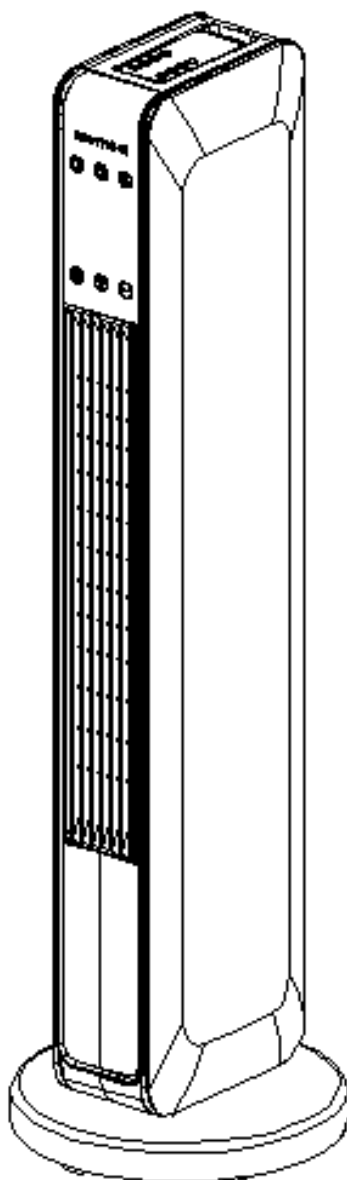

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

ASSEMBLY INSTRUCTION

WHEN USING ELECTRICAL APPLIANCES, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK AND INJURY TO PERSON, INCLUDING THE FOLLOWING:

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use grip handle when provided.
- Keep combustible materials such as drapes, furniture, pillows, bedding, papers, clothes, and curtains at least three (3) feet (0.9m) from the front of heater and keep them at least 1 foot (0.3m) the sides and rear of the heater.
- Extreme caution is necessary when heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Always unplug heater when not in use.
- Do not use any heater with a damaged cord or plug or after the heater malfunctions or has been dropped or damaged in any manner. Return heater to manufacturer for examination, electrical or mechanical adjustment, or repair. (See Warranty for information).
- Do not use outdoors.
- This heater is not to be used in bathrooms, laundry areas or other similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over.
- To disconnect heater, turn control to OFF then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause electric shock or fire or damage the heater.
- To prevent possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored.
- Use this heater only as directed in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- If the heater will not operate: See specific instructions in Safety Feature explained in this manual.

CLEANING/ MAINTENANCE INSTRUCTIONS:

During Season Care:

- Before cleaning, be sure to turn off and unplug the heater.
- Carefully wipe the unit with a soft, damp cloth. Please be very cautious near the motor and heating elements.
- Do not immerse the heater in water.
- Never use gasoline, benzene or thinner. This will damage the surface of the heater.
- After cleaning, be sure to completely dry the unit with a cloth or towel.

After Season Care:

- Store heater in a cool and dry location with power cord properly secured.
- Please store the unit in its original carton or suitable container.

PARTS AND FEATURES

It is important to know your heater's parts and features to ensure its proper and safe use. Review these before using your heater.

TOWER HEATER

Fig. 1

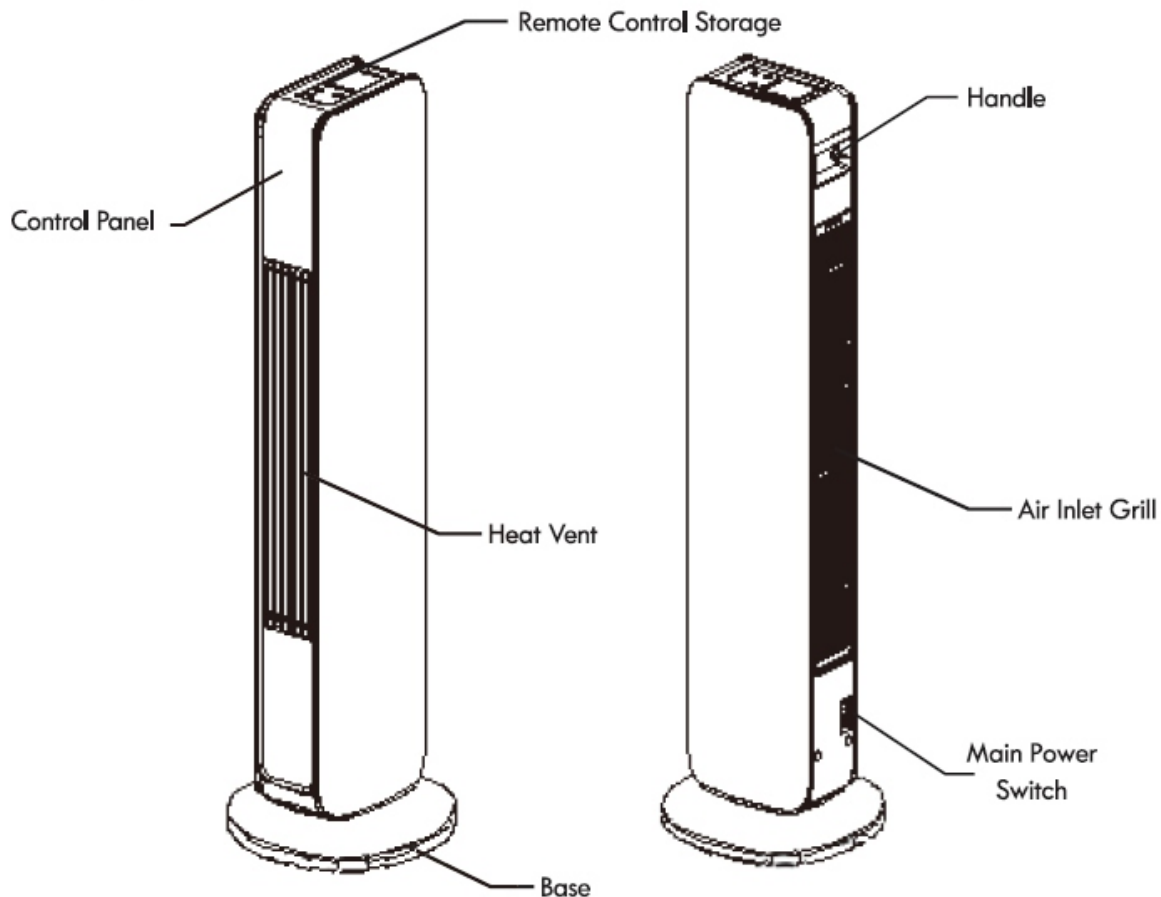 


Fig. 2

 
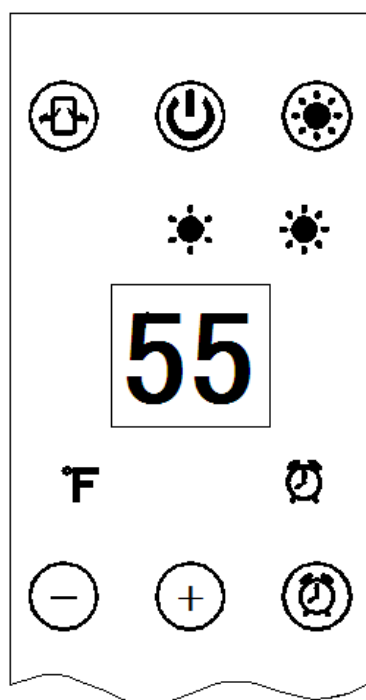 


Fig. 3

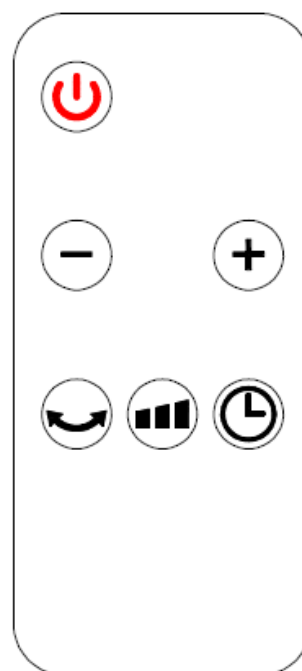

USING THE HEATER

HEATER OPERATION

Always operate the heater in the upright position following all instructions and recommendations listed in this manual.

HEATER LOCATION

Place the heater in the area of the room that is coldest.

HEATER CONNECTION

Plug heater directly into 120 volt A.C. 60Hz outlet. Be sure the plug fits tightly in outlet. A loose connection may cause overheating and damage to the plug or heater.

NOTE: To prevent overloading a circuit, do not plug the heater into a circuit that is serving other electrical needs.

The heater may be operated by the controls located on the heater (see Fig.2) or by the remote control(see Fig.3)

- 1.Carefully remove the heater from the plastic bag and the carton.
- 2.Place the heater on a firm level surface.
- 3.Power On the unit by switching on the Main Power Switch(Fig.1).The control panel will display the factory default temperature of 77 °F for one second, and then show the current room temperature.
- 4.Turn the heater ON by pressing the  on the control panel or remote control.
 - If the room temperature is less than 2°F lower than the set temperature, the heater will go into FAN MODE and blow unheated air.
 - If the room temperature is less than 2°F-4°F lower than the set temperature, the heater will go into LOW HEAT MODE and blow warm air.
 - If the room temperature is more than 4°F lower than the set temperature, the heater will go into HIGH HEAT MODE and blow hot air.

- 5.Regardless of the difference between room temperature and heater settings, you may repeatedly press the  button to force the heater to advance to LOW, HIGH or FAN mode.

NOTE: Once in a particular mode, using the  or  buttons to adjust the heater setting will also advance the mode according to the temperature differences specified in step 4 above.

- 6.To turn the heater off, press the POWER button.

NOTE: When the unit is powered off on the control panel, the fan may continue to run to cool off the ceramic elements and dispense any retained heat. The unit shut off  automatically when sufficiently cooled down.

OSCILLATING FUNCTION

The Oscillating function will work in any mode.

Press the  button to oscillate the heater fan from left to right across a wide degree arc. To turn the oscillation off, press this button again.

TIMER FUNCTION

The Timer function will work in any mode. The timer function allows you to set the length of operation from 1 to 8 hours. Each time the  button is pressed the length of operation will increase 1 hour. The duration the timer is set for will be displayed on the LED screen in hour increments. TO TURN THE TIMER FUNCTION OFF: Press the  button continuously until the LED screen displays "0 H".

USING THE HEATER

TEMPERATURE SETTING

1. You may adjust the desired temperature setting in any heater operation mode. The temperature can be set from 50°F to 95°F.
2. Press the  or  button to adjust the temperature setting.
 - The heater will operate in LOW HEAT mode and blow warm air when the set temperature is 2°F-4°F higher than the room temperature.
 - The heater will operate in HIGH HEAT mode and blow hot air when the set temperature is more than 4°F higher than the room temperature.
 - When the room temperature reaches the set temperature the heater will automatically go into FAN MODE and blow unheated air.
 - After setting is complete, blink for 5 seconds, then return to steady mode to display actual room temperature.

NOTE: The heater will cycle between FAN MODE and LOW HEAT MODE as it maintains the set temperature.

SAFETY FEATURES

A thermal overload protector is built into the heater to automatically shut the heater off if it becomes overheated. The heater must cool down and be reset before it will operate again. To reset, turn the Main Power Switch button to Off and then back ON. Press the  button on the control panel to resume normal operation. Be sure that the heater is on a smooth level surface with no obstructions. The heater is also equipped with a safety tip-over switch to turn power off to the heater when the heater tip over. To resume heater functions simply stand heater upright. With tip over protection, the heater will only operate when placed upright on a level surface.

REMOTE CONTROL

The remote control uses on button cell battery, type CR2025(3V). To remove the battery carriage use your thumb to squeeze the release tab to the right and then pull the carriage out. Place the battery into the carriage and slide the carriage back into the remote. See Fig.4. We recommend the use of a Lithium-ion battery for longer use.

NOTE: Follow battery disposal instruction on battery packaging, or contact your local safety council for safely disposal of batteries.

Before using the remote control, you must remove the insulating film as shown in the figure below.

1. All functions performed with remote control work identically to the heater control panel.
2. Aim the remote control at the heater control panel to operate the heater.

 
 
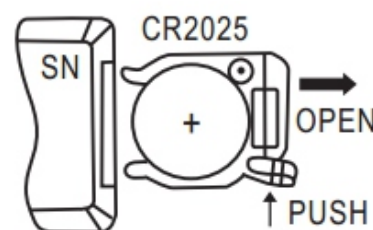 


Fig. 4

Installation Method of Remote Controller Battery

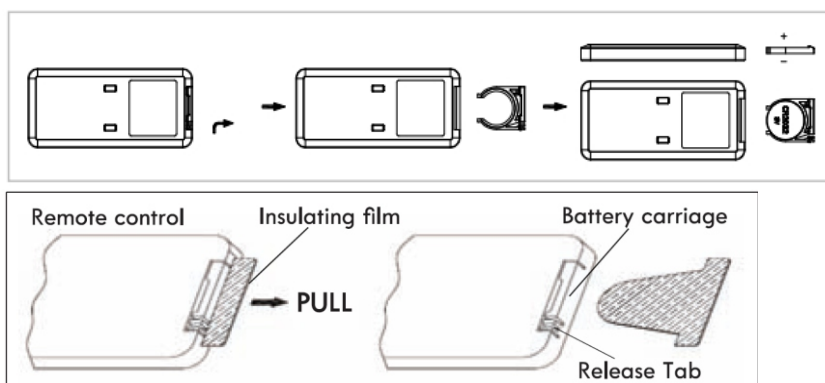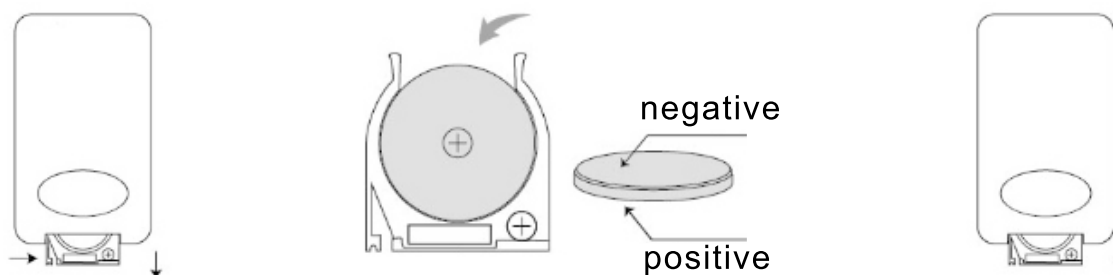

1. The battery cover can be removed by gently pulling it down.
2. Put the battery into the battery box. (Note the positive and negative direction of the battery)
3. Put the battery cover into the original outlet and fasten it completely.
 - a) Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. DO NOT dispose of batteries in household trash or incinerate.
 - b) Even used batteries may cause severe injury or death.
 - c) Call a local poison control center for treatment information.
 - d) Non-rechargeable batteries are not to be recharged.
 - e) Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
 - f) Ensure the batteries are installed correctly according to polarity (+ and -).
 - g) Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon zinc, or rechargeable batteries.
 - h) Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
 - i) Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



SPECIFICATIONS

Model No	820-249V80
Voltage	120V AC
Frequency	60Hz
Output Power (W)	1500W

If you have any questions, please contact our customer care center.
Our contact details are below:



001-877-644-9366



customerservice@aosom.com

Imported by Aosom LLC
27150 SW Kinsman Rd Wilsonville, OR 97070 USA
MADE IN CHINA

