 
 

















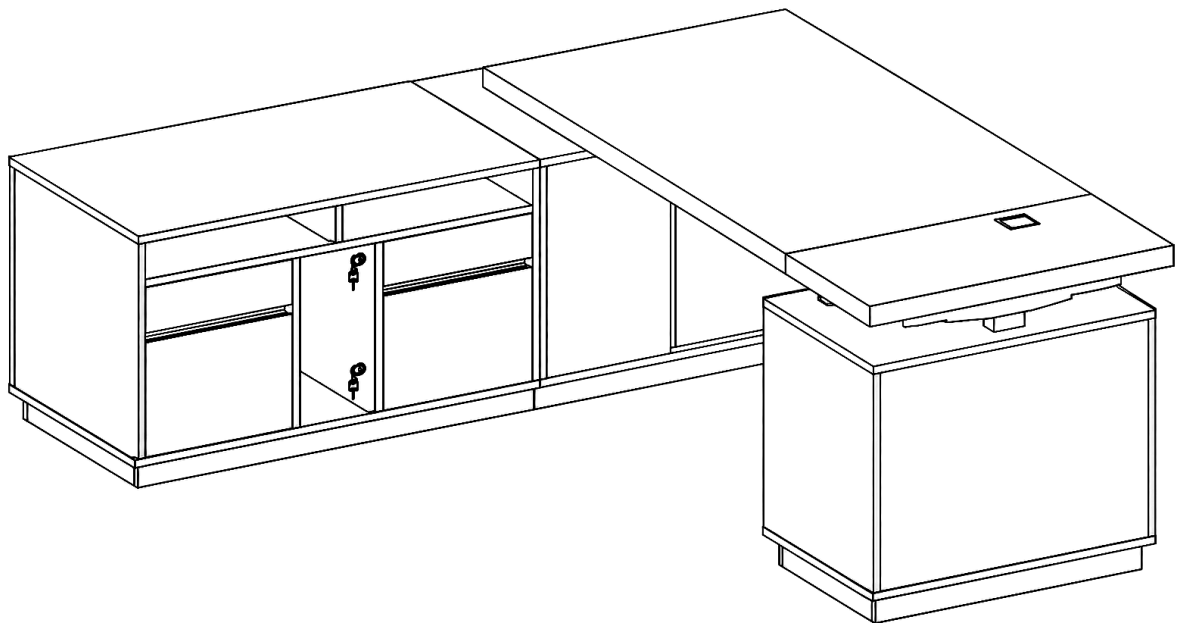


Suggestion ·It is recommended to install it near a power source, as later steps will require the power to be turned on.
This product requires installation by at least two people.








ASSEMBLY INSTRUCTION





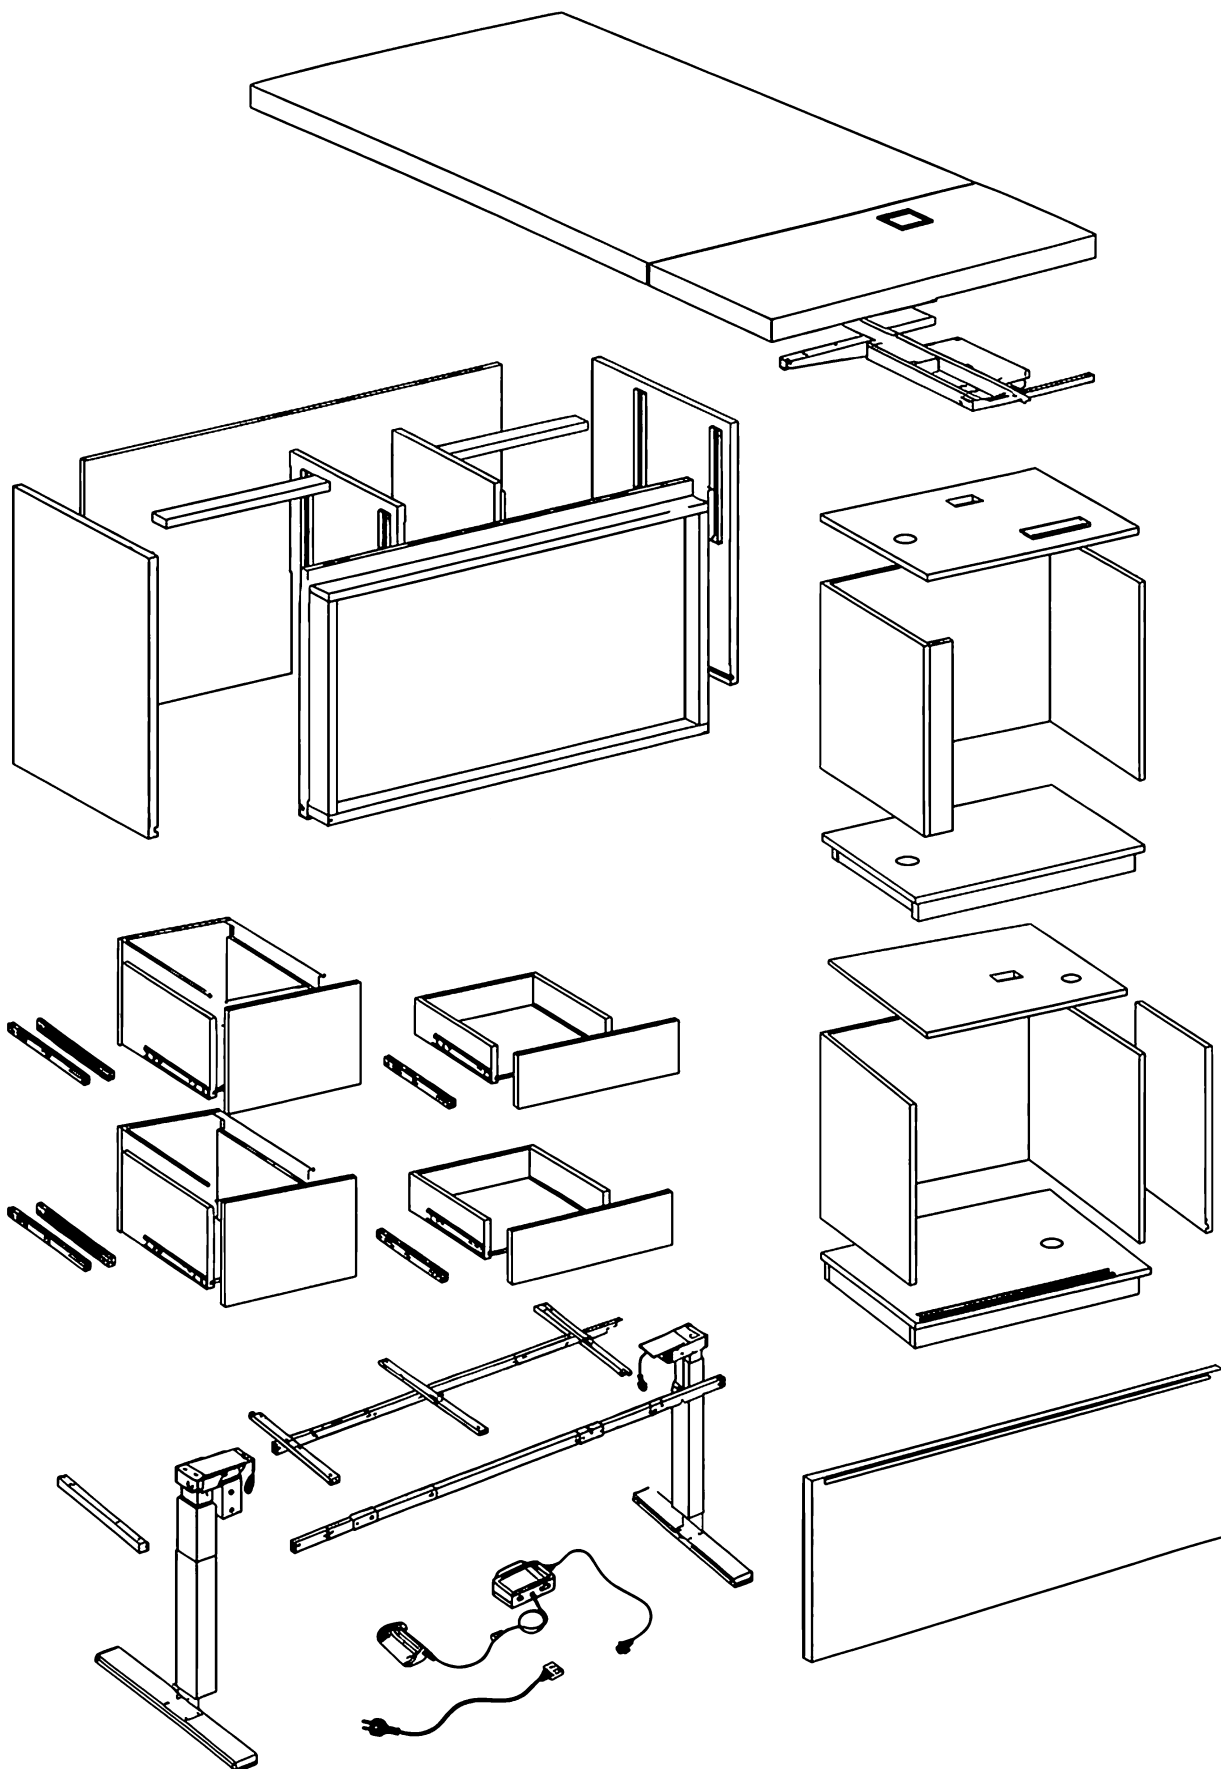


                
PARTS LIST

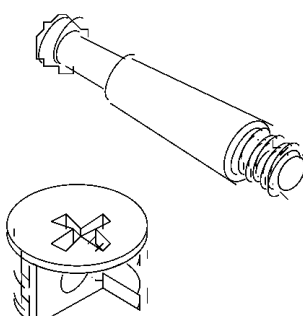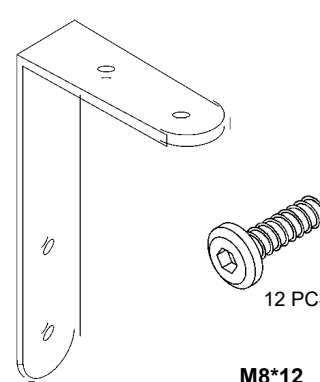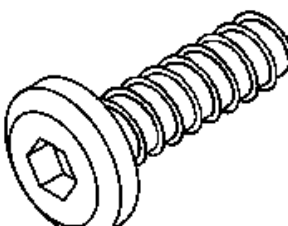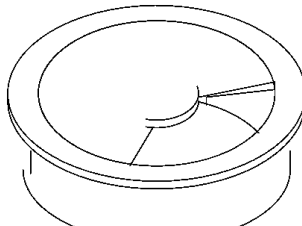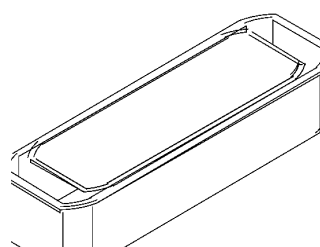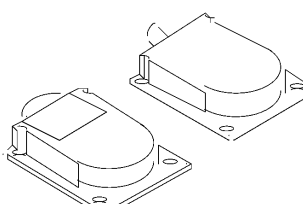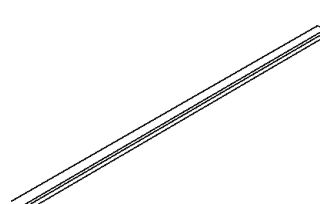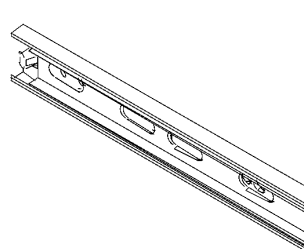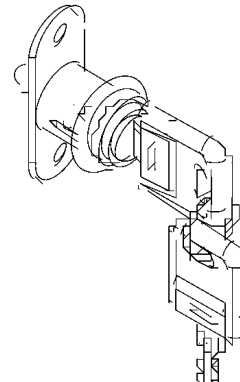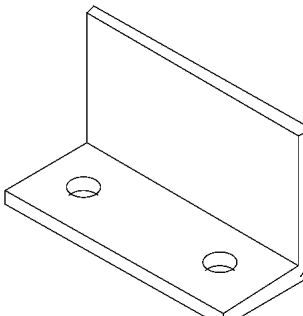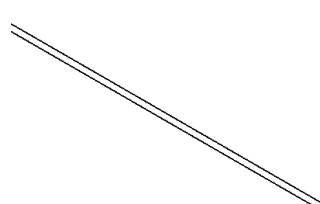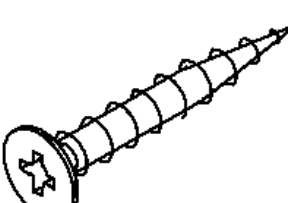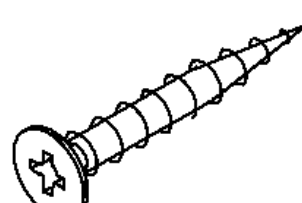
01 130 PCS 	02 3 PCS  M8*12 12 PCS	03 2 PCS  M8*15	04 4 PCS 
05 1 PCS 	06 1 PCS 	07 2 PCS 	08 2 PCS  90 mm
09 4 PCS 	10 1 PCS 	11 4 PCS  14"	12 4 PCS 
13 4 PCS 	14 4 PCS 	15 120 PCS  Ø3.5*16	16 8 PCS  Ø3.5*35

               
 
 
 
ASSEMBLY INSTRUCTION

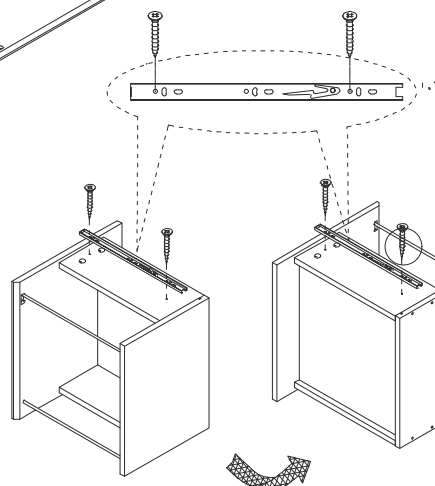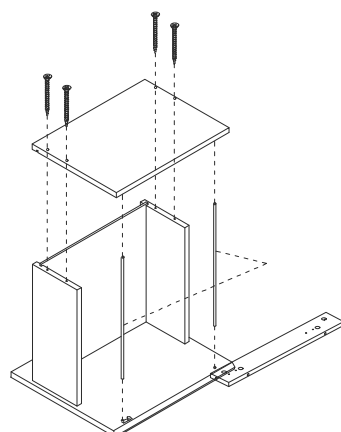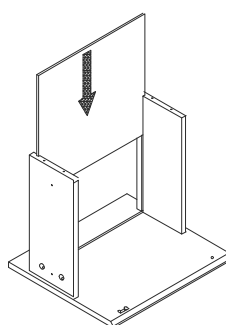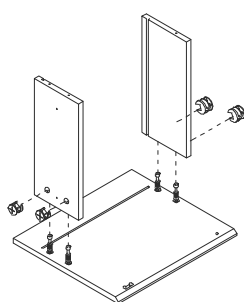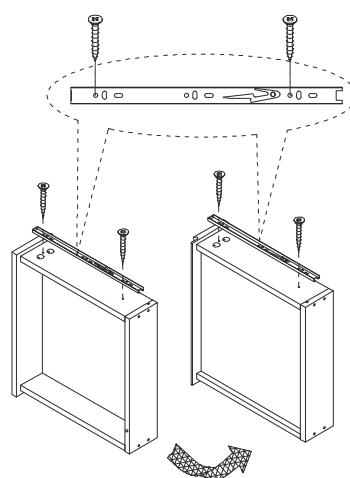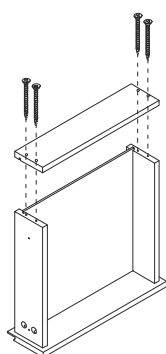 
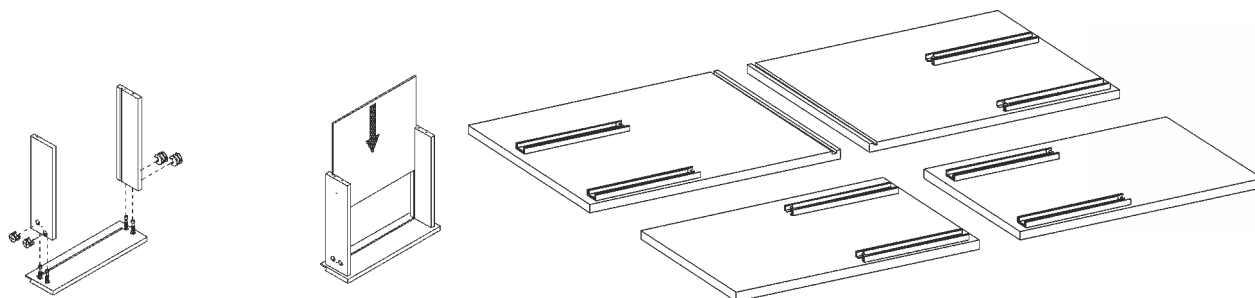 


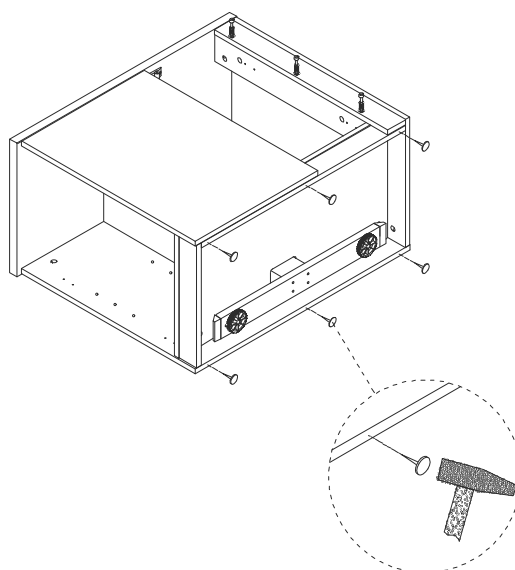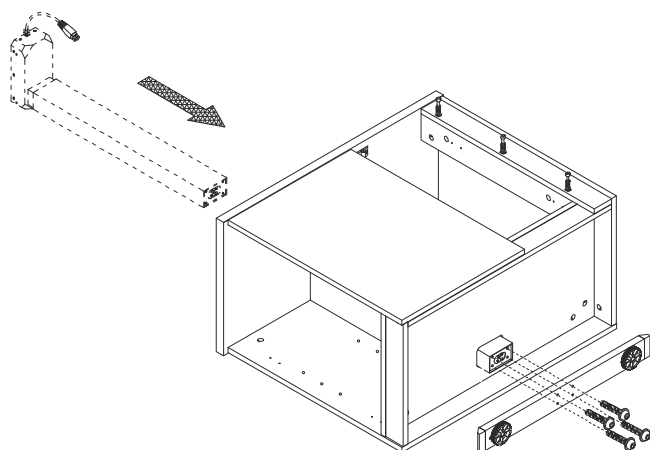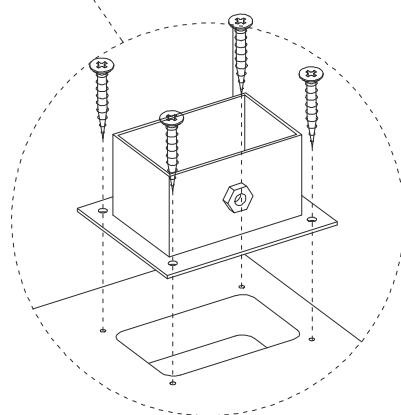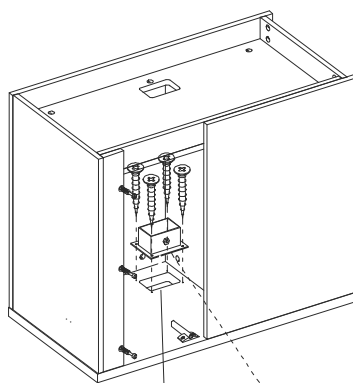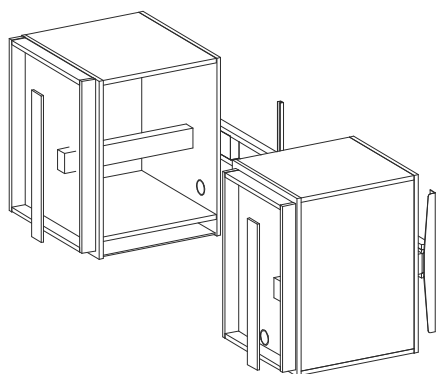

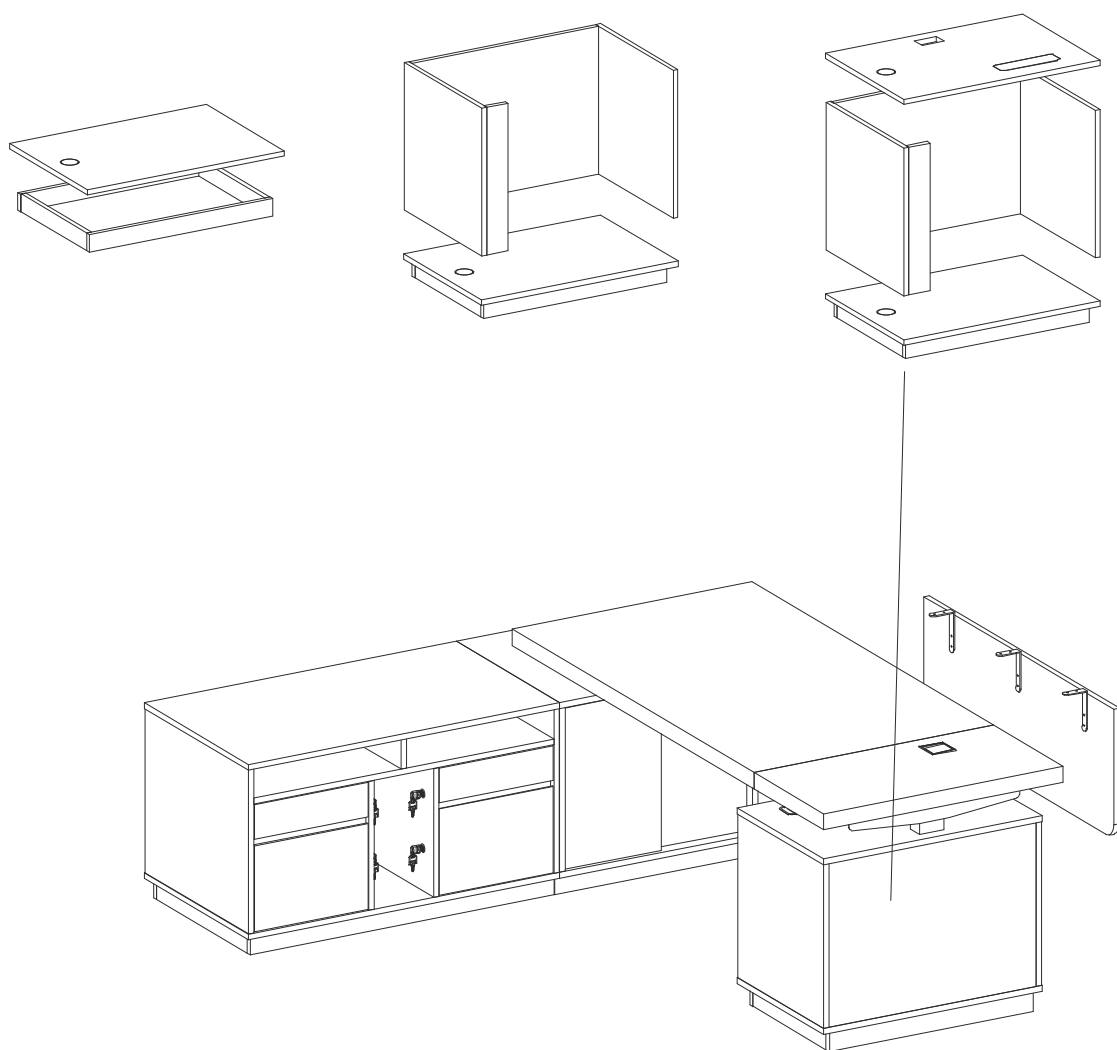

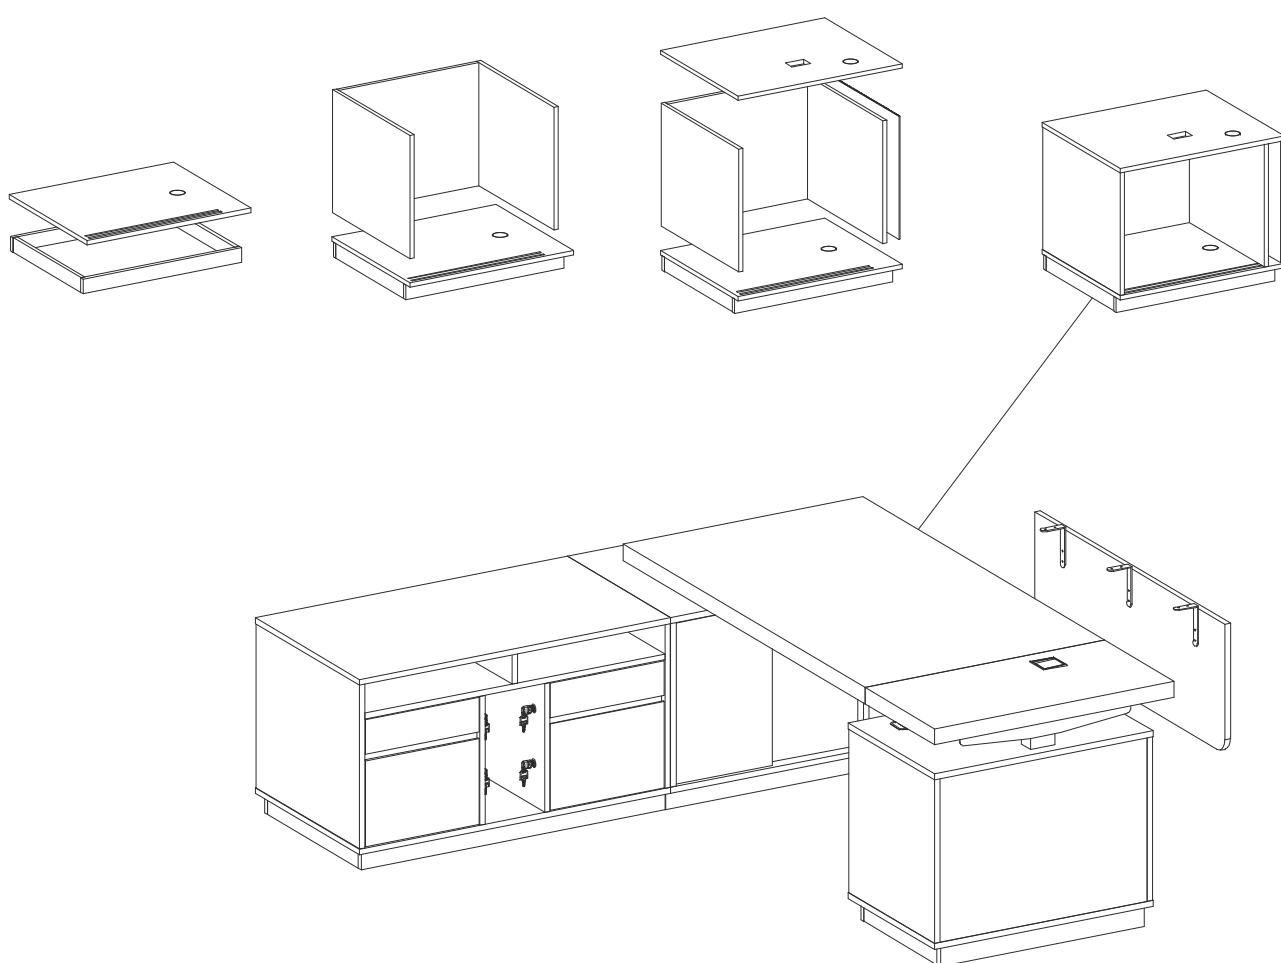

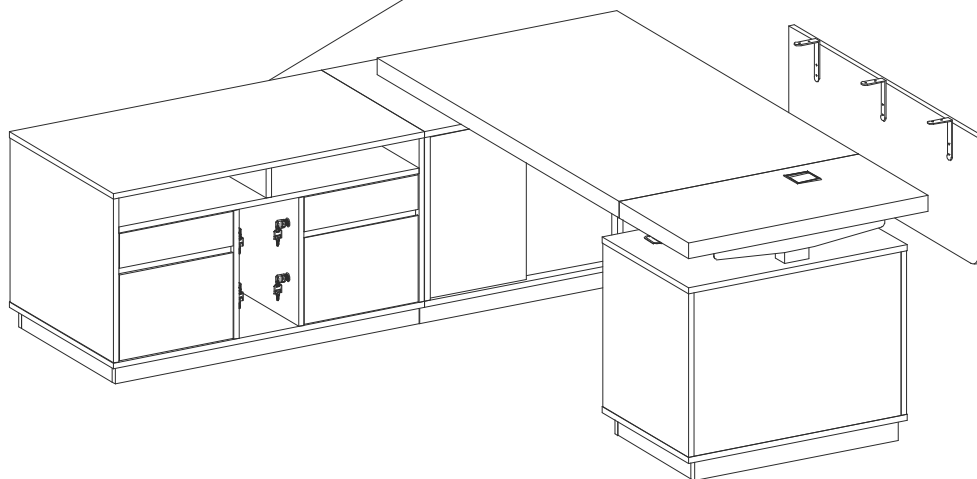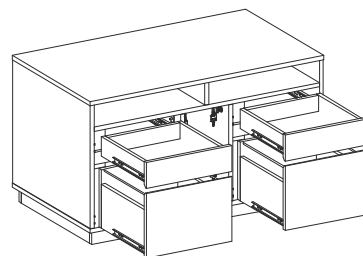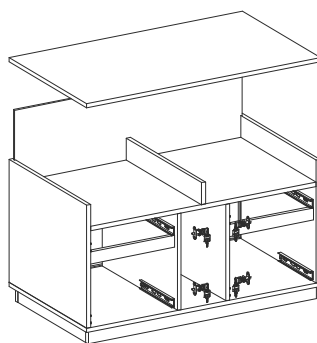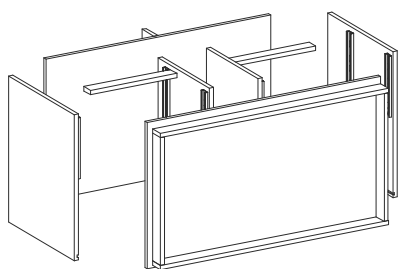

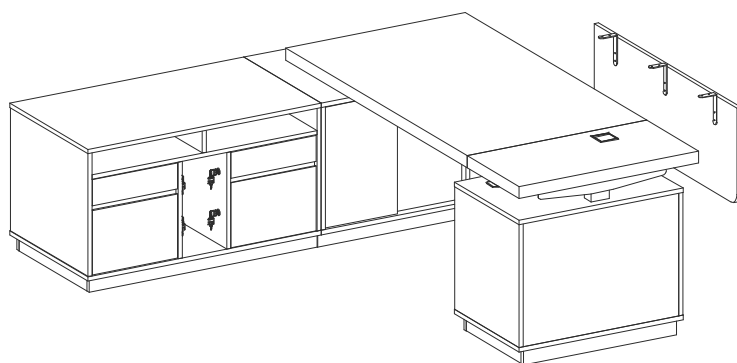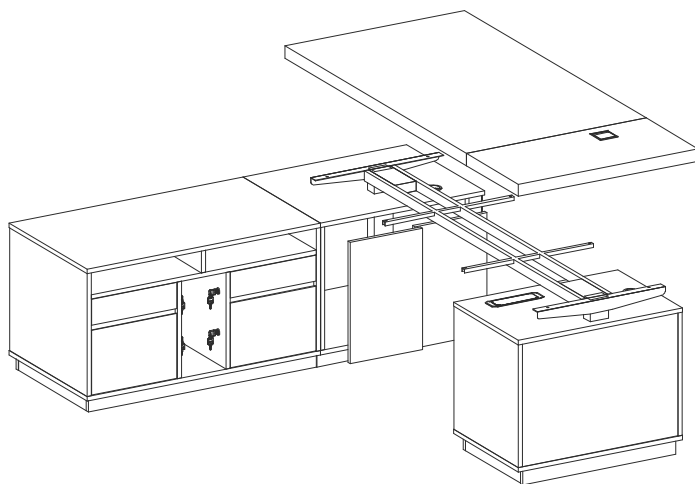

Instruction Manual for JCB35M51C Controller (Version 1.0-English)

 
System Function Description:

1. Lifting and Lowering Function of the Height-Adjustable Desk:

Hold down the upward button, and the column will rise; hold down the downward button, and the column will lower. Release the button, and the movement will stop.

2. Memory Position Function:

Long press the "①/②" button for 3 seconds until the digital tube display flashes. After the number flashes 3 times and stops, the current height will be successfully stored in the corresponding memory position. Short press the "①/②" button and release it, and the tabletop will automatically move to the height of the memory position. During operation, pressing any button can stop the movement.

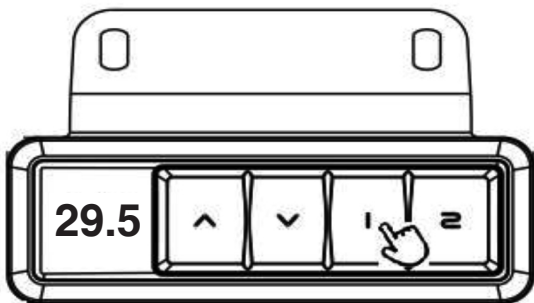

3. Reset Function:

(1) Function Description:

 
The system needs to be reset under specific circumstances.

These circumstances include:


- ① When used for the first time, the system will enter the reset state after being powered on.
- ② Active reset will put the system into the reset state.
- ③ A system abnormality will cause the system to enter the reset state.

(2) Operation Method:

Bottom Reset: Hold down the downward button until it reaches the bottom. Then release the button, and press the downward button again for 5 seconds—the hand controller will display "RST". Release the button, then hold down the downward button again until the digital tube shows a number.

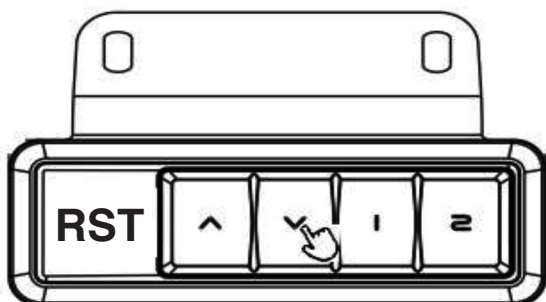

PACKING ALLOCATION OVERVIEW

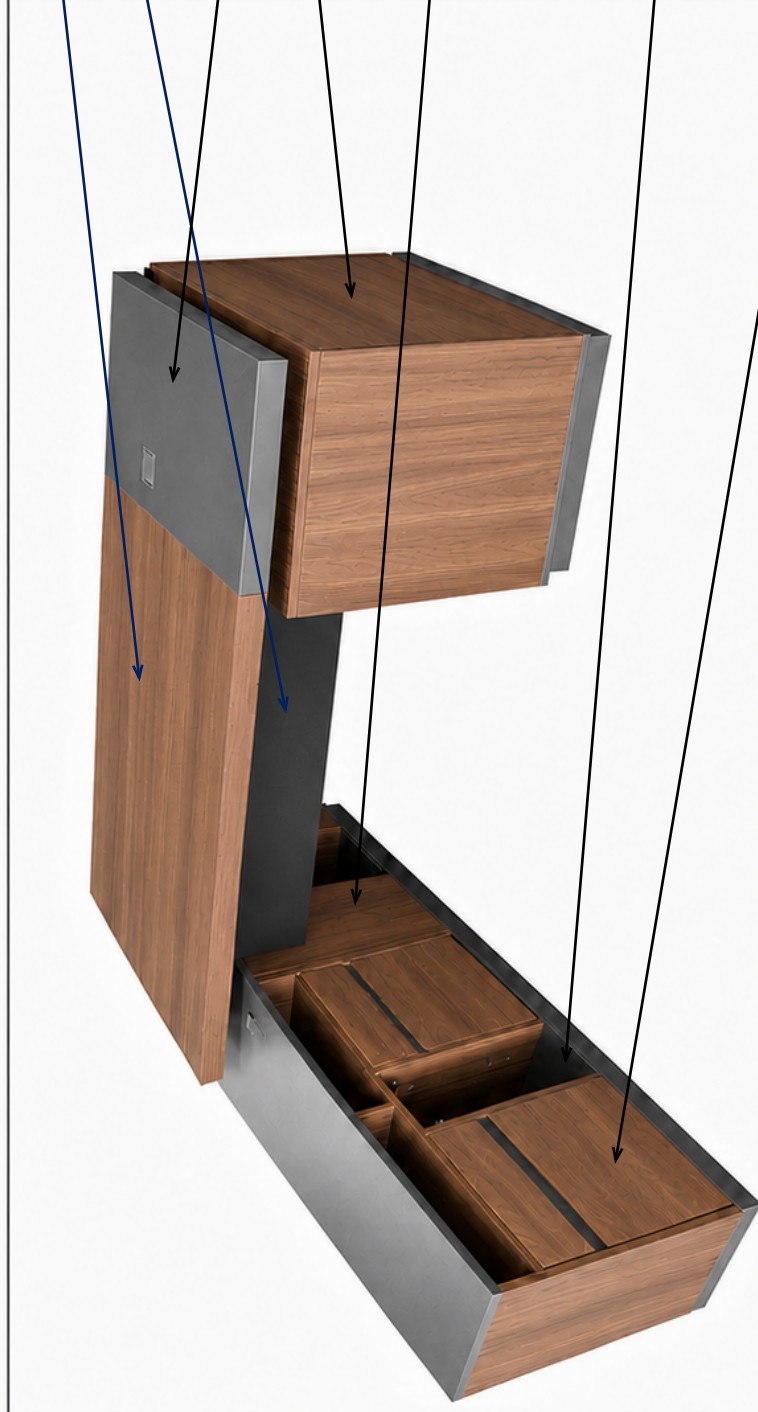 

SZ-LSJZ-26008-01-180-US_1



1

SZ-LSJZ-26008-01-180-US_2



2

SZ-LSJZ-26008-01-180-US_3



3

SZ-LSJZ-26008-01-180-US_4



4

SZ-LSJZ-26008-01-180-US_5



5

HOW TO CHECK THE PACKAGE NUMBER

Item No.: SZ-LSJZ-26008-01-180-US_1

1

The final suffix
identifies the package number.

PACKAGE 1