 
 
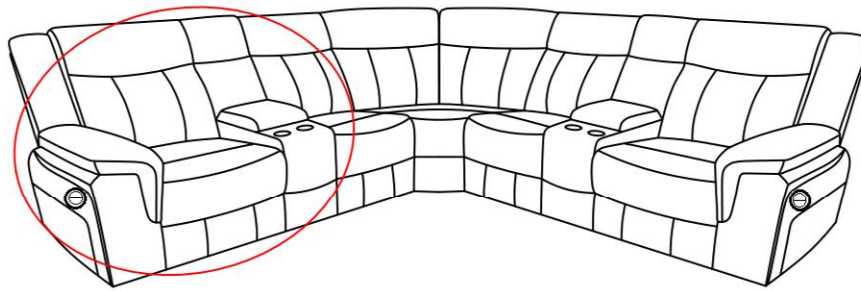 


ASSEMBLY INSTRUCTIONS

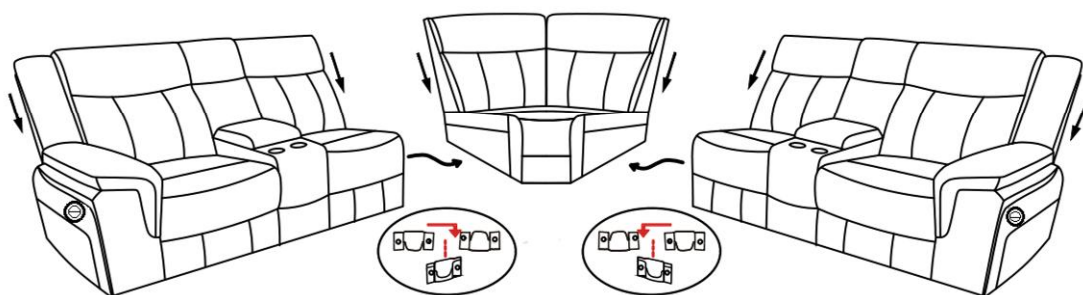 


Parts of the list:

A 1PC	B 1PC	C 1PC	D 1PC	E 3PCS	F 1PC	G 1PC
				 M6*60MM		

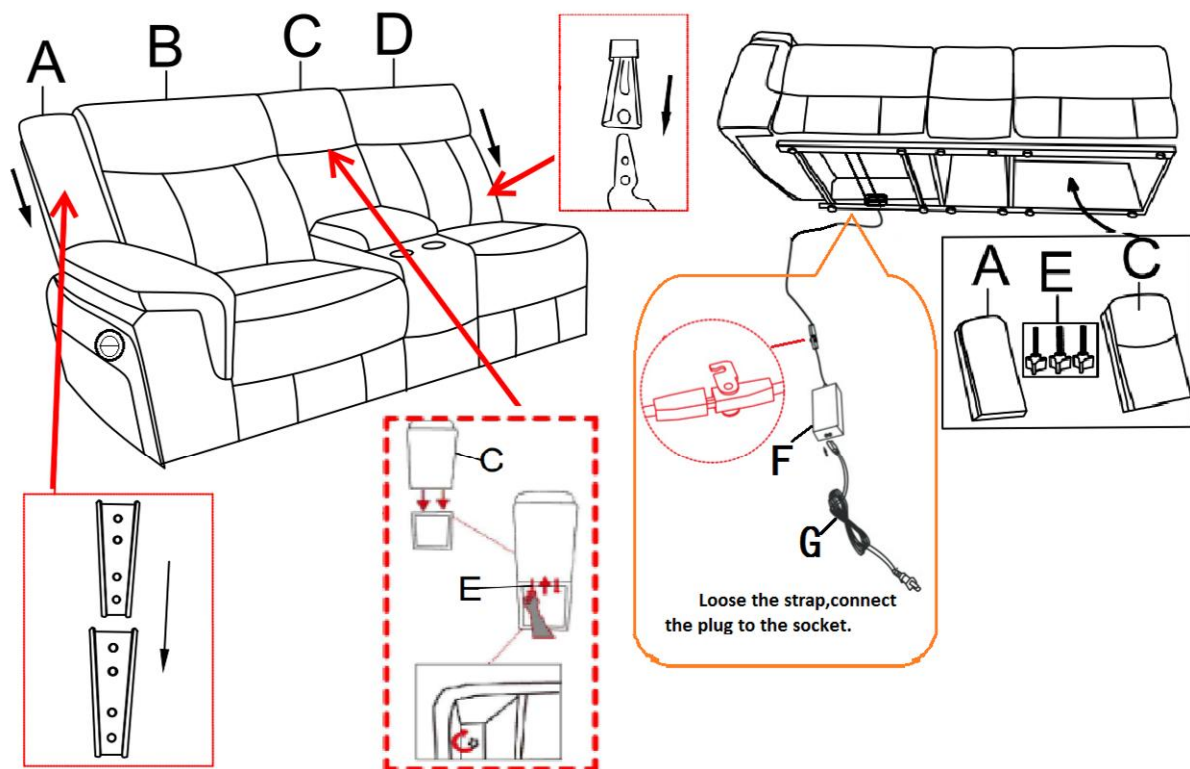 


ASSEMBLY INSTRUCTIONS

 
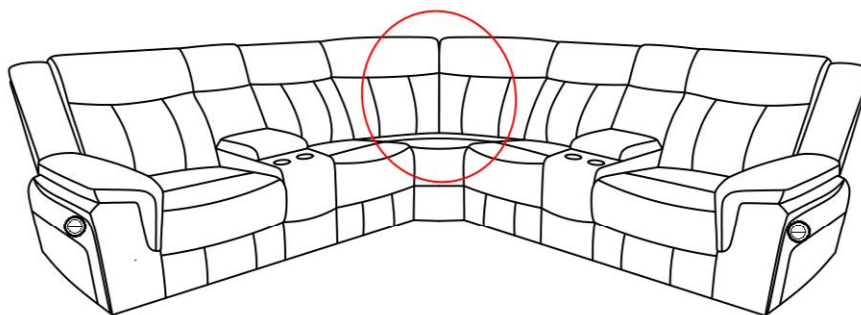 


Parts of the list:

 
A 1PC

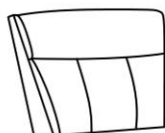


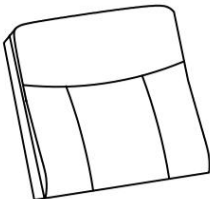 
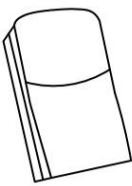 
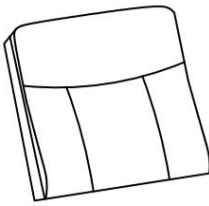 
 


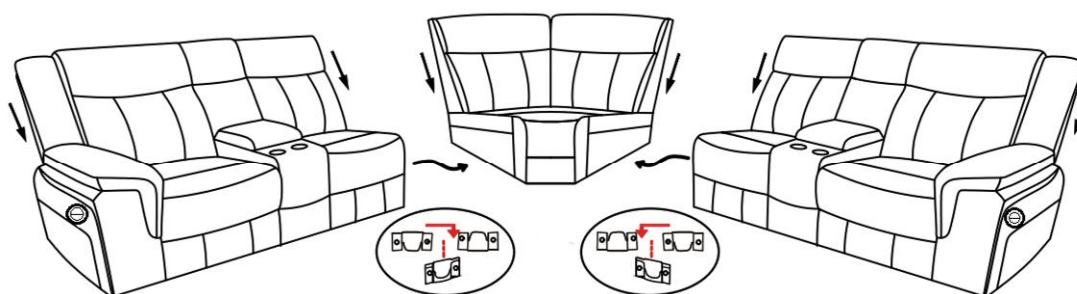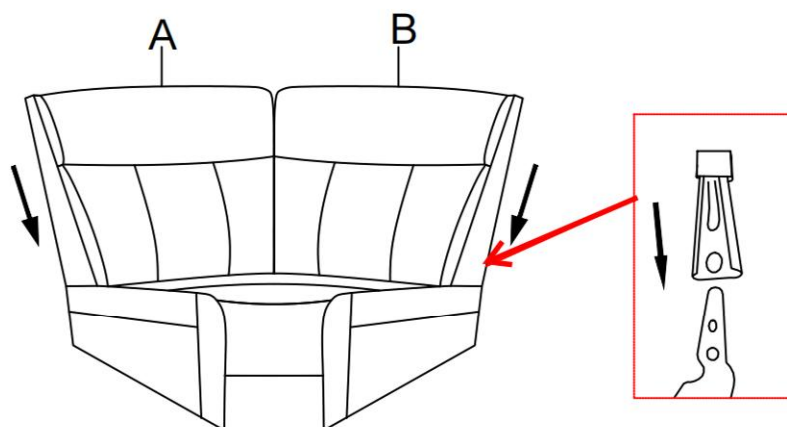B 1PC

 
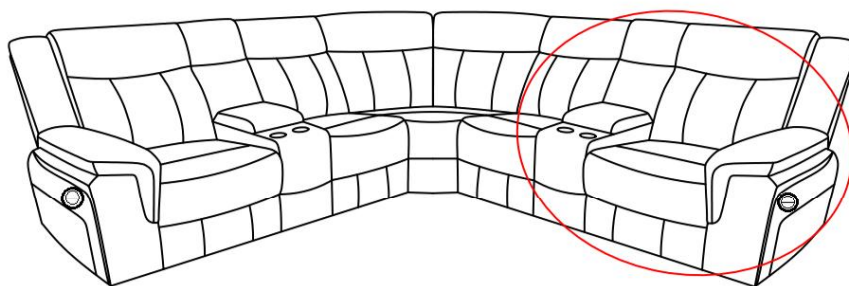 


 
ASSEMBLY INSTRUCTIONS



Parts of the list:

A 1PC	B 1PC	C 1PC	D 1PC	E 3PCS	F 1PC	G 1PC
				 M6*60MM		

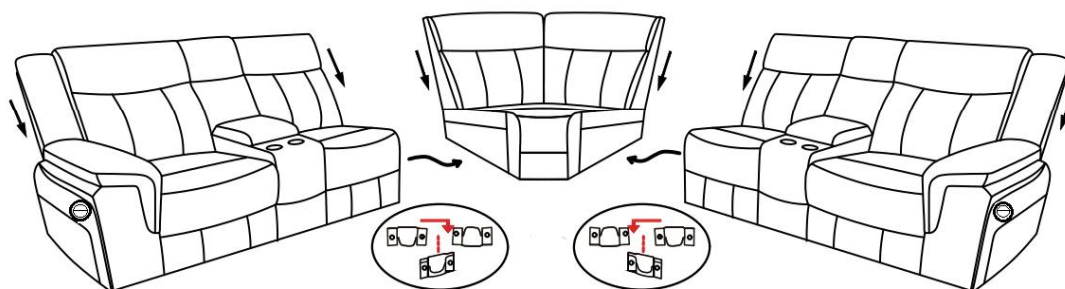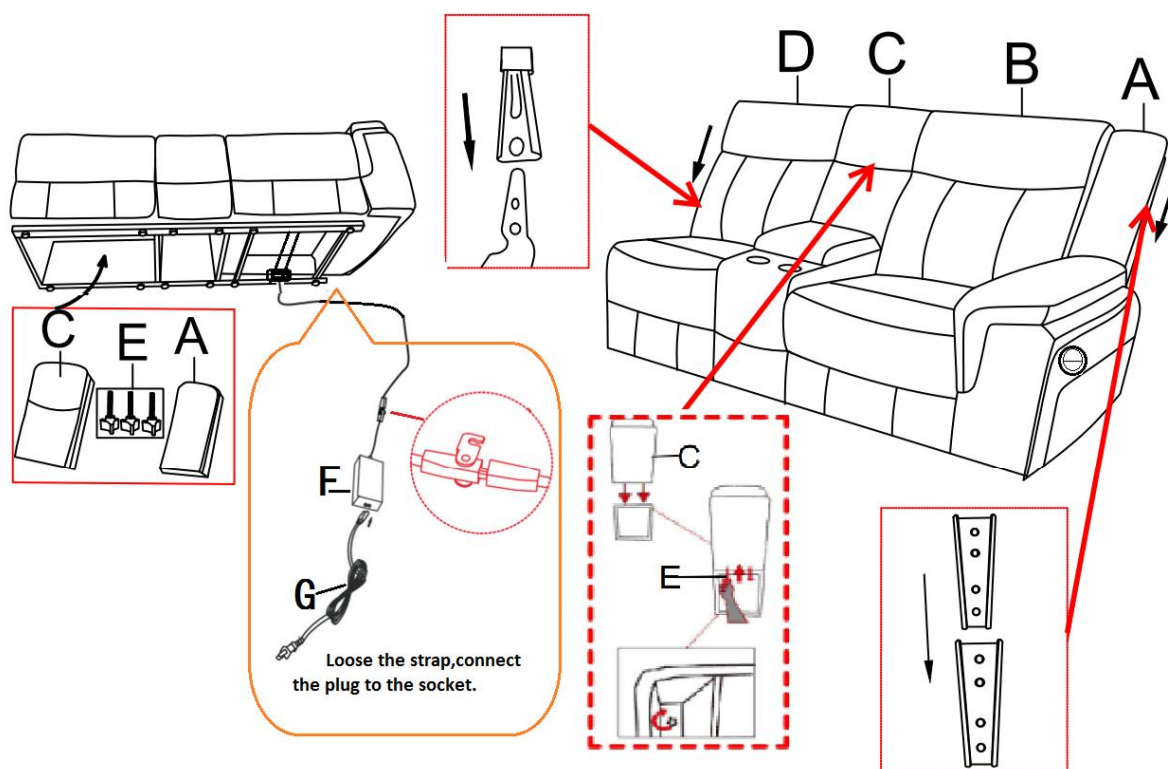

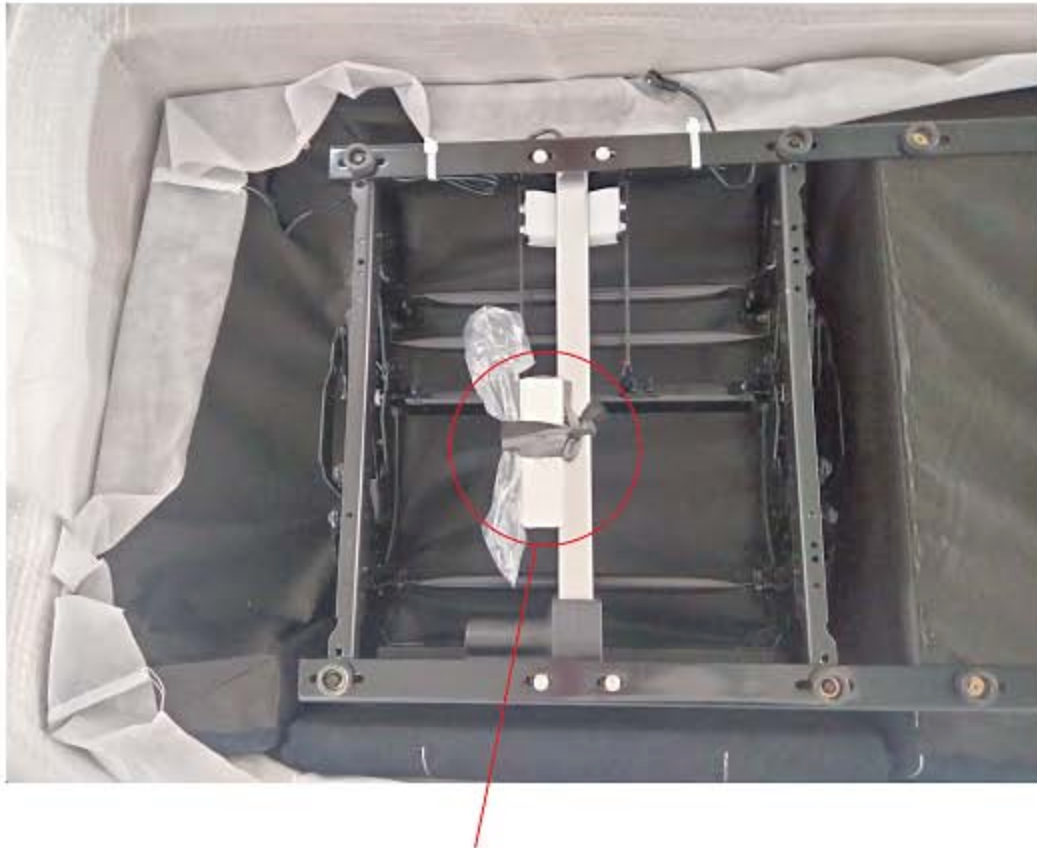

Loose the strap,connect the plug to the socket .

WARNING

- 1) Do not allow children and pet to play around the sofa when you recline the sofa back.
- 2) Sit down in the sofa gently, do not jump on the sofa to avoid deforming and collapsing.
- 3) Close the recliner completely after leave the seat.
- 4) Loose the button when it is reclined in max angle.
- 5) Product cannot touch water, fire, etc.
- 6) Do not repair or disassemble parts by yourself, please contact the seller or professional maintenance if damaged or malfunction.