


 

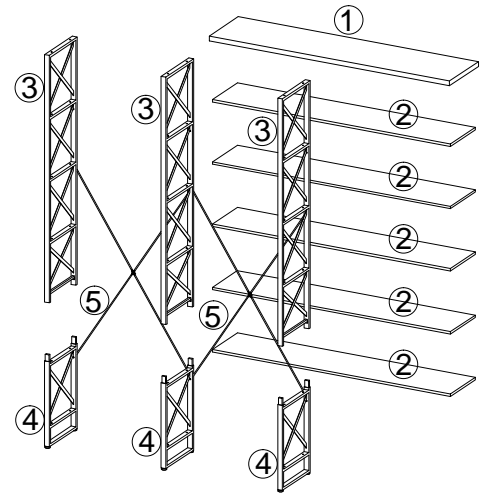


# ASSEMBLY INSTRUCTION FURNITURE DOUBLE BOOKCASE






 


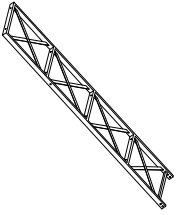**ATTENTION:** We have provided EXTRA SCREWS of A/B/C in case of any screws missing in the boxes.

## PART LIST

				
60.04"x13.19" Top Panel	60.04"x11.89" Bottom Panel	Top Metal Frame	Bottom Metal Frame	Cross Bar
①×1PC	②×5PCS	③×3PCS	④×3PCS	⑤×2PCS



## HARDWARE


							
M6×25mm	M6×12mm	M6	M4×35mm	ANCHOR SCREW	WALL BRACKET	WRENCH	ALLEN KEY
A×42PCS	B×12PCS	C×6PCS	D×6PCS	E×6PCS	F×3PCS	G×1PC	H×1PC

### NOTED:

1. Check to ensure all parts and hardware are present. Complete assembly required by 2 adults.
2. Do not fully tighten all bolts until all parts are in place. Failure to follow these instructions may cause the bolt to misalign during assembly.
3. As you unpack and prepare for assembly, place all the metal frame and shelves on a carpeted or padded area to protect them from scratch and damage. The long shelves is a bit heavy, please handle gently to avoid knocked into the ground.

### Step 1:

Attach the Bottom Frame ④ onto the Top Frame ③, then screw up the Bolt(B) by Allen Key(H).

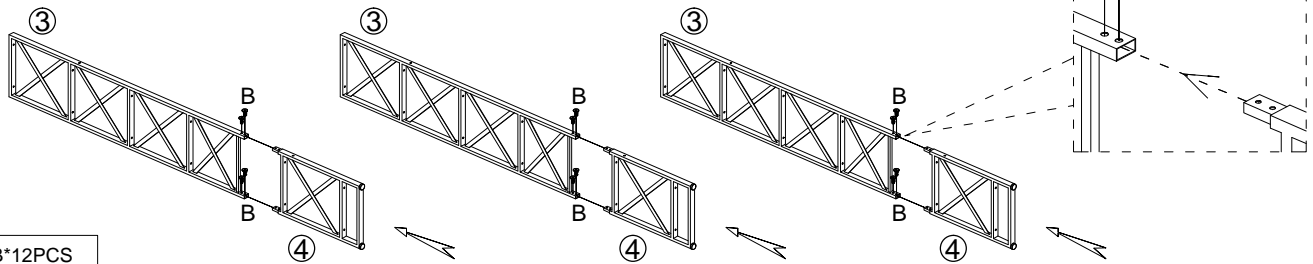


B\*12PCS

H\*1PC

### Step 2:

Open the folding Cross Bar ⑤ and assembly the Cross Bar ⑤ onto the metal frame (assembled ③ and ④). Then screw up the Bolts (A) and Nuts (C) by Wrench (G) and Allen Key (H). Note: Don't fully tighten all bolts until all shelves are in place.

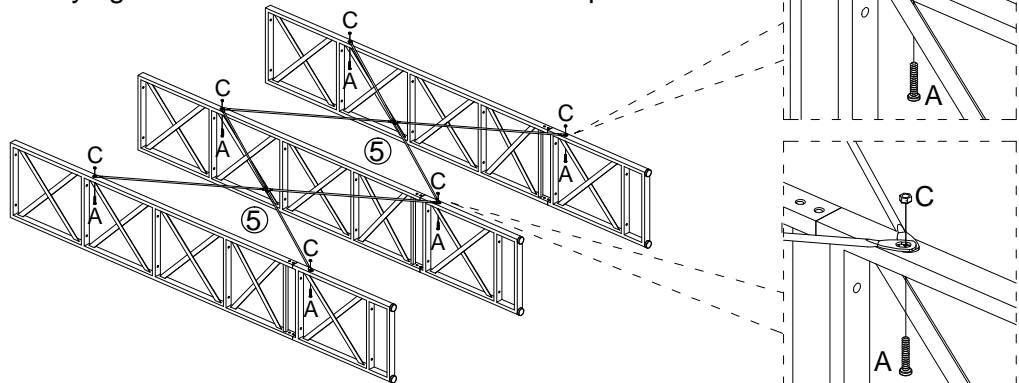


A\*6PCS

C\*6PCS

G\*1PC

### Step 3:


Assembly the Top Panel ① and Bottom Panel ② onto the metal frame. Then using the Bolt (A) by Allen Key(H). Finally tighten all the connections with Allen key(H).

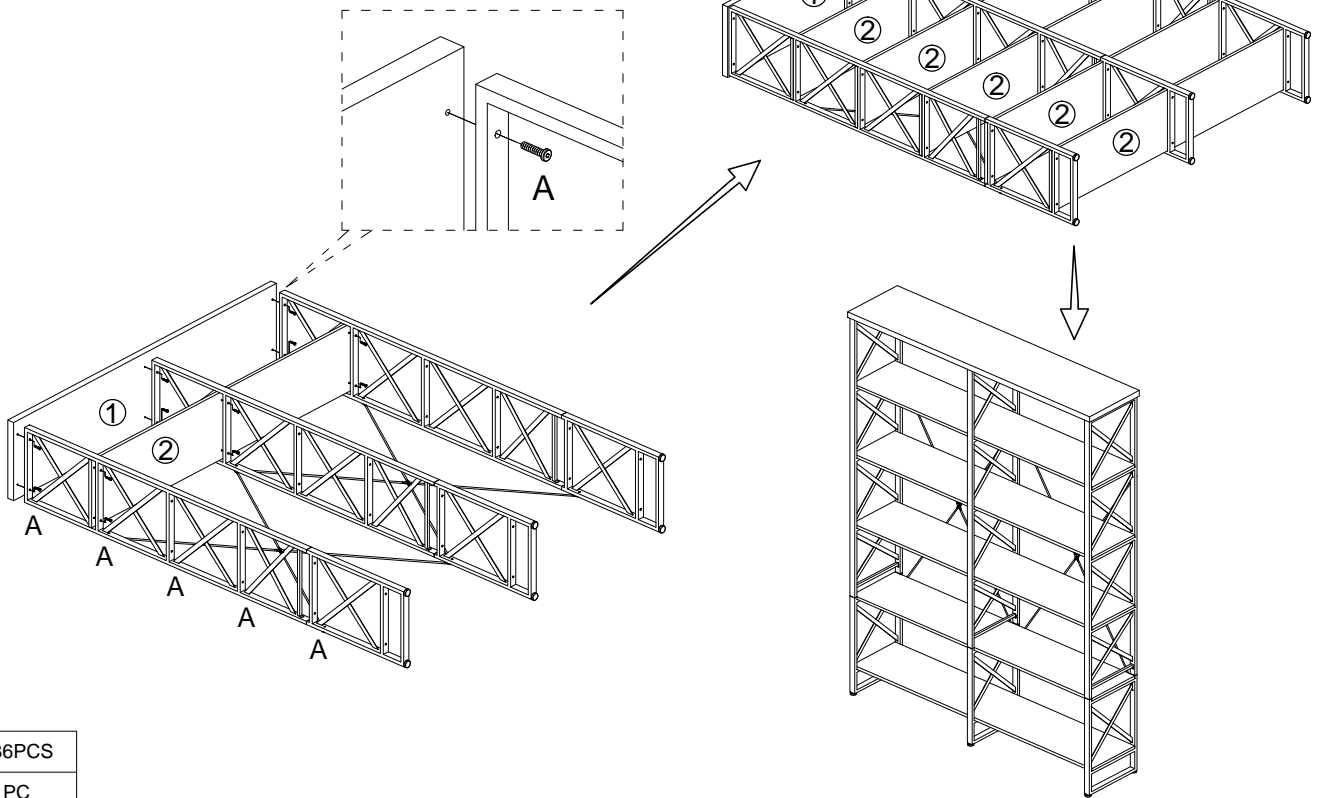

A\*36PCS

H\*1PC

**Step 4:** Assemble the Wall Bracket (F) between the metal frame and the wall. To prevent injury and property damaged from unexpected tipping of furniture.

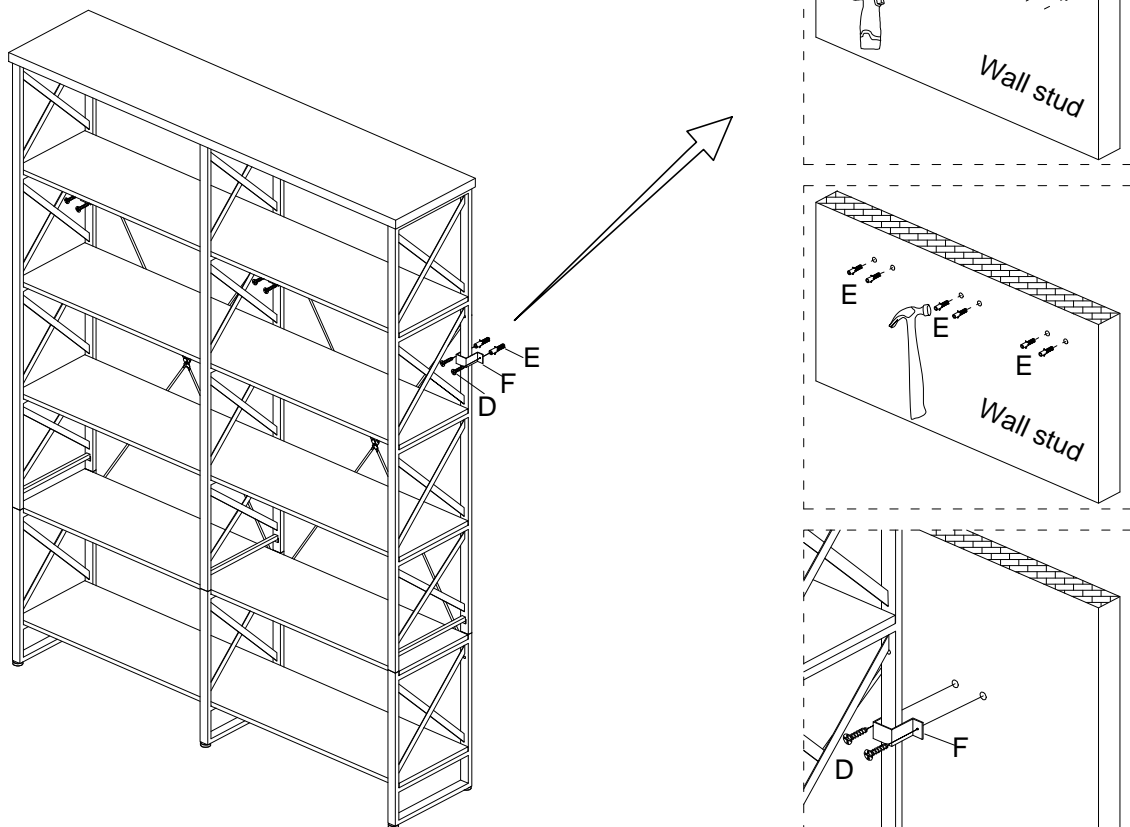

D\*6PCS

E\*6PCS

F\*3PCS

## **Manufacturer Warranty**

Manufacturer will replace any missing or damaged part due to manufacturer defect for 30-days after purchase. Please have proof of purchase for warranty claims.

## **Warning and Tips to Protect and Care for Your Furniture**

1. This unit contains small parts which could be a choking hazard for small children. Children should be under adult supervision at all times or serious bodily injury could occur.
2. Do not overload unit. If any shelf, top, or bottom of unit bows or bends, it is overloaded. The shelf, or bottom could collapse and cause serious bodily injury and/or damage to personal belongings.
3. Do not use this unit as a television stand. Serious bodily injury and/or damage to personal belongings may occur.
4. Avoid placing your furniture in direct sunlight, as sunlight causes fading.
5. Avoid extreme changes in temperature by arranging furniture away from radiators, heat and air vents and air conditioning units.
6. Avoid placing plastic or rubber materials (lamp bases, notebooks, placemats, etc.) on your furniture, as certain plastics contain ingredients that may damage the finish.
7. Periodically rotate accessories on furniture so they do not sit in the same spot all the time.
8. Use pads, cloth or felt to protect the furniture so they do not sit in the same spot all the time.
9. Clean up spills immediately. Use a blotting rather than a wiping action. Water left over a long period of time will cause white spots in the finish. Alcohol, perfume, after-shave and medications can cause severe finish damage.
10. Use a protective pad when writing on the furniture surface.
11. Lift and place objects rather than dragging them across the furniture surface.
12. We recommend you protect your work surface during assembly to prevent scratching or damage to table tops, wood floors, etc.
13. We recommend you hand-tighten screws. Use care not to over tighten if using power tools.