

# INSTRUCTION MANUAL

## OPT11 Smart Toilet

### **Thank you for choosing our product!**

To ensure proper installation and safe use of your smart toilet, please read this manual carefully.


If you encounter any missing or damaged parts, please contact our customer service team.

Be sure to include your Order ID for faster service.

#### **Customer Service Contact**

✉ **Email:** [customerservice@hkfoam.com](mailto:customerservice@hkfoam.com)

🕒 **Response Time:** Within 24 hours

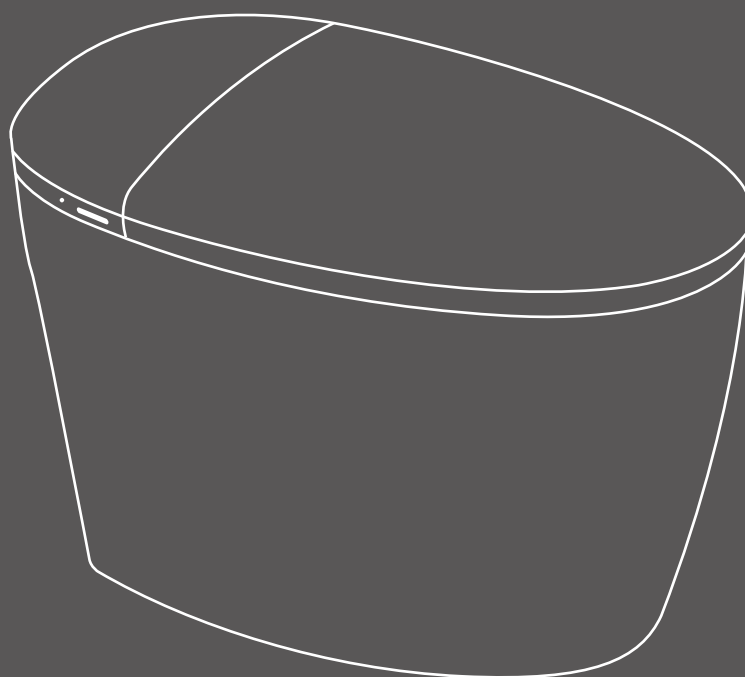


# Catalogue

For any questions or support, please email: [customerservice@hkfoam.com]  
We're here for you: [customerservice@hkfoam.com]

|                                                      |    |
|------------------------------------------------------|----|
| Component name .....                                 | 02 |
| Hardware list .....                                  | 02 |
| Safety directory .....                               | 03 |
| Smart toilet initial use inspection items .....      | 03 |
| Safety caution .....                                 | 04 |
| Please be sure to observe the following .....        | 04 |
| Safety and prohibited matters .....                  | 05 |
| Daily cleaning and maintenance .....                 | 06 |
| Foot sensor user guide .....                         | 06 |
| Instructions for using the toilet side buttons ..... | 07 |
| Remote control instructions .....                    | 08 |
| Common fault diagnosis .....                         | 10 |
| Installation steps for smart toilet .....            | 11 |
| Battery replacement and installation .....           | 15 |
| Foam liquid replacement and installation .....       | 15 |
| Product standard .....                               | 17 |

Component name

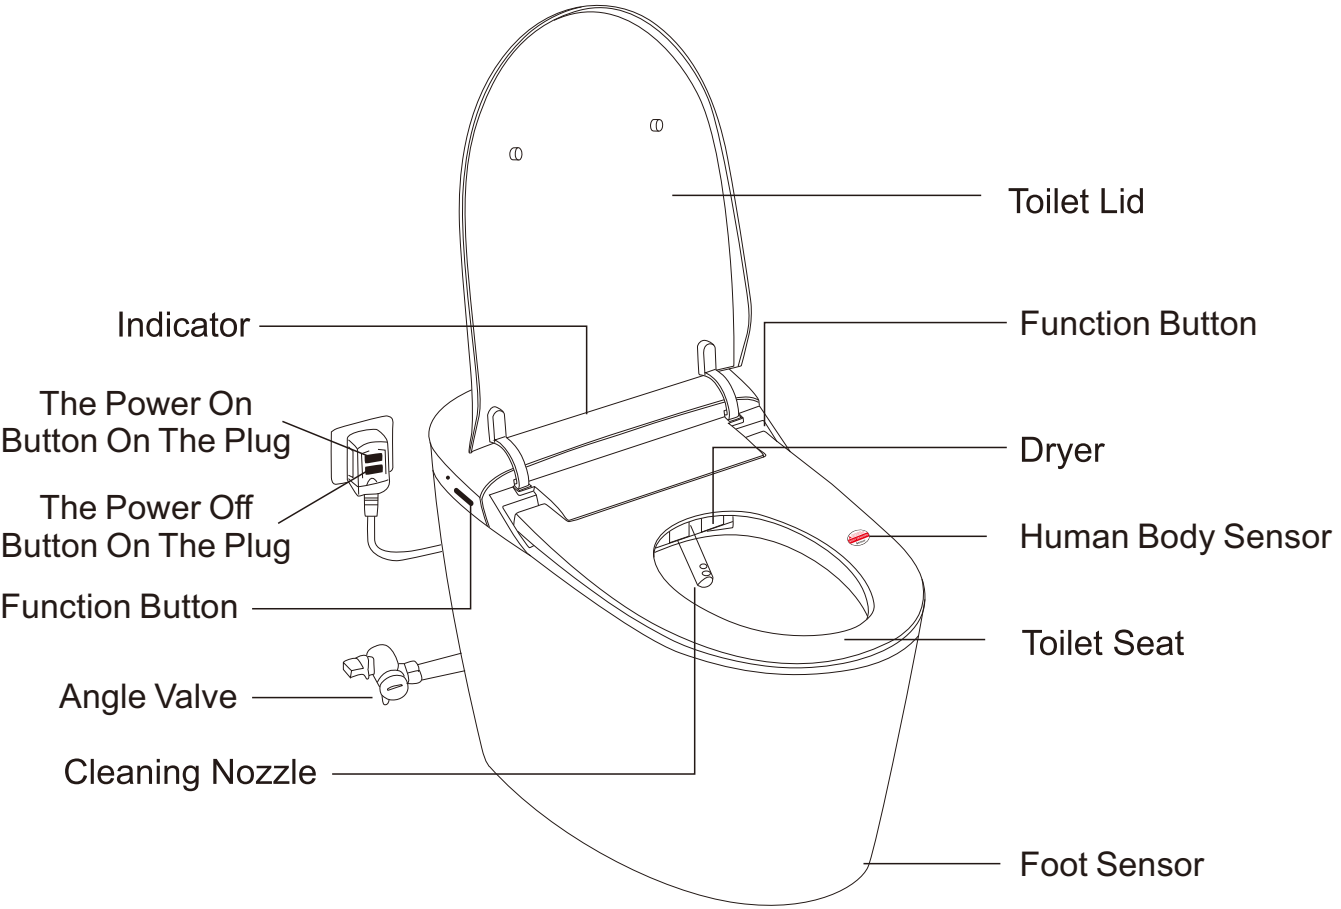

Hardware list

Please check if all accessories listed below have been received.

|                                                                                     |                                                                                     |                                                                                     |                                                                                     |                                                                                     |                                                                                      |                                                                                       |                                                                                       |                                                                                       |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| 1pc                                                                                 | 1pc                                                                                 | 1set                                                                                | 1set                                                                                | 1pc                                                                                 | 1set                                                                                 | 1pc                                                                                   | 1pc                                                                                   | 1set                                                                                  |
|  |  |  |  |  |  |  |  |  |
| flange ring                                                                         | instruction                                                                         | angle valve                                                                         | remote control battery                                                              | fixed disk                                                                          | fixed disk screws                                                                    | foam solution bottle                                                                  | foam liquid effervescent tablet                                                       | Power Outage Flushing Battery                                                         |
| A                                                                                   | B                                                                                   | C                                                                                   | D                                                                                   | E                                                                                   | F                                                                                    | G                                                                                     | H                                                                                     | E                                                                                     |

### Warning: To avoid electric shock

1. Do not place the product where it may get wet.
2. Do not drop the remote control into the water.
3. Do not spray water into the product or plug.


### Warning: To prevent the possibility of burns, electric shocks, fires and injuries.

1. Young children, temperature insensitive users, when using this product, should be accompanied by others. And turn off or lower the seat temperature.
2. The product is limited to the function on the manual, do not use other equipments.
3. Do not continue to use when the product is out of order, damaged or flooded. Please send the product to the designated repair center for repair.
4. Please make sure that the wires are not damaged by burning.
5. Do not use this product when you are out of your mind.
6. Do not plug the product or pipe.
7. Do not use outdoors.

## Smart toilet initial use inspection items

Note: To ensure the normal use of the product, please follow the instructions to text.


1. Insert the power plug into the AC 110V socket
2. Please confirm whether the indicator of the digital display panel is lit
3. Confirm whether the inlet valve is take on
4. Whether the hose between the wall angle valve and the toilet inlet valve is installed in place

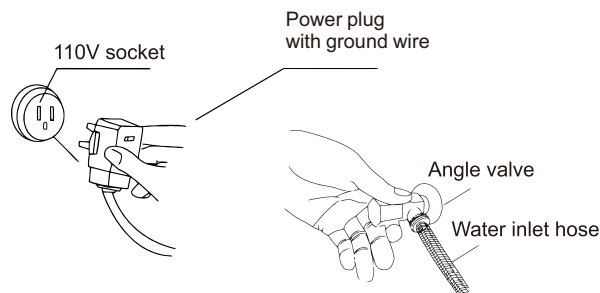

## Caution-confirmed matters before using

1. Check for water pipe leaks by drying all sections with absorbent paper.
2. Press the seat around the seat sensor, whether there is a sound.
3. Whether the damped structure is normal.

Seating sensing position

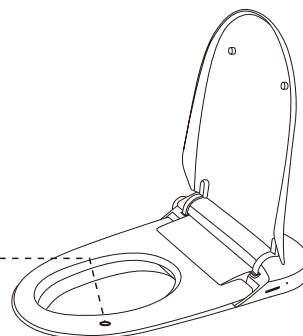

Verify that the seat detection and foot detection functions are enabled.

## Safety caution

Note: please cautiously read before using

Please read carefully before using. the cautions listed here are related to safety and please follow. 

This product is an electrical product. please do not install it in a place where it is easy to be splashed by water or high humidity. when using in the bathroom, please install a vent to keep good air flow in the bathroom.

The socket for power distribution should be set as follows

- The gearing position of electric outlet pleases to give examples 0.3 min the ground above, and leave bathtub as far as possible a little bit farer.
- The back track of electric outlet pleases use a high feeling and rapid type electric leakage switch (the sum certainly responds the electric current 15 mA following) or use to insulate the transformer 1.5 KVA above, the 3 KVA is following)carry on a protection.

Warning: Be sure to firmly connect ground wires 

The power plug of this product is a three-phase plug (with ground wire).  
There is a danger of electric shock when there is a fault or leakage of electricity.  
If there is no ground plug in the socket, consult with the electrical installation company.  
Do not use power supply other than AC 110V, please wiring according to relevant regulations.



The product connects a ground of line to carry on to connect a ground of processing, if has never carried on to connect a ground of processing, may arouses to get an electric shock.

Note: the grounding treatment mentioned here means that the grounding resistance is below 100Ω, and the grounding wires of the switchboard shall be copper wires with a diameter of more than 1.6mm.

While using in the bathroom please confirm the power plug have already used silica gel to carry on a waterproof processing.

\*Using the wrong power supply can easily cause fire\*

Please be sure to observe the following 

Please don't sprinkle urine at the essence and spray.  
Pull out the plug when it thunders.  
Strictly forbid to directly flush with water.  
Please do not wipe seat and cover with dry cloth or toilet paper.

 
Please do not open the seat ring or cover violently.  
- May cause cracking or malfunction.



Please take antifreeze measures to prevent damage caused by freezing.



Please do not put heaters near this product.  
- Discoloration or malfunction will occur



## Safety and prohibited matters

Note: please cautiously read before using

Please read carefully before using.

The cautions listed here are related to safety and please follow.



Must obey

### Notice heat burn

- Please turn the seat temperature down or off when sitting on the toilet for a long time.
- Please set the temperature to room temperature when the following persons use the seat to dry gently.

- Children, the elderly, the sick, the disabled, etc.
- People who take sleeping pills, get drunk and get overtired.

### Do not use any power source other than AC 110V

- It may start a fire

### Keep cigarettes and other fire kindling away from the product

- It may start a fire

### Do not use loose and unstable power sockets

- It may cause fire or electric shock

### Please don't sprinkle water or rinse on product essence or the power plug.

- May arouse a fire or get an electric shock
- May cause toilet break, damage or indoor seepage.

### When long time didn't use, please pull out the power plug.

- For safety, please pull out the power plug
- For re-use, please drain water for one minute before use.

### Please do not flush other items except for urine and feces

- May cause then block, sewage outside overflows.

### Do not unplug the power plug with wet hands

- It may cause electric shock

### Do not distort or damage the water inlet

- It may cause a leak



Prohibit

### Do not continue to use the product when it breaks down

When the following occurs, please unplug the power plug, close the inlet angle valve, stop the inlet.

- Ceramic WC is leaking
- Cracks appear
- Abnormal sound and smell
- Fume-off
- Abnormal heating
- The toilet is clogged

- If continued under the condition of failure, it may cause fire, electric shock or indoor seepage problems

### Do not disassemble, repair or transform the product without permission

- It may cause a fire or electric shock

### Do not install this product in damp places such as bathrooms

- It may cause a fire or electric shock

### Do not damage the power cord or toilet seat cable

- Don't pull
- Don't process
- Don't heat
- Don't forcibly bent
- Do not place heavy objects on the power cord and toilet seat connection line.

- May cause fire, electric shock or short circuit. If the power supply is damaged, please contact a professional for repair.

### Do not use extension wires. otherwise, it may cause a fire or electric shock

- Do not connect wires or use extension cords, which may cause fire and electric shock.

### Do not use unhealthy water

- May cause skin irritation and other problems


## Daily cleaning and maintenance

Note: During cleaning and maintenance, please be sure to unplug the power switch and power off

### Smart toilet cleaning and maintenance methods

Please wipe it with a soft cloth dampened with water

- If the dirt is not removed in time, it will become difficult to clean, please wipe with water sometimes.
- Static electricity will absorb dust, resulting in the product black, dirty, water wipe can prevent the generation of static electricity.
- The ceramic body can be removed from the toilet seat to facilitate cleaning between the toilet seat and the ceramic body.

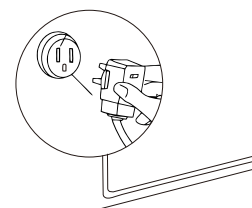


Unplug the power supply before maintenance

### Cleaning and maintenance of spray head

If there is dirt in the nozzle. Please clean it with a small brush such as a toothbrush.

- Do not stretch and bend the spray head.

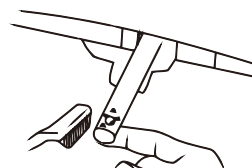

Must obey

#### Clean the dust on the power plug regularly

When cleaning, remove the power plug and wipe with a dry cleaning cloth.  
- Poor insulation may cause a fire.



#### Must obey

Hip washing, women's washing, and drying require seating before use

## Foot sensor user guide

Note: Please read the following carefully before use

**Tip: The toilet foot sensor is not sensitive to darker colors or fails to sense. It is recommended to wear light-colored socks and shoes.**

#### Open cover and seat by foot sensor

Close to the foot sensor, automatically open/close cover and seat (automatic flip cover)



#### Radar automatic flip cover version

The cover opens automatically when people get close to it.  
The flushing automatically starts after the person leaving the seat, and cover closes automatically after the person leaves the seat for a while.



#### Men's urinating operation

1. Put your feet in front of the (Foot Sensor) and the toilet lid will automatically flip up.
2. Put your feet in front of the (Foot Sensor) again and the toilet seat will automatically flip up.
3. The first situation: When you finish using, the toilet seat and toilet lid will automatically close and flush 90 seconds after you leave.  
The second situation: when you put your foot in front of the (Foot Sensor), the toilet seat will automatically flip up. It takes more than 15 seconds during use. Then put your foot in front of the (Foot Sensor), the toilet seat and toilet lid closes automatically and flushes.



## Instructions for using the toilet side buttons

### Left button



1. When you are using functions such as buttock cleaning or female cleaning or drying. Press this button to stop these functions in use.
2. When no function is in use, pressing this button can activate the toilet flushing function.
3. Press and hold this button for more than 5 seconds and the toilet will enter the shutdown state.



Warm air drying: this function requires you to sit on the toilet seat, press this button, the toilet will automatically flush once, then start the warm air drying function, after 180 seconds, the warm air drying will automatically stop, or press the stop button.

### Right button



Buttock cleaning: This function requires you to sit on the toilet seat, press this button, (Cleaning Nozzle) will move out for buttock cleaning, press this button again, (Cleaning Nozzle) will start to move for cleaning, after 120 seconds, the buttock cleaning will stop automatically, or press the stop button.



Female cleaning: This function requires you to sit on the toilet seat, press this button, (Cleaning Nozzle) will move out for female cleaning, press this button again, (Cleaning Nozzle) will start to move for cleaning, after 120 seconds, the female cleaning will stop automatically, or press the stop button.

## Description of commonly used special functions

#### 1. Automatically open the toilet lid - on/off setting instructions:

When you approach the toilet, the lid will open automatically. If you do not need this function, please follow the steps below to disable it: Press and hold the (Seat Cover Opening) button on the remote control. When you hear one beep (di), the automatic lid opening function is turned off. Repeat the same operation, and when you hear two beeps (di, di), the automatic lid opening function is turned on again. (If this function is disabled, you can still open the lid using the foot sensor or the remote control.)

#### 2. Pre-rinse function (wet wall) - on/off setting instructions:

The "Pre-Rinse" function means that when someone sits on the toilet seat, the toilet will automatically release a small amount of water once to pre-rinse the inner surface of the bowl, helping to prevent waste from sticking. This function is disabled by default at the factory. If you want to activate this function, please follow the steps below: Press and hold the (Stop/Power) button on the remote control to turn off the toilet. Within 3 seconds after the toilet is turned off, press the (Front Cleansing) button on the remote control. When you hear two beeps (di, di), the Pre-Rinse function is enabled. Press the (Stop/Power) button again to power the toilet back on. Repeat the same operation, When you hear one beep (di), the Pre-Rinse function is disabled.

#### 3. Auto-flush when leaving the seat - on/off setting instructions:


When you sit on the toilet seat and then stand up after use, the toilet will automatically flush. If you do not want this feature, please follow the steps below: Press and hold the (Flushing) button on the remote control for 3 seconds. When you hear one beep (di), the auto flush function is disabled. Repeat the same operation, When you hear two beeps (di, di), the auto flush function is enabled.

#### 4. Automatic foam shield - on/off setting instructions:

When you sit on the toilet seat, the Foam Shield function will automatically activate. This feature is turned off by default at the factory. If you want to enable it, please follow the steps below: Press and hold the (Stop/Power) button on the remote control to power off the toilet. Within 3 seconds after the toilet powers off, press the (Flushing) button on the remote control. When you hear two beeps (di, di), the auto foam shield function is enabled. Press the (Stop/Power) button again to power the toilet back on. Repeat the same operation, When you hear one beep (di), the auto foam shield function is disabled. (If the auto foam shield function is disabled, you can still manually activate it by pressing the Foam button on the remote control.)

## Remote control instructions

Note: Please read the following carefully before use

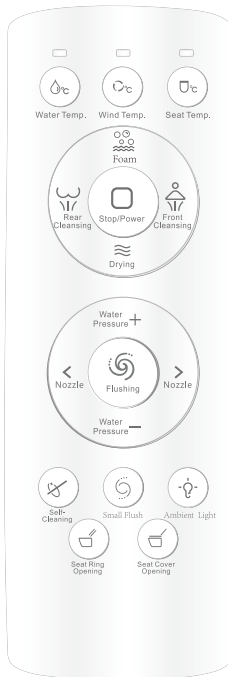

### Remote Control Code:

If the remote control does not respond the first time you use it, you will need to code the remote control to the toilet. First, press the (TEST) button on the plug to turn off the power, then press the (RESET) button on the plug to turn on the power, within 5 seconds after turning on the power, Press the bottom cleaning button on the toilet side for 3 seconds. After hearing (di), press any button on the remote control. If you hear (di) again, it indicates that the remote control has been successfully paired.

#### Water Temp

During the cleaning process of buttocks and female, press the (Water Temp) button to adjust the water temperature of (Cleaning Nozzle). There are 4 levels of water temperature adjustment, the first level is normal temperature, the second level is 93°F, the third level is 99°F, and the fourth level is 104°F.

#### Wind Temp

During the process of using the drying function, press the (Wind Temp) button to adjust the drying temperature, which can be adjusted to first gear, second gear, third gear, and fourth gear.

#### Seat Temp

Press the (Seat Temp) button to adjust the temperature of the toilet seat. There are four settings in total. The first one is for normal temperature, the second for 93°F, the third for 99°F, and the fourth for 104°F.

#### Foam

When you are sitting (or not sitting) on the toilet, press (Foam) to activate the foam shield function (Note: This function can only be used after installing the foam liquid according to the installation steps on page 16.)

#### Rear Cleansing

This function requires you to sit on the toilet seat, press the (Rear Cleansing) button, the (Cleaning Nozzle) will move out to clean the buttocks. Press the (Rear Cleansing) button again, and the (Cleaning Nozzle) to start moving and cleaning, After 120 seconds, hip cleaning will automatically stop, or press the (Stop/Power) button.

#### Stop/Power

Pressing the (Stop/Power) button can stop the operation of functions such as bottom washing, female washing and drying, Press and hold for 5 seconds to close the toilet.

#### Front Cleansing

This function requires you to sit on the toilet seat, press the (Front Cleansing) button, (Cleaning Nozzle) will move out to start female cleaning, press the (Front Cleansing) button again, (Cleaning Nozzle) will move to clean, and then automatically stop female cleaning after 120 seconds or press the (Stop/Power) button.

### Drying

This function requires you to sit on the toilet seat, press the (Drying) button, and the toilet will automatically flush once, and then start the drying function. After 180 seconds, drying will automatically stop, or press the (Stop/Power) button.

### Water Pressure

During the cleaning process of buttocks or female, press the (+) button to increase the water pressure of (Cleaning Nozzle), and it can be adjusted to weak, medium, strong, and strongest.

### Water Pressure

During the cleaning process of buttocks or female, press the (-) button to reduce the water pressure of (Cleaning Nozzle), and it can be adjusted strongest, strong, medium and weak.

### Nozzle

During the buttocks or female cleaning process, press this button to adjust the position of the (Cleaning Nozzle) forward. (repeatedly press the button to move the nozzle forward)

### Nozzle

During the buttocks or female cleaning process, press this button to adjust the position of the (Cleaning Nozzle) backward. (repeatedly press the button to move the nozzle backward)

### Flushing

Press the (Flushing) button to activate the full flush function of the toilet.

### Self-Cleaning

Press the (Self-Cleaning) button, (Cleaning Nozzle) will move out and water will come out for cleaning, and then you can use a brush or rag to clean (Cleaning Nozzle).

### Small Flush

Press the (Small Flush) button to activate the half-flush function of the toilet.

### Ambient Light

Press the (Ambient Light) button to switch the RGB ambient light color. Long press (Ambient Light) for 3 seconds to turn off the RGB ambient light and night light.

### Seat Ring Opening

Press this button and the toilet seat will open automatically. Press it again and the toilet seat will close automatically.

### Seat Cover Opening


Press this button and the toilet lid will open automatically. Press it again and the toilet lid will close automatically.

## Common fault diagnosis


Note: If similar fault is found, please read the following solution or contact after sales

| Fault phenomenon                                                            | Fault analysis                                                                    | Fault handling                                                                                                                                                                                                 |
|-----------------------------------------------------------------------------|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Product unavailable                                                         | Check to see if the power/socket is loose                                         | Please check the circuit                                                                                                                                                                                       |
|                                                                             | Whether there is leakage (the display light of leakage protection plug is not on) | Remove the power plug from the socket and replug it later. Press the reset switch of the leakage protection plug. If the toilet still cannot be operated, please unplug the power plug and entrust the repair. |
| No water with spray                                                         | Check if water is cut off                                                         | Pending resumption of water supply                                                                                                                                                                             |
|                                                                             | Check that the Angle valve is closed                                              | Open the Angle valve                                                                                                                                                                                           |
|                                                                             | Check if the inlet filter is blocked                                              | Clean or replace the filter                                                                                                                                                                                    |
|                                                                             | Check the inlet pipe for bends                                                    | Exclude the intake bend                                                                                                                                                                                        |
| Cleaning insufficient rigidity                                              | Check whether the cleaning pressure is at the lowest level                        | Refer to the instruction manual for regulating the water pressure                                                                                                                                              |
|                                                                             | Check if the inlet filter is blocked                                              | Clean or replace the filter                                                                                                                                                                                    |
| Spray water disorderly                                                      | Abnormal operation                                                                | Unplug the plug for one minute and then switch it back on                                                                                                                                                      |
| Water temperature is not enough                                             | Check that the water temperature is set low                                       | Adjust the water temperature according to the instructions                                                                                                                                                     |
|                                                                             | Whether the hot and cold massage function is on                                   | Turn off the hot and cold massage function according to the instructions                                                                                                                                       |
| The washer often drips water                                                | Solenoid valve failure                                                            | Please get professional maintenance technicians                                                                                                                                                                |
| Misoperation of remote control                                              | Check the battery level of the remote control is it too low                       | Please replace the battery                                                                                                                                                                                     |
| Drying/seat temperature too low/no heating                                  | Check whether the temperature is set at low or normal temperature                 | Adjust the temperature according to the instruction                                                                                                                                                            |
|                                                                             | Whether to turn on the power saving function                                      | Refer to the manual to choose to turn off the power saving function                                                                                                                                            |
| Seat/cover falling too fast                                                 | Failure of damping drop function                                                  | Please get professional maintenance technicians                                                                                                                                                                |
| The cleaning function cannot be used normally                               | Is there any other hard material holding it under the seat                        | Remove the hard objects                                                                                                                                                                                        |
|                                                                             | Whether the body's sensing area is covered                                        | Adjust the body sensing area of the seat cover                                                                                                                                                                 |
|                                                                             | Whether the power supply is restored during the power failure                     | Unplug the plug for one minute and then switch it back on                                                                                                                                                      |
|                                                                             | The skin completely cover the human body induction area of the seat               | Sensor failure, please get professional maintenance technicians                                                                                                                                                |
| Seat/cover cannot be opened or closed<br>* Only for automatic flip machines | Failure of automatic damping function                                             | 1. Disconnect the plug for one minute and switch it back on<br>2. The above treatment is invalid, please ask professional personnel for maintenance                                                            |
| Low water pressure does not flush clean                                     | Filter mist blocking                                                              | Clean the filter according to the instruction                                                                                                                                                                  |
|                                                                             | Pipe bending                                                                      | Observe whether the connection line bends and keep the water supply line smooth                                                                                                                                |
| No siphon flushing is not clean when water pressure is normal               | Air escapes from the sewage outlet                                                | Please get professional maintenance technicians                                                                                                                                                                |
|                                                                             | The S-bend is blocked                                                             | Please buy water pipe dredger in the market for dredging                                                                                                                                                       |
| Flush is not clean when water pressure normal                               | Flush valve failure                                                               | Ask professionals for maintenance                                                                                                                                                                              |

## Installation steps for smart toilet

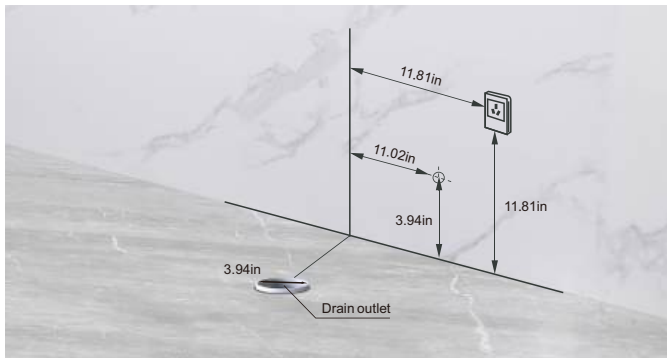

The confirmation of the installation environment.

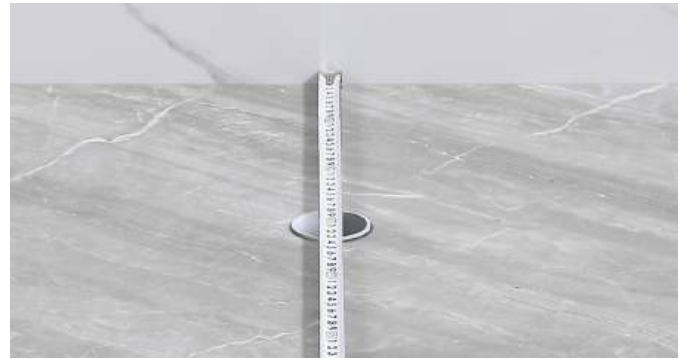

1. The confirmation of the installation environment: The measurement distance is 11.81in or greater.



2. Place the fixed disk into the drain outlet and mark the screw hole positions.



3. Take off the fixed disk and drill four holes for screws.



4. Put the screws into the holes.

Corresponding to the following accessories/quantities:



5. Place the fixed disk into the drain outlet and tighten the screws to secure it.


Corresponding to the following accessories/quantities:





6. Install two long screws as shown in the picture below.

Corresponding to the following accessories/quantities:

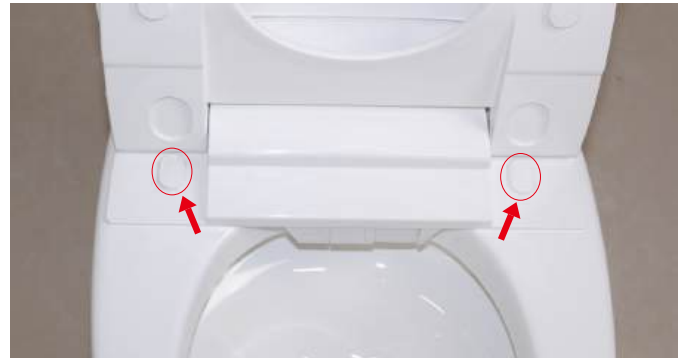

7. Remove these two lids.



8. Remove these two screws.



9. Raise the toilet seat.



10. Remove the entire toilet seat cover, unscrew the hose, the transparent tube and the black wire.





11. Gently turn the toilet over to access the base and install the flange ring.



12. Apply a layer of silicone sealant to the base of the toilet. ( The glass adhesive in the picture needs to be purchased by oneself. )



13. Move the toilet to the location where it will be installed.



14. Make sure two holes in the bottom of the toilet align with the two long screws in the fixed disk, then install it.

Corresponding to the following accessories/quantities :



15. Put the toilet lid in the toilet, reconnect the hose, the transparent pipe and the black wire.









16. Reattach the lid to the toilet.




17. Reinstall and fix the positioning screws and the decorative cover.



18. Apply some glass glue to fix the toilet and insulate the outside dirt from entering.  
( The glass adhesive in the picture needs to be purchased by oneself. )

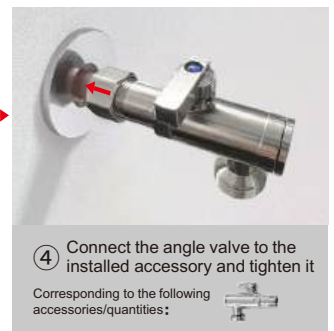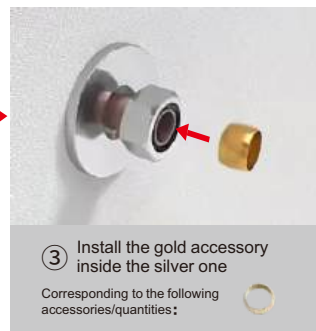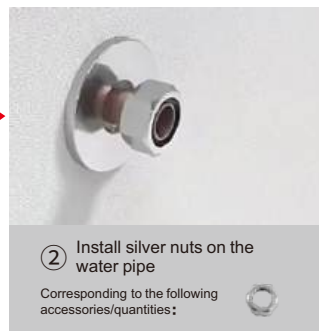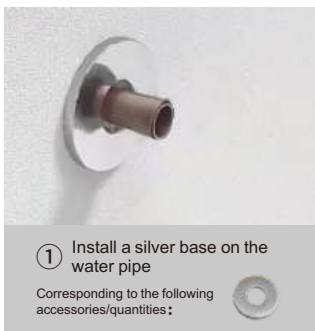

Our angle valve is a standard American-controlled angle valve. If the valve is incompatible with your plumbing setup, please contact us in time. email: [customerservice@hkfoam.com](mailto:customerservice@hkfoam.com), we will solve your problem as soon as possible.

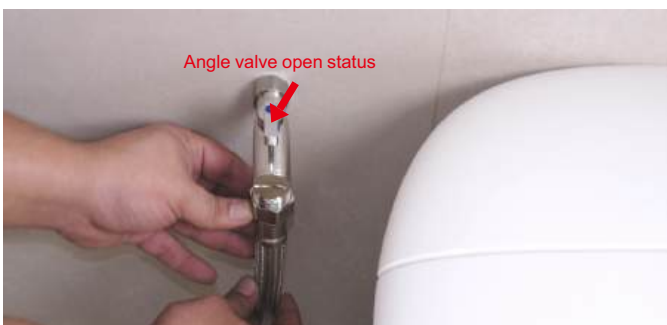

19. Finally connecting the flexible tube to the inlet angle valve and turn on the angle valve switch.

Attention: The above installation steps are universal for all models of toilets and are only for your reference during installation. if you find that the details in the pictures do not match the actual product, please ignore them!



20. Plug in the power supply, press the (RESET) button forcefully. Release the button when you hear a (di) sound. If the toilet display remains constantly on, it indicates that the power has been successfully turned on. Press the (TEST) button to turn off the power.

## Battery replacement and installation

If the equipment is powered off, you can install a spare battery and discharge it. Note: If the spare battery runs out, you can purchase a 9-volt battery and replace it by following the installation steps below. ( When installing the toilet for the first time, a spare battery needs to be installed.)



Step 1. Put the 9-volt battery into the battery box.



Step 2. Cut off the power supply and find the power outage flushing wire interface behind the toilet.



Step 3. Connect the 9V spare battery to the toilet's connection cable and place the battery in a dry area behind the toilet.

**Attention: install a backup battery for flushing during power outages. Press and hold the flush button on the side of the toilet for 3 seconds to flush it.**

## Foam liquid replacement and installation



Step 1. Push the back cover of the toilet out to the back and pick up the back cover of the toilet.



Step 2. Remove the connecting tube of the foam bottle.



Step 3. Fill an empty bottle with tap water, and then put the effervescent tablets into the bottle to dissolve.

If you use up this bottle of foam solution, you can purchase a separate concentrated foam solution or take detergent to water to replace it.



Step 4. Connect the filled foam bottles and tighten them before putting them into the empty slot.



Step 5. After the accessories are installed, reinstall the back cover of the toilet to its original position.

## Product standard

|                                  |                                                                                                                    |                 |                                                                                                                                                     |
|----------------------------------|--------------------------------------------------------------------------------------------------------------------|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| Dimensions                       | 68*39*44CM                                                                                                         |                 |                                                                                                                                                     |
| Rated voltage                    | Alternating voltage 110V±10%, 60HZ                                                                                 |                 |                                                                                                                                                     |
| Rated power                      | Water inlet temperature: 59°F      Outlet water temperature: 104°F<br>Water discharge: 750ml/min      Power: 1350W |                 |                                                                                                                                                     |
| Cleaning                         | Water outlet                                                                                                       | Hip cleaning    | About 700 ml/min                                                                                                                                    |
|                                  |                                                                                                                    | Female cleaning | About 700 ml/min                                                                                                                                    |
|                                  | Outlet water temperature                                                                                           |                 | Normal temperature, and 93°F/99°F/104°F(4 levels)                                                                                                   |
|                                  | Water heating                                                                                                      |                 | Instant water heater                                                                                                                                |
|                                  | Heater power                                                                                                       |                 | Water inlet temperature: 59°F , Outlet water temperature: 104°F<br>Water discharge: 750ml/min      Power: 1350W                                     |
| Seat heating                     | Seat temperature                                                                                                   |                 | Normal temperature, and 93°F/99°F/104°F(4 levels)                                                                                                   |
|                                  | Heater power                                                                                                       |                 | 45W                                                                                                                                                 |
| Warm drying                      | Wind temperature                                                                                                   |                 | Normal temperature, and 93°F/99°F/104°F(4 levels)                                                                                                   |
| Spray position                   |                                                                                                                    |                 | Adjustable Fore and Aft                                                                                                                             |
| Water temperature                |                                                                                                                    |                 | 41~104°F                                                                                                                                            |
| Water Pressure (with water tank) |                                                                                                                    |                 | Water pressure requirements: 0.15-0.75Mpa (static pressure), that is,filling 5L of water in 15 seconds means that the water pressure is sufficient. |

**For any questions or support, please email: [customerservice@hkfoam.com]  
We're here for you: [customerservice@hkfoam.com]**

Due to different printing time of the materials, the product specifications may be slightly changed.  
Please refer to the material object.