 
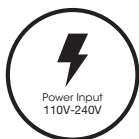 



# USER MANUAL

## Electric Smart Sofa

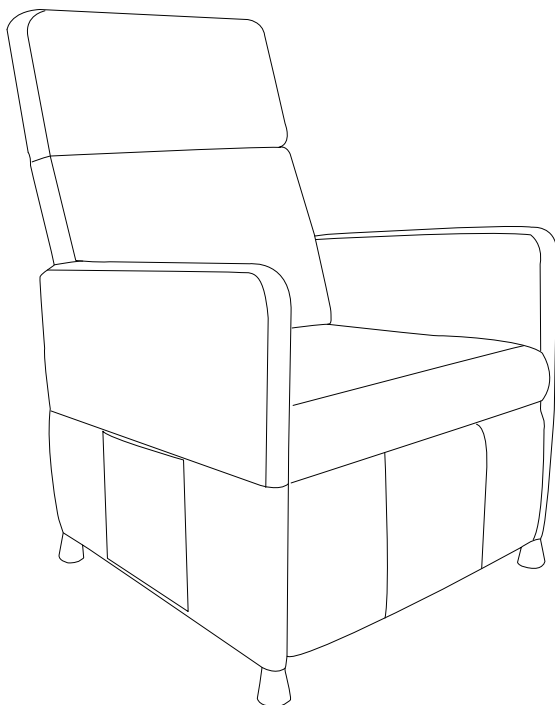

Caution: Do Not Exceed Maximum Listed Weight Capacity.  
Serious Injury Or Property Damage May Occur!
 
# The sofa is tidied up before use

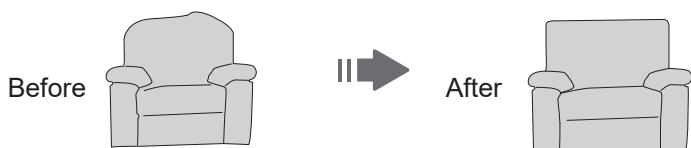

①



②



 
 
 
 
③



 
 
 
 
 

 


④



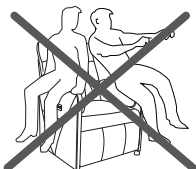
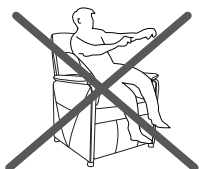
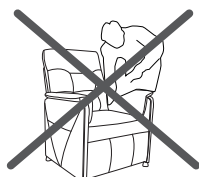
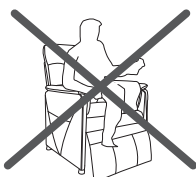


## Attention

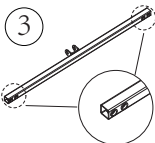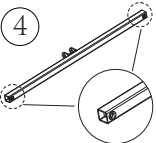
    
## PARTS LIST

 Right-(x1)	 Left-(x1)	 (x1)	 (x1)	 (x1)
 (x1)	 (x1)	 (x1)	 (x1)	

## HARDWARE


<b>A</b>  Adjustable feet (x4)	<b>B</b>  Screws M8×20mm (x12)	<b>C</b>  Screws M6×15mm (x4)
<b>D</b>  10x40 (x2)	<b>E</b>  2x40 (x2)	<b>F</b>  Allen Key S=5mm (x1)

## SPARE PARTS

  <b>B</b> M8×20mm (x2)	 <b>C</b> M6×15mm (x1)
---	---

# STEP 1


Adjustable feet  
AX4

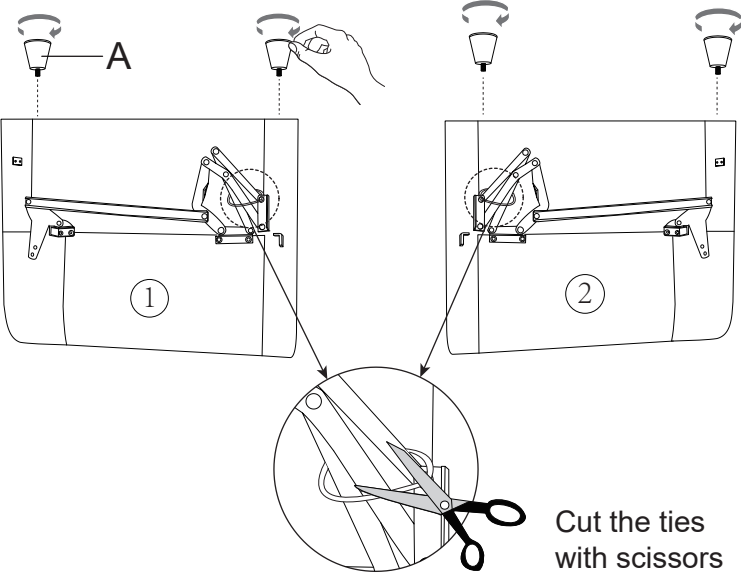



# STEP 2


M8x20mm  
BX4

 S=5mm  
FX1

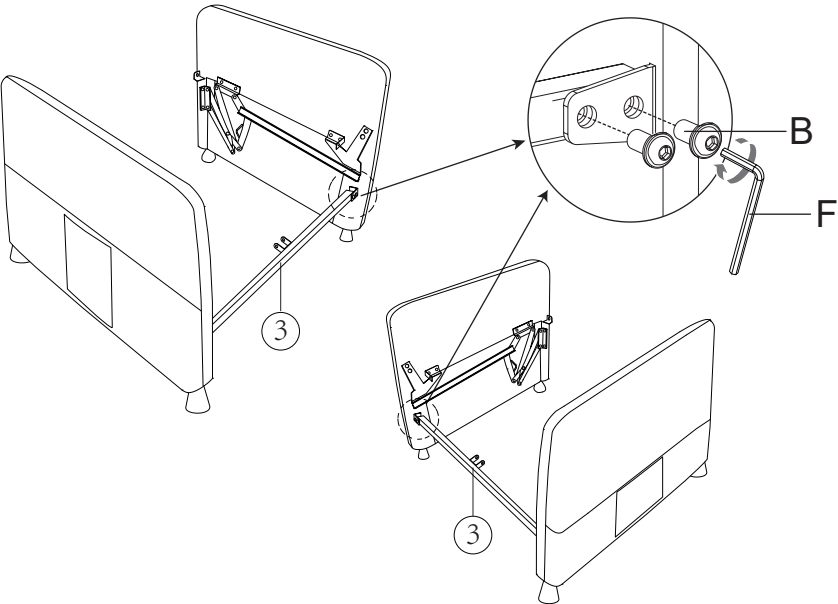


 STEP 3


M8x20mm  BX2	S=5mm  FX1
---	---

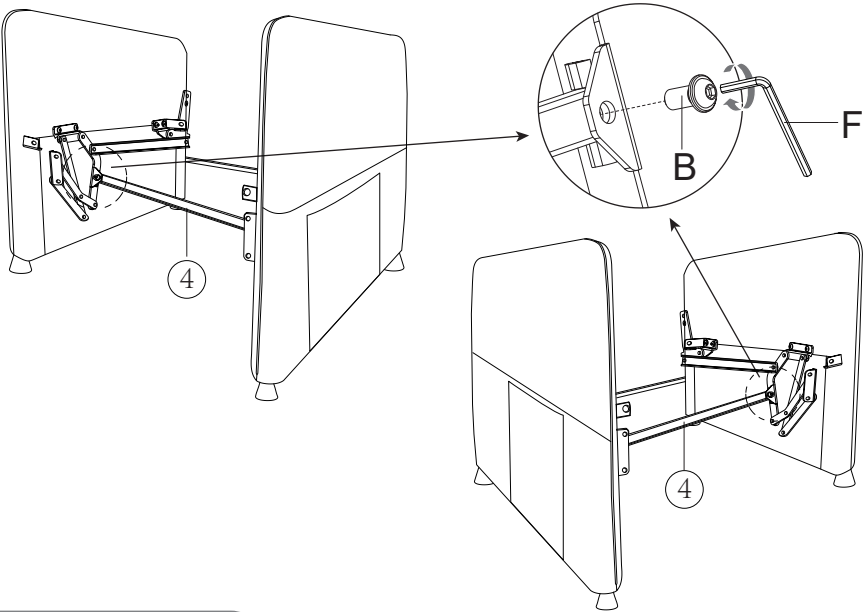 


 STEP 4

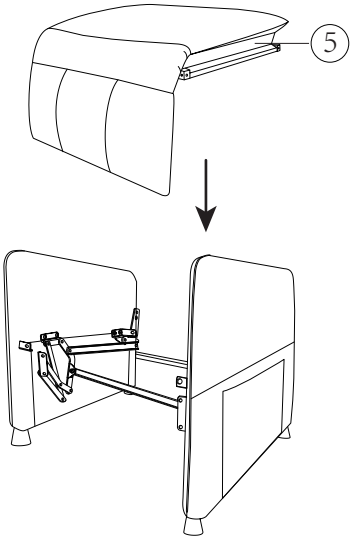



 
STEP 5

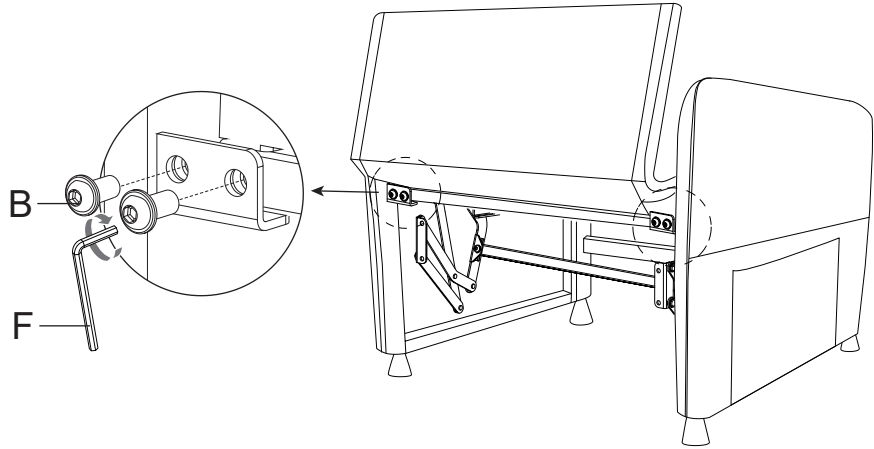M8x20mm	S=5mm
	
BX4	FX1




  
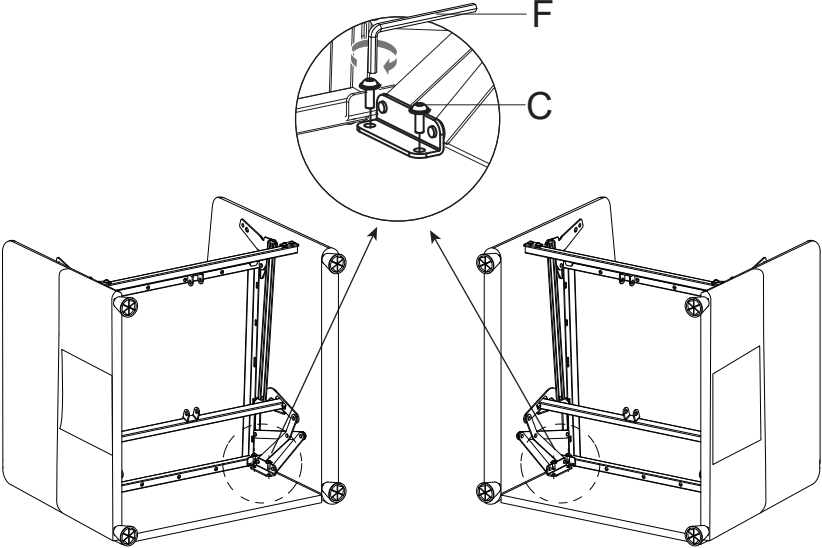 
STEP 6

M8x20mm	S=5mm
	
BX2	FX1

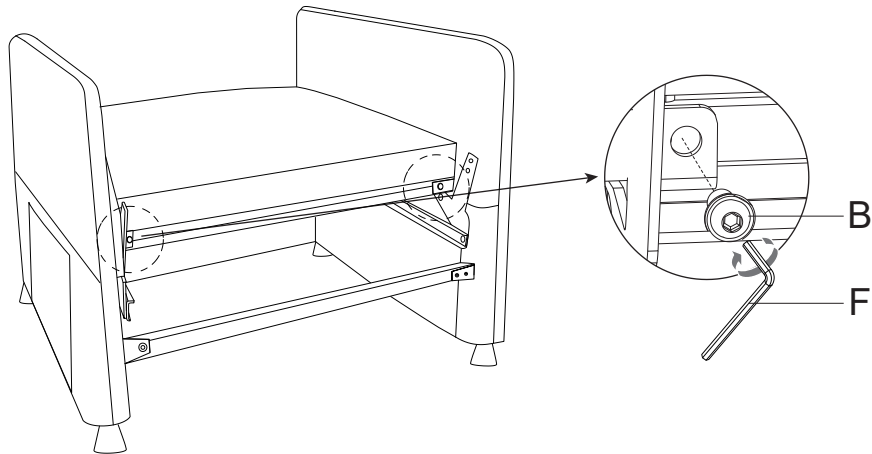


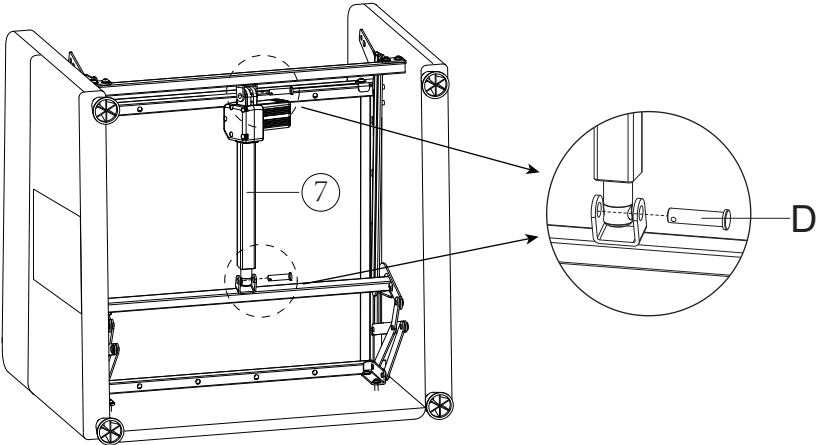 
STEP 7

M6x15mm  CX4	S=5mm  FX1
---	---



STEP 8

10x40mm  DX2
---





STEP 9



2x40mm



  EX2

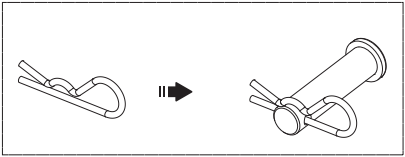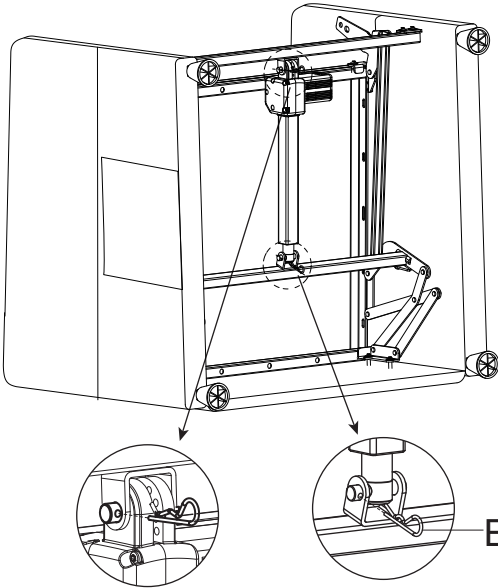


  STEP 10

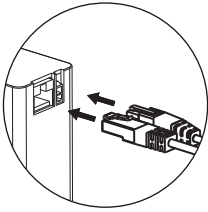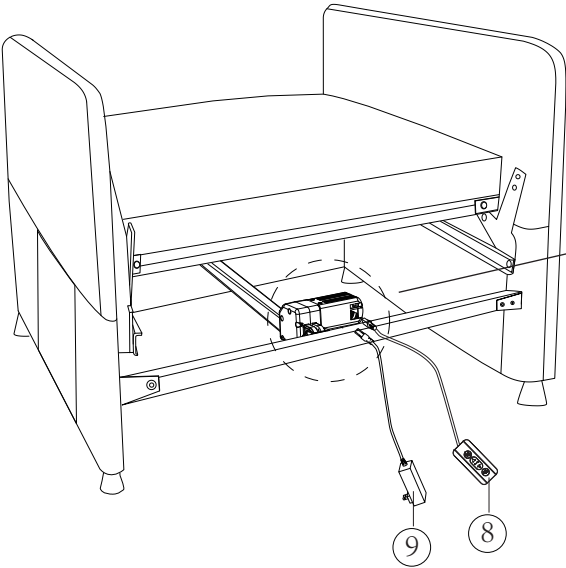




 
STEP 11

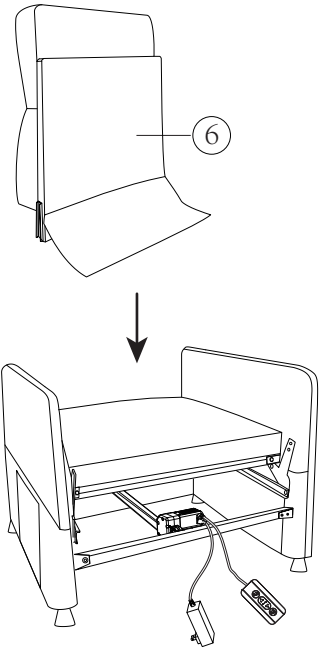

 
STEP 12

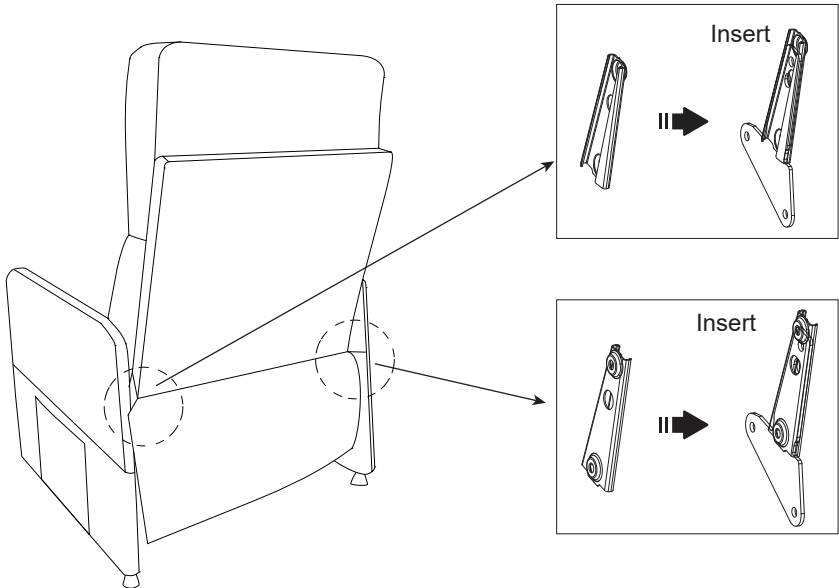

 
STEP 13

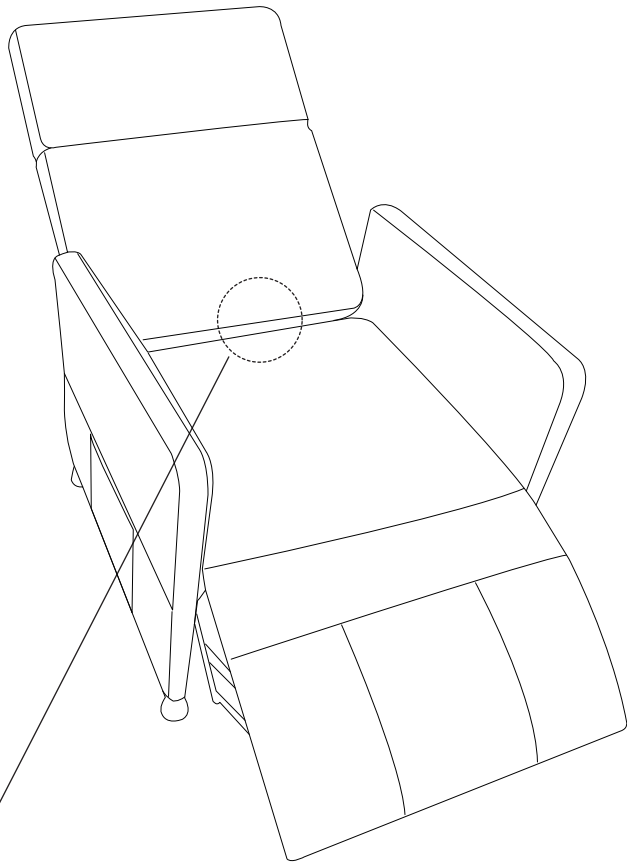

Velcro

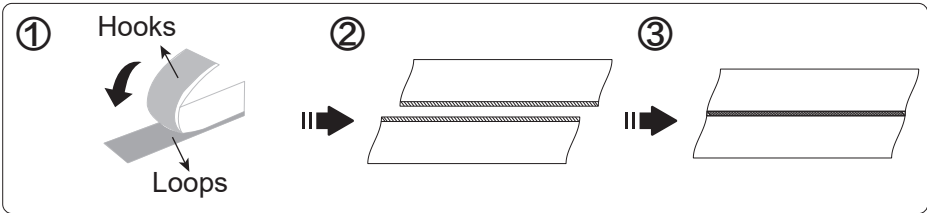 

# Manual controller instructions

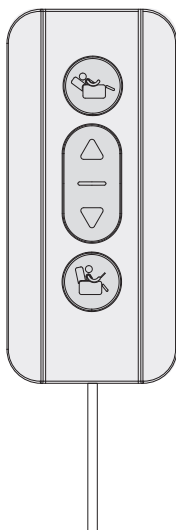 

1. Press and hold the  $\triangle$  button.

The footrest will slowly rise, while the backrest synchronously lowers.

The movement will automatically stop when it reaches the maximum position.



2. Press and hold the  $\nabla$  button.

The footrest will slowly lower, while the backrest synchronously rises.

The movement will automatically stop when it reaches the maximum position.

3. Memory setting:

Adjust the sofa to your desired position, then press and hold the memory

button  or  for more than 3 seconds. The position will be successfully memorized.

4. Reset setting: Press and hold the  $\nabla$  button until the sofa reaches the lowest limit position and release the button. Then press and hold the  $\nabla$  button again until the footrest slightly retract and bounce back. This indicates a successful reset.

ELECTRIC SMART SOFA