

Kitchen Furniture Set for 18 inch Dolls

Assembly and Use Instructions. Adult Assembly Required. Read all instructions before use. This manual is part of the product and must be saved for future reference.

MODEL NUMBER*: 12025 -**Gray/White**

VERSION CODE*: 2.0/1018/TG


* Model and Version numbers are needed if replacement parts are requested



FOR REPLACEMENT PARTS: http://www.badgerbasket.com/parts

Badger Basket, PO Box 227, Edgar, WI 54426-0227 USA • Web: www.badgerbasket.com U.S. Based Customer Service Toll-Free (Mon-Thurs 7:00 AM-4:00 PM CST): 1-800-236-1310 Phone: 715-352-2311 • Fax: 715-352-3163

2.0/1018/TG

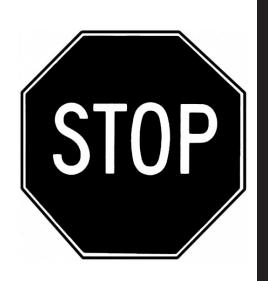

BEFORE YOU BEGIN ASSEMBLY:

Check all parts. If anything is missing or not satisfactory, please DO NOT call the store or return the product to them. Please go online to:

http://www.badgerbasket.com/parts

Most problems are resolved without you needing to leave home.

When emailing or calling us, please have this instruction manual, your product model number, and your Version Code ready.

Your Model Number is: 12025 Your Version Code is: 2.0/1018/TG

CARE INSTRUCTIONS:

Wipe clean with a damp cloth and mild soap and dry thoroughly.



WARNING

ADULT ASSEMBLY REQUIRED. DUE TO THE PRESENCE OF SMALL PARTS AND SHARP POINTS DURING ASSEMBLY, KEEP OUT OF REACH OF CHILDREN UNTIL ASSEMBLY IS COMPLETE.







WARNING - CAUTION


READ ALL INSTRUCTIONS before use of this product. Use only the parts provided by Badger
Basket. Keep instructions for future use.


Do not use the product if it is damaged or broken. Periodically inspect the product to ensure all parts remain tight. This item is a toy for dolls only. It is never to be used for real infants or pets. No product is a substitute for adult supervision. Always supervise your child during play. For children ages three (3) years and older.

Never sit on or stand on the toy.

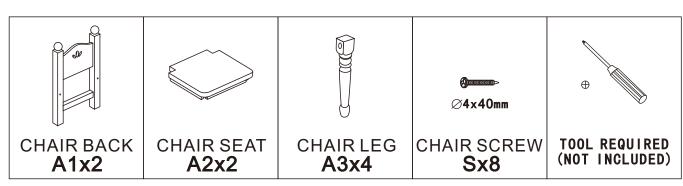


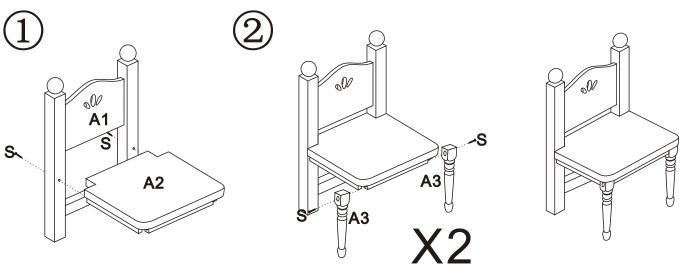


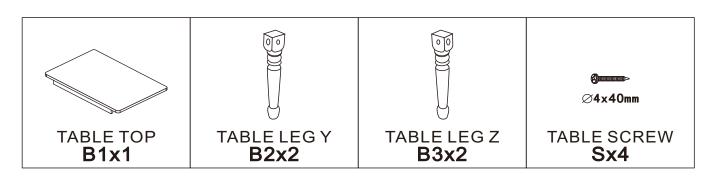


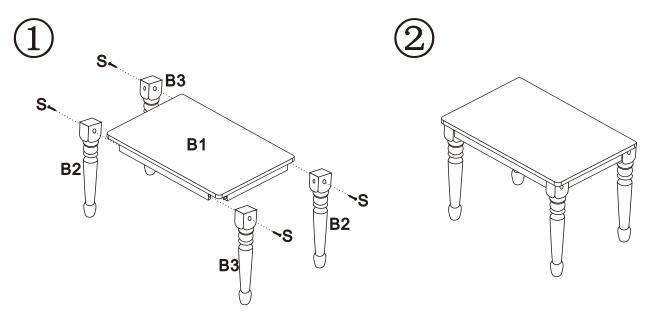





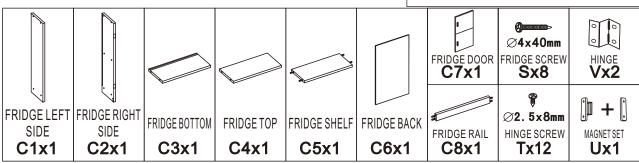

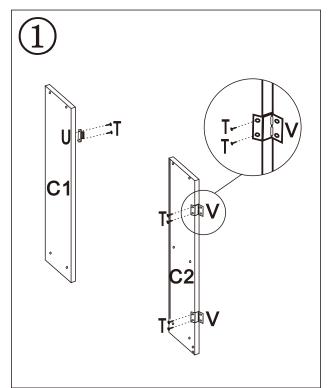

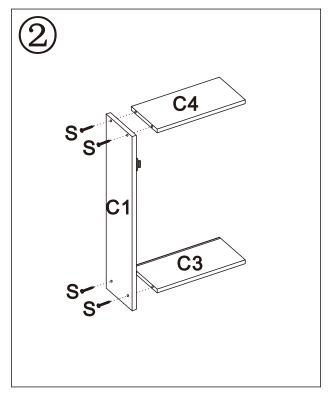

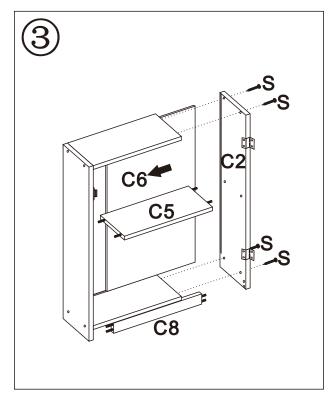

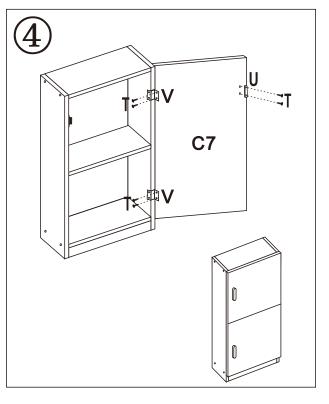

TOOL REQUIRED (NOT INCLUDED)

COUNTER LOWER LEFT D1x1	COUNTER LOWER RIGHT D2x1	COUNTER BOTTOM D3x1	COUNTER RAIL D4x1	COUNTER LOWER BACK D5x1
		٠		
COUNTER DIVIDER D6x1	COUNTER UPPER LEFT D7x1	COUNTER UPPER RIGHT D8x1	COUNTER UPPER BACK D9x1	COUNTER SHELF D10x1
COUNTER TRIM D11x1	COUNTER TOP D12x1	FAUCET D13x1	OVEN DOOR D14x1	CABINET DOOR D15x1
	Ø > ∅4×40mm	Ø2. 5×8mm HINGE SCREW Tx24	MAGNET SET Ux2	© CLOCK D22x1
SINK D16x1		Ø4×14mm COUNTER SHORT SCREW D19x2	HINGE Vx4	Ø4×25mm COUNTER FAUCET SCREW D23×1

