 


Mobile TV Floor Stand with Shelf

SKU: STAND-TVHD8B Instruction Manual





A CAUTION! A

If you do not understand these directions, or if you have any doubts about the safety of the installation, please contact our product support team at 309-278-5303 or help@vivo-us.com for further assistance. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.



WARNING: CHOKING HAZARD

SMALL PARTS - NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.



DO NOT EXCEED WEIGHT CAPACITY

FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY.



TIPOVER WARNING

SERIOUS OR FATAL CRUSHING INJURIES CAN OCCUR FROM TIPOVER. TO HELP PREVENT TIPOVER:

- NEVER ALLOW CHILDREN TO CLIMB, STAND, HANG, OR PLAY ON ANY PART OF TV OR TV CART
- · USE TIPOVER RESTRAINT OR ANCHOR STAND TO WALL

USE OF TIPOVER RESTRAINTS MAY ONLY REDUCE, BUT NOT ELIMINATE RISK OF TIPOVER.

We're Here for You

Open Monday - Friday 7:00am - 7:00pm CST,

our dedicated support team can offer immediate assistance with rapid response times. If any parts are received damaged or defective, please contact us. We are happy to replace parts to ensure you have a fully functioning product.



Give us a Call:

309-278-5303

AVG. RESOLUTION TIME (within office hrs): 5M 4S



Chat Us:

www.vivo-us.com

AVG. RESOLUTION TIME (within office hrs): < 15 M




Email Us:

help@vivo-us.com


AVG. RESPONSE TIME (within office hrs): 1HR 8M

- 23% within < 15m
- 38% within < 30m
- 61% within < 1hr
- 83% within < 2hr
- 92% within < 3hr

Package Contents

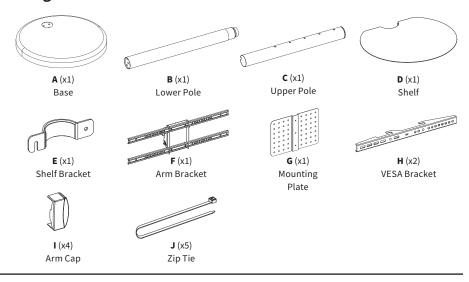

Included Hardware & Tools

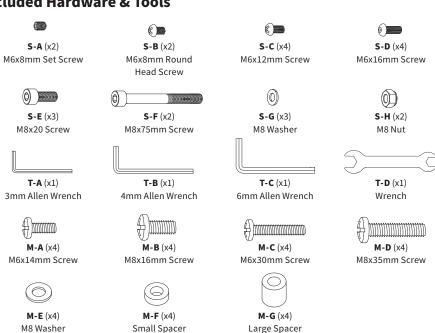

Tools Needed:



Screwdriver


Weight Capacity:



ASSEMBLY STEPS


STEP 1

Attach Lower Pole (B) to the Base (A) using M8x20mm Screws (S-E), M8 Washers (S-G), and 6mm Allen Wrench (T-C) making sure the Cable Slot on Lower Pole is facing the back.

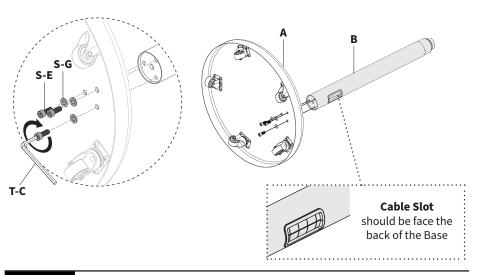


STEP 2

Insert Upper Pole (C) onto Lower Pole (B) and secure using M6x8mm Set Screws (S-A) and 3mm Allen Wrench (T-A).

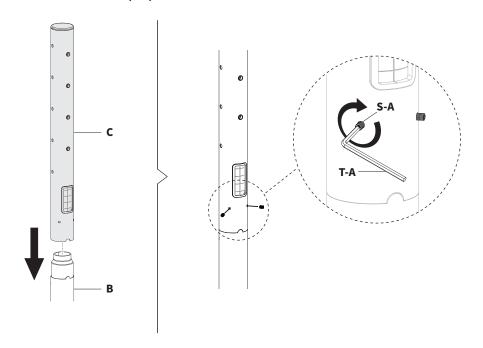


Secure Shelf **(D)** onto Lower Pole **(B)** at desired height using M6x16mm Screws **(S-D)**, Shelf Bracket **(E)**, and 4mm Allen Wrench **(T-B)**.

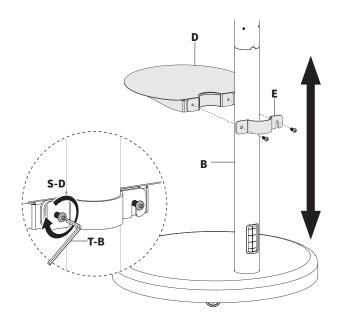


STEP 4

Press Arm Caps (I) onto Arm Bracket (F) as shown.

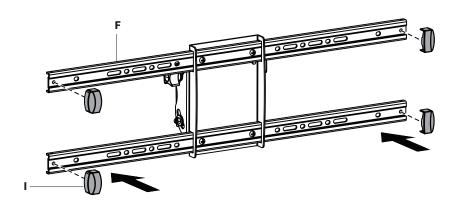


STEP 4 Cont'd


Attach Arm Bracket (F) to Upper Pole (C) at desired height using M8x75mm Screws (S-F) and M8 Nuts (S-H). Tighten using 6mm Allen Wrench (T-C) and Wrench (T-D).

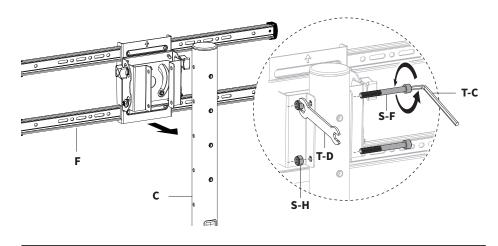


STEP 5

 Attach VESA Brackets (H) to your TV using appropriate Screws (M-A through M-D), Washers (M-E), and Spacers (M-F, M-G).

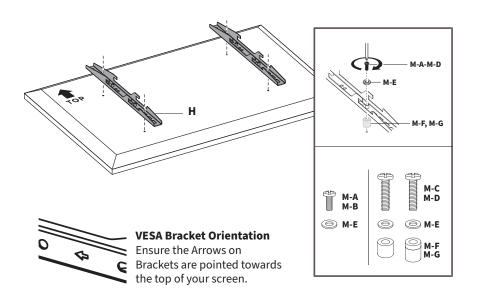





Hang TV onto Arm Bracket (F).

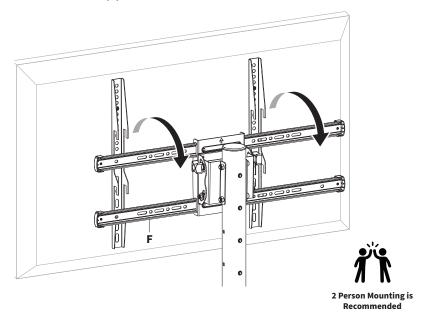

Secure using M6x12mm Screws (S-C) and a Phillips screwdriver.

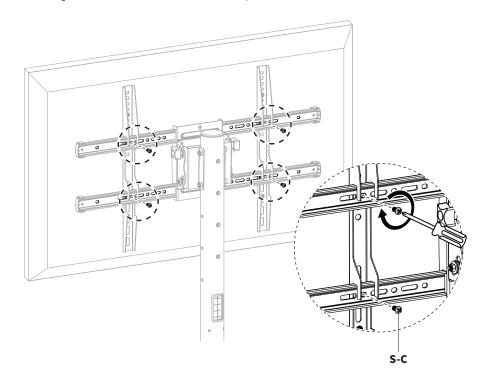


Use **Knobs** on Arm Bracket **(F)** to adjust the tilt of your TV.

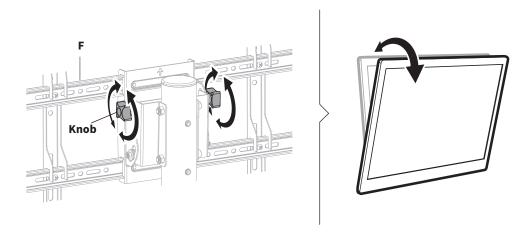


STEP 8

Lock the TV at your desired orientation using M6x8mm Round Head Screws **(S-B)** and a Phillips screwdriver.

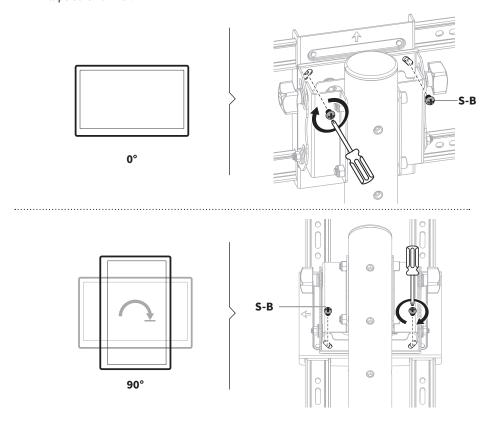


C

Attach Mounting Plate (G) to Upper Pole (C) at your desired height using M6x16mm Screws (S-D) and 4mm Allen Wrench (T-B).

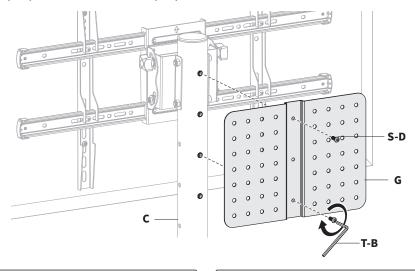

Secure accessories onto the Mounting Plate (G) using Zip Ties (J). Route cables through the Cable Slots.

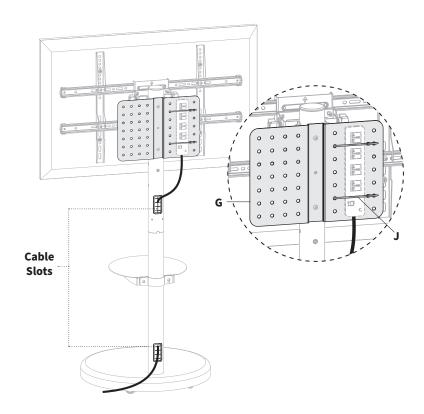

[THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK]



Need Help? Get In Touch

Monday-Friday from 7:00am-7:00pm CST



help@vivo-us.com



www.vivo-us.com
Chat live with an agent!



309-278-5303

