
ASSEMBLY INSTRUCTIONS

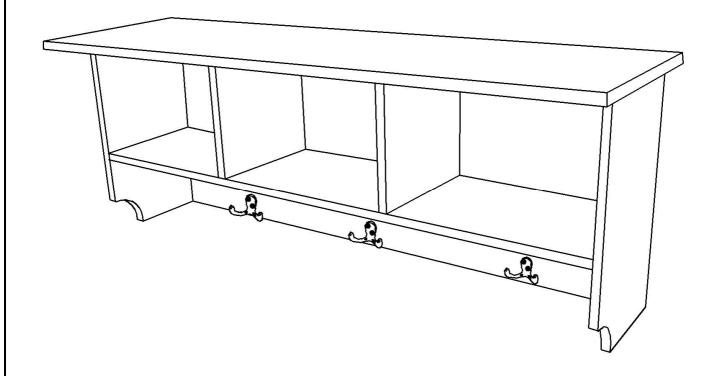

Description : ENTRY SHELF

Item No. : SH-150

ITEM NO.: SH-150 REVISED AUG 28, 2012

BEFORE ASSEMBLY

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. All parts were checked prior to packaging to insure quality. Prior to beginning assembly, however, make sure all parts and hardware are included and free of obvious defect. If a part is missing or defective, please contact the store where purchased. If hardware is missing, or you need help with assembly, please call toll free 888-944-8396.

IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.



PART LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
A	Тор	1		В	Side panel	2	
C	Vertical panel (L-R)	2		D	Bottom panel	1	
E	Bottom Crossbar	1		F	Back panel	2	

ITEM NO.: SH-150 REVISED AUG 28, 2012


HARDWARE LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have all of the following hardware:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
1	Bolt (M6x30mm)	16		2	Lock washer (φ6.5x11mm)	16	Ø
3	Flat washer (¢6.5x13mm)	16	0	4	Cam bolt	2	
5	Cam lock	2		6	Screw (M4x15mm)	8	(- 1111-
7	Allen key (4mm)	1		8	Plastic Dowel (40mm)	2	O STATUTE
9	Screw (M4x40mm)	2		10	Steel band	2	

STEP 1


Attach vertical panels (C) to bottom panel (D) with bolts (1), and washers (2) and (3) as shown below .Tighten with Allen key (7).

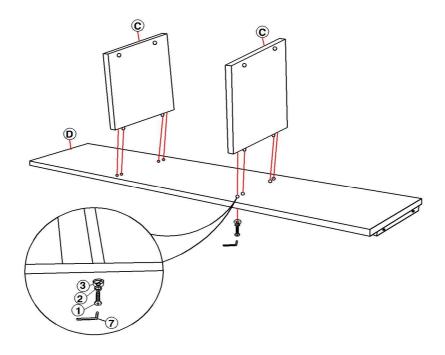

ITEM NO.: SH-150 REVISED AUG 28, 2012


STEP 2

Attach side panels (B) and bottom crossbar (E) to bottom panel (D) with bolts (1), washers (2) and (3), cam bolts (4), and cam locks (5) as shown below. Tighten with Allen key (7).

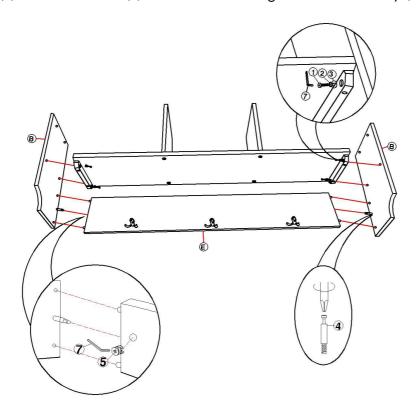

STEP 3


Attach back panel (F) into groove of the unit. Attach top (A) to the unit with bolts (1) and washers (2) and (3) as shown below. Tighten with Allen key (7)

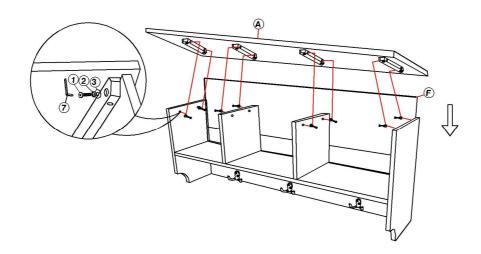

ITEM NO.: SH-150 REVISED AUG 28, 2012


STEP 4

Attach back panel (F) to the unit with screws (6) as shown below. Tighten with a screwdriver.

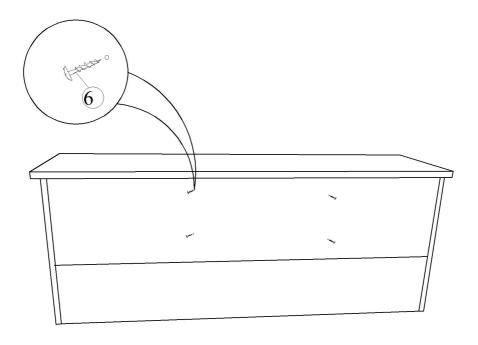

STEP 5

Attach steel bands (10) to the unit with screws (6). Then attach steel bands (10) to a wall with plastic dowels (8) and screws (9) as shown below.

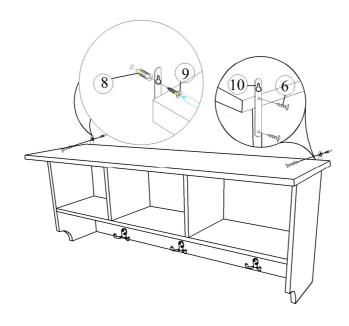

ITEM NO.: SH-150 REVISED AUG 28, 2012