

TECHO—BLOC

Inspiring Artscapes

Wind Guard Installation Instructions

Items included:

- Glass panels
- Brackets with set screws and silicone washers
- Black rubber feet

Tools needed:

- #2 Phillips screwdriver

Instructions:

1. Carefully remove the wind guard from the packaging and inspect for any damage such as chips or cracks. Place glass panels on a soft surface to prevent any damage.
2. Ensure that each bracket has 2 set screws in them with the silicon inserts attached to the back side.
3. Stand the glass panel vertically and slide the bracket onto the glass. The glass should be flush with the bottom of the brackets. Fig.1
4. Using a #2 Phillips screw driver, loosely connect the brackets to the glass panels. Repeat until the wind guard is fully assembled. Fig.1
5. Tighten all screws starting at the bottom.
6. Now that your wind guard is fully assembled, center the complete assembly over your fire pit insert.

Maintenance:

- Clean the glass 2 - 3 times per season or as needed.
- Clean with a non-abrasive glass cleaner and a clean lint - free cloth.
- When storing the wind guard, it is recommended to be stored in a safe place.
- Wrap glass with in a clean lint - free cloth. (If original packaging is not availab le.)
- Periodically check the set screws to ensure tight.

Warnings:

- Never place your wind guard directly on the fire pit insert.
- Always ensure the rubber feet are used.
- Always ensure the silicon insert is on the set screws.
- Always ensure there is a 1/2 " gap between the glass panels.
- Always check the glass panels for cracks. DO NOT use glass panels with a crack.
- Wind guard surfaces can become extremely hot during operation — DO NOT TOUCH while fire feature is in use.
- Do not place any object on or against the wind guard while the unit is operating.
- Do not place any cover on the wind guard while the fire feature is in use or while the glass is still hot.
- Wait at least 30 minutes after turning off the fire feature before handling the wind guard or placing a cover.
- Do not pour water or other liquids on the glass while hot. Sudden temperature changes may cause the glass to crack or shatter.
- Keep flammable items, furniture, and decorations away from the fire feature and wind guard during use.
- Children and pets must be always supervised when the fire feature is in use.
- In case of strong winds or storms, remove and store the wind guard to prevent damage or injury.
- Use protective gloves when assembling, removing, or handling the wind guard to avoid injury.
- Do not modify or alter any part of the wind guard assembly.



Square



Rectangle

Square/Rectangle Bracket

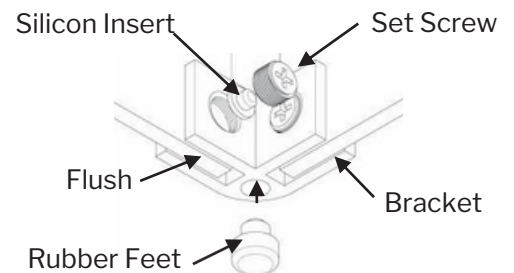


Fig. 1

Techo-Bloc assumes no responsibility for damage, injury, or loss resulting from improper use, installation, handling, or maintenance of this product.