

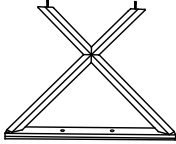
 


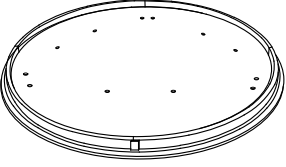






ASSEMBLY INSTRUCTION


ROUND DINING TABLE

A Table Top	B Base Plate	C "X" Leg Frame	D JCBC Bolt M6x40mm
			
1 pc	1 pc	3 pcs	12 pcs
E Lock Washer M8	F Flat Washer M8x18mm	G Hex Nut M8	H Flat Washer M8x22mm
			
18 pcs	12 pcs	6 pcs	6 pcs
I Allen Key M4	J Wrench 12.8mm		
			
1 pc	1 pc		

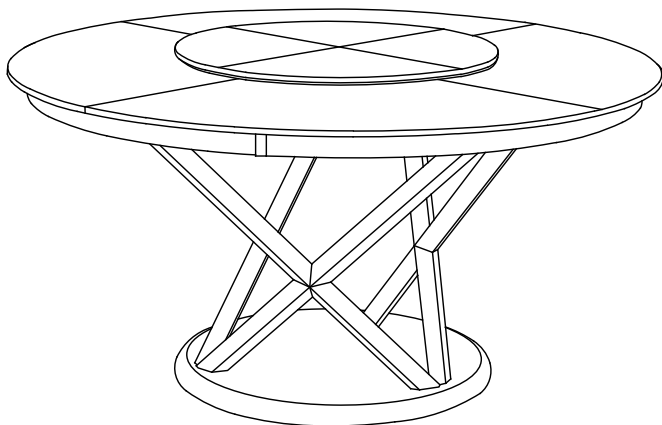


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

- 1** Place the Table Top (A) on the protective surface. Tighten the Table Top (A) and "X" Leg Frame (C) by JCBC Bolt (D), Lock Washer (E), Flat Washer (F) and Allen Key (I).
**Do not fully tighten the bolt until all bolts are attached.

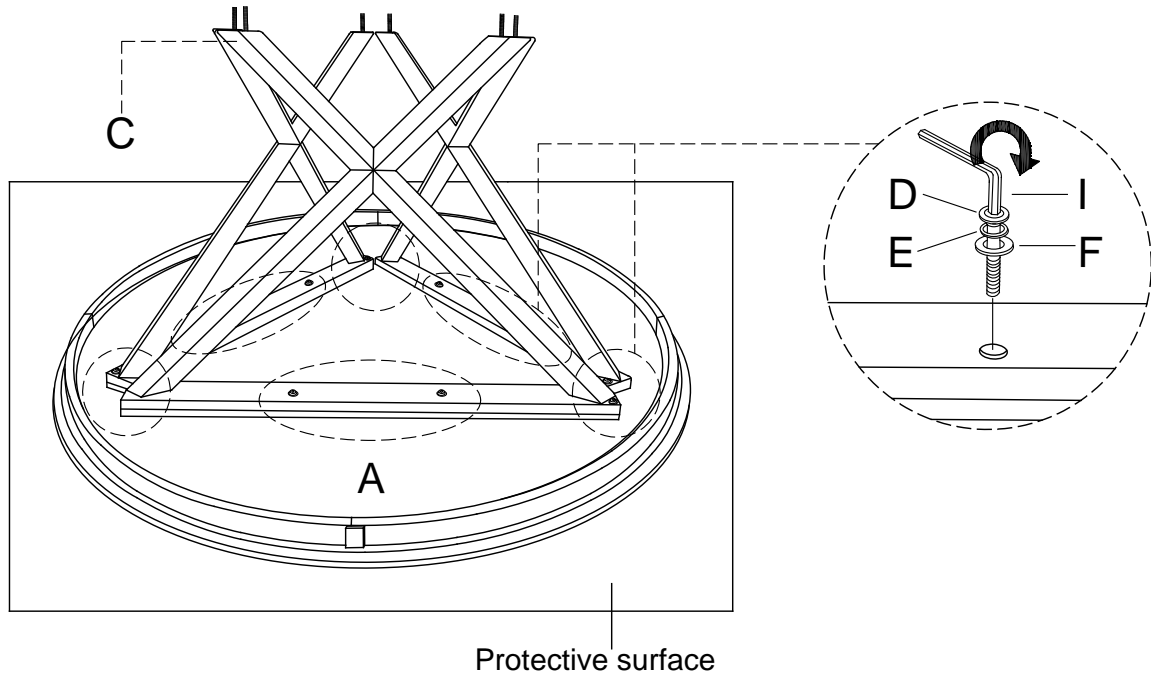


- 2** Place the Base Plate (B) on "X" Leg Frame (C). Tighten the Base Plate (B) and "X" Leg Frame (C) by Hex Nut (G), Lock Washer (E), Flat Washer (H) and Wrench (J).

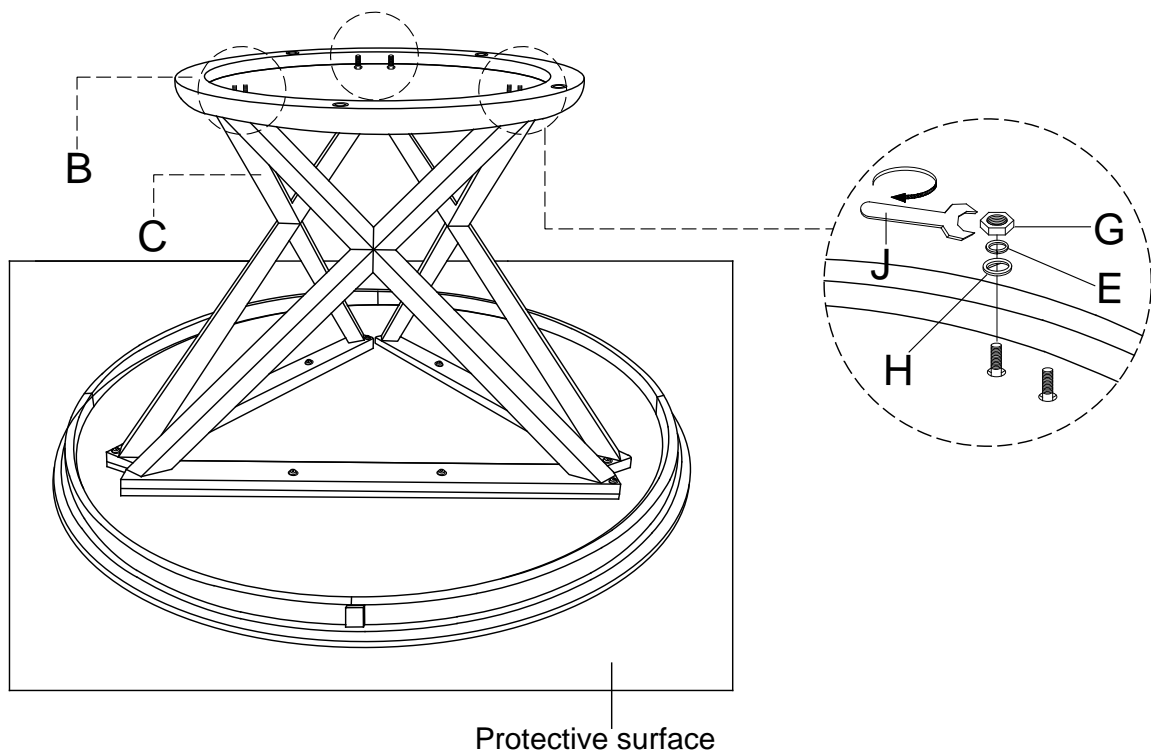

3

Stand table up on an even surface and check that it is balanced. If there is a slight wobble, please adjust the leveler.

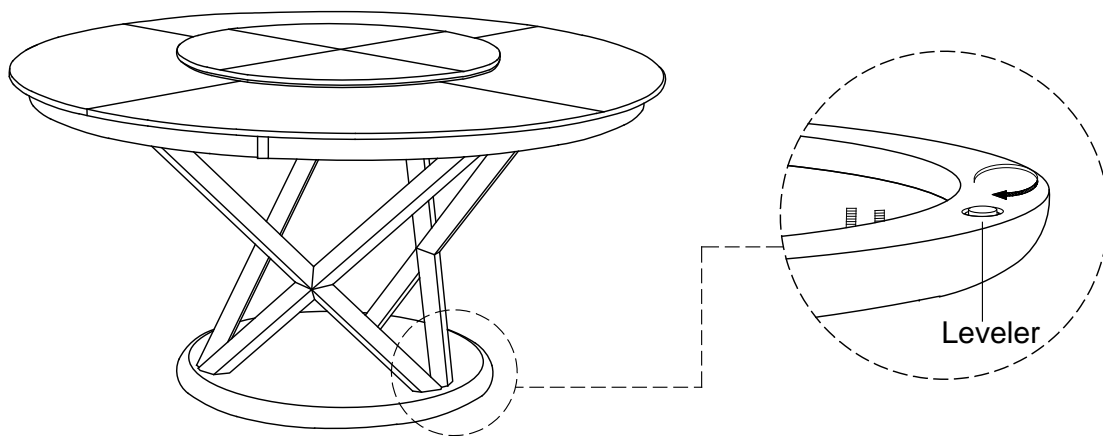

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surface with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.